

# 2013 Harley-Davidson Sportster Models Service Manual

99484-13

©2012 H-D.

# **IMPORTANT NOTICE**

Harley-Davidson motorcycles conform to all applicable U.S.A. Federal Motor Vehicle Safety Standards and U.S.A. Environmental Protection Agency regulations effective on the date of manufacture.

To maintain the safety, dependability, and emission and noise control performance, it is essential that the procedures, specifications and service instructions in this manual are followed.

Any substitution, alteration or adjustment of emission system and noise control components outside of factory specifications may be prohibited by law.

**Harley-Davidson Motor Company** 



# 2013 Harley-Davidson Sportster Models Service Manual

©2012 H-D.
ALL RIGHTS RESERVED
99484-13

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE http://www.harley-davidson.com

# **READER COMMENTS**

I The Harley-Davidson Service Communications Department maintains a continuous effort to improve the quality

	pleteness, accuracy, organization, usab	ility, and readability of this manual.
lease list the page, item, an	d part number(s) of any errors you find	in this manual.
Please tell us how we can im	prove this manual.	
Occupation:		
lame:	Dealership:	
itreet:	Department:	
	State:	Zip:
ity:		
City:	ter Models Service Manual (99484-13)	

# ABOUT THIS MANUAL

# **GENERAL**

This service manual has been prepared with the following purposes in mind:

- To acquaint the user with the construction of the Harley-Davidson product and assist in the performance of basic maintenance and repair.
- To introduce the professional Harley-Davidson technician to the latest field-tested and factory-approved major repair methods.

We sincerely believe that this service manual will make your association with Harley-Davidson products more pleasant and profitable.

#### **HOW TO USE YOUR SERVICE MANUAL**

Refer to the table below for the content layout of this manual.

NO.	CHAPTER
1	Maintenance
2	Chassis
3	Engine
4	Fuel System
5	Drive/Transmission
6	Electrical
Α	Appendix A Connector Repair
В	Appendix B Wiring
С	Appendix C Compensating Sprocket
D	Appendix D Conversions
E	Appendix E Glossary

Use the TABLE OF CONTENTS (which follows this FORE-WORD) and the INDEX (at the back of this manual) to quickly locate subjects. Chapters and topics in this manual are sequentially numbered for easy navigation.

For example, a cross-reference shown as **2.2 SPECIFICATIONS** refers to chapter 2 CHASSIS, heading 2.2 SPECIFICATIONS.

For quick and easy reference, all pages contain a chapter number followed by a page number. For example, **page 3-5** refers to page 5 in Chapter 3.

A number of acronyms and abbreviations are used in this document. See the <u>E.1 GLOSSARY</u> for a list of acronyms, abbreviations and definitions.

### PREPARATION FOR SERVICE

PART NUMBER	TOOL NAME
HD-48650	DIGITAL TECHNICIAN II

# **WARNING**

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

Good preparation is very important for efficient service work. Start each job with a clean work area. This will allow the repair to proceed as smoothly as possible. It will also reduce the incidence of misplaced tools and parts. Clean a motorcycle that is excessively dirty before work starts. Cleaning will occasionally uncover sources of trouble. Gather any tools, instruments and any parts needed for the job before work begins. Interrupting a job to locate tools or parts is a distraction and causes needless delay.

#### **NOTES**

- To avoid unnecessary disassembly, carefully read all related service information before repair work begins.
- In figure legends, the number which follows the name of a part indicates the quantity necessary for one complete assembly.
- When servicing a vehicle equipped with the Harley-Davidson Smart Security System (H-DSSS), it must first be disarmed. Keep the fob close to the vehicle or use DIGITAL TECHNICIAN II (Part No. HD-48650) to disable the system. Activate the system after service is completed.

#### SERVICE BULLETINS

In addition to the information presented in this manual, Harley-Davidson Motor Company will periodically issue service bulletins to Harley-Davidson dealers. Service bulletins cover interim engineering changes and supplementary information. Consult the service bulletins to keep your product knowledge current and complete.

# **USE GENUINE REPLACEMENT PARTS**

# **AWARNING**

Harley-Davidson parts and accessories are designed for Harley-Davidson motorcycles. Using non-Harley-Davidson parts or accessories can adversely affect performance, stability or handling, which could result in death or serious injury. (00001b)

To achieve satisfactory and lasting repairs, carefully follow the service manual instructions and use only genuine Harley-Davidson replacement parts. Behind the emblem bearing the words GENUINE HARLEY-DAVIDSON stand more than 100 years of design, research, manufacturing, testing and inspecting experience. This is your assurance that the parts you are using will fit right, operate properly and last longer.

# WARNINGS AND CAUTIONS

Statements in this manual preceded by the following words are of special significance.

# WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

# **A**CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

#### NOTICE

NOTICE indicates a potentially hazardous situation which, if not avoided, may result in property damage. (00140b)

#### NOTE

Refers to important information, and is placed in italic type. It is recommended that you take special notice of these items.

Proper service and repair is important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this manual are effective methods for performing service operations.

# **A**WARNING

Always wear proper eye protection when using hammers, arbor or hydraulic presses, gear pullers, spring compressors, slide hammers and similar tools. Flying parts could result in death or serious injury. (00496b)

Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended. It is important to note that some warnings against the use of specific service methods, which could damage the motorcycle or render it unsafe, are stated in this manual. However, remember that these warnings are not all-inclusive. Inadequate safety precautions could result in death or serious injury.

Since Harley-Davidson could not possibly know, evaluate or advise the service trade of all possible ways in which service might be performed, or of the possible hazardous consequences of each method, we have not undertaken any such broad evaluation. Accordingly, anyone who uses a service procedure or tool which is not recommended by Harley-Davidson must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized as a result. Failure to do so could result in death or serious injury.

# **PRODUCT REFERENCES**

# **AWARNING**

Read and follow warnings and directions on all products. Failure to follow warnings and directions can result in death or serious injury. (00470b)

When reference is made in this manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be substituted.

# **Kent-Moore Products**

All tools mentioned in this manual with an "HD", "J" or "B" preface must be ordered through SPX Kent-Moore. For ordering

information or product returns, warranty or otherwise, visit www.spx.com.

# LOCTITE Sealing and THREADLOCKING Products

Some procedures in this manual call for the use of LOCTITE products. If you have any questions regarding LOCTITE product usage or retailer/wholesaler locations, contact Loctite Corp. at www.loctite.com.

# PRODUCT REGISTERED MARKS

Apple, Alcantara S.p.A., Allen, Amp Multilock, Bluetooth, Brembo, Delphi, Deutsch, Dunlop, Dynojet, Fluke, G.E. Versilube, Garmin, Gunk, Hydroseal, Hylomar, iPhone, iPod, Kevlar, Lexan, Loctite, Lubriplate, Keps, K&N, Magnaflux, Marson Thread-Setter Tool Kit, MAXI fuse, Molex, Michelin, MPZ, Mulitilock, nano, NGK, Novus, Packard, Pirelli, Permatex, Philips, PJ1, Pozidriv, Robinair, S100, Sems, Snap-on, Teflon, Threadlocker, Torca, Torco, TORX, Tufoil, Tyco, Ultratorch, Velcro, X-Acto, XM Satellite Radio, and zumo are among the trademarks of their respective owners.

# H-D MICHIGAN, INC. TRADEMARK INFORMATION

Bar & Shield, Cross Bones, Digital Tech, Digital Technician, Digital Technician II, Dyna, Electra Glide, Evolution, Fat Bob, Fat Boy, Forty-Eight, Glaze, Gloss, H-D, H-Dnet.com, Harley, Harley-Davidson, HD, Heritage Softail, Iron 883, Low Rider, Night Rod, Nightster, Night Train, Profile, Revolution, Road Glide, Road King, Road Tech, Rocker, Screamin' Eagle, Seventy-Two, Softail, Sportster, Street Glide, Street Rod, Sun Ray, Sunwash, Super Glide, SuperLow, Switchback, SYN3, TechLink, TechLink II, Tour-Pak, Twin Cam 88, Twin Cam 88B, Twin Cam 96, Twin Cam 96B, Twin Cam 103, Twin Cam 103B, Twin Cam 110, Twin Cam 110B, Ultra Classic, V-Rod, VRSC, XR1200X and Harley-Davidson Genuine Motor Parts and Genuine Motor Accessories are among the trademarks of H-D Michigan, Inc.

# **CONTENTS**

All photographs, illustrations and procedures may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Since product improvement is our continual goal, Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

Installing Oil Filter.....1-17

MAINTENANCE		Installing Oil FilterRefilling Oil Tank	
1.1 FASTENER TORQUE VALUES		1.7 AIR FILTER	
Fastener Torque Values in this Chapter	1-1	XL Models except XL 1200V	1-19
		Removal	1-19
1.2 GENERAL		Installation	
Servicing a New Motorcycle		XL 1200V	
Safe Operating Maintenance		Removal	
Shop Practices.		InstallationXR 1200X	
Repair Notes		Removal	
SafetyRemoving Parts		Installation	
Cleaning		Cleaning Filter Element	
Disassembly and Assembly			
Checking Torques on Fasteners		1.8 TIRES AND WHEELS	
Magnetic Parts Trays		Air Pressure	1-23
Repair and Replacement Procedures		Tire Replacement	1-23
Hardware and Threaded Parts	1-4	Tread Wear	1-23
Threadlocking Agents		Tire Damage	
Wiring, Hoses and Lines		Specified Tires	
Instruments and Gauges		Wheel Bearings	
Bearings		Wheel Spokes	
Bushings		Identify Wheel Spoke Groups	
GasketsLip-Type Seals		Wheel Spoke Adjustment	1-25
O-Rings		1.9 PRIMARY CHAIN	
Gears			4.00
Shafts		Free Play Adjustment	1-26
Part Replacement		1.10 TRANSMISSION LUBRICANT	Γ
Cleaning			
Part Protection	1-5	Transmission Lubrication	
Cleaning Process		Change Lubricant	
Rust or Corrosion Removal		Change Eubhoant	1-20
Bearings		1.11 CLUTCH	
Tool Safety		Adjustment	1-29
Air Tools		Release the Clutch Cable Tension	
Wrenches Pliers/Cutters/Pry Bars		Clutch Adjustment	
Hammers		Lever Free Play	
Punches/Chisels			
Screwdrivers		1.12 DRIVE BELT AND SPROCKE	TS
Ratchets and Handles		General	1-31
Sockets	1-6	Cleaning	1-31
Storage Units	1-6	Inspection	
4.2 FUEL AND OU		Sprockets	
1.3 FUEL AND OIL		Idler Pulley: XR 1200X	
Fuel		Drive Belt	
Gasoline Blends		Drive Belt Deflection	
Engine Lubrication		Gauging DeflectionAdjustment	
Winter Lubrication	1-8	Adjustifierit	1-33
1.4 BULB REQUIREMENTS		1.13 THROTTLE CONTROL	
Bulb Chart	1-9	Cable Inspection and Lubrication  Cable Adjustment	
1.5 MAINTENANCE SCHEDULE		Operation	
General	1 10	Adjustment	1-35
	1-10	1.14 CABLE AND CHASSIS LUBR	
1.6 ENGINE OIL AND FILTER	4.45	General	
Checking and Adding Oil		Cables and Hand Levers	
Removing and Replacing Oil Filler Cap Oil Level Cold Check		Foot Shift Lever and Rear Brake Pedal	
Oil Level Hot Check		Jiffy Stand	
Changing Oil and Filter		Steering Head Bearings	1-36
Draining Oil Tank			
Removing Oil Filter			

1.15 BRAKES		1.23 EXHAUST SYSTEM	
General	1-37	Exhaust System Leak Check	1-65
Brake Lines	1-37	4 0 4 VAULEEL AL IONIMENIT	
Fluid Level		1.24 WHEEL ALIGNMENT	
Troubleshooting	1-39	Wheel Alignment	
1.16 BRAKE PADS AND DISCS: XL MO	ODELS	Checking Wheel Alignment	
		Adjusting Wheel Alignment	1-67
Inspection		1.25 SUSPENSION ADJUSTMENTS	
Brake Disc Thickness, Lateral Runout and	1-40		1 60
Warpage	1-40	Front Fork: XR 1200XSpring Preload	
Brake Pad Replacement: Front		Rebound Damping	
Brake Pad Replacement: Rear		Compression Damping	
4 47 DDAVE DADO AND DIOCO. VD	1000V	Shock Absorber Preload: All Models	
1.17 BRAKE PADS AND DISCS: XR 1	1200X	Shock Absorber Rebound and Compression: XR 1200X.	
Inspection	1-47	Shock Absorber Rebound Damping Adjustment	1-70
Brake Pads	1-47	Shock Absorber Compression Damping	
Brake Disc Thickness, Lateral Runout and		Adjustment	
Warpage		Suspension Tuning: XR 1200X	1-70
Brake Pad Replacement: Front		1.26 HEADLAMP ALIGNMENT	
RemovalInstallation			4 70
Brake Pad Replacement: Rear		Headlamp Alignment	
Removal		Headlamp: AdjustmentAdjustment: XL 1200X/C/C ANV/CP/CA/CB/V	
Installation		Adjustment: XL 883R/L/N, XR 1200X	
		Adjustment. AL GOOTVEAN, ART 1200A	.1 70
1.18 SPARK PLUGS		1.27 STORAGE	
Removal	1-53	Placing in Storage	1-74
Inspection		Removal From Storage	
Cleaning		•	
Installation		1.28 TROUBLESHOOTING	
Spark Plug Cable Inspection	1-54	General	1-76
1.19 STEERING HEAD BEARINGS		Engine	
Fall-Away	4 55	Starter Motor Does Not Operate or Does Not Turn E	
Measurement.		Over	
Adjustment		Engine Turns Over But Does Not StartStarts Hard	
Lubrication		Starts But Runs Irregularly or Misses	
		Spark Plug Fouls Repeatedly	
1.20 CRITICAL FASTENERS		Pre-Ignition or Detonation (Knocks or Pings)	
Inspection	1-56	Check Engine Light Illuminates During Operation	
Checking Torques on Fasteners	1-56	Overheating	1-77
4 04 ENGINE MOUNTS AND STADIL	7ED	Valve Train Noise	
1.21 ENGINE MOUNTS AND STABILI	ZEK	Excessive Vibration	
LINKS		Lubrication System	
Inspection	1-58	Oil Does Not Return To Oil Tank	
·		Engine Uses Too Much Oil Or Smokes Excessively. Engine Leaks Oil From Cases, Pushrods, Hoses,	1-77
1.22 BATTERY MAINTENANCE		Etc	1-77
General	1-59	Low Oil Pressure	
Battery Disconnection and Removal		High Oil Pressure	
Cleaning and Inspection		Electrical System	
Voltmeter Test		Alternator Does Not Charge	1-78
Voltmeter Test		Alternator Charge Rate Is Below Normal	
Charging Battery		Speedometer Operates Erratically	
Safety Precautions Using a Battery Charger		Transmission	
Battery Installation and Connection		Shifts Hard	
Storage		Jumps Out Of Gear	
		Clutch SlipsClutch Drags Or Does Not Release	
		Clutch Chatters	
			10

Handling		Wheel Lacing: Straight Flange Hub, Dual Hole Circ	cle2-31
Brake Does Not Hold Normally		2.7 CHECKING AND TRUING WHEE	LS
CHASSIS		Cast Wheel Runout	
CHASSIS		Wheel Stand	
		Lateral Runout	
2.1 FASTENER TORQUE VALUES		Radial Runout	
Fastener Torque Values in this Chapter	2-1	Laced Wheel Rim Offset	
		Truing Laced Wheels	
2.2 SPECIFICATIONS		Radial Runout	
Tables	2-9	Lateral Runout	2-35
Chassis		2.8 FRONT BRAKE MASTER CYLIN	DFR
Wheels and Tires	2-11		
		General	
2.3 VEHICLE IDENTIFICATION NU	MBER	InspectionRemoval	
(VIN)		Disassembly	
Vehicle Identification Number (VIN)	2-12	Cleaning, Inspection and Repair	
General		Assembly	
Location		Installation	
Abbreviated VIN		IIIStaliation	2-42
	2-12	2.9 FRONT BRAKE CALIPER: XL M	ODELS
2.4 TIRES		Removal	2-45
Removal	2-14	Disassembly	2-46
Cleaning, Inspection and Repair	2-14	Cleaning, Inspection and Repair	2-48
Installation		Assembly	
Mounting	2-14	Lubricating Front Caliper Bolt Pins and Boots	2-49
Tube Type Tires	2-14	Installing Brake Pads in Caliper	2-50
Tubeless Tires	2-15	Installation	2-51
Checking Tire Runout	2-15		
Lateral Runout	2-15	2.10 FRONT BRAKE CALIPER: XR 1	1200X
Radial Runout	2-16	Removal	2-53
Wheel Balancing	2-16	Disassembly	
Static vs Dynamic	2-16	Cleaning, Inspection and Repair	
Weights	2-16	Assembly	
2.5 WHEELS		Installation	2-57
General	2-18	2.11 REAR BRAKE MASTER CYLING	ER: XL
Wheel Bearing End Play		MODELS	
Front Wheel			
Removal		General	
Disassembly: Cast Front Wheel		Inspection	
Assembly Cast Single Disc		Removal	
Assembly Cast Dual Disc: XL 883R		Disassembly	
Assembly Cast Dual Disc: XR 1200X		Cleaning and Inspection	
Disassembly: Laced Front Wheel		Assembly	
Assembly: Laced Front Wheel		Installation	2-62
Installation		2.12 REAR BRAKE MASTER CYLING	IED. VD
Rear Wheel			IEK. AK
Removal		1200X	
Disassembly		General	2-64
Cleaning and Inspection		Inspection	2-64
Assembly		Removal	
Installation		Disassembly	
Sealed Wheel Bearings		Cleaning, Inspection and Repair	
Inspection		Assembly	
Removal		Installation	
Installation	2-27		
2.6 WHEEL LACING		2.13 REAR BRAKE MASTER CYLIN	DER
	0.00	RESERVOIR	
Wheel Lacing: Straight Flange Hub. Single Hole		Removal: XL Models	2-69

Installation: XL Models		Installation	2-102
Removal: XR 1200X		2.20 FRONT FORK: XR 1200X	
Installation: XR 1200X	2-71		
2.14 REAR BRAKE CALIPER: XL MO	ODFLS	Removal	
		Disassembly	
Removal		Initial Disassembly	
Disassembly		Drain the Fork Oil	
Cleaning, Inspection and Repair		Complete Disassembly	
Lubricating Rear Caliper Bolt Pins and Boots		Cleaning and Inspection	
Assembly		Assembly	
Installation	2-77	Piston Rod Service	
2.15 REAR BRAKE CALIPER: XR 12	UUX	Initial Assembly	
		Fill with Fork Oil	
Removal		Complete Assembly	
Disassembly		Installation	2-108
Cleaning, Inspection and Repair		2.21 FORK STEM AND BRACKET	
Assembly			
Installation	2-83	ASSEMBLY	
2.46 DDAVE LINES		Removal and Disassembly	2-109
2.16 BRAKE LINES		Cleaning, Inspection and Repair	
Front Brake Line	2-86	Assembly and Installation	
Removal	2-86		
Installation	2-86	2.22 BELT GUARD AND DEBRIS	
Front Brake Line Routing	2-88	DEFLECTOR	
XL 883R	2-88		0.444
XL 883L/N, XL 1200X, XL 1200C/C ANV/CP v	//Pull	Belt Guard: XL Models	
Back		Removal	
XL 1200V/CP/CB w/Mini-Ape	2-89	Installation	
XL 1200CP/CA with Drag Bar	2-89	Debris Deflector: XL Models	
XR 1200X		Removal	
Rear Brake Line: XL Models	2-90	Installation	
Removal	2-91	Belt Guard: XR 1200X	
Installation	2-91	Removal	
Rear Brake Line: XR 1200X	2-92	Installation	
Removal	2-92	Debris Deflector: XR 1200X	
Installation	2-93	Removal	
		Installation	2-112
2.17 BLEEDING BRAKES		2.23 REAR FORK	
General	2-94		
Procedure		Removal	
		Disassembly	
2.18 LEFT SIDE COVER		Cleaning and Inspection	
General	2-06	Assembly	
Opening Left Side Cover		Installation	2-114
Closing Left Side Cover		2.24 CHOCK ARCORDER	
Removing Left Side Cover		2.24 SHOCK ABSORBERS	
Installing Left Side Cover		Removal	2-116
Installing Left Side Cover	2-91	Cleaning and Inspection	2-116
2.19 FRONT FORK: XL MODELS		Installation	2-116
		Shock Disposal: Schrader Valve Models	2-117
Changing Fork Oil: XL Models			
Drain Forks: XL 883N/R		2.25 STABILIZER LINKS	
Fill Forks: XL 883N/R	2-98	General	2-118
Drain Forks: XL 883L and XL 1200X/C/C	0.00	Upper Front Stabilizer Link	
ANV/CP/CA/CB/V		Removal	
Removal		Installation	
Disassembly		Lower Front Stabilizer Link	
Drain Fork Oil		Removal	
Fork Disassembly		Installation	
Cleaning, Inspection and Repair		Rear Stabilizer Link	
Assembly		Removal	
Fill with Fork Oil	2-101	Installation	
		ottailation	

2.26 FRONT ENGINE MOUNT/ISOLAT	OR	License Plate Lamp Module: XL 883N and XL 1200X/V	2 145
Removal		Seat Nut	
Installation	2-120	Fender Extension	
2.27 REAR ENGINE MOUNT/ISOLATO	)B	Wire Harness with Conduit	
		Wire Retention Bracket	
Removal		License Plate Bracket: XL 883R/L	
Installation	2-123	Removal	
2.28 THROTTLE CABLES: ALL MODE	ELS	InstallationLicense Plate Bracket: XL 1200C/C ANV/CP/CA/CB	
Removal and Disassembly		LICENSE FIALE BIACKEL AL 1200C/C ANV/CF/CA/CB	2-140
Cleaning and Inspection		2.34 REAR FENDER AND LICENSE P	LATE
Assembly and Installation		BRACKET: XL 883N, XL 1200X/V	
2.29 CLUTCH CONTROL		General	2-147
		Removal and Disassembly	
Removal and Disassembly		Assembly and Installation	2-149
Clutch Cable: Lower		2 25 DEAD FENDED. VD 4200V	
Clutch Lever and Cable: Upper	2-13U 2-131	2.35 REAR FENDER: XR 1200X	
Assembly and Installation		Removal	
Clutch Hand Control		Installation	2-152
Clutch Lever and Clutch Cable: Upper	2-132	2.36 SAREE GUARD: INDIA MODELS	;
Clutch Cable: Lower	2-132		
2.30 HANDLEBAR		Saree Guard: XL 883R, XL 1200C/C ANV (India) Right, Left-Rear	
		Left-Front	
Removal			
XL 1200C/C ANV		2.37 REAR LICENSE PLATE: INDIA MC	)DELS
XL 1200CP/CA/CB		Rear License Plate: XL Models (India)	2-155
All XL Models except XL 1200C/C ANV		XL 883L/R, XL 1200C/C ANV	
XR 1200X		XL 883N, XL 1200X	2-155
Installation		2.38 JIFFY STAND	
XL 1200C/C ANV/CP with One-Piece Riser			0.450
XL 1200CP		RemovalCleaning and Lubrication	
XL 1200VAll XL Models except XL 1200C/C ANV		Installation	
XR 1200X			2 101
All Models		2.39 SEAT	
Left Hand Grip	2-137	Seat: XL Models	2-158
Removal		Removal	
Installation	2-137	Installation	
2.31 FRONT FENDER		Seat: XR 1200X	
All Models	2 120	RemovalInstallation	
	2-130	Passenger Pillion: XR 1200X	
2.32 FRONT LICENSE PLATE: INDIA		Removal	
MODELS		Installation	
Front License Plate: XL Models (India)	2-140	2.40 RIDER FOOT CONTROLS: XL	
XL 883L/N/R		MID-MOUNT CONTROLS	
XL 1200X/C/C ANV	2-140		
2.33 REAR FENDER: ALL XL MODEL	S	Right Footrest and Rear Brake Pedal Assembly	
	.0	RemovalInstallation	
<b>EXCEPT XL 883N, XL 1200X/V</b>		Left Footrest and Shift Lever Assembly	
XL 883R/L		Removal	
Removal		Installation	
InstallationXL 1200C/C ANV/CP/CA/CB		2.44 DIDED FOOT CONTROL OF Y	
Removal		2.41 RIDER FOOT CONTROLS: XL	
Installation		FORWARD CONTROLS	
Fender Preparation		Right Footrest and Rear Brake Pedal Assembly	
Tail Lamp Assembly	2-144	Removal	2-163

Installation		Compression Test	
Left Footrest and Shift Lever Assembly	2-164	Cylinder Leakage Test	3-14
Removal	2-164	Diagnosing Smoking Engine or High Oil Consumption.	
Installation		Check Prior to Cylinder Head Removal	3-15
Adjusting Shift Pedal: Forward Controls Models	2-165	Check After Cylinder Head Removal	3-15
A 40 DIDED FOOT CONTROL OF VD 4	000	Adjustment and Testing	
2.42 RIDER FOOT CONTROLS: XR 1	200X	General	3-15
Right Footrest and Rear Brake Pedal Assembly	2-166	3.6 ENGINE LUBRICATION SYSTEM	
Removal			
Installation		Oil Pump Operation	
Left Footrest and Shift Lever Assembly		Oil Flow: XL Models	
Removal	2-167	Oil Flow: XR 1200X	3-18
Installation		2.7 HOW TO HEE THIS SECTION	
Adjusting Shift Lever	2-168	3.7 HOW TO USE THIS SECTION	
2.43 PASSENGER FOOTRESTS		Typical Symptoms	
		Top End Repair	
XL Models		Bottom End Repair	3-25
Removal		3.8 TOP END SERVICE	
Installation			
XR 1200X		Engine in Chassis	
RemovalInstallation		Engine Removed from Chassis	3-27
IIIStaliation	2-170	3.9 BOTTOM END SERVICE	
2.44 FORK LOCK			
Removal	0.474	Engine in Chassis	
Installation		Engine Removed From Chassis	3-29
IIIstaliation	2-172	3.10 REMOVING ENGINE FROM CHAS	212
2.45 MEDALLIONS, SERIALIZED BA	DGES		
AND TANK EMBLEMS		Procedure: XL Models	
		Procedure: XR 1200X	3-33
Removal		3.11 INSTALLING ENGINE IN CHASSIS	
Installation	2-1/3		
ENGINE		Procedure: XL Models	
		Procedure: XR 1200X	3-41
3.1 FASTENER TORQUE VALUES		3.12 PRECISION COOLING SYSTEM: >	(R
		1200X	
Fastener Torque Values in this Chapter	3-1		
3.2 SPECIFICATIONS		General	
		Return Oil Manifold	
Specifications: Sportster Models	3-5	Removal	
3.3 OIL PRESSURE		Installation Cylinder Head Oil Return Lines	3-45
3.3 OIL PRESSURE		Removal	
Operation	3-10	Installation	
All Models		Cylinder Head Oil Feed Assembly	
XL Models	3-10	Removal	
XR 1200X	3-10	Installation	
Oil Pressure Indicator Lamp		Oil Pump Lines	
Checking Oil Pressure		Removal	
Connecting Gauge: XL Models		Installation.	
Connecting Gauge: XR 1200X		Oil Cooler	
Testing Pressure		Removal	
Removing Gauge: XL Models		Installation	
Removing Gauge: XR 1200X			
Finalize Test	3-11	3.13 TOP END OVERHAUL: DISASSEN	<b>IBLY</b>
3.4 CRANKCASE BREATHING SYST	FМ	General	
		Stripping Motorcycle for Top End Repair	
XL Models		Cylinder Heads	
XR 1200X	3-13	Disassembling Rocker Covers	
3.5 TROUBLESHOOTING		Removing Cylinder Head	
		Disassembling Pushrods and Covers	
Diagnosing Valve Train Noise	3-14	Cylinder and Piston	

3.14 CYLINDER HEAD		Bushing Installation: XL Only	
Disassembly	3-56	Cam Gear Bushings in Right Crankcase	
Cleaning and Inspection		Cam Gear Bushings (Except Rear Intake Bus	
Cylinder Heads	3-56	Gearcase Cover	
Rocker Arm Assemblies		Rear Intake Cam Gear Bushing in Gearcase	
Valves		Pinion Shaft Bushing in Gearcase Cover	
Valve Seats		Bushing Reaming: XL Only	
Valve Guides		Cam Gear Bushings in Right Crankcase	
Valve Springs		Cam Gear Bushings (Except Rear Intake Bus	
Spark Plug Threads		Gearcase Cover	
Pushrods		Rear Intake Cam Gear Bushing in Gearcase	
Replacing Rocker Arm Bushings		Pinion Shaft Bushing in Gearcase Cover	3-92
Replacing Valve Guides		3.19 CRANKCASE	
Removal			
Installation		General	
Refacing Valve Seats		Disassembly	
Replacing Valve Seats		Fitting Pinion Bearings	
Assembly		Outer and Inner Races	
•		Bearing Selection	
3.15 CYLINDER AND PISTON		Inner Bearing Finish Example	
Cleaning, Inspection and Repair	3-68	Lapping Engine Main Bearing Races	3-98
Checking Gasket Surface		3.20 OIL PUMP: XL MODELS	
Measuring Cylinder Bore		3.20 OIL PUIVIP. AL IVIODELS	
Measuring Piston to Cylinder Fit		General	3-100
Boring and Honing Cylinder		Removal	3-101
Fitting Piston Rings		Disassembly	3-101
Connecting Rod Bushings		Cleaning and Inspection	3-101
Removing Upper Connecting Rod Bushings		Assembly	3-101
Installing Upper Connecting Rod Bushings		Installation	3-102
Reaming Upper Connecting Rod Bushings		0.04.0U DUMB VD 4000V	
Honing Upper Connecting Rod Bushings		3.21 OIL PUMP: XR 1200X	
Repair		General	3-103
Тора		Disassembly	
3.16 TOP END OVERHAUL: ASSEME	BLY	Cleaning and Inspection	
General	2.76	Assembly	
Piston and Cylinder			
Tappet Covers, Pushrod Covers and Pushrods		3.22 BOTTOM END OVERHAUL: AS	SEMBLY
Cylinder Head		Crankcase	3-108
Rocker Covers		Installing Piston Oil Jets	
Inner Cover		Installing Pinion Shaft Bearings	
Breather: XL Models		Installing Left Main Bearing	
Breather: XR 1200X		Assembling Crankcase Halves	
Outer Cover		Installing Cylinder Base Studs	
Assembling Motorcycle After Top End Repair		Cam and Pinion Gear Identification	
r tooding motor of one r titler top = title tropation		Cam Gears and Gearcase Cover: XL Models	3-113
3.17 BOTTOM END OVERHAUL:		Cam Gears and Gearcase Cover: XR 1200X	3-115
DISASSEMBLY		Tappets	3-118
		General	
General		Cleaning and Inspection	3-118
Oil Pump: XL Models		Installation	3-118
Tappets			
Cam Gear End Play		3.23 OIL FILTER MOUNT	
Gearcase Cover and Cam Gears: XL Models		General	3-120
Oil Pump Housing/Gearcase Cover and Cam Gears		Disassembly	
1200X		Cleaning and Inspection	
Crankcase		Assembly	
Split Crankcase			
Piston Oil Jets		3.24 OIL TANK	
Removing Cylinder Base Studs	3-88	Pressure Relief Valve	2.101
3.18 GEARCASE: XL MODELS		Oil Line Routing: XL Models	
		Oil Line Routing: XR 1200X	
Bushing Inspection and Removal: XL Only	3-89	On Line Routing. AIX 1200A	3-121

RemovalInstallation		AssemblyInstallation	
FUEL SYSTEM		4.10 IDLE AIR CONTROL (IAC)	
4.1 FASTENER TORQUE VALUES		GeneralRemoval: XL Models	
		Installation: XL Models	
Fastener Torque Values in this Chapter	4-1	Removal: XR 1200X	4-35
4.2 SPECIFICATIONS: FUEL SYSTEM	М	Installation: XR 1200X	4-36
Specifications	4-4	4.11 TEMPERATURE MANIFOLD ABS	OLUTE
4.3 AIR CLEANER ASSEMBLY		PRESSURE (TMAP) SENSOR	
XL Models except XL 1200V	4-5	General	
Removal		Removal: XL ModelsInstallation: XL Models	
Installation		Removal: XR 1200X	
XL 1200V		Installation: XR 1200X	
RemovalInstallation			
XR 1200X		4.12 OXYGEN (O2) SENSOR	
Removal		General	4-40
Installation		Removal	
		Installation	4-41
4.4 FUEL TANK: XL MODELS	4.0	4.13 EXHAUST SYSTEM: XL MODE	LS
Purging and Disconnecting Fuel Supply Hose Removing Fuel Tank		General	4-42
Cleaning and Inspection		Removal	
Installing Fuel Tank		Mufflers and Exhaust Pipes	
Connecting Fuel Hose and Filling Fuel Tank		Muffler Interconnect Bracket	
Vapor Valve		Installation	
A E FLIEL TANK, VD 4000V		Muffler Interconnect Bracket	
4.5 FUEL TANK: XR 1200X		Exhaust Pipes and Mufflers	4-44
Purging and Disconnecting Fuel Supply Hose		4.14 EXHAUST SYSTEM: XR 1200X	
Removing Fuel Tank  Disassemble Fuel Tank		General	4-46
Cleaning and Inspection		Removal	
Assemble Fuel Tank		Mufflers	
Installing Fuel Tank		Header Pipes	4-47
Connecting Fuel Hose and Filling Fuel Tank		Installation	4-47
4.6 THROTTLE POSITION SENSOR	(TPS)	4.15 FUEL INJECTORS	
General	-	Removal	4-49
Removal: XL Models		Installation	
Installation: XL Models			
Removal: XR 1200X		4.16 FUEL PUMP	
Installation: XR 1200X	4-19	General	4-52
4.7 ENCINE TEMPERATURE (ET) CE	NCOD	Removal	
4.7 ENGINE TEMPERATURE (ET) SE		Disassembly	
General		Pressure Regulator and Filter Housing	
Removal		Fuel Pump Assembly and Pump Bracket Low Fuel Level Sensor Assembly	
Installation	4-21	Assembly	
4.8 INDUCTION MODULE: XL MODE	LS	Low Fuel Level Sensor Assembly	
Removal	4-23	Fuel Pump Assembly and Pump Bracket	
Disassembly		Pressure Regulator and Filter Housing	
Assembly		Installation	4-55
Installation		4.17 FUEL FILTER ELEMENT	
4.9 INDUCTION MODULE: XR 1200X	,	General	4-57
Removal		Removal	
Disassembly		Installation	
Diodocomory			

4.18 FUEL PRESSURE TEST		Friction Plates	
General	4-58	Clutch Shell/Hub Inspection	
Testing		Clutch Shell Bearing Replacement	
Connect the Fuel Pressure Gauge		Assembly	
Perform Test		Installation	5-22
Return to Service		5.6 DRIVE BELT	
4.19 INTAKE LEAK TEST		Drive Belt Handling	5-24
		Drive Belt: XL Models	
General		Removal	
Leak Tester		Installation	
Parts List		Idler Pulley: XR 1200X	
Tester Assembly	4-61	Removal	
Tester Adjustment		Installation	
Procedure	4-61	Drive Belt: XR 1200X	
4.20 EVAPORATIVE EMISSIONS C	ONTROL	Removal	
		Installation	5-27
General Consister		E 7 TRANSMISSION DOWER ELOW	
Charcoal Canister		5.7 TRANSMISSION POWER FLOW	
Installation		General	5-28
Vapor Valve: XL Models		F O CACE DICACCEMBLY FOR	
Removal		5.8 CASE DISASSEMBLY FOR	
Installation.		TRANSMISSION REMOVAL	
Hose Routing		General	5-30
Induction Module		Engine Removal and Disassembly	
Canister Hose Routings: XL Models			
Canister Hose Routings: XR 1200X		5.9 TRANSMISSION REMOVAL AND	
		DISASSEMBLY	
DRIVE/TRANSMISSION		Transmission Removal From Left Crankcase	5-33
		Mainshaft/Countershaft	
<b>5.1 FASTENER TORQUE VALUES</b>		Mainshaft Disassembly	
Fastener Torque Values in this Chapter	5_1	Cleaning and Inspection	
r asterier forque values in this oriapter	5-1	Countershaft Disassembly	
5.2 SPECIFICATIONS: DRIVE		Cleaning and Inspection	
Sportster Specifications	5-3	E 40 TRANSMISSION ASSEMBLY	
		5.10 TRANSMISSION ASSEMBLY	
5.3 PRIMARY COVER		Mainshaft Assembly	
Removal	5-4	Countershaft Assembly	5-37
Clutch Release Ramp		5.11 MAIN DRIVE GEAR AND BEARIN	JC
Primary Chain Adjuster		3.11 MAIN DRIVE GEAR AND BEARIN	10
Installation		General	5-39
- /		Removal	
<b>5.4 PRIMARY DRIVE AND CLUTCI</b>	H: XL	Main Drive Gear	
MODELS		Main Drive Gear Ball Bearing	
Troubleshooting	5-8	Disassembly	
Removal		Assembly	
Disassembly		Installation	
Inspection and Repair: XL Models		Main Drive Gear Bearing: XL Models	
Assembly		Main Drive Gear Bearing: XR 1200X  Main Drive Gear	
Installation		Main Drive Gear Seal	
		Wall Bive Odd Godi	0 10
5.5 PRIMARY DRIVE AND CLUTCI	1: XK	5.12 TRANSMISSION RIGHT CASE	
1200X		BEARINGS	
Troubleshooting	5-15		E 40
Removal		Removal  Countershaft Needle Bearing	
Disassembly		Shifter Drum Bushing	
Adjusting Screw		Installation	
Clutch Pack Cleaning and Inspection		Countershaft Needle Bearing	
Steel Plates		Shifter Drum Bushing	

5.13 TRANSMISSION LEFT CASE BEAF	RINGS	XL Models	
Removal	5-50	XR 1200X	
Mainshaft and Countershaft Bearings		Installation	
Shifter Drum Bushing		XL Models	
Installation		XR 1200X	
Mainshaft and Countershaft Bearings	5-50	6.7 TURN SIGNAL AND SECURITY N	/ODULE
Shift Drum Bushing	5-50	(TSM/TSSM/HFSM)	IODOLL
<b>5.14 TRANSMISSION INSTALLATION</b>		General	6-14
General	5-51	Removal	6-14
Installation		Installation	6-14
Shifter Forks and Drum Assembly		0.0 DATTEDY 0.4 DL 50	
Assembling Crankcases		6.8 BATTERY CABLES	
Shifter Shaft Installation		Removal	6-15
		Installation	6-15
5.15 TRANSMISSION SPROCKET		6.9 BATTERY TRAY	
Removal			
Preparation		General	
XL Models		Removal	
XR 1200X		Installation	6-18
All Models		6.10 STARTER	
Installation			
Preparation		Removal	
XL 1200X		Touch-Up Paint	
XR 1200X		Installation	
All Models	5-50	Solenoid	
ELECTRICAL		Cover and Plunger Removal	
LEEGITTIOAL		Short Post Contact: Starter	
C 4 FACTENED TODOUE VALUES		Long Post Contact: Battery Positive	
6.1 FASTENER TORQUE VALUES		Plunger and Cover Installation	
Fastener Torque Values in this Chapter	6-1	Removal	
		Inspection	
6.2 SPECIFICATIONS: ELECTRICAL		Installation	
Specifications	6-5		0-21
6.3 FUSES AND RELAYS		6.11 IGNITION SWITCH	
General	6-6	Removal	
Main Fuse		Installation	6-23
Removal		6.12 SPARK PLUG CABLES	
Installation			
Fuses		General	
Relays	6-7	Removal	
6.4 SPEEDOMETED, VI. MODELS		Installation	0-25
6.4 SPEEDOMETER: XL MODELS		6.13 IGNITION COIL	
Removal		General	6-27
Installation		Removal	6-27
Reset Switch		Installation	6-28
Speedometer	0-0	6.14 HEADLAMP	
6.5 SPEEDOMETER AND TACHOMET	ER:		
XR 1200X		Bulb Replacement	
Speedometer Removal	6_10	Hi/Lo Beam	
Speedometer Installation		Position Lamp: HDI	
Trip Odometer Reset Switch Replacement		Headlamp Mounts	
Tachometer Removal		Mount: XL 883L/N/R, XR 1200X Models Mount: XL 1200X	
Tachometer Installation.		Mount: XL 1200X	
		Visor: XL 1200C/C ANV/CP/CA/CB	
6.6 ELECTRONIC CONTROL MODULE	(ECM)	VISUL AL 12000/G ANV/GF/GA/GB	0-32
General	6-12		
Removal	6-12		

6.15 INDICATOR LAMP MODULE		Replacement	6-57
General		6.22 CRANK POSITION SENSOR (CKP	)
Preliminary Disassembly: All Models		General	
Replacement: XL 1200C/C ANV/CP/CA except with Mir		Removal	
Handlebar		Installation	
Replacement: XL 883R/L/N, XL 1200X/V, XL 1200CP/C Mini-Ape Handlebar			
Replacement: XR 1200X		6.23 VOLTAGE REGULATOR	
Assembly: All Models		General	6-60
•		Removal: XL Models	6-60
6.16 TAIL LAMP: ALL MODELS EXCEP	TXL	Installation: XL Models	
883N/XL 1200X/V		Removal: XR 1200X	
Bulb Replacement Except XL 1200C/C ANV/CP/CA/CB	6-36	Installation: XR 1200X	6-62
Base Replacement: XL 883R/L and XR 1200X		6.24 ALTERNATOR	
LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB			0.04
Removal	6-38	Removal and Disassembly  Rotor: XL Models	
Installation	6-39	Stator	
6.17 LICENSE PLATE LAMP MODULE:	VI	Cleaning and Inspection	
	<b>AL</b>	Assembly and Installation	
883N, XL 1200X/V		Stator	
General		Rotor: XL Models	6-65
Removal: Domestic Only		Final Assembly	6-65
Installation: Domestic Only		6 25 VEHICLE SPEED SENSOR (VSS)	
Removal: Non-Domestic		6.25 VEHICLE SPEED SENSOR (VSS)	
Installation: HDI	6-44	General	
6.18 FRONT TURN SIGNALS		Removal	
Bulb Replacement	6 45	Installation	6-67
All Except XL 1200X		6.26 NEUTRAL INDICATOR SWITCH	
Removal		General	6 69
Installation		Replacement	
XL 1200X	6-46		0 00
Removal	6-46	6.27 MAIN WIRING HARNESS	
Installation	6-46	Wire Harness Connectors	6-69
6.19 REAR TURN SIGNALS		Removal	
		Installation	6-72
General		COOFIECTDICAL CADDICS	
Bulb Replacement		6.28 ELECTRICAL CADDIES	
Tail and Stop LampsXL 883R/L		Wire Harness Caddy: XL Models	
Removal		General	
Installation		Removal	
XL 883N and XL 1200X/V	6-50	Installation	
Removal	6-50	Removal	
Installation		Installation	
XL 1200C/C ANV/CP/CA/CB			
Removal		6.29 JIFFY STAND SENSOR (JSS):	
InstallationXR 1200X		INTERNATIONAL MODELS	
Removal		Removal	6-80
Installation		Installation	
		Operation	6-81
6.20 REAR LIGHTING CONVERTER		Jiffy Stand Down: Engine Non-Start	6-81
<b>MODULE: XL 883N, XL 1200X/V (DOM)</b>		Jiffy Stand Down: Engine Starts and Stalls	
General	6-55	Jiffy Stand Drops	6-81
Removal		6.30 SECURITY SYSTEM/OPTIONAL SI	BEN
Installation			
0.04 DEAD OTOD   414D 000000000		Fob Battery	
6.21 REAR STOP LAMP SWITCH		Battery Replacement Schedule Battery Replacement	
Conoral	6.57	Battery Replacement	0-02

Optional Siren		6.38 TSM/HFSM: PASSWORD LEA	RN
Removal Disassembly		General	
Assembly		Password Learn	6-104
Installation		APPENDIX A CONNECTOR R	FDAIR
Siren Battery		ATTENDIX A CONNECTOR IX	
Battery Replacement Schedule		A 4 AUTOFUCE UNCEALED FLECT	TDICAL
Battery Replacement	6-83	A.1 AUTOFUSE UNSEALED ELEC	IRICAL
6.31 OIL PRESSURE SWITCH		CONNECTOR	
General	6 05	Autofuse Unsealed Connector Repair	
Removal		General	
Installation.		DisassemblyAssembly	
6.32 HORN			
	0.07	A.2 BOSCH COMPACT 1.1M CONN	IECTOR
Troubleshooting		Bosch Compact 1.1M Connector	
Replacement: Front Mount		General	
Replacement: Side Mount		Housings	
		Removing Socket Terminal Installing Socket Terminal	
6.33 HANDLEBAR SWITCH ASSEME	BLIES	-	
Repair Procedures		A.3 DELPHI 100W MICRO-PACK SI	EALED
Connectors	6-89	CONNECTOR	
6.34 RIGHT HANDLEBAR SWITCHES	3	Delphi 100W Micro-Pack Sealed Connector Rep	airA-3
Removal		General	A-3
Disassembly		Separating Socket Housing From ECM	
Switch Repair/Replacement		Mating Socket Housing To ECM	
Switch and Lead Replacement		Removing Socket Terminal Installing Socket Terminal	
Switch Only Replacement: Upper Housing		Crimping Terminals	
Switch Only Replacement: Lower Housing			
Turn-Right Signal Switch Only		A.4 DELPHI 150 METRI-PACK SEA	LED
Front Stop Lamp Switch Only		CONNECTOR	
Installation		Delphi 150 Metri-Pack Sealed Connector Repair	A-5
		General	
<b>6.35 LEFT HANDLEBAR SWITCHES</b>		Separating Pin and Socket Housings	
Removal	6-97	Mating Pin and Socket Housings	
Disassembly		Removing Socket Terminal	
Switch Repair and Replacement		Inserting Socket Terminal	A-5
Switch and Lead Replacement		A.5 DELPHI 280 METRI-PACK UNS	EALED
Switch Only Replacement: Upper Housing Switch Only Replacement: Lower Housing		CONNECTOR	
Turn-Left Signal Switch Only		Fuse Block Repair	۸ 7
Clutch Interlock Switch Only		Removing Socket Terminals	
Assembly	6-98	Installing Socket Terminals	
Installation	6-99	Crimping Terminals	
6.36 PERSONAL IDENTIFICATION NU	IMBER	A.6 DELPHI 480 METRI-PACK UNS	EALED
(PIN)		CONNECTORS	EALED
General	6-101		oir A O
Initial PIN Entry		Delphi 480 Metri-Pack Unsealed Connector Rep General	
Changing the PIN		Separating Pin and Socket Housings	
Modifying an Existing PIN	6-101	Mating Pin and Socket Housings	
6.37 H-DSSS ACTUATION		Removing Socket Terminals	A-8
	0.400	Installing Socket Terminals	A-8
GeneralSidecar Configuration		A.7 DELPHI 630 METRI-PACK UNS	FALED
Actuation		CONNECTOR	
Fob Assignment			
Power Disruption and Configuring		Delphi 630 Metri-Pack Unsealed Connector Rep	aırA-9

Mating Pin and Socket Housings		A.14 DEUTSCH DI SEALED TERMINA	4L
Removing Socket Terminal		REPAIR	
Installing Socket Terminal		Deutsch DT Sealed Terminal Crimps	
		Preparing Wire Leads for Crimping	A-24
A.8 DELPHI 800 METRI-PACK SEALE	D MAIN	Crimping Terminal to Lead	
FUSE HOUSING		Inspecting Crimps	A-24
Delphi 800 Metri-Pack Sealed Main Fuse Housing		A.15 DEUTSCH DTM SEALED MINI	
Repair		TERMINAL REPAIR	
Removing Socket Terminals		Deutsch DTM Sealed Mini Terminal Crimps	۸ ۵۵
Installing Socket Terminals	A-10	Preparing Wire Leads for Crimping	
A.9 DELPHI METRI-PACK TERMINA	I	Crimping a Mini Terminal to Wire Lead	
REPAIR	_	Inspecting Crimps	
Metri-Pack Terminal Crimps	۸ 11		
Matching Terminal To Crimper		A.16 DEUTSCH DTM SEALED SOLID	
Preparing Wire Lead		BARREL MINI TERMINAL REPAIR	
Crimping Wire Core		Deutsch DTM Sealed Solid Barrel Terminal Crimps	A-26
Crimping Insulation/Seal		Preparing Wire Leads For Crimping	
Inspecting Crimps	A-12	Adjusting Crimper Tool	
A 40 DELDIUMICOO CA CEALED		Crimping a Barrel Contact To Wire Lead	
A.10 DELPHI MICRO 64 SEALED		Inspecting Crimps	A-26
CONNECTOR		A.17 JAE MX19 SEALED CONNECTO	R
Delphi Micro 64 Sealed Connector Repair		JAE MX19 Sealed Connectors	A-28
General		Connector Housings	
Separating Pin and Socket Housings		Removing Terminals	
Mating Pin and Socket Housings		Installing Terminals	
Removing TerminalInstalling Terminal		Crimping Terminals	
Preparing Wire Leads for Crimping			
Crimping Terminals		A.18 MOLEX CMC SEALED CONNEC	IOR
Inspecting Crimps		Molex CMC Sealed Connectors	A-29
		Separating the Connector	
A.11 DELPHI GT 150 SEALED CONN	ECTOR	Removing Terminals	
Delphi GT 150 Sealed Connector Repair	A-16	Installing Terminals	
General		Crimping Terminals	A-30
Separating Pin and Socket Housings	A-16	A.19 MOLEX MX 150 SEALED CONNE	CTOR
Mating Pin and Socket Housings			
Removing Socket Terminals		Molex MX 150 Sealed Connector Repair	
Installing Socket Terminals	A-16	Separating Pin and Socket Housings  Mating Pin and Socket Housings	
A.12 DELPHI GT 280 SEALED 73-TEF	INIME	Removing Terminals	
		Installing Terminals	
ECM CONNECTOR		Crimp Terminal to Lead	
Delphi GT 280 Sealed 73-Terminal ECM Connector		Prepare Lead	
Separating Socket Housing From ECM		Prepare Tool	
Mating Socket Housing To ECM		Position Terminal in the Punch/Die	
Socket Terminal		Insert Stripped Lead	A-33
ECM Ground Terminal	A-18	Crimp Terminal to Lead	A-34
A.13 DEUTSCH DT SEALED CONNE	CTOR	Inspect Crimp	A-34
Deutsch DT Sealed Connector Repair		A.20 TYCO 070 MULTILOCK UNSEAL	FD
General		CONNECTOR	
Separating Pin and Socket Housings			
Mating Pin and Socket Housings		Tyco 070 Multilock Unsealed Connector Repair	
Removing Socket Terminals		General Seeket Haveings	
Installing Socket Terminals		Separating Pin and Socket Housings	
Removing Pin Terminals		Mating Pin and Socket HousingsRemoving Terminals from Housing	
Installing Pin Terminals		Inserting Terminals into Housing	
Crimping Terminals	A-23	Preparing Wire Leads for Crimping	
		Crimping Terminals to Leads	

Inspecting Crimped TerminalsA-38		APPENDIX C COMPENSATING		
A.21 TYCO GET 64 SEALED CONN	NECTOR	SPROCKET		
Tyco GET 64 Sealed Connector				
General		C.1 COMPENSATING SPROCKET		
Housings		General		
Removing Socket Terminals		Removal and Disassembly	C-1	
Installing Socket Terminals  Crimping Terminals		Cleaning, Inspection and Repair		
		Sprocket Bearing		
A.22 TYCO MCP SEALED CONNEC	CTOR	RemovalInstallation		
Tyco MCP Sealed Connector	A-41	Assembly and Installation		
General				
Housing		APPENDIX D CONVERSIONS		
Removing the Large Terminals				
Removing the Small Terminals		D.1 METRIC CONVERSION		
Crimping Terminals		Conversion Table	D-1	
A.23 SEALED SPLICE CONNECTO		D.2 FLUID CONVERSIONS		
			D (	
Sealed Splice Connector Repair		United States System Metric System		
Preparing Wire Leads		British Imperial System		
Splicing Wire Leads				
Inspecting Seals		D.3 TORQUE CONVERSIONS		
ADDENDIV D WIDING		United States System		
APPENDIX B WIRING		Metric System	D-3	
B.1 CONNECTORS		APPENDIX E GLOSSARY		
Connector Locations	B-1			
Function/Location	B-1	E.1 GLOSSARY		
Place and Color		Acronyms and Abbreviations	E-1	
Connector Number		DEEEDENCE MATERIAL		
Repair Instructions	B-1	REFERENCE MATERIAL		
B.2 WIRING DIAGRAMS		TOOLS		
Wiring Diagram Information	B-4			
Wire Color Codes	B-4	TORQUE VALUES	XI	
Wiring Diagram Symbols				
2013 Sportster Wiring Diagrams	B-6	INDEX	XXXIII	

SUBJECT	PAGE NO.
1.1 FASTENER TORQUE VALUES	1-1
1.2 GENERAL	1-3
1.3 FUEL AND OIL	1-7
1.4 BULB REQUIREMENTS	1-9
1.5 MAINTENANCE SCHEDULE	
1.6 ENGINE OIL AND FILTER	
1.7 AIR FILTER	1-19
1.8 TIRES AND WHEELS	
1.9 PRIMARY CHAIN	1-26
1.10 TRANSMISSION LUBRICANT	1-27
1.11 CLUTCH	
1.12 DRIVE BELT AND SPROCKETS	1-31
1.13 THROTTLE CONTROL	
1.14 CABLE AND CHASSIS LUBRICATION	1-36
1.15 BRAKES	1-37
1.16 BRAKE PADS AND DISCS: XL MODELS	1-40
1.17 BRAKE PADS AND DISCS: XR 1200X	
1.18 SPARK PLUGS	1-53
1.19 STEERING HEAD BEARINGS	
1.20 CRITICAL FASTENERS	1-56
1.21 ENGINE MOUNTS AND STABILIZER LINKS	
1.22 BATTERY MAINTENANCE	1-59
1.23 EXHAUST SYSTEM	1-65
1.24 WHEEL ALIGNMENT	1-66
1.25 SUSPENSION ADJUSTMENTS	1-68
1.26 HEADLAMP ALIGNMENT	1-72
1.27 STORAGE	1-74
1.28 TROUBLESHOOTING	1_76

# **FASTENER TORQUE VALUES**

# FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE	VALUE	NOTES	
Air cleaner cover screw	36-60 in-lbs	4.1-6.8 Nm	1.5 MAINTENANCE SCHEDULE, General	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	1.7 AIR FILTER, XL Models except XL 1200V	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	1.7 AIR FILTER, XL 1200V	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	1.5 MAINTENANCE SCHEDULE, General	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	1.7 AIR FILTER, XL Models except XL 1200V	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	1.7 AIR FILTER, XL 1200V	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	1.12 DRIVE BELT AND SPROCKETS, Drive Belt Deflection	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	1.24 WHEEL ALIGNMENT, Wheel Alignment	
Battery cable connector nut	55-75 <b>in-lbs</b>	6.2-8.5 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection	
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	1.5 MAINTENANCE SCHEDULE, General	
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection	
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection	
Battery strap screw	36-60 in-lbs	4.1-6.8 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection	
Brake hose clamp to rear fork screw	30-40 in-lbs	3.4-4.5 Nm	1.12 DRIVE BELT AND SPROCKETS, Drive Belt Deflection	
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front	
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Front	
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.5 MAINTENANCE SCHEDULE, General	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front	
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Front	
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear	
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front	
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear	
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear	
Chain tensioner nut	20-25 ft-lbs	27.1-33.9 Nm	1.5 MAINTENANCE SCHEDULE, General	
Clutch cable adjuster jamnut	120 <b>in-lbs</b>	13.6 Nm	1.11 CLUTCH, Adjustment	
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.5 MAINTENANCE SCHEDULE, General	

FASTENER	TORQUE	VALUE	NOTES
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.10 TRANSMISSION LUBRICANT, Transmission Lubrication
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.10 TRANSMISSION LUBRICANT, Transmission Lubrication
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.11 CLUTCH, Adjustment
Fork bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	1.19 STEERING HEAD BEARINGS, Fall-Away
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	1.19 STEERING HEAD BEARINGS, Fall-Away
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm	1.5 MAINTENANCE SCHEDULE, General
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	1.5 MAINTENANCE SCHEDULE, General
Headlamp clamp nut: XL 883L/N/R, XR 1200X	120-240 <b>in-lbs</b>	14-27 Nm	1.26 HEADLAMP ALIGNMENT, Headlamp: Adjustment
Headlamp horizontal adjustment: XL 1200X/C/C ANV/CP/CA/CB/V	30-35 ft-lbs	40.7-47.5 Nm	1.26 HEADLAMP ALIGNMENT, Headlamp: Adjustment
Headlamp vertical adjustment: XL 1200X/C/C ANV/CP/CA/CB/V	30-35 ft-lbs	40.7-47.5 Nm	1.26 HEADLAMP ALIGNMENT, Headlamp: Adjustment
Oil drain hose worm clamp	6-10 <b>in-lbs</b>	0.7-1.1 Nm	1.6 ENGINE OIL AND FILTER, Changing Oil and Filter
Primary chain adjuster locknut	20-25 ft-lbs	27.1-33.9 Nm	1.9 PRIMARY CHAIN, Free Play Adjustment
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	1.5 MAINTENANCE SCHEDULE, General
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	1.10 TRANSMISSION LUBRICANT, Transmission Lubrication/Apply LOCTITE 565 THREAD SEALANT
Primary chain inspection cover	90-120 in-lbs	10.2-13.6 Nm	1.5 MAINTENANCE SCHEDULE, General
Primary chain inspection cover	90-120 in-lbs	10.2-13.6 Nm	1.9 PRIMARY CHAIN, Free Play Adjustment
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.5 MAINTENANCE SCHEDULE, General
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.5 MAINTENANCE SCHEDULE, General
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.18 SPARK PLUGS, Installation
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm	1.5 MAINTENANCE SCHEDULE, General
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm	1.8 TIRES AND WHEELS, Wheel Spokes
Switch housing screw	35-45 in-lbs	4.0-5.1 Nm	1.5 MAINTENANCE SCHEDULE, General
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	1.13 THROTTLE CONTROL, Cable Inspection and Lubrication

GENERAL 1.2

#### SERVICING A NEW MOTORCYCLE

# WARNING

Perform the service and maintenance operations as indicated in the regular service interval table. Lack of regular maintenance at the recommended intervals can affect the safe operation of your motorcycle, which could result in death or serious injury. (00010a)

Perform necessary set-up tasks before customer delivery. See applicable model year predelivery and set-up instructions.

The performance of new motorcycle initial service is required to keep warranty in force and to verify proper emissions systems operation. See <u>1.5 MAINTENANCE SCHEDULE</u>.

# SAFE OPERATING MAINTENANCE

#### NOTES

- Do not attempt to tighten engine head bolts or engine damage may result.
- During the initial break-in period, use only GENUINE HARLEY-DAVIDSON H-D 360 MOTORCYCLE OIL 20W50. Failure to use the recommended oil will result in improper break-in of the engine cylinders and piston rings.

Inspect motorcycle on a regular basis for additional maintenance needs. Routinely check components between regular maintenance intervals. Always inspect motorcycle after periods of storage before riding.

#### Check:

- Tires for correct pressure, excessive wear or any signs of tire damage.
- 2. Drive belt tension and condition.
- 3. Brakes, steering and throttle for responsiveness.
- 4. Brake fluid level and condition. Hydraulic lines and fittings for leaks. Also, check brake pads and discs for wear.
- 5. Cables for fraying, crimping and free operation.
- 6. Engine oil and transmission fluid levels.
- 7. Headlamp, auxiliary/fog lamp, tail lamp, stop lamp, horn and turn signal operation.

#### SHOP PRACTICES

# **Repair Notes**

General maintenance practices are given in this section.

## NOTES

- Repair = Disassembly/Assembly.
- Replacement = Substitute a new part for existing component.

All special tools and torque values are noted at the point of use.

All required parts or materials can be found in the parts catalog.

# Safety

Safety is always the most important consideration when performing any job.

- Always have a complete understanding of the task.
- Use common sense.
- Use the proper tools.
- Protect yourself and bystanders with approved eye protection

Don't just do the job, do the job safely.

# **Removing Parts**

Always consider the weight of a part when lifting. Use a hoist whenever necessary. Do not lift heavy parts by hand. If a hoist and adjustable lifting beam or sling are needed to remove some parts, verify that:

- The lengths of multiple chains or cables from the hoist to the part are equal and parallel.
- Slings, chains and cables are positioned directly over the center of the part.
- No obstructions will interfere with the lifting operation.
- Parts are not left suspended.

# **A**WARNING

Be sure to check capacity rating and condition of hoists, slings, chains and cables before use. Exceeding capacity ratings or using lifting devices that are in poor condition can lead to an accident, which could result in death or serious injury. (00466c)

Always use blocking or proper stands to support the part that has been hoisted. If a part cannot be removed, verify that all bolts and attaching hardware have been removed. Verify that no parts are in the way of the part being removed.

When removing hoses, wiring or tubes, always tag each part to verify proper installation.

# Cleaning

Always clean around lines or covers before they are removed. Plug, tape or cap holes and openings to keep out dirt, dust and debris. Clean and inspect all parts as they are removed. Verify all holes and passages are clean and open. After cleaning, cover all parts with clean lint-free cloth, paper or other material. Verify the part is clean when installed.

Thoroughly clean all parts to be reused before assembly. Clean parts promote better component operation and longer life. Seals, filters and covers used in this vehicle keep out extraneous dirt and dust. Keep these items in good condition to guarantee satisfactory operation.

When instructed to clean fastener threads or threaded holes, always:

- Clean all threadlocking material from fastener threads and threaded holes.
- Use a wire brush to clean fastener threads.
- Use a thread chaser or other suitable tool to clean threaded holes.
- Use PJ1 cleaner or equivalent to remove all traces of oil and contaminants from threads.
- Clear all threaded holes with low pressure compressed air.

Always verify cleanliness of blind holes before assembly. Tightening a screw with dirt, water or oil in the hole can cause castings to crack or break.

# Disassembly and Assembly

Always assemble or disassemble one part at a time. Do not work on two assemblies simultaneously. Make all necessary adjustments. Inspect your work when finished to verify that everything is done.

Operate the vehicle to perform any final check or adjustments. If all is correct, the vehicle is ready to go back to the customer.

# **Checking Torques on Fasteners**

Check torque using a torque wrench set to the minimum specification for that fastener. If the fastener does not rotate, the torque has been maintained. If the fastener rotates, remove it to determine if it has a threadlocking agent.

If it has a threadlocking agent, clean all material from the threaded hole. Replace the fastener with a **new** one or clean the original fastener threads and apply the appropriate threadlocking product. Install and tighten the fastener to specification.

If the fastener does not use a threadlocking agent, install and tighten it to specification.

# **Magnetic Parts Trays**

Magnetic parts trays are common in the service facility because they are convenient and can keep parts from becoming lost during a repair procedure. However, hardened steel parts can become magnetized when held in magnetic parts trays.

Metal fragments from normal wear are usually trapped in the oil filter or by the magnetic drain plug. Magnetized parts in the engine can retain these fragments, potentially causing accelerated engine wear and damage.

Never place parts that will be returned to service inside the vehicle's powertrain such as gears, thrust washers and especially bearings in magnetic parts trays.

# REPAIR AND REPLACEMENT PROCEDURES

#### **Hardware and Threaded Parts**

Install thread repair inserts when threaded holes in castings are stripped, damaged or not capable of withstanding specified torque.

Replace bolts, nuts, studs, washers, spacers and small common hardware if missing or damaged. Clean up or repair minor thread damage with a suitable tap or die.

Replace all damaged or missing lubrication fittings.

Use LOCTITE 565 THREAD SEALANT on pipe fitting threads.

# **Threadlocking Agents**

Always follow specific service manual procedures when working with fasteners containing preapplied threadlocking agents when fastener replacement is recommended. When re-using fasteners containing threadlocking agents, thoroughly clean all fasteners and threaded holes. Always use the recommended threadlocking agent for the specific procedure.

# Wiring, Hoses and Lines

Replace hoses, clamps, electrical wiring, electrical switches or fuel lines if they do not meet specifications.

# Instruments and Gauges

Replace damaged or defective instruments and gauges.

# Bearings

Always use the proper tools and fixtures when servicing bearings.

Anti-friction bearings must be handled in a special way. To keep out dirt and abrasives, cover the bearings as soon as they are removed from the package.

When bearings are installed against shoulders, always verify that the chamfered side of the bearing faces the shoulder. Lubricate bearings and all metal contact surfaces before pressing into place. Only apply pressure on the part of the bearing that makes direct contact with the mating part. Install bearings with numbered side facing out.

Only remove bearings if necessary. Removal usually damages bearings requiring replacement with **new** parts.

# **Bushings**

Do not remove a bushing unless damaged, excessively worn or loose in its bore. Press out bushings requiring replacement.

When pressing or driving bushings, always apply pressure in line with the bushing bore. Use a bearing/bushing driver or a bar with a smooth, flat end. Never use a hammer to drive bushings.

Verify that all oil holes are properly aligned during installation.

#### Gaskets

Always discard gaskets after removal. Replace with **new** gaskets. Never use the same gasket twice. Verify that gasket holes match up with holes in the mating part. Be aware that sections of a gasket may be used to seal passages.

# Lip-Type Seals

Lip seals are used to seal oil or grease and are usually installed with the sealing lip facing the contained lubricant. Seal orientation, however, may vary under different applications.

Do not remove seals unless necessary. Only remove seals to gain access to other parts or if seal damage or wear dictates replacement.

Leaking oil or grease usually means that a seal is damaged. Replace leaking seals to prevent overheated bearings.

Always discard seals after removal. Do not use the same seal twice.

# **O-Rings**

Always discard O-rings after removal. Many O-rings are similar in size and appearance. Always use **new** O-rings keeping them packaged until use to avoid confusion. To prevent leaks, lubricate the O-rings before installation with the same type of lubricant as that being sealed. Be sure that all gasket, O-ring and seal mating surfaces are thoroughly clean before installation

#### Gears

Always check gears for damaged or worn teeth.

Remove burrs and rough spots with a honing stone or crocus cloth before installation.

Lubricate mating surfaces before pressing gears on shafts.

#### **Shafts**

If a shaft does not come out easily, check that all nuts, bolts or retaining rings have been removed. Check to see if other parts are in the way before using force to remove.

Shafts fitted to tapered splines should be very tight. If shafts are not tight, disassemble and inspect tapered splines. Discard parts that are worn. Verify that tapered splines are clean, dry and free of burrs before putting them in place. Press mating parts together tightly.

Clean all rust from the machined surfaces of **new** parts.

# Part Replacement

# **A**WARNING

Harley-Davidson parts and accessories are designed for Harley-Davidson motorcycles. Using non-Harley-Davidson parts or accessories can adversely affect performance, stability or handling, which could result in death or serious injury. (00001b)

Always install **new** genuine Harley-Davidson parts and accessories. This will provide best service life and maintain compliance with noise and emissions regulations.

Installing non-Harley-Davidson, off-road or competition parts can void warranty or result in an unsafe vehicle.

# **CLEANING**

# **Part Protection**

Before cleaning, protect rubber parts (such as hoses, boots and electrical insulation) from cleaning solutions. Use a grease-proof barrier material. Remove the rubber part if it cannot be properly protected.

# **Cleaning Process**

Any cleaning method may be used as long as it does not result in parts damage. Thorough cleaning is necessary for proper parts inspection. Strip rusted paint areas to bare metal before priming and repainting.

## **Rust or Corrosion Removal**

Remove rust and corrosion with a wire brush, abrasive cloth, sand blasting, vapor blasting or rust remover. Use buffing crocus cloth on highly polished parts that are rusted.

# **Bearings**

Wash bearings in a non-flammable petroleum cleaning solution. Never use a solution that contains chlorine. Knock out packed lubricant by tapping the bearing against a wooden block. Wash bearings again.

# **A**WARNING

Using compressed air to "spin dry" bearings can cause bearing to fly apart, which could result in death or serious injury. (00505b)

Cover bearings with a clean shop towel and allow to air dry. Do not spin bearings while they are drying. Never use compressed air to dry bearings.

When dry, coat bearings with clean oil. Wrap bearings in clean paper.

#### TOOL SAFETY

#### Air Tools

- Always use approved eye protection equipment when performing any task using air-operated tools.
- On all power tools, use only recommended accessories with proper capacity ratings.
- Do not exceed air pressure ratings of any power tools.
- Bits should be placed against work surface before air hammers are operated.
- Disconnect the air supply line to an air hammer before attaching a bit.
- Never point an air tool at yourself or another person.
- Protect bystanders with approved eye protection.

### Wrenches

- Never use an extension on a wrench handle.
- If possible, always pull on a wrench handle and adjust your stance to prevent a fall if something suddenly releases.
- Always keep the wrench squarely installed on the fastener.
- Never use a hammer on any wrench other than a STRIKING FACE wrench.
- Discard any wrench with damaged or battered points.
- Never use a pipe wrench to bend, raise or lift a pipe.

# Pliers/Cutters/Pry Bars

- Plastic- or vinyl-covered pliers handles are not intended to act as insulation. Do not use them on live electrical circuits.
- Do not use pliers or cutters for cutting hardened wire unless they were designed for that purpose.
- Always cut at right angles.
- Do not use any pry bar as a chisel, punch or hammer.

## **Hammers**

- Never strike a hammer against a hardened object, such as another hammer.
- Always grasp a hammer handle firmly, close to the end.
- · Strike the object with the full face of the hammer.
- Never work with a hammer which has a loose head or cracked handle.
- Discard hammer if face is chipped or mushroomed.
- Wear approved eye protection when using striking tools.
- Protect bystanders with approved eye protection.

# **Punches/Chisels**

- Never use a punch or chisel with a chipped or mushroomed end. Dress mushroomed chisels and punches with a grinder.
- Hold a chisel or a punch with a tool holder if possible.
- When using a chisel on a small piece, clamp the piece firmly in a vise and chip toward the stationary jaw.
- Always wear approved eye protection when using these tools.
- Protect bystanders with approved eye protection.

# **Screwdrivers**

- Do not use a screwdriver for prying, punching, chiseling, scoring or scraping.
- Use the right type of screwdriver for the job. Match the tip
  of a screwdriver to the fastener.
- Do not interchange POZIDRIV, PHILLIPS or REED AND PRINCE screwdrivers.
- Screwdriver handles are not intended to act as insulation.
   Do not use them on live electrical circuits.
- Do not use a screwdriver with rounded edges because it will slip. Redress with a grinder.

### **Ratchets and Handles**

- Periodically clean and lubricate ratchet mechanisms with a light grade oil. Do not replace parts individually. Ratchets should be rebuilt with the entire contents of service kit.
- Never hammer on a ratchet or put a pipe extension on a ratchet handle for added leverage.
- Always support the ratchet head when using socket extensions, but do not put your hand on the head or you may interfere with the action of its reversing mechanism.
- When breaking a fastener loose, apply a small amount of pressure as a test to be sure the ratchet's gear wheel is engaged with the pawl.

#### Sockets

- Never use hand sockets on power or impact wrenches.
   Select only impact sockets for use with air or electric impact wrenches.
- Select the right size socket for the job.
- Always keep the wrench or socket squarely on the fastener.
- Replace sockets showing cracks or wear.
- Keep sockets clean.
- Always use approved eye protection when using power or impact sockets.

# Storage Units

- Do not open more than one loaded drawer at a time. Close each drawer before opening another to prevent the cabinet from unexpectedly tipping over.
- Close lids and lock drawers and doors before moving storage units.
- Do not pull on a tool cabinet. Always push tool cabinets in front of you.
- Set the brakes on the locking casters after the cabinet has been rolled into position.

1-6 2013 Sportster Service: Maintenance

FUEL AND OIL 1.3

## **FUEL**

Always use a good quality unleaded gasoline. Octane ratings are usually found on the pump. Refer to <u>Table 1-1</u>.

# WARNING

Avoid spills. Slowly remove filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028a)

# **AWARNING**

Use care when refueling. Pressurized air in fuel tank can force gasoline to escape through filler tube. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00029a)

Modern service station pumps dispense a high flow of gasoline into a motorcycle fuel tank making air entrapment and pressurization a possibility.

**Table 1-1. Octane Ratings** 

SPECIFICATION	RATING
Pump Octane (R+M)/2	91 (95 RON)

#### **GASOLINE BLENDS**

Your motorcycle was designed to get the best performance and efficiency using unleaded gasoline. Most gasoline is blended with alcohol and/or ether to create oxygenated blends. The type and amount of alcohol or ether added to the fuel is important.

## **NOTICE**

Do not use gasoline that contains methanol. Doing so can result in fuel system component failure, engine damage and/or equipment malfunction. (00148a)

- Gasoline/METHYL TERTIARY BUTYL ETHER (MTBE) blends are a mixture of gasoline and as much as 15% MTBE. Gasoline/MTBE blends use in your motorcycle is approved.
- ETHANOL fuel is a mixture of ethanol (grain alcohol) and unleaded gasoline and can have an impact on fuel mileage. Fuels with an ethanol content of up to 10% may be used in your motorcycle without affecting vehicle performance. U.S. EPA regulations currently indicate that fuels with 15% ethanol (E15) are restricted from use in motorcycles at the time of this publication. Some motorcycles are calibrated to operate with higher ethanol concentrations to meet the fuel standards in certain countries.
- REFORMULATED OR OXYGENATED GASOLINES (RFG) describes gasoline blends that are specifically

designed to burn cleaner than other types of gasoline. This results in fewer tailpipe emissions. They are also formulated to evaporate less when filling the tank. Reformulated gasolines use additives to oxygenate the gas. Your motorcycle will run normally using this type of fuel. Harley-Davidson recommends using it whenever possible as an aid to cleaner air in our environment.

- Do not use racing fuel or fuel containing methanol. Use of these fuels will damage the fuel system.
- The only octane booster Harley-Davidson recommends is SCREAMIN' EAGLE SUPER OCTANE BOOST (available only in the U.S.). This is the only octane booster that has been extensively tested and approved for use with Harley-Davidson engines and components.

Some gasoline blends might adversely affect starting, driveability or fuel efficiency. If any of these problems are experienced, try a different brand of gasoline or gasoline with a higher octane blend.

# **ENGINE LUBRICATION**

# **ACAUTION**

Prolonged or repeated contact with used motor oil may be harmful to skin and could cause skin cancer. Promptly wash affected areas with soap and water. (00358b)

# **A**CAUTION

If swallowed, do not induce vomiting. Contact a physician immediately. In case of contact with eyes, immediately flush with water. Contact a physician if irritation persists. (00357c)

#### NOTICE

Do not switch lubricant brands indiscriminately because some lubricants interact chemically when mixed. Use of inferior lubricants can damage the engine. (00184a)

Engine oil is a major factor in the performance and service life of the engine. Always use the proper grade of oil for the lowest temperature expected before the next scheduled oil change. Refer to Table 1-2.

This motorcycle was originally equipped with GENUINE HARLEY-DAVIDSON H-D 360 MOTORCYCLE OIL 20W50. H-D 360 is the preferred oil under normal operating conditions. If operation under extreme cold or heat are expected, refer to Table 1-2 for alternative choices.

If necessary and H-D 360 is not available, add oil certified for diesel engines. Acceptable designations include: CH-4, Cl-4 and CJ-4. The preferred viscosities, in descending order are: 20W50, 15W40 and 10W40.

At the first opportunity, see an authorized dealer to change back to 100 percent Harley-Davidson oil.

Table 1-2. Recommended Engine Oils

TYPE	VISCOSITY	RATING	LOWEST AMBIENT TEMPERATURE	COLD WEATHER STARTS BELOW 50 °F (10 °C)
Screamin' Eagle SYN 3 Full Synthetic Motorcycle Lubricant	SAE 20W50	HD 360	Above 30 °F (-1 °C)	Excellent
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 20W50	HD 360	Above 40 °F (4 °C)	Good
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 50	HD 360	Above 60 °F (16 °C)	Poor
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 60	HD 360	Above 80 °F (27 °C)	Poor
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 10W40	HD 360	Below 40 °F (4 °C)	Excellent

# WINTER LUBRICATION

Change engine oil often in colder climates. If motorcycle is frequently used for trips less than 15 mi (24 km), in ambient temperatures below 60  $^{\circ}$ F (16  $^{\circ}$ C), reduce oil change intervals to 1500 mi (2400 km).

#### NOTE

The further below freezing the temperature drops, the shorter the oil change interval should be.

Water vapor is a normal by-product of combustion in any engine. During cold weather operation, some water vapor

condenses to liquid form on the cool metal surfaces inside the engine. In freezing weather this water will become slush or ice. Over time, accumulated slush or ice may block the oil lines and cause engine damage.

If the engine is run frequently and allowed to thoroughly warm up, most of this water will become vapor again and will be blown out through the crankcase breather.

If the engine is not run frequently and not allowed to thoroughly warm up, this water will accumulate, mix with the engine oil and form a sludge that is harmful to the engine.

1-8 2013 Sportster Service: Maintenance

# **BULB REQUIREMENTS**

# **BULB CHART**

Table 1-3. Bulb Chart

LAMP	DESCRIPTION (ALL LAMPS 12 V)	BULBS REQUIRED	CURRENT DRAW (AMPERAGE)	HARLEY-DAVIDSON PART NUMBER
Headlamp	High beam/low beam	1	5.0/4.58	68329-03
	Position lamp international	1	0.32	53436-97
Indicator lamp module	All models***	-	-	LED assembly
License plate lamp	XL 883N, XL 1200X/V (Domestic)***	-	-	LED assembly
	XL 883N, XL 1200X/V (HDI)	2	0.35	52441-95
Tail and stop lamp	Tail and stop lamp XL 1200C/C ANV/CP/CA/CB***	-	-	LED assembly
	Tail and stop lamp (all other models)	1	2.10/0.59	68167-04
Turn signal lamp	Front/running	2	2.25/0.59	68168-89A
	Front international	2	1.75	68163-84
	Rear (Domestic XL 883N, XL 1200X/V)**	2	2.25	68168-89A
	Rear (Canada XL 883N, XL 1200X)	-	2.25	68572-64B
	Rear (HDI XL 883R, XL 1200X/V)***	2	-	LED assembly
	Rear (all other models)	2	1.75	68163-84

<sup>\*</sup> XL 1200C/C ANV/CP/CA/CB tail and stop lamp is illuminated with LED's. Replace entire assembly upon failure. \*\* Functions as turn signal, tail and stop lamps.

<sup>\*\*\*</sup> This is an LED assembly. Replace entire assembly upon failure.

# **GENERAL**

FASTENER	TORQUE VALUE				
Air filter screw	40-60 in-lbs	4.5-6.8 Nm			
Air cleaner cover screw	36-60 in-lbs	4.1-6.8 Nm			
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm			
Brake master cylinder, front, reservoir cover screws	9-17 in-lbs	1.0-2.0 Nm			
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm			
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm			
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm			
Fuel pump module mounting screw	40-45 <b>in-lbs</b>	4.5-5.1 Nm			
Chain tensioner nut	20-25 ft-lbs	27.1-33.9 Nm			
Primary chain inspection cover	90-120 in-lbs	10.2-13.6 Nm			
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm			
Spark plug	12-18 ft-lbs	16.3-24.4 Nm			
Spark plug	12-18 ft-lbs	16.3-24.4 Nm			
Spoke nipple	55 in-lbs	6.2 Nm			

Use the quick reference maintenance chart for torque values, lubricants or cross references to maintenance procedures. Refer to <u>Table 1-5</u>.

Use the lubricants, greases and sealants table to identify maintenance supplies. Refer to  $\underline{\text{Table 1-6}}$ .

At each regular service interval, perform the required maintenance. Refer to  $\underline{\text{Table 1-4}}$ .

Table 1-4. Regular Service Intervals: 2013 Sportster Models

ITEM SERVICED	PROCEDURE	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Engine oil and filter	Replace	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	3, 7
Oil lines and brake system	Inspect for leaks, contact or abrasion	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	1, 3
Air cleaner	Inspect, service as required		Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	7
Tires	Check pressure, inspect tread	Х	Х	Х	Х	х	Х	Х	Х	Х	Х	Х	3
Wheel spokes (if equipped)	Check tightness	Х	Х			Х			Х			Х	1, 5, 7
Primary chain	Check adjustment	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	
Transmission lub- ricant	Replace	Х		Х		Х		Х		Х		Х	7
Clutch	Check adjustment	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	1, 7
Drive belt and sprockets	Inspect, adjust belt	Х	Х	Х	х	Х	х	х	х	Х	х	х	1
Throttle, brake and clutch controls	Check, adjust and lubricate	Х	Х	Х	х	Х	х	х	х	х	х	х	1
Jiffy stand	Inspect and lub- ricate	Х	Х	Х	х	Х	х	х	х	х	х	х	1
Fuel lines and fit- tings	Inspect for leaks, contact or abrasion	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	1, 3
Fuel filter element	Replace		Replace every 100,000 mi (160,000 km).							1			
Brake fluid	Inspect sight glass	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	4
Brake pads and discs	Inspect for wear	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	

1-10 2013 Sportster Service: Maintenance

Table 1-4. Regular Service Intervals: 2013 Sportster Models

ITEM SERVICED	PROCEDURE	1000 MI 1600 KM	5000 MI 8000 KM	10000 MI 16000 KM	15000 MI 24000 KM	20000 MI 32000 KM	25000 MI 40000 KM	30000 MI 48000 KM	35000 MI 56000 KM	40000 MI 64000 KM	45000 MI 72000 KM	50000 MI 80000 KM	NOTES
Front brake lever pin	Inspect		Х	Х	Х	Х		Х	Х	Х	Х		1, 6
Front brake lever pin	Lubricate						Х					Х	1, 6
Brake caliper pins	Inspect		Х	Х	Х	Х		Х	Х	Х	Х		1, 6
Brake caliper pins	Lubricate						Х					Х	1, 6
Brake caliper boots and bushings	Inspect		Х	Х	Х	Х		Х	Х	Х	Х		1, 6
Brake caliper boots and bushings	Replace						Х					Х	1, 6
Rear master cyl- inder outer boot	Inspect		Х	Х	х	Х	Х	Х	Х	Х	Х	Х	1, 6
Brake components	Replace brake rubber components in master cylinders and calipers						Х					Х	1, 6
Brake components	Lubricate master cylinder pistons						Х					Х	1, 6
Spark plugs	Replace							Х					8
Electrical equip- ment and switches	Check operation	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	
Front forks	Rebuild											Х	1, 9
Steering head bearings	Adjust	Х				Х				Х			1, 2
Rear fork bearings					Ins	pect every	/ 30,000 m	i (48,000 l	km)				1
Critical fasteners	Check tightness	Х		Х		Х		Х		Х		Х	1
Engine mounts and stabilizer links	Inspect			Х		Х		Х		Х		Х	1
Battery					Check b	attery and	d clean cor	nections a	annually.				
Exhaust system	Inspect for leaks, cracks, and loose or missing fasteners or heat shields	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	3, 7
Road test	Verify component and system functions	х	Х	Х	х	Х	X	X	Х	X	X	Х	
NOTES:	1. Should be perforr 2. Disassemble, lub 3. Perform annually 4. Replace DOT 4 h 5. Perform spoke te interval thereafter. N 6. Replace every fo 7. Perform maintenar roads, long storage 8. Replace every tw 9. Disassemble, ins	oricate and or or at speconydraulic beension cheension cheension (4) year ance more conditions (2) year	inspect everified interversake fluid a ck at 1000 icles are ed frequently s, short runs or at spe	rery 30,00 rals, which and flush s mi (1600 quipped w cified inte in severe s, heavy s cified intel	0 mi (48,00 never come system ever km), 5000 iith spoke vrvals, which riding conditions top/go transvals, which which which will be stoped to the conditions to the conditions to the conditions which will be something to the conditions to the cond	200 km).  es first.  ery two (2)  mi (8000 l  wheels. Co  chever con  ditions (sue  ffic or pool  hever com	years. km), 20,00 pnsult appr nes first. ch as extre r fuel qualines first.	00 mi (32,0 ropriate top	00 km) se oic in servi	rvices and ce manua	every 15, l.	000 mi (24	4,000 km)

# **Table 1-5. Quick Reference Maintenance Chart**

ITEM SERVICED	SPECIFICATION	DATA			
Air cleaner	See 1.7 AIR FILTER				
	Air filter screw torque: XL Models	40-60 <b>in-lbs</b> (4.5-6.8 Nm)			
	Air cleaner cover screw torque: XL Models	36-60 <b>in-lbs</b> (4.1-6.8 Nm)			
Battery	Lubricant	Electrical Contact Lubricant			
	Terminal screw torque	60-70 <b>in-lbs</b> (6.8-7.9 Nm)			

**Table 1-5. Quick Reference Maintenance Chart** 

ITEM SERVICED	SPECIFICATION	DATA				
Brake fluid reservoir level	Brake fluid type	DOT 4 Brake Fluid				
(Check sight glass. If fluid is low, remove reservoir	Proper fluid level (front brake)	1/4 in (6.35 mm) from the top of the reservoir				
cover and re-check.)	Proper fluid level (rear brake)	Upper fluid level in reservoir				
	Front master cylinder reservoir cover screw torque	9-17 <b>in-lbs</b> (1.0-2.0 Nm)				
Brake pad linings and discs	Minimum brake pad thickness	0.04 in (1.02 mm)				
	Minimum brake disc thickness	See stamp on side of disc.				
Clutch adjustment	Free play at adjuster screw	1/4 turn				
	Free play at hand lever	1/16-1/8 in (1.6-3.2 mm)				
	Clutch inspection cover screw torque	90-120 <b>in-lbs</b> (10.3-13.6 Nm)				
Clutch and throttle cables	Lubricant	Harley Lube				
	Handlebar clamp screw torque	12-18 ft-lbs (16.3-24.4 Nm)				
	Switch housing screw torque	35-45 <b>in-lbs</b> (4.0-5.1 Nm)				
Critical fasteners	See <u>1.20 CRITICAL FASTENERS</u> .					
Drive belt	Apply upward measurement force at midpoint of bottom belt strand.	10 lb (4.5 kg)				
	Belt deflection with motorcycle on jiffy stand, belt and sprockets at ambient temperature (cold engine), without rider or luggage	XL 883L/XL 883N/XL 1200X/XL 1200V/XL 1200C/C ANV/XL 1200CP/XL 1200CA/XL 1200CB: 1/4-5/16 in (6.35-7.94 mm)				
		XL 883R: 9/16-5/8 in (14.3-15.9 mm)				
	Belt deflection measurement taken midway between rear sprocket and idler	XR 1200X: 1/4-3/8 in (6.4-9.5 mm)				
Engine idle speed	Idle speed	950-1050 rpm				
Engine mounts/isolators and stabilizers	See <u>2.26 FRONT ENGINE MOUNT/ISOLATOR</u> , <u>2.27 REAR ENGINE MOUNT/ISOLATOR</u> , and <u>2.25 STABILIZER LINKS</u> .					
Engine oil and filter	Oil capacity	2.8 qt (2.65 L)				
	Filter	Hand tighten 1/2-3/4 turn after gasket contact.				
Front fork oil: XL Models	Туре	Type "E" Hydraulic Fork Oil				
	Amount	See 2.19 FRONT FORK: XL MODELS, Assembly.				
Front fork oil: XR 1200X	Туре	Big Piston Fork Oil				
	Amount	See 2.20 FRONT FORK: XR 1200X, Assembly.				
Fuel filter	Fuel pump module mounting screw torque	40-45 <b>in-lbs</b> (4.5-5.1 Nm)				
Primary chain tension	Deflection with hot engine	1/4-3/8 in (6.3-9.5 mm)				
	Deflection with cold engine	3/8-1/2 in (9.5-12.7 mm)				
	Chain tensioner nut torque	20-25 ft-lbs (27.1-33.9 Nm)				
	Primary chain inspection cover screw torque	90-120 <b>in-lbs</b> (10.2-13.6 Nm)				
Primary chain/transmission		32 oz (946 mL)				
lubricant	Primary chaincase drain plug torque	14-30 ft-lbs (19.0-40.7 Nm)				
	a., onamodoo arani piag torquo	Genuine Harley-Davidson Formula+ Transmis-				
	Lubricant	sion and Primary Chaincase Lubricant				
		sion and Primary Chaincase Lubricant				
Spark plugs: XL Models	Type Gap					

**Table 1-5. Quick Reference Maintenance Chart** 

ITEM SERVICED	SPECIFICATION	DATA
Spark plugs: XR 1200X	Туре	10R12X
	Gap	0.032-0.038 in (0.81-0.97 mm)
	Torque	12-18 ft-lbs (16.3-24.4 Nm)
Steering head bearings	Lubricant	Special Purpose Grease
Tire condition and pressure	XL 883L	Front: 36 psi (248 kPa) Rear: 42 psi (290 kPa)
	XL Models (except XL 1200X/C/C ANV/CP/CA/CB)	, , ,
	XL 1200X/C/C ANV/CP/CA/CB	Front: 36 psi (248 kPa) Rear: 40 psi (275 kPa)
	XR 1200X	Front: 36 psi (248 kPa) Rear: 42 psi (290 kPa)
	Wear	Replace tire if 1/32 in (0.8 mm) or less of tread pattern remains.
Wheel spokes	Spoke nipple torque	55 <b>in-lbs</b> (6.2 Nm)

Table 1-6. Lubricants, Greases, Sealants

ITEM	PART NUMBER	PACKAGE
3M 847 Adhesive	021200-19718 *	5 oz tube
3M General Purpose Adhesive Remover		15 oz. aerosol
Anti-Seize Lubricant	98960-97	1 oz squeeze tube
Big Piston Fork Oil (Sportster XR only)	62600029	16 oz bottle
CCI #20 Brake Grease	42830-05	squeeze packet (included in master cylinder rebuild kit)
DOT 4 Brake Fluid	99953-99A	12 oz bottle
Dow Corning Moly 44 Grease	94674-99	2 cc packet
Electrical Contact Lubricant	99861-02	1 oz squeeze tube
Formula+ Transmission and Primary Chaincase Lubricant	99851-05	1 qt bottle
G40M Brake Grease	42820-04	squeeze packet
Genuine Harley-Davidson Extended Life Antifreeze and Coolant (V-Rod only)	99822-02	1 gal container
Genuine Harley-Davidson H-D 360 20W50 Motorcycle Oil	99816-2050/00QT	1 qt bottle
Harley-Davidson Adhesive (Griplock)	99839-95	10 g tube
Harley-Davidson High Performance Sealant - Gray	99650-02	1.9 oz squeeze tube
Harley-Davidson Leather Dressing	98261-91V	6 oz can
Harley-Davidson Seal Grease	11300005	1 oz tube
Harley® Lube	94968-09	1/4 oz needle dispenser
Hylomar Gasket and Thread Sealant	99653-85	3.5 oz tube
Loctite 222 Low Strength Threadlocker and Sealant (purple)	99811-97	6 mL tube
Loctite 243 Medium Strength Threadlocker and Sealant (blue)	99642-97	6 mL tube
	11100005	50 mL bottle
Loctite 246 Medium Strength/High Temperature Threadlocker (blue)		
Loctite 262 High Strength Threadlocker and Sealant (red)	94759-99	6 mL tube
	11100006	50 mL bottle
Loctite 411 Prism Instant Adhesive		
Loctite 420 Super Bonder Adhesive		
Loctite 565 Thread Sealant	99818-97	6 mL tube
Loctite 770 Prism Primer		
Loctite 7649 Cleaner/Primer	98968-99	1.75 oz bottle
RTV Silicone Sealer	99650-02	1.9 oz tube
Screamin' Eagle Assembly Lube	94971-09	4 oz bottle
Screamin' Eagle SYN3 Full Synthetic Motorcycle Lubricant 20W50	99824-03/00QT	1 qt bottle
Special Purpose Grease	99857-97A	14 oz cartridge
Type "E" Hydraulic Fork Oil	62600026	16 oz bottle
Wheel Bearing Grease	99855-89	1 lb can
	99856-92	14 oz cartridge
* Not a Harley-Davidson part number		

# **ENGINE OIL AND FILTER**

## CHECKING AND ADDING OIL

# Removing and Replacing Oil Filler Cap

- 1. Park the motorcycle on level ground on the jiffy stand.
- 2. See Figure 1-1. Remove the filler cap from the oil tank.
  - a. Press straight down on the filler cap and release. The cap will pop up.
  - b. Pull up on the filler cap while turning counterclockwise one-quarter turn as if removing the filler cap.
- 3. Wipe the dipstick clean.

#### NOTE

See <u>Figure 1-2</u>. Align tabs on oil tank filler neck to slots (1, 2) on dipstick.

- 4. Insert the dipstick into the tank.
  - Turn the filler cap clockwise one-quarter turn as if screwing the filler cap into tank. When the filler cap stops turning, it is seated.
  - b. Press down on the filler cap until it snaps in place, flush with the top of the oil tank cover.

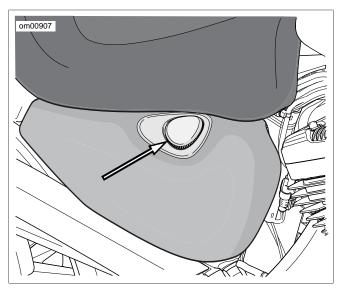


Figure 1-1. Filler Cap Location

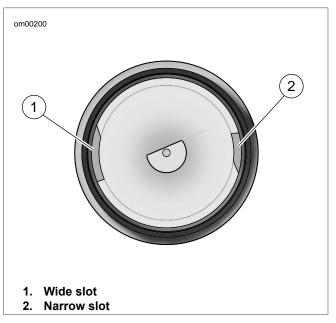


Figure 1-2. Filler Cap Slots

# Oil Level Cold Check

#### NOTES

- Check engine oil level at each complete fuel refill.
- An accurate engine oil check can only be made with the engine at operating temperature (Hot Check).
- 1. Park the motorcycle on level ground on the jiffy stand.
- Remove the filler cap and wipe the dipstick clean. Install the oil filler cap in tank.
- Remove oil filler cap again and visually check for oil in the tank.
- 4. If oil is not visible in the tank, install the filler cap.

## NOTE

If the oil pressure lamp stays lit after starting engine, immediately shut the engine off.

- 5. Start and idle the engine for 30 seconds. Stop the engine.
- 6. Remove oil filler cap and visually check for oil in the tank.

## **NOTICE**

Do not overfill oil. Doing so can result in oil carryover to the air cleaner leading to equipment damage and/or equipment malfunction. (00190b)

#### NOTE

Use only recommended oil. Recommended viscosity depends upon ambient temperature. Refer to <u>Table 1-2</u>.

7. If there is no oil visible in the tank, add oil until it is present on the bottom of the dipstick.

8. When oil is present on the bottom of the dipstick, perform a hot check.

## Oil Level Hot Check

- Run the engine until the engine oil is at operating temperature
- 2. Idle the motorcycle on the jiffy stand for one to two minutes. Turn the engine off.
- 3. Park the motorcycle on level ground on the jiffy stand.
- Remove the filler cap. Wipe the dipstick clean and install the filler cap in the tank.

## **NOTICE**

Do not allow hot oil level to fall below Add/Fill mark on dipstick. Doing so can result in equipment damage and/or equipment malfunction. (00189a)

## NOTES

- Use only recommended oil. Recommended viscosity depends upon ambient temperature. Refer to <u>Table 1-2</u>.
- Do not overfill the oil tank. The oil tank has a built-in pressure relief valve. If the oil tank is overfilled, excessive pressure is created in the oil tank. The pressure relief valve will open to relieve the pressure and prevent damage to the oil tank. Excessive oil due to overfilling will also be forced out the pressure relief valve when it opens.



Do not overfill oil. Doing so can result in oil carryover to the air cleaner leading to equipment damage and/or equipment malfunction. (00190b)

- 5. See <u>Figure 1-3</u>. Remove the filler cap and check the hot oil level on the dipstick.
  - Below the lower mark: Add only enough oil until the level reads between the upper and lower marks.
  - b. **Between the upper and lower marks:** It is safe to operate the motorcycle.
  - c. **At (or above) the upper mark:** Drain the oil until the level reads between the upper and lower marks.
- 6. Install the filler cap.
- If oil was added, remove the filler cap and verify the engine oil level in the oil tank. Do not fill oil tank to a level above upper mark on the dipstick. Install the filler cap.

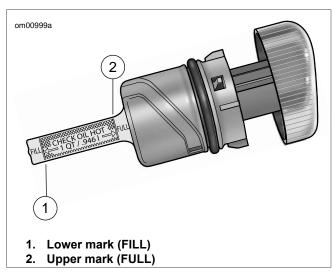


Figure 1-3. Dipstick

## **CHANGING OIL AND FILTER**

PART NUMBER	TOOL NAME
HD-42311	HARLEY-DAVIDSON OIL FILTER WRENCH
HD-44067-A	HARLEY-DAVIDSON OIL FILTER WRENCH

FASTENER	TORQUE VALUE		
Oil drain hose worm clamp	6-10 <b>in-lbs</b>	0.7-1.1 Nm	

## **NOTICE**

Do not switch lubricant brands indiscriminately because some lubricants interact chemically when mixed. Use of inferior lubricants can damage the engine. (00184a)

Completely drain oil tank of used oil at scheduled service intervals. Refill with fresh oil. Refer to Table 1-4.

## **NOTES**

- Change oil at specified intervals in normal service at warm or moderate temperatures.
- Change engine oil at shorter intervals in cold weather or in severe operating conditions. See <u>1.3 FUEL AND OIL</u>, Winter Lubrication.
- Change engine oil at shorter intervals if ridden extremely hard, used in competition, or driven on dusty roads.
- · Always change oil filter when changing engine oil.

# **A**WARNING

Be sure that no lubricants or fluids get on tires, wheels or brakes when changing fluid. Traction can be adversely affected, which could result in loss of control of the motorcycle and death or serious injury. (00047d)

## **Draining Oil Tank**

 Run engine until engine oil has reached normal operating temperature.

- 2. Remove dipstick from oil tank. Oil will drain faster when the dipstick is removed.
- See <u>Figure 1-4</u>. Place a suitable container directly under the drain hose (1) at the bottom rear of the engine crankcase. The container must be able to hold approximately 3.0 qt (2.8 L).
- 4. Loosen worm drive clamp (2). Pull drain plug (3) from end of drain hose. Completely drain engine oil from oil tank. Drain engine crankcase only if needed.
- 5. Install drain plug into end of drain hose. Tighten worm drive clamp to 6-10 **in-lbs** (0.7-1.1 Nm).

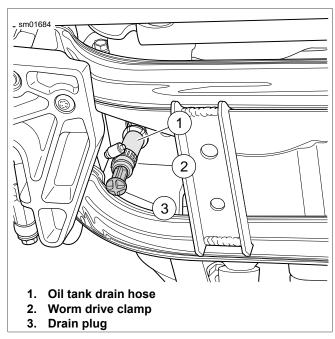


Figure 1-4. Oil Tank Drain Hose

## Removing Oil Filter

1. Place a drain pan beneath front of engine crankcase.

# **NOTICE**

Use Harley-Davidson oil filter wrench for filter removal. This tool can prevent damage to crankshaft position sensor and/or sensor cable. (00192b)

- See Figure 1-5 and Figure 1-6. Remove oil filter using HARLEY-DAVIDSON OIL FILTER WRENCH (Part No. HD-42311) or HARLEY-DAVIDSON OIL FILTER WRENCH (Part No. HD-44067-A). Turn oil filter counterclockwise to remove from filter mount.
- 3. Drain oil filter into drain pan. Discard oil filter.
- 4. Clean any oil spills off crankcase and frame.

#### NOTE

Dispose of oil and oil filter in accordance with local regulations.

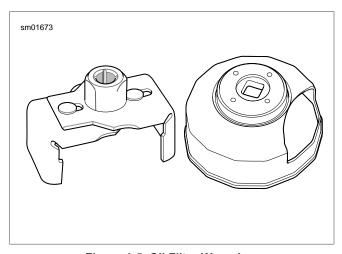


Figure 1-5. Oil Filter Wrenches

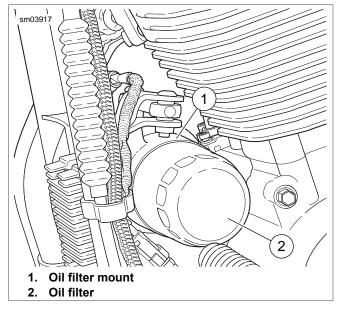


Figure 1-6. Oil Filter

# Installing Oil Filter

## NOTE

Minimize the time required for buildup of oil pressure when engine is first started. Partially fill oil filter before installation.

- Pour about 4 fl oz (120 mL) of fresh, clean engine oil into new oil filter. Allow time for oil to soak into filter element.
- See <u>Figure 1-7</u>. Wipe filter gasket contact surface of oil filter mount with a clean cloth. Surface should be smooth and free of any debris or old gasket material.
- Apply a thin film of oil to gasket contact surface on crankcase (3) and gasket surface of **new** oil filter.

## NOTE

Do not use oil filter wrench to install new oil filter.

 Install new oil filter. Screw filter clockwise onto adapter until gasket contacts the filter mount surface. Then hand tighten an additional 1/2-3/4-turn to secure the oil filter.

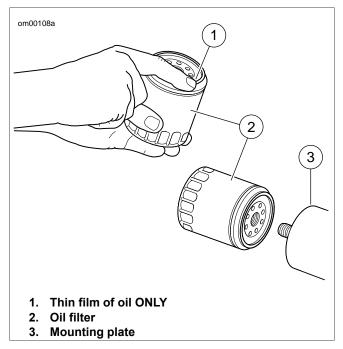


Figure 1-7. Applying Thin Oil Film

# **Refilling Oil Tank**

## NOTICE

Do not overfill oil. Doing so can result in oil carryover to the air cleaner leading to equipment damage and/or equipment malfunction. (00190b)

## NOTE

Do not overfill the oil tank. The oil tank has a built-in pressure relief valve. If the oil tank is overfilled, excessive pressure is created in the oil tank. The pressure relief valve will open to relieve the pressure and prevent damage to the oil tank. Excessive oil due to overfilling will also be forced out the pressure relief valve when it opens.

- Refer to <u>Table 1-2</u>. Always use the proper grade of oil for the lowest expected air temperature before the next regularly scheduled oil change. Pour 2.0 qt (1.9 L) of oil into engine oil tank.
- 2. Install dipstick in oil tank. Verify cap is fully seated.
- See <u>Figure 1-8</u>. Start engine. Verify that oil pressure signal lamp turns off when engine speed is 1000 rpm or above. Turn engine off.
- Check for oil leaks at oil filter and oil tank drain hose. Perform oil level hot check.

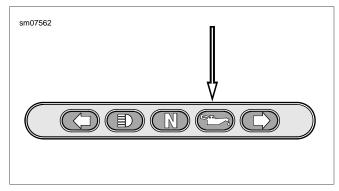


Figure 1-8. Oil Pressure Indicator

AIR FILTER 1.7

## **XL MODELS EXCEPT XL 1200V**

FASTENER	TORQUE VALUE	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm
Air cleaner cover screw	36-60 in-lbs	4.1-6.8 Nm

## Removal

- 1. See Figure 1-9. Remove the two fasteners (1) and the trim insert (2) from the air cleaner cover (3).
- 2. Remove the air cleaner cover from the backplate. Remove air cleaner seal (4) from the cover.
- 3. Remove three fasteners (5). Remove the air filter (6) and the gasket (7) from the backplate. Discard the gasket.
- 4. Inspect the O-rings. Replace as necessary.
- 5. Inspect the cover seal. Replace as necessary.
- Clean the air cleaner backplate.
- 7. Clean the inside of air cleaner cover.

## **NOTICE**

Install air filter before running engine. Failure to do so can draw debris into the engine and could result in engine damage. (00207a)


## Installation

- 1. See Figure 1-9. Apply a thin coat of engine oil or light grease to the O-rings (8).
- 2. Position a **new** gasket (7) on the air cleaner. Line up the gasket holes with the backplate holes.

## NOTE

Install the air filter with THIS SIDE OUT on top.

- 3. Apply a drop of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to each of three air filter fasteners (5). Install the air filter (6) onto the backplate. Tighten to 40-60 **in-lbs** (4.5-6.8 Nm).
- 4. Fit air cleaner seal (4) onto air cleaner cover (3). Verify alignment around cover edge.
- Install air cleaner cover onto backplate. Do not pinch or distort seal.
- Install trim insert (2) and cover assembly with fasteners (1). Tighten to 36-60 in-lbs (4.1-6.8 Nm).

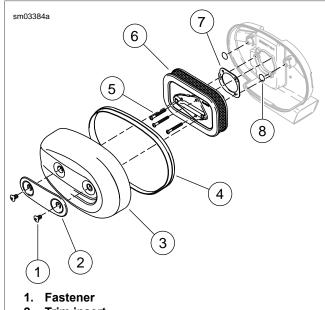

- 2. Trim insert
- 3. Air cleaner cover
- I. Air cleaner seal
- 5. Fastener
- 6. Air filter element
- 7. Gasket
- 8. O-ring

Figure 1-9. Air Filter Element: XL Models except XL 1200V

## **XL 1200V**

FASTENER	TORQUE VALUE	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm

## Removal

- See <u>Figure 1-10</u>. Remove the fastener (1) from the air cleaner cover (2).
- Remove the cover from the backplate. Remove air cleaner seal (3) from the cover.
- 3. Remove three fasteners (4). Remove the air filter (5) from the backplate.
- Inspect the O-rings. Replace as necessary.
- 5. Inspect the cover seal. Replace as necessary.
- 6. Clean the air cleaner backplate.
- 7. Clean the inside of air cleaner cover.

## NOTICE

Install air filter before running engine. Failure to do so can draw debris into the engine and could result in engine damage. (00207a)

# Installation

- 1. Apply a thin coat of engine oil to the O-rings (6).
- Install a new gasket (7) on the air cleaner. Line up the gasket holes with the backplate holes.

## NOTE

Install the filter (5) with THIS SIDE OUT on top.

- 3. See Figure 1-10. Apply a drop of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to each of three air filter fasteners (4).
- 4. Install the air filter onto the backplate. Tighten to 40-60 in-lbs (4.5-6.8 Nm).
- 5. Fit air cleaner seal (3) onto air cleaner cover (2). Verify alignment around cover edge.
- Install air cleaner cover onto backplate. Do not pinch or distort seal.
- 7. Install cover. Tighten to 36-60 in-lbs (4.1-6.8 Nm).

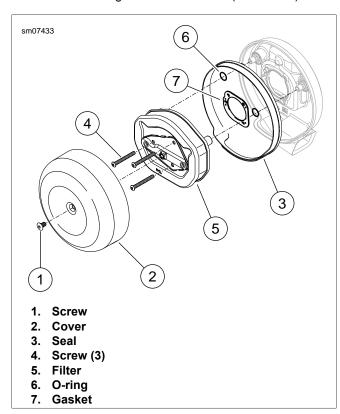


Figure 1-10. Air Filter Element: XL 1200V

# **XR 1200X**

# Removal

# **A**WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

Remove the fuel tank. See <u>4.5 FUEL TANK: XR 1200X</u>.

- 2. Remove the air box. See 1.7 AIR FILTER, XR 1200X.
- 3. See Figure 1-11. Remove the two screws (2, 3) securing the air filter cover (4) to air box (1).
- Using a small flat blade screwdriver, gently pry two button head clips (5) securing air filter cover to air box. Discard button head clips.
- See <u>Figure 1-12</u>. Gently pull rear end of air filter cover (2) away from air box. Disengage front of air filter cover from the air box and set the cover aside.
- See <u>Figure 1-13</u>. Using a flat blade screwdriver, gently pry the lower front corner of the filter (2) out of the air box. Work screwdriver around bottom of filter gasket (4) to free the filter.
- 7. Carefully pull the filter out of the air box.
- 8. Clean the inside of the air box housing and cover.
- 9. Inspect the air filter seal. Replace if necessary.

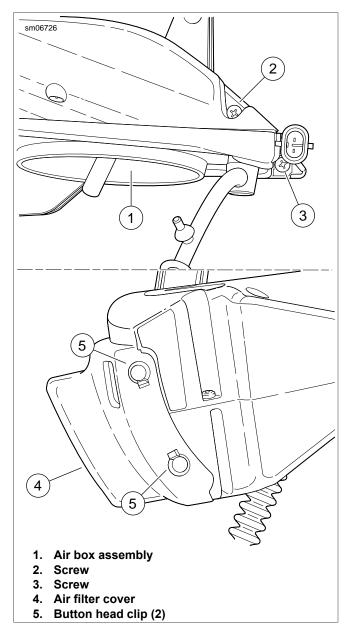


Figure 1-11. Unbolting Air Filter Cover

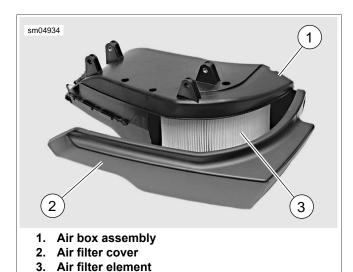


Figure 1-12. Removing Air Filter Cover

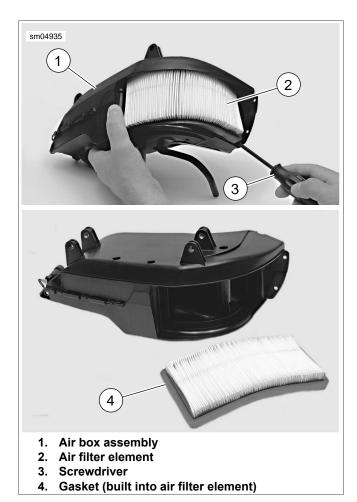


Figure 1-13. Removing Air Filter Element

# Installation

- See <u>Figure 1-13</u>. Form a **new** air filter into a curved shape. Slide top of air filter up into opening in air box. Top of the air filter must fit into channel in top of air box.
- Press bottom and ends of air filter into air box. The air filter must fit into the air box opening.

- 3. See <u>Figure 1-12</u>. Position front of air filter cover (2) onto air box. Do not install button head clips at this time.
- 4. Active Intake Models: See Figure 1-15.
  - a. Verify that the active intake connector wiring harness
     (4) is in the air box recess (5).
  - b. Position the breather hose assembly inside the to air box. The breather hose cannot interfere with the active air solenoid flapper.

## NOTE

Do not pinch the active intake connector wiring harness with the air filter cover.

- Install rear of air filter cover (2) onto air box. Secure with two screws.
- 6. Install **new** button head clips. Press in firmly.
- 7. Install the air box. See 1.7 AIR FILTER, XR 1200X.
- 8. Install the fuel tank. See 4.5 FUEL TANK: XR 1200X.


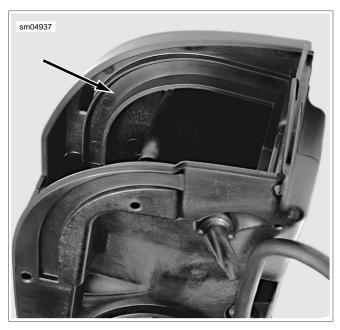


Figure 1-14. Filter Element Channel

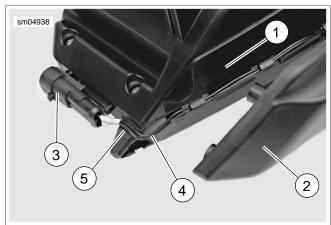

- 1. Air box assembly
- 2. Air filter cover
- 3. Active intake connector [178] (if equipped)
- 4. Wiring harness
- 5. Recess

Figure 1-15. Installing Air Filter Cover

# **CLEANING FILTER ELEMENT**

# **A**WARNING

Do not use gasoline or solvents to clean filter element. Flammable cleaning agents can cause an intake system fire, which could result in death or serious injury. (00101a)

## NOTE

Do not tap the filter on a hard surface.

- 1. Wash the filter in warm soapy water.
- 2. To remove soot, soak the filter in warm soapy water for 30 minutes.

#### NOTE

The filter is clean if light is visible through filter.

3. Hold the filter up to light.

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

4. Dry the filter with low-pressure compressed air from the inside.

# TIRES AND WHEELS

## AIR PRESSURE

# **AWARNING**

Be sure tires are properly inflated, balanced, undamaged, and have adequate tread. Inspect your tires regularly and see a Harley-Davidson dealer for replacements. Riding with excessively worn, unbalanced, improperly inflated, overloaded or damaged tires can lead to tire failure and adversely affect stability and handling, which could result in death or serious injury. (00014b)

Always maintain proper tire pressure as specified in <u>Table 1-7</u>. Do not load tires beyond GAWR specified in <u>Table 2-4</u>. Underinflated, over-inflated or overloaded tires can fail.

Check tire pressure when the tires are cold. Refer to <u>Table 1-7</u>.

#### NOTE

Harley-Davidson does not perform any testing with only nitrogen in tires. Harley-Davidson neither recommends nor discourages the use of pure nitrogen to inflate tires.

Table 1-7. Air Pressure (cold): 2013 Sportster Models

MODEL	WHEEL	psi	kPa
XL 883L	Front	36	248
	Rear	42	290
XL 883N	Front	30	207
	Rear	40	276
XL 883R	Front	30	207
	Rear	40	276
XL 1200C/C ANV	Front	36	248
	Rear	40	276
XL 1200CP	Front	36	248
	Rear	40	276
XL 1200CA	Front	36	248
	Rear	40	276
XL 1200CB	Front	36	248
	Rear	40	276
XL 1200V	Front	30	207
	Rear	40	276
XL 1200X	Front	36	248
	Rear	40	276
XR 1200X	Front	36	248
	Rear	42	290

## TIRE REPLACEMENT

## **Tread Wear**

# **A**WARNING

Replace tire immediately with a Harley-Davidson specified tire when wear bars become visible or only 1/32 in (0.8 mm) tread depth remains. Riding with a worn tire could result in death or serious injury. (00090c)

Harley-Davidson tires are equipped with wear bars that run horizontally across the tread. When a tire is worn to the point that the wear bars are visible, or 1/32 in (0.8 mm) tread depth remains, the tire can:

- · Be more easily damaged leading to tire failure.
- Provide reduced traction.
- Adversely affect stability and handling.

Replace the tires with **new** tires before the tread wear bars appear:

- See <u>Figure 1-16</u> or <u>Figure 1-17</u>. Indicators (1) on the tire sidewalls point to tread wear bars (2) in the tread.
- Tread wear bars appear in the tread pattern when 1/32 in (0.8 mm) or less of tread remains.

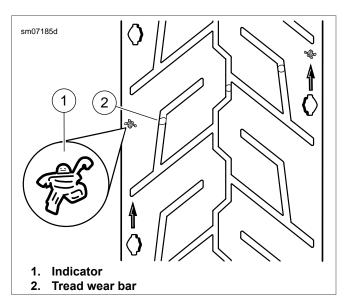


Figure 1-16. Tread Pattern: Michelin Tires

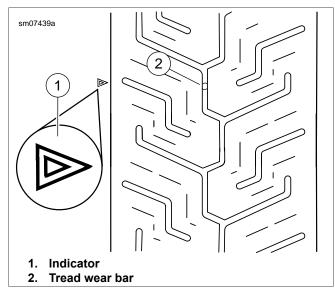


Figure 1-17. Tread Pattern: Dunlop Tires

# **Tire Damage**

Replace tires with new tires when:

- Tire cords or fabric are visible through cracked sidewalls, snags or deep cuts.
- A bump, bulge or split is found anywhere on the tire.
- A puncture, cut or other damage cannot be repaired.

## SPECIFIED TIRES

# **A**WARNING

Match tires, tubes, rim strips or seals, air valves and caps to the correct wheel. Contact a Harley-Davidson dealer. Mismatching can lead to tire damage, allow tire slippage on the wheel or cause tire failure, which could result in death or serious injury. (00023c)

# **AWARNING**

Use only Harley-Davidson specified tires. See a Harley-Davidson dealer. Using non-specified tires can adversely affect stability, handling or braking, which could result in death or serious injury. (00024b)

- Store new tires on a horizontal tire rack. Do not stack tires in a vertical stack.
- Mount only Harley-Davidson specified tires. Refer to <u>Table 1-8</u>.

Table 1-8. Specified Tires: 2013 Sportster Models

MODEL	WHEEL	SPECIFIED TIRE
XL 883L	F	Michelin Scorcher "11F" 120/70ZR18
	R	Michelin Scorcher "11" 150/60ZR17
XL 883N/R	F	Michelin Scorcher "31" 100/90B19
	R	Michelin Scorcher "31" 150/80B16
XL 1200C/X	F	Michelin Scorcher "31" 130/90B16
XL 1200C ANV XL 1200CP XL 1200CA XL 1200CB	R	Michelin Scorcher "31" 150/80B16
XL 1200V	F	Dunlop D402F MH90 21 M/C 54H WW
	R	Dunlop D401 150/80B16 M/C 71H WWW
XR 1200X	F	Michelin Scorcher "11F" 120/70ZR18
	R	Michelin Scorcher "11" 180/55ZR17

## WHEEL BEARINGS

#### NOTE

Replace bearings in sets only. See <u>2.5 WHEELS</u>, <u>Sealed Wheel Bearings</u>.

- 1. Replace when bearings exceed end play service wear limit of 0.002 in (0.051 mm).
- 2. Inspect any time the wheels are removed.
  - Inspect the play of the wheel bearings by finger while they are in the wheel.
  - Rotate the inner bearing race. Listen for abnormal noise.
  - c. Verify smooth bearing rotation.
- Check wheel bearings and axle spacers for wear and corrosion. Excessive play or roughness indicates worn bearings.

# WHEEL SPOKES

PART NUMBER	TOOL NAME
HD-48985	SPOKE TORQUE WRENCH
HD-94681-80	SPOKE NIPPLE WRENCH

FASTENER	TORQUE	VALUE
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm

# **A**WARNING

Spokes that are too tight can draw nipples through the rim or distort hub flanges. Spokes that are too loose can continue to loosen when put in service. Either condition can adversely affect stability and handling, which could result in death or serious injury. (00286a)

# **AWARNING**

Do not over tighten spoke nipples. Protruding spoke nipples can damage rim seal, resulting in rapid tire deflation, which could cause death or serious injury. (00611b)

## **NOTICE**

When lifting a motorcycle using a jack, be sure jack contacts both lower frame tubes where down tubes and lower frame tubes converge. Never lift by jacking on crossmembers, oil pan or other housings. Failure to comply can cause serious damage resulting in the need to perform major repair work. (00586c)

# Identify Wheel Spoke Groups

NOTE

Spokes are grouped in sets of four.

- 1. Raise wheel with a suitable lifting device.
- 2. See <u>Figure 1-18</u>. Starting at the valve stem, identify the first group of four spokes (1-4).
- Using a different color for each spoke in the group, draw an alignment mark across the spoke nipple and onto the rim.
- 4. Continue around the wheel marking the rest of the spokes the same as they were marked in the previous way.

# Wheel Spoke Adjustment

## NOTES

- Do not tighten spoke more than 1/4 turn past alignment mark. If more tension is needed, label spoke and check after completing rest of wheel.
- Do not use the spoke torque wrench to loosen spokes.
   Use SPOKE NIPPLE WRENCH (Part No. HD-94681-80) to loosen spokes.
- 1. See <u>Figure 1-18</u>. Starting with the first group of spokes, loosen spoke (1) using SPOKE NIPPLE WRENCH (Part No. HD-94681-80) 1/4 turn.
- 2. Using SPOKE TORQUE WRENCH (Part No. HD-48985) tighten spoke (1) to the value listed in <u>Table 1-9</u>.
  - a. While tightening, if the torque wrench clicks before the alignment marks align, continue to turn the spoke nipple until the marks align.
  - b. If the alignment marks align and the torque specification has not been reached, continue to tighten the spoke nipple until the correct torque is achieved, but do not turn spoke nipple more then 1/4 turn past alignment mark.
- 3. Repeat previous two steps for spoke (4) in the same group.

- Continue around the wheel checking spokes 1 and 4 until all groups are done.
- 5. Repeat procedure for spokes (2, 3) in each group.

## NOTE

When checking any spokes that were labeled, make sure to use the original alignment mark.

- Check spokes, if any, that were labeled as not reaching the proper torque value after tightening 1/4 turn past alignment mark.
  - a. Loosen spoke 1/4 turn past original alignment mark using SPOKE NIPPLE WRENCH (Part No. HD-94681-80).
  - b. While tightening, if the torque wrench clicks before the alignment marks align, continue to turn the spoke nipple until the marks align.
  - c. If the alignment marks align and the torque specification has not been reached, continue to tighten the spoke nipple until the correct torque is achieved, but do not turn spoke nipple more then 1/4 turn past alignment mark.
- True the wheel. See <u>2.7 CHECKING AND TRUING</u> WHEELS.

Table 1-9. Spoke Nipple Torque Specification

RIM TYPE	MINIMUM TORQUE
All	55 <b>in-lbs</b> (6.2 Nm)

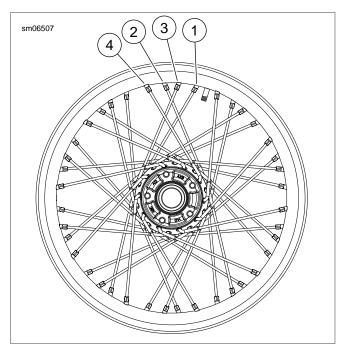


Figure 1-18. Tightening Laced Wheels (typical)

## FREE PLAY ADJUSTMENT

FASTENER	TORQUE VALUE		
Primary chain adjuster locknut	20-25 ft-lbs	27.1-33.9 Nm	
Primary chain inspection cover	90-120 <b>in-lbs</b>	10.2-13.6 Nm	

# WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- See <u>Figure 1-19</u>. Remove the primary chain inspection cover (1).

## NOTE

Rotate the engine to measure free play at several chain positions.

3. See <u>Figure 1-20</u>. Through the inspection opening, measure chain free play at the tightest position.

## NOTE

**Factory Setting:** The factory sets initial cold engine free play to 1/4-3/8 in (6.35-9.53 mm). With the engine cold, measure free play on a primary chain that has never been adjusted:

- Less than 1/4 in (6.35 mm): Adjust to specification.
- Between 1/4 in (6.35 mm) and 3/8 in (9.53 mm): Do NOT adjust.

## NOTICE

Do not adjust the primary chain tighter than specified. Running chain too tight will result in excessive wear. (00202a)

- 4. If the measurement is not in specification, adjust the primary chain. Refer to <u>Table 1-10</u>.
  - a. See Figure 1-19. Loosen the locknut (2).
  - With a hex key, turn the adjuster screw (3) clockwise to reduce free play or counterclockwise to increase free play.
  - c. When free play is within specification, hold the adjuster screw with a hex key and tighten the locknut to 20-25 ft-lbs (27.1-33.9 Nm).
- If the primary chain cannot be adjusted to specification, replace the chain. See <u>5.4 PRIMARY DRIVE AND</u> <u>CLUTCH: XL MODELS</u> or <u>5.5 PRIMARY DRIVE AND</u> <u>CLUTCH: XR 1200X.</u>
- Install a new gasket and the primary chain inspection cover. Tighten to 90-120 in-lbs (10.2-13.6 Nm).

Install main fuse.

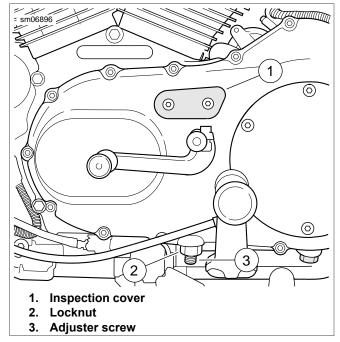


Figure 1-19. Primary Chain Inspection Cover and Adjuster

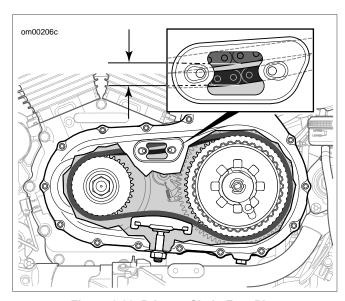


Figure 1-20. Primary Chain Free Play

Table 1-10. Primary Chain Free Play Specifications

ENGINE	in	mm
Cold	3/8-1/2	9.5-12.7
Hot	1/4-3/8	6.3-9.5

1-26 2013 Sportster Service: Maintenance

# TRANSMISSION LUBRICANT

## TRANSMISSION LUBRICATION

FASTENER	TORQUE VALUE	
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm

## **Check Lubricant Level**

1. Ride motorcycle until engine is warmed up to normal operating temperature.

## NOTE

Support motorcycle upright to equalize lubricant level in the transmission compartments.

2. Position motorcycle upright.

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- Remove main fuse.
- 4. Remove foot controls:
  - a. XL Models with Mid-mount Controls: Remove left side rider footrest and mounting bracket assembly.
     See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - XR 1200X: Remove left side rider footrest, mounting bracket assembly, and shift linkage. See 2.42 RIDER FOOT CONTROLS: XR 1200X.
- 5. See <u>Figure 1-21</u>. Remove screws with washers and remove clutch inspection cover (1).
- 6. See <u>Figure 1-22</u>. Verify that lubricant level is even with bottom of clutch diaphragm spring (1).

## **NOTICE**


When draining or adding lubricant, do not allow dirt, debris or other contaminants to enter the engine. (00198a)

## NOTICE

Do not overfill the primary chaincase with lubricant. Overfilling can cause rough clutch engagement, incomplete disengagement, clutch drag and/or difficulty in finding neutral at engine idle. (00199b)

 If the level is low, add FORMULA+ TRANSMISSION AND PRIMARY CHAINCASE LUBRICANT through clutch inspection cover opening. Verify that lubricant level is even with bottom of clutch diaphragm spring.

- 8. Install the clutch inspection cover:
  - Install a new quad ring. Verify that the quad ring is fully seated in groove of primary cover.
  - b. See <u>Figure 1-23</u>. Install cover and tighten screws in sequence to 90-120 **in-lbs** (10.3-13.6 Nm).
- Install left side rider footrest:
  - a. XL Models with Mid-mount Controls: Install left side rider footrest and mounting bracket assembly.
     See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - XR 1200X: Install left side rider footrest, mounting bracket assembly, and shift linkage. See 2.42 RIDER FOOT CONTROLS: XR 1200X.
- 10. Install main fuse.
- Run engine. Check for leaks.

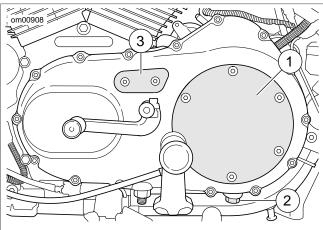

- 1. Clutch inspection cover
- 2. Drain plug
- 3. Primary chain inspection cover

Figure 1-21. Primary Cover: XL Model

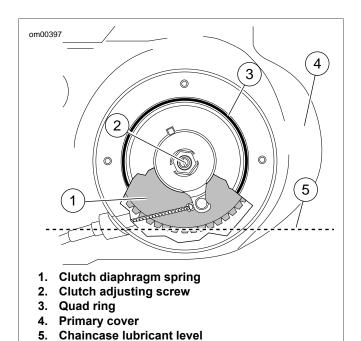


Figure 1-22. Chaincase Lubricant Level

# **Change Lubricant**

# WARNING

Be sure that no lubricants or fluids get on tires, wheels or brakes when changing fluid. Traction can be adversely affected, which could result in loss of control of the motorcycle and death or serious injury. (00047d)

- 1. Ride motorcycle until engine is warmed up to normal operating temperature.
- Turn the engine off and position motorcycle on jiffy stand. This will allow the chaincase lubricant to drain out of transmission.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 3. Remove main fuse.
- 4. See <u>Figure 1-21</u>. Position a suitable container under transmission drain plug (2).
- 5. Remove drain plug. Drain lubricant.
- 6. Position the motorcycle straight up and level. This allows additional fluid to be drained from clutch compartment.

#### NOTE

Dispose of lubricant in accordance with local regulations.

## **NOTICE**

Do not over-tighten filler or drain plug. Doing so could result in a lubricant leak. (00200b)

- 7. Clean magnetic drain plug. Replace O-ring if damaged.
- 8. Apply LOCTITE 565 THREAD SEALANT and install drain plug. Tighten to 14-30 ft-lbs (19.0-40.7 Nm).
- 9. Remove the clutch inspection cover.
- See <u>Figure 1-22</u>. Add 1.00 qt (0.95 L) of FORMULA+ TRANSMISSION AND PRIMARY CHAINCASE LUB-RICANT through clutch inspection cover opening. Verify that lubricant level is even with bottom of clutch diaphragm spring (1).
- 11. Install the clutch inspection cover:
  - Install a **new** quad ring. Verify that the quad ring is fully seated in groove of the primary cover.
  - b. See <u>Figure 1-23</u>. Install cover and tighten screws in sequence to 90-120 **in-lbs** (10.3-13.6 Nm).
- 12. Install main fuse.
- 13. Run engine. Check for lubricant leaks.

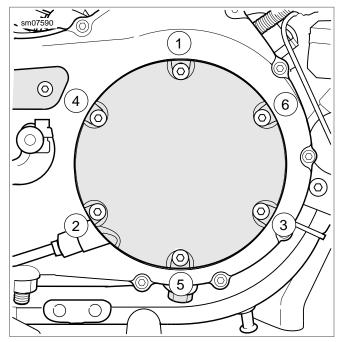


Figure 1-23. Clutch Inspection Cover Torque Sequence

CLUTCH 1.11

## **ADJUSTMENT**

FASTENER	TORQUE	VALUE
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm
Clutch cable adjuster jamnut	120 in-lbs	13.6 Nm

## **Release the Clutch Cable Tension**

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- XL Models: See <u>Figure 1-24</u>. Remove cable adjuster from the frame retaining clips.
- 3. See <u>Figure 1-25</u>. Pull the boot (1) away from the cable adjuster (2).
- 4. Loosen the jamnut (3).
- Turn the adjuster to loosen the clutch cable at the hand lever.

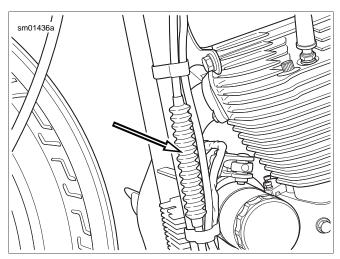


Figure 1-24. Clutch Cable Adjuster Location: XL Models

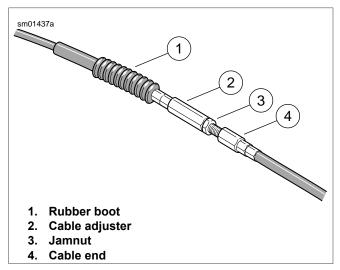


Figure 1-25. Clutch Cable Adjuster

# **Clutch Adjustment**

- 1. Access the clutch inspection cover:
  - a. XL Models with Mid-mount Controls: Remove the clutch side rider footrest and mounting bracket assembly. See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - XR 1200X: Remove the clutch side rider footrest and shifter mounting bracket and a shift linkage pivot bolt. See 2.42 RIDER FOOT CONTROLS: XR 1200X.
- Remove the clutch inspection cover. Discard the quad ring.
- 3. See Figure 1-26. Remove the hex lockplate with the spring (1) from the clutch adjusting screw (2).
- Turn the adjusting screw counterclockwise until resistance is felt and then turn the adjusting screw clockwise 1/4 turn.
- Install the hex lockplate with the spring and turn the adjusting screw clockwise to fit the lockplate onto the flats of the adjusting screw.
- 6. Install the clutch inspection cover.
  - a. Install a **new** quad ring in the primary cover.
  - b. Install the inspection cover.
  - Install the screws and tighten in a cross pattern to 90-120 in-lbs (10.3-13.6 Nm).
- 7. Install the foot controls:
  - XL Models with Mid-mount Controls: Install the footrest and mounting bracket. See <u>2.40 RIDER</u> FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - XR 1200X: Install the rider footrest and shifter mounting bracket and shift linkage. See 2.42 RIDER FOOT CONTROLS: XR 1200X.

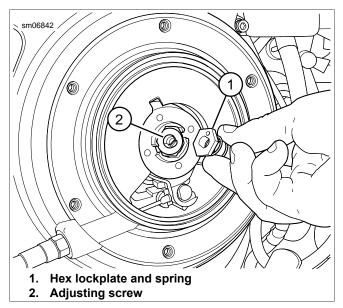


Figure 1-26. Clutch Adjustment Screw

# **Lever Free Play**

- 1. Turn the adjuster away from the jamnut until there is no slack in the cable at the clutch lever.
- 2. See Figure 1-27. Pull the clutch cable ferrule (2) away from the clutch lever bracket (3) and measure the free play (4).
- 3. Adjust to specification. Refer to <u>Table 1-11</u>.

- 4. Tighten the jamnut to 120 in-lbs (13.6 Nm).
- 5. Pull the rubber boot over the cable adjuster.
- 6. **XL Models:** Secure the cable in the cable retainers.
- 7. Install main fuse.

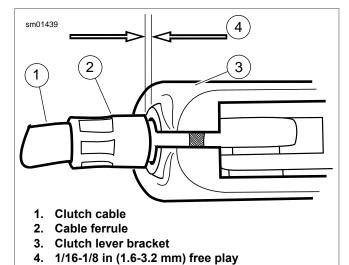


Figure 1-27. Clutch Free Play Adjustment

Table 1-11. Clutch Lever Free Play Specifications

FREE PLAY	in	mm	
Measurement	1/16-1/8	1.6-3.2	

# **DRIVE BELT AND SPROCKETS**

## **GENERAL**

## WARNING

Never bend belt forward into a loop smaller than the drive sprocket diameter. Never bend belt into a reverse loop. Over bending can damage belt resulting in premature failure, which could cause loss of control and death or serious injury. (00339a)

In the case of stone damage to belt, inspect the sprockets for damage and replace as required. If replacing belt, always replace both transmission and rear sprockets.

## **CLEANING**

Keep dirt, grease, oil, and debris off the drive belt and sprockets. Clean the belt with a rag slightly dampened with a light cleaning agent.

## INSPECTION

# **Sprockets**

#### NOTE

Chrome chips or rear sprocket gouges large enough to be harmful will leave a pattern on the belt face.

- See <u>Figure 1-28</u>. Inspect each tooth (1) of rear sprocket for:
  - a. Tooth damage.
  - b. Large chrome chips with sharp edges.
  - c. Gouges caused by hard objects.
  - d. Excessive loss of chrome plating (see next step).
- To check if chrome plating has worn off, drag a scribe or sharp knife point across the bottom of a groove (2) (between two teeth) with medium pressure.
  - If scribe or knife point slides across groove without digging in or leaving a visible mark, chrome plating is still good.
  - If scribe or knife points digs in and leaves a visible mark, it is cutting the bare aluminum. A knife point will not penetrate the chrome plating.
- Replace rear sprocket if major tooth damage or loss of chrome exists.

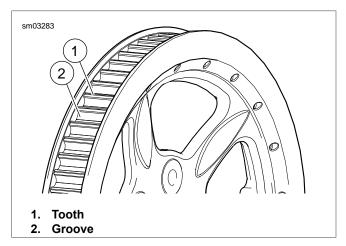


Figure 1-28. Rear Sprocket

# Idler Pulley: XR 1200X

See <u>Figure 1-29</u>. Inspect idler pulley for signs of uneven wear. Excessive lateral side play of 0.035 in (0.9 mm) or roughness indicates worn bearings. Replace idler pulley as an assembly. See <u>5.6 DRIVE BELT</u>.



Figure 1-29. Measuring Lateral Side Play on Idler Pulley

## **Drive Belt**

## NOTE

Belt teeth are coated with polyethylene lubricant. Coating will wear off over time. This is not an indicator of belt wear.

See Figure 1-30. Inspect drive belt for:

- Cuts or unusual wear patterns.
- Outside edge bevelling (8). Some bevelling is common, but it indicates that sprockets are misaligned.
- Stone punctures (7) on outside ribbed surface. If cracks/damage exists near edge of belt, replace belt immediately. Damage to center of belt will require belt replacement eventually. When cracks extend to the edge of the belt, failure is imminent.
- Inside (toothed portion) of belt for exposed tensile cords (normally covered by nylon layer and polyethylene layer).

This condition will result in belt failure and indicates worn transmission sprocket teeth. Replace belt and transmission sprocket.

- Signs of puncture or cracking at the base of the belt teeth.
   Replace belt if either condition exists.
- If conditions 2, 3, 6 or 7 (on edge of belt) exist, replace belt.

## NOTE

Condition 1 may develop into 2 or 3 over time. Condition 1 is not grounds for replacing the belt, but it should be watched closely before condition 2 develops which will require belt replacement.

Table 1-12. Drive Belt Wear Analysis

NO.*	CONDITION	REQUIRED ACTION
1	Internal tooth cracks (hairline)	OK to run, but monitor condition.
2	External tooth cracks	Replace belt.
3	Missing teeth	Replace belt.
4	Chipping (not serious)	OK to run, but monitor condition.
5	Fuzzy edge cord	OK to run, but monitor condition.
6	Hook wear	Replace belt and sprocket.
7	Stone damage	Replace belt if damage is on the edge.
8	Bevel wear (outboard edge only)	OK to run, but monitor condition.
XR only	Excess edge wear	Check idler bearings and bracket attachment.
* See <u>Figure 1-30</u> .		

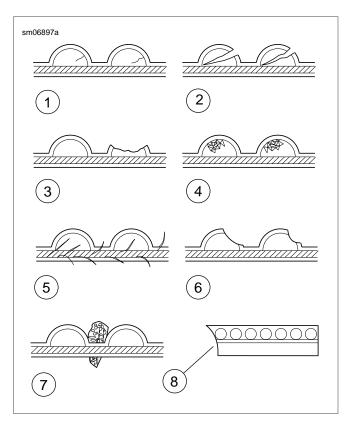


Figure 1-30. Drive Belt Wear Patterns

## DRIVE BELT DEFLECTION

PART NUMBER	TOOL NAME
HD-35381A	BELT TENSION GAUGE

FASTENER	TORQUE	VALUE
Axle, rear, nut	95-105 ft-lbs	129-142 Nm
Brake hose clamp to rear fork screw	30-40 <b>in-lbs</b>	3.4-4.5 Nm

# **Gauging Deflection**

Check belt deflection at the loosest spot in the belt with the transmission in neutral and the motorcycle at ambient temperature.

- With the motorcycle unladen and resting on its jiffy stand, fit the BELT TENSION GAUGE (Part No. HD-35381A) on the belt.
  - XL Models: See <u>Figure 1-31</u>. Position the gauge halfway between the transmission and rear wheel sprockets.
  - XR 1200X: See <u>Figure 1-32</u>. Fit the tension gauge half-way (1) between the idler wheel and rear sprocket.

- 2. With the BELT TENSION GAUGE set to 0 lb (0 kg), note the current belt position.
  - a. XL Models: See Figure 1-31. View position through window on drive belt guard.
  - b. XR 1200X: See Figure 1-32. Check position (2) on front of debris deflector.
- Using the BELT TENSION GAUGE, apply 10 lb (4.5 kg) of force to the bottom belt.
- 4. Count the number of gradations (3) between the original belt position and after applying the force. Multiply this number by 1/8 in (3.2 mm) to determine the deflection.
- 5. Compare the deflection to specifications. Refer to Table 1-13.
- 6. Adjust as necessary.

# **A**WARNING

Be sure wheel and brake caliper are aligned. Riding with a misaligned wheel or brake caliper can cause the brake disc to bind and lead to loss of control, which could result in death or serious injury. (00050a)

## NOTE

When gauging deflection, check the rear brake caliper position on rear brake disc. Disc should run true within brake caliper.

Table 1-13. Belt Deflection Specifications\*

MODELS	in	mm
XL 883R	9/16-5/8	14.3-15.9
Other XL models	1/4-5/16	6.4-7.9
XR 1200X	1/4-3/8	6.4-9.5
* Deflection measured at 10 lb (4.5 kg) tension.		


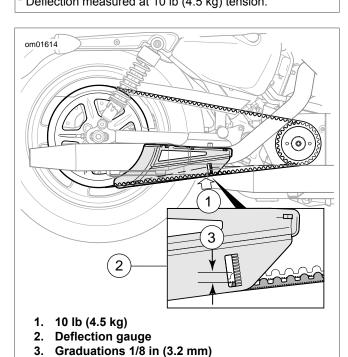


Figure 1-31. Belt Deflection: XL Models

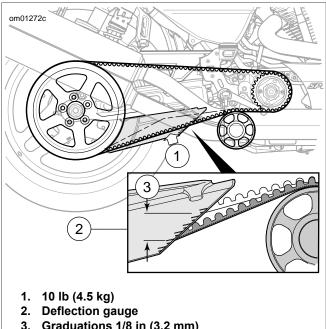

3. Graduations 1/8 in (3.2 mm)

Figure 1-32. Belt Deflection: XR 1200X

# Adjustment

## NOTE

Rear brake line is clamped tightly to rear fork to avoid chafing of brake line in clamp. A small amount of slack must be maintained in rear brake line between clamp and rear caliper when rear wheel is adjusted.

- XL Models: See Figure 1-33. Remove screw (4) from clamp (3) on rear brake line (2).
- See Figure 1-34. Remove and discard E-clip (1) and loosen rear axle nut (4).

## NOTE

Turn both adjuster nuts the same number of turns in order to maintain approximate alignment of rear wheel.

- Turn axle adjuster nuts (2) on each side of rear fork clockwise to decrease belt deflection (increase tension), or counterclockwise to increase belt deflection (decrease tension).
- Check rear wheel alignment. See 1.24 WHEEL ALIGN-MENT, Wheel Alignment.

## **A**WARNING

Do not exceed specified torque when tightening axle nut. Exceeding torque can cause wheel bearings to seize during vehicle operation, which could result in death or serious injury. (00408e)

- After belt deflection and wheel alignment are properly adjusted,
  - a. Tighten axle nut (4) to 95-105 ft-lbs (129-142 Nm). Install **new** E-clip (1).
  - XL Models: See Figure 1-33. Reposition clamp (3) on rear brake line (2) and secure clamp to rear fork (1) with screw (4). Tighten to 30-40 in-lbs (3.4-4.5 Nm).

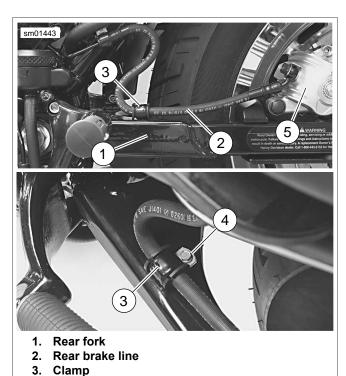


Figure 1-33. Rear Brake Line: XL Models

Screw

5. Rear brake caliper

4.

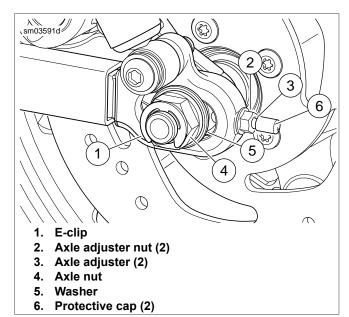


Figure 1-34. Drive Belt Adjustment: XL Models

# THROTTLE CONTROL

# CABLE INSPECTION AND LUBRICATION

FASTENER	TORQUE	VALUE
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

- Release the throttle cable tension. See <u>1.13 THROTTLE</u> CONTROL, Cable Adjustment.
- 2. See <u>Figure 1-35</u>. Remove screws (1) to separate the upper switch housing from the lower housing.
- Unhook ferrules and cables from throttle grip. Remove throttle sleeve.
- 4. Inspect each cable. Replace cable assembly if cable is frayed or kinked.
- Inspect cable outer sheath from throttle grip to induction module. Replace if necessary.
- 6. Apply a light coat of graphite to handlebar. Replace throttle grip.
- 7. Pour two drops of HARLEY LUBE into the cable housings.
- Install switch housing. Tighten to 35-45 in-lbs (4.0-5.1 Nm).
- 9. Adjust throttle cables.

## CABLE ADJUSTMENT

# Operation

# **A**WARNING

Before starting engine, be sure throttle control will snap back to idle position when released. A throttle control that prevents engine from automatically returning to idle can lead to loss of control, which could result in death or serious injury. (00390a)

- 1. Back off the friction screw.
- Roll on and release the throttle grip. If the throttle does not return to closed (idle), inspect and adjust throttle cables.
- 3. With engine idling, turn handlebar stop to stop. If engine speed changes, adjust throttle cables.

## Adjustment


- 1. See Figure 1-35. Loosen throttle friction screw (3).
- 2. Slide rubber boot off control cable adjusters (6).
- 3. Loosen jamnuts (7).
- 4. Turn cable adjusters to shorten cable housings to minimum length.
- Point front wheel straight ahead. With engine OFF, gently turn throttle control grip (2) to fully open. Hold in position.
- 6. Gently turn adjuster (6) on throttle control cable (4) counterclockwise until throttle cam (8) touches throttle cam stop (10). Release throttle grip. Turn adjuster counterclock-

- wise an additional 1/2-1 turn. Tighten jamnut on throttle cable adjuster.
- Turn handlebar to right stop. Turn adjuster (6) on idle control cable (5) to lengthen sleeve until end of cable housing touches spring (9) within cable guide (11).

#### NOTE

Verify that throttle wheel returns to idle each time throttle grip is released.

- Check adjustment. Twist and release throttle grip two or three times. If throttle does not return to idle, turn idle adjuster to shorten sleeve until correct. Tighten jamnuts.
- 9. Slide the rubber boots over the cable adjusters.

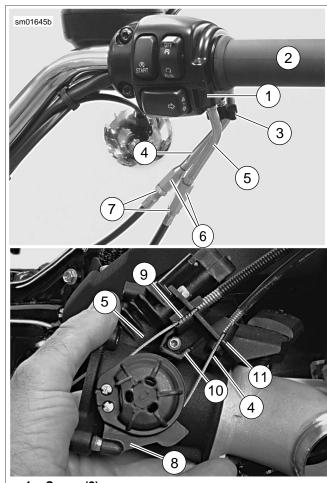

- 1. Screw (2)
- 2. Throttle grip
- 3. Friction screw
- 4. Throttle (pull open) cable
- 5. Idle (pull close) cable
- 6. Cable adjuster (2)
- 7. Jamnut (2)
- 8. Throttle cam
- 9. Spring
- 10. Throttle cam stop
- 11. Cable guide

Figure 1-35. Throttle Cable Adjustment (typical)

# CABLE AND CHASSIS LUBRICATION

1.14

## **GENERAL**

Inspect and lubricate the following items according to 1.5 MAINTENANCE SCHEDULE.

- · Front brake hand lever
- Clutch hand lever
- · Throttle control cables
- · Throttle control grip sleeve
- · Clutch cable
- Foot shift lever pivot (if applicable)
- · Rear brake lever pivot
- · Steering head bearings
- · Jiffy stand

If service is on muddy or dusty roads, clean and lubricate at shorter intervals.

## **CABLES AND HAND LEVERS**

For throttle cables, see <u>2.28 THROTTLE CABLES: ALL MODELS.</u>

Use HARLEY® LUBE for clutch lever and cable.

Use G40M BRAKE GREASE on front brake lever pin pivot hole and on the end of piston that contacts brake lever.

# FOOT SHIFT LEVER AND REAR BRAKE PEDAL

Clean and lubricate the foot shift lever pivot (on models with forward controls) and rear brake pedal pivot with ANTI-SEIZE LUBRICANT at scheduled service intervals as specified in 1.5 MAINTENANCE SCHEDULE.

If service is on muddy or dusty roads, clean and lubricate components at shorter intervals.

## JIFFY STAND

Clean and lubricate the jiffy stand. For more information, see 2.38 JIFFY STAND.

# STEERING HEAD BEARINGS

Lubricate the steering head bearings with SPECIAL PURPOSE GREASE. See <u>1.19 STEERING HEAD BEARINGS</u>.

1-36 2013 Sportster Service: Maintenance

BRAKES 1.15

## **GENERAL**

The front and rear brakes are fully hydraulic disc brake systems that require little maintenance.

# **AWARNING**

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### **NOTES**

- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Cover handlebar switches with a shop towel before adding brake fluid to front master cylinder reservoir. Spilling brake fluid on handlebar switches may render them inoperative.

# **AWARNING**

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

## **BRAKE LINES**

Inspect brake lines for leaks, contact or abrasion. Refer to Table 1-14.

LINE TYPE	INSPECTION	REMEDY
Steel lines	No marks	OK/Monitor
	Slight mark in paint or plating*	
	Copper colored-paint/plating worn off*	
	Silver colored base material-no noticeable feel of wear*	
	Silver colored base material-noticeable feel of wear*	Replace
	Brake fluid leak or other damage	
Rubber hose	No marks	OK/Monitor
	Slight dent or flattening of ribs*	
	Worn to bottom of ribs	Replace
	Brake fluid leak or other damage	
Protective cover (steel, rubber, plastic or braided)	No marks	OK/Monitor
	Slight dent in covering*	
	Slight dent or flattening of plastic covering*	
	Worn or cut-through covering-exposed brake line material	Replace
	Brake fluid leak or other damage	
* If there is line contact, reposition	n the line. If base material is visible, prevent corrosion with touch-u	p paint.

- Front brake: Position vehicle on a flat level surface. Turn handlebar so front brake master cylinder is approximately level. See <u>Figure 1-36</u>.
- 2. Check for fluid through reservoir sight glass.

**FLUID LEVEL** 

NOTE

**XL Models:** See <u>Figure 1-37</u>. Rear brake reservoir cover may be removed to more easily verify fluid level in reservoir.

- 3. Rear brake: Prepare vehicle:
  - Have an assistant hold vehicle upright on a level surface.
  - See <u>Figure 1-38</u> or <u>Figure 1-39</u>. Check that fluid level is between upper (3) and lower (4) marks on reservoir sight window.
- 4. If fluid is not visible through sight glass (front) or level in sight window is low (rear), check system for leaks. Check that brake pads are properly installed and not worn beyond service wear limits. Perform any necessary repairs. See 1.16 BRAKE PADS AND DISCS: XL MODELS or 1.17 BRAKE PADS AND DISCS: XR 1200X.
- If fluid is still not visible through sight glass (front) or level in sight window is low (rear), remove cover to verify fluid level. If necessary, add DOT 4 BRAKE FLUID. Replace cover. See <u>2.17 BLEEDING BRAKES</u>.
- Front brake hand lever and rear brake foot pedal must have a firm feel when applied. If not, bleed system using only DOT 4 BRAKE FLUID. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.

NOTE

XL Models: Replace rear brake reservoir cover if removed.

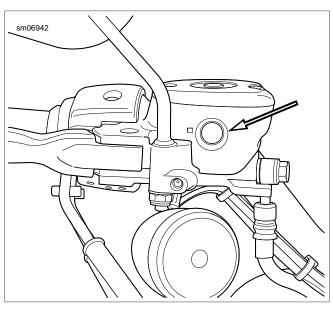


Figure 1-36. Master Cylinder Sight Glass (typical)

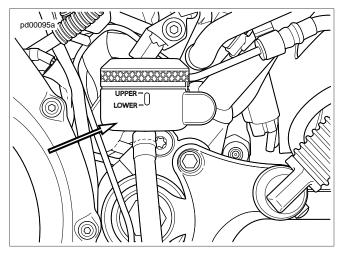


Figure 1-37. Rear Brake Master Cylinder Reservoir Cover (typical)


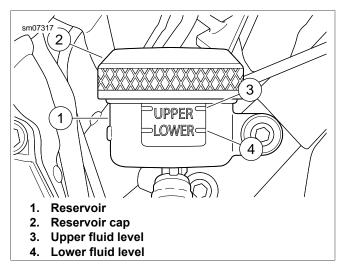


Figure 1-38. Rear Brake Master Cylinder Reservoir: XL Models

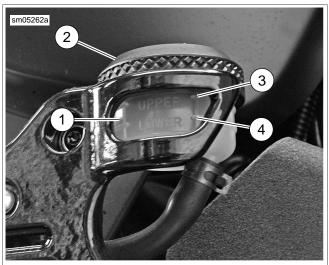

- 1. Reservoir
- 2. Reservoir cap
- 3. Upper fluid level
- 4. Lower fluid level

Figure 1-39. Rear Brake Master Cylinder Reservoir: XR 1200X

# **TROUBLESHOOTING**

Use the following troubleshooting guide to help in determining probable causes of poor brake operation. Refer to <u>Table 1-15</u>.

Table 1-15. Troubleshooting Brakes

CONDITION	CHECK FOR	REMEDY
Excessive lever or pedal	Air in system	Bleed brake system.
travel or spongy feel	Master cylinder reservoir low on fluid	Fill master cylinder reservoir with approved brake fluid. Bleed brake system.
Chattering sound when brake	Worn brake pads	Replace brake pads.
is applied	Loose mounting bolts	Tighten bolts.
	Warped brake disc	Replace brake disc.
Ineffective brake lever or pedal - travels to limit	Low fluid level	Fill master cylinder reservoir with approved brake fluid and bleed brake system.
	Piston cup not functioning	Rebuild master cylinder.
Ineffective brake lever or	Distorted or glazed brake disc	Replace brake disc.
pedal - travel normal	Distorted, glazed or contaminated brake pads	Replace brake pads.
	Cup in master cylinder blocking relief port	Inspect master cylinder.
not retract.	Master cylinder overfilled	Correct fluid level.

# **INSPECTION**

# **Brake Pads**

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

# **AWARNING**

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

See <u>Figure 1-40</u>. Replace brake pads if brake pad friction material on either the front or rear caliper is worn to 0.04 in (1.02 mm) or less (3) above the backing plate. Always replace both pads in a caliper as a set. See <u>1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front or 1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear.</u>

When checking the brake pads and discs, inspect the brake hoses for correct routing and any signs of damage or leakage.

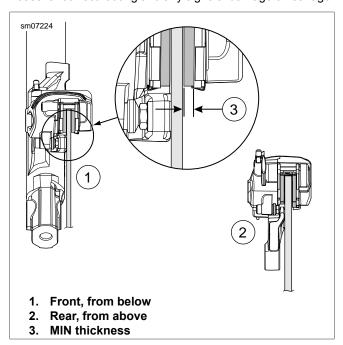


Figure 1-40. XL Brake Pad MIN Thickness


# Brake Disc Thickness, Lateral Runout and Warpage


See <u>Figure 1-41</u>. The minimum brake disc thickness is stamped on the side of the disc. Replace disc if worn past minimum thickness or badly scored.

Maximum brake disc lateral runout and warpage is 0.008 in (0.2 mm) when measured near the outside diameter.

- To replace front brake disc(s), see <u>2.5 WHEELS, Front Wheel</u>.
- To replace rear brake disc, see <u>2.5 WHEELS</u>, Rear Wheel.

1-40 2013 Sportster Service: Maintenance

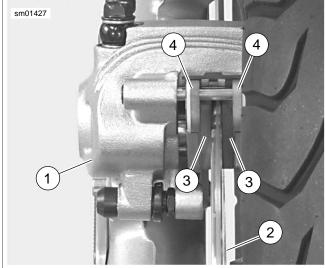

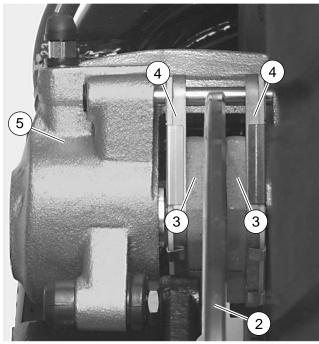

- 1. Front brake caliper (from below)
- 2. Brake disc
- 3. Brake pad
- 4. Brake pad backing plate
- 5. Rear brake caliper (from rear)

Figure 1-41. Brake Pads and Discs

## **BRAKE PAD REPLACEMENT: FRONT**

FASTENER	TORQUE VALUE	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

## **NOTES**

- Do not remove front caliper(s) from mounting bracket unless caliper mounting pins require service. Caliper removal increases risk of contaminate damage.
- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Cover handlebar switches with a shop towel before adding brake fluid to front master cylinder reservoir. Spilling brake fluid on handlebar switches may render them inoperative.
- Position motorcycle so that front master cylinder reservoir is level.
- See <u>Figure 1-42</u>. Remove two screws (5), reservoir cover (4), diaphragm plate (3) and diaphragm (2) from master cylinder reservoir (1).
- Wrap a shop towel around the master cylinder reservoir to contain any brake fluid spills.

#### NOTE

As the pistons are pushed back into the caliper, fluid level may rise higher than fluid level mark at about 1/4 in (6.35 mm) below top of reservoir. You may have to remove fluid to allow for this.

 Press against the side of the brake caliper body to push the outside brake pad (pad closest to caliper pistons) back. This pushes the caliper pistons back into their bores.

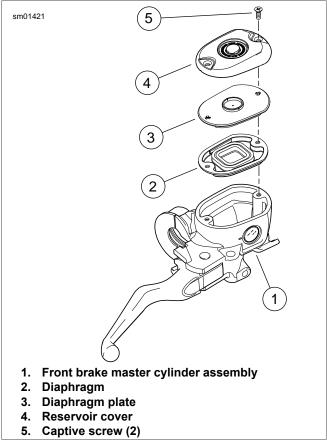


Figure 1-42. Front Brake Master Cylinder Cover Assembly (typical)

#### NOTES

- See <u>Figure 1-43</u>. Verify that the pad spring is installed before installing the **new** pads.
- Front and rear brake caliper pads are not interchangeable.

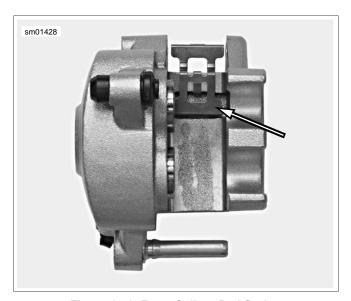


Figure 1-43. Front Caliper Pad Spring


5. See Figure 1-44. Remove pad pin plug (3).

See <u>Figure 1-45</u>. Loosen, but do not remove, brake pad pin.

#### NOTE

Do not completely remove brake pad pin from caliper during the next step. Completely removing pad pin at this time may cause difficulty during assembly.

7. Once the pistons have been fully retracted into their bores, pull pad pin part way until inside pad drops free. Note the pad's original orientation for replacement purposes.

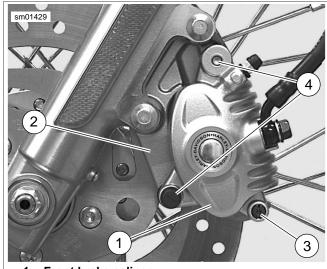

- 1. Front brake caliper
- 2. Caliper mounting bracket
- 3. Pad pin plug
- 4. Caliper mounting pins

Figure 1-44. Front Caliper Assembly


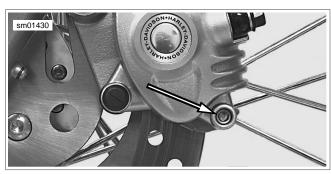


Figure 1-45. Brake Pad Pin (plug removed)

- 8. See <u>Figure 1-46</u>. Install **new** inside brake pad (1) using same orientation as pad previously removed. Align mounting tabs.
- 9. While holding **new** inside pad in place, pull pad pin out and remove outside brake pad. Note the pad's original orientation for replacement purposes.
- 10. Install **new** outside brake pad using the same orientation as pad previously removed. Align mounting tabs.
- 11. Temporarily insert a 1/8 drill bit in caliper pad pin hole to hold both pads in place.
- Inspect pad pin for grooving and wear. Measure pad pin diameter in an unworn area, and then in the area of any

grooving or wear. If wear exceeds 0.011 in (0.28 mm), replace pin.

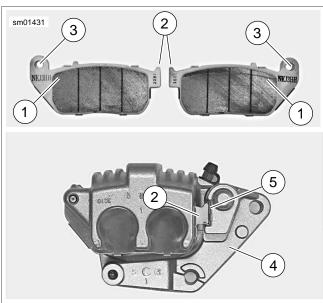

- 1. Brake pad
- 2. Front mounting tab
- 3. Pad pin hole
- 4. Front caliper mounting bracket
- 5. Slot

Figure 1-46. Front Brake Pads

13. Press brake pads firmly up against pad spring. Remove drill bit. Install pad pin. Tighten to 131-173 in-lbs (14.8-19.6 Nm).

## NOTE

If pad pin does not fit, check the following:

- You are using a set of pads, not two identical pads.
- Pad spring orientation must match Figure 1-43.
- See Figure 1-46. Fully seat mounting tabs (2) in slot (5).
- Push pads against pad spring before installing pad pin.
- 14. See Figure 1-44. Install pad pin plug (3). Tighten to 18-25 in-lbs (2.0-2.9 Nm).

# **AWARNING**

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

15. Pump brake lever to move pistons out until they contact outside brake pad. Verify piston location against pad.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

16. See Figure 1-47. Check brake fluid level in master cylinder. Add enough DOT 4 BRAKE FLUID to reservoir to bring fluid level even with ridge (1) cast into inside of reservoir. about 1/4 in (6.35 mm) below top edge.



2. Sight glass

Figure 1-47. Filling Front Master Cylinder Reservoir (typical)

17. See Figure 1-42. Install diaphragm (2), diaphragm plate (3), reservoir cover (4) and screws (5) on front brake master cylinder reservoir. Tighten screws to 9-17 in-lbs (1.0-2.0 Nm).

## **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 18. Test brake system.
  - a. Turn ignition switch ON. Pump brake lever to verify operation of the stop lamp.
  - b. Test ride the motorcycle. If the brakes feel spongy, bleed the system. See <u>2.17 BLEEDING BRAKES</u>.

## NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.

# **BRAKE PAD REPLACEMENT: REAR**

FASTENER	TORQUE VALUE	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)


## **NOTES**


- See <u>Figure 1-50</u>. Do **not** remove or loosen the caliper mounting pins (4). Removing caliper from mounting bracket increases the risk of contaminants falling into caliper boots and bushings. These contaminants could damage caliper during vehicle operation.
- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- 1. Position vehicle on a flat level surface.

#### NOTE

See <u>Figure 1-48</u>. As the piston is pushed back into the caliper, fluid level may rise higher than the upper fluid level (3) in the reservoir (1). You may have to remove fluid to allow for this.

- See <u>Figure 1-48</u>. Remove rear master cylinder reservoir cap (2).
- 3. Place a suitable container under the rear master cylinder to catch any fluid that may overflow.

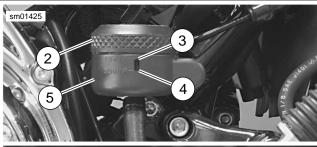

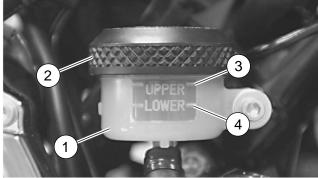

- 1. Rear brake master cylinder reservoir
- 2. Reservoir cap
- 3. Upper fluid level
- Lower fluid level
- 5. Reservoir cover

Figure 1-48. Rear Brake Master Cylinder Reservoir: XL Models

4. Press against the side of the brake caliper body to push the outside brake pad (pad closest to caliper piston) back. This pushes the caliper piston back into its bore.

## NOTES

- See <u>Figure 1-49</u>. Verify that the pad spring is installed before installing **new** pads.
- Front and rear brake pads are not interchangeable.

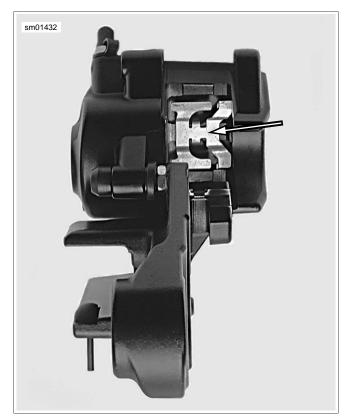



Figure 1-49. Rear Caliper Pad Spring

- 5. See Figure 1-50. Remove pad pin plug (3).
- See <u>Figure 1-51</u>. Loosen, but do not remove, brake pad pin.

## NOTE

Do not completely remove brake pad pin from caliper during the next step. Completely removing pad pin at this time may cause difficulty during assembly.

7. Once the piston has been fully retracted into its bore, pull pad pin part way until inside pad drops free. Note the pad's original orientation for replacement purposes.

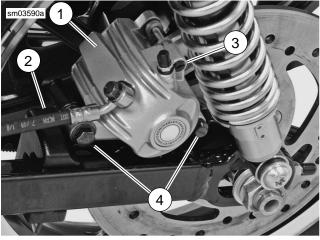

- 1. Rear brake caliper
- 2. Caliper mounting bracket
- 3. Pad pin plug
- 4. Caliper mounting pins

Figure 1-50. Rear Caliper Assembly

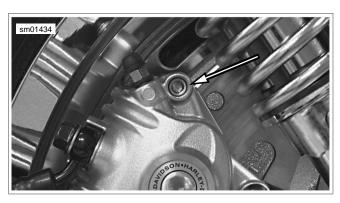



Figure 1-51. Brake Pad Pin (plug removed)

- See <u>Figure 1-52</u>. Install **new** inside brake pad (2) using same orientation as pad previously removed. Align mounting tabs.
- While holding **new** inside pad in place, pull pad pin out and remove outside brake pad (1). Note the pad's original orientation for replacement purposes.
- Install new outside brake pad using the same orientation as pad previously removed. Align mounting tabs.
- 11. Temporarily insert a 1/8-in (3.175 mm) drill bit in caliper pad pin hole to hold pads in place.
- Inspect pad pin for grooving and wear. Measure pad pin diameter in an unworn area, and then in the area of any grooving or wear. If wear exceeds 0.011 in (0.28 mm), replace pin.
- Press brake pads firmly up against pad spring. Remove drill bit. Install pad pin. Tighten to 131-173 in-lbs (14.8-19.6 Nm).

#### NOTE

If pad pin does not fit, check the following:

- You are using a set of pads, not two identical pads.
- Pad spring orientation must match <u>Figure 1-49</u>.
- See <u>Figure 1-52</u>. Pad front mounting tabs (3) must be fully seated in mounting bracket slot (6).
- Before the pad pin is installed, push pads up against the pad spring.
- 14. See <u>Figure 1-50</u>. Install pad pin plug (3). Tighten to 18-25 **in-lbs** (2.0-2.9 Nm).

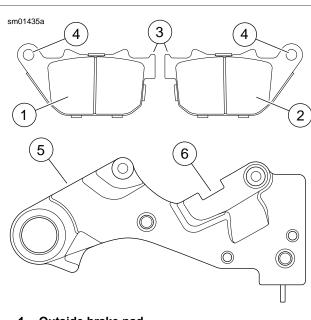

- 1. Outside brake pad
- 2. Inside brake pad
- 3. Front mounting tab
- 4. Pad pin hole
- 5. Rear caliper mounting bracket
- 6. Slot

Figure 1-52. Rear Brake Pads

# **AWARNING**

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

15. Pump brake pedal to move piston out until it contacts outside brake pad. Verify piston location against pad.

# **ACAUTION**

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

## **NOTES**

- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Fill the rear brake master cylinder reservoir must be in a level position.
- See <u>Figure 1-48</u>. Reservoir cover (5) may be removed from rear brake master cylinder reservoir (1) to more easily verify fluid level in reservoir.
- 16. See <u>Figure 1-48</u>. If desired, remove rear brake master cylinder reservoir cover (5) by grasping cover and gently pulling it straight away from reservoir (1).
- 17. Check brake fluid level in master cylinder reservoir. If necessary, add DOT 4 BRAKE FLUID to reservoir until fluid reaches upper fluid level (3).
- 18. Replace master cylinder reservoir cap (2). Replace reservoir cover (5), if removed.

# **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 19. Test brake system.
  - a. Turn ignition switch ON. Pump brake pedal to verify operation of the stop lamp.
  - Test ride motorcycle at low speed. If the brakes feel spongy, bleed the system. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.

## NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.

# **BRAKE PADS AND DISCS: XR 1200X**

## INSPECTION

## **Brake Pads**

# **AWARNING**

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

See Figure 1-53. Replace brake pads if thickness of brake pad friction material (3) is worn to 0.040 in (1.02 mm) or less. Always replace both pads in a caliper as a set. See 1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Front or 1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear.

When checking the brake pads and discs, inspect the brake hoses for correct routing and any signs of damage or leakage.

# Brake Disc Thickness, Lateral Runout and Warpage

See <u>Figure 1-54</u>. The minimum brake disc (4) thickness is stamped on the side of the disc. Replace disc if worn past minimum thickness or badly scored.

Maximum brake disc lateral runout and warpage is 0.008 in (0.2 mm) when measured near the outside diameter.

- To replace front brake disc(s), see <u>2.5 WHEELS, Front Wheel</u>.
- To replace rear brake disc, see <u>2.5 WHEELS</u>, <u>Rear Wheel</u>.


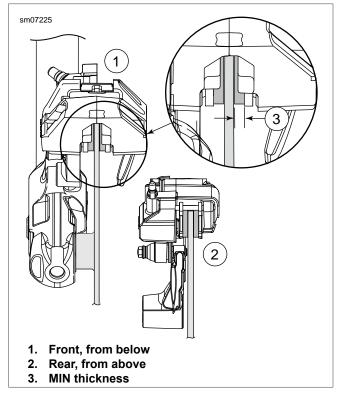


Figure 1-53. Brake Pad MIN Thickness: XR 1200X

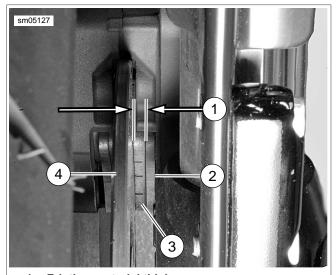

- 1. Friction material thickness
- 2. Pad backing plate
- 3. Friction material
- 4. Brake disc

Figure 1-54. Brake Pad Inspection (front brake shown)

## BRAKE PAD REPLACEMENT: FRONT

FASTENER	TORQUE VALUE	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm

## Removal

## **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)


## **NOTES**

- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Cover handlebar switches with a shop towel before adding brake fluid to front master cylinder reservoir. Spilling brake fluid on handlebar switches may render them inoperative.
- Turn handlebar to level the front master cylinder reservoir.
- See Figure 1-55. Remove two screws (5), reservoir cover (4), diaphragm plate (3) and diaphragm (2) from master cylinder reservoir (1).

#### NOTE

As the pistons are pushed back into the caliper, fluid level may rise higher than fluid level mark at about 1/4 in (6.35 mm) below top of reservoir. Remove fluid as necessary to prevent overflow.

- Wrap a shop towel around the master cylinder reservoir to contain any brake fluid spills.
- 4. Pry between the brake pads and brake disc to force all caliper pistons back into their bores. Do not to scratch the rotor or cause warpage.

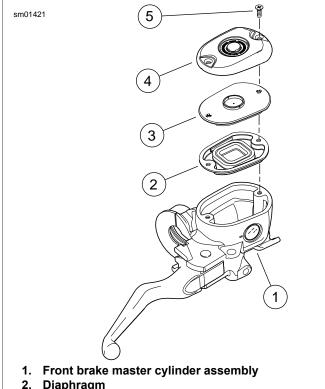

- Diaphragm
- 3. Diaphragm plate
- 4. Reservoir cover
- 5. Captive screw (2)

Figure 1-55. Front Brake Master Cylinder Cover Assembly (typical)

- 5. See Figure 1-56. Remove pad pins (1).
- 6. Remove pad spring (2) and brake pads through opening in caliper assembly.

## NOTE

The pad pins are manufactured with a relief near the center of their length, where the pad spring touches. Do not use this area as a measurement point to determine pad pin wear.

- 7. Inspect pad pin for grooving and wear. Measure pad pin diameter in an unworn area and in the area of any grooving or wear. If wear exceeds 0.011 in (0.28 mm), replace pin.
- 8. Inspect pad spring for wear or cracks. Replace if necessary.

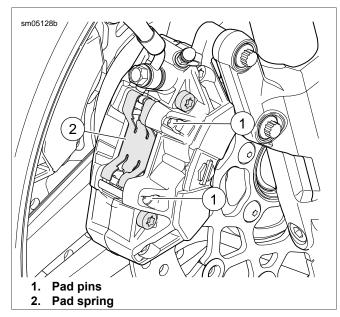


Figure 1-56. Front Caliper Assembly: XR 1200X

## Installation

#### NOTE


See <u>Figure 1-57</u>. When replacing front brake pads, make sure pad spring is installed with the arrow and word UP (2) pointing up and captured by both pad pins (3).

 See <u>Figure 1-56</u>. Install **new** outer brake pad and pad spring. Make sure friction material faces brake disc.

#### NOTE

If pad pin does not fit, check the following:

- · You are using the correct set of pads.
- Pad spring orientation must match Figure 1-57.
- Push pads tight up against pad spring before pad pins are installed.
- While holding **new** outer pad in place, insert pad pins through holes in tabs of pad and into pad spring.
- 3. Install **new** inner brake pad, making sure friction material faces brake disc.
- 4. Push pad pins through holes in tabs of inner pad and into holes in caliper housing.
- 5. Tighten pad pins to 131-173 in-lbs (14.8-19.6 Nm).

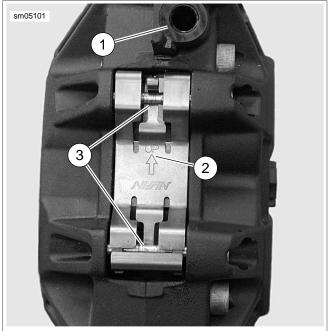

- 1. Banjo bolt hole
- 2. Arrow and word "UP"
- 3. Pad pins (2)

Figure 1-57. Front Caliper Pad Spring Orientation

# **A**WARNING

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

Pump brake lever to move pistons out until they contact outside brake pad. Verify piston location against pad.

## **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

## NOTICE

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

 See <u>Figure 1-58</u>. Check brake fluid level in master cylinder. Add enough DOT 4 BRAKE FLUID to reservoir to bring fluid level even with ridge (1) cast into inside of reservoir, about 1/4 in (6.35 mm) below top edge.



Figure 1-58. Filling Front Master Cylinder Reservoir (typical)

8. See Figure 1-55. Install diaphragm (2), diaphragm plate (3), reservoir cover (4) and screws (5) on front brake master cylinder reservoir. Tighten screws to 9-17 in-lbs (1.0-2.0 Nm).

# **AWARNING**

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 9. Test brake system.
  - a. Turn ignition switch ON. Pump brake lever to verify operation of the stop lamp.
  - Test ride the motorcycle at low speed. If the brakes feel spongy, bleed the system. See <u>2.17 BLEEDING</u> BRAKES.

## NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.

## BRAKE PAD REPLACEMENT: REAR

FASTENER	TORQUE VALUE	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm

## Removal

# NOTICE

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

## **NOTES**

- Do not remove rear caliper from mounting bracket unless caliper mounting pins and boots require service. Removing caliper from mounting bracket unnecessarily increases the risk of contaminants falling into caliper boots and bushings. These contaminants could damage caliper during vehicle operation.
- See <u>Figure 1-60</u>. It is **not** required or recommended to remove or loosen the caliper mounting fasteners (2).
- It is not necessary or recommended to remove the rear brake caliper from the caliper mounting bracket to replace pads.
- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- 1. Place motorcycle in an upright, level position.
- 2. Remove rear master cylinder reservoir cover.
- 3. Place a suitable container under the rear master cylinder to catch any fluid that may overflow.

#### NOTE

The fluid level can rise above the upper fluid level in the reservoir. Remove fluid as necessary.

 Press against the outside of the brake caliper body to push the caliper piston back into its bore, forcing fluid back to the reservoir.

### NOTE

See <u>Figure 1-59</u>. Verify that pad spring is installed before installing **new** pads.

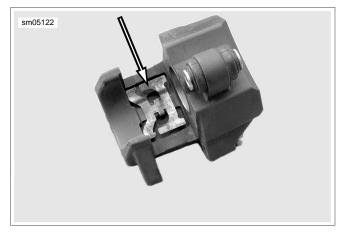



Figure 1-59. Rear Caliper Pad Spring

## NOTE

Left shock absorber is disconnected from rear fork for clarity of photograph. Pad replacement does not require the shock be disconnected.

- 5. See Figure 1-60. Remove pad pin plug (1).
- 6. Loosen, but do not remove, brake pad pin (metric).
- Pull pad pin part way out until inner pad drops free.
   Remove pad and note the pad's original orientation for replacement purposes.
- 8. Continue to remove pad pin until outer pad drops free.

- 9. Inspect pad pin for grooving and wear.
- Measure pad pin diameter in an unworn area and then in the area of any grooving or wear. If wear exceeds 0.011 in (0.28 mm), replace pin.

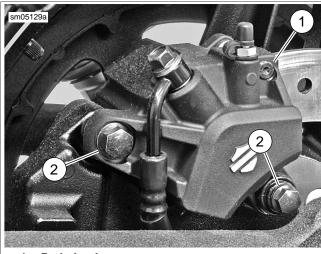

1. Pad pin plug

2. Mounting fasteners

Figure 1-60. Rear Caliper Assembly: XR 1200X

## Installation

### NOTE


The caliper and mounting bracket are shown removed for clarity of photograph. Removal is not required to replace brake pads.

- See <u>Figure 1-61</u>. Install **new** outside brake pad using the same orientation as pad previously removed. Make sure front mounting tab (3) is seated in slot (6) in caliper mounting bracket and pad friction material faces brake disc.
- 2. Install pad pin into caliper and through outer pad.
- 3. Position inner pad and continue to install pad pin while pressing brake pads firmly up against pad spring. Tighten pad pin to 131-173 **in-lbs** (14.8-19.6 Nm).

#### NOTE

If pad pin does not fit, check the following:

- The part number of the pads.
- See Figure 1-59. Check pad spring orientation.
- See <u>Figure 1-61</u>. Pad front mounting tabs (3) must be fully seated in mounting bracket slot (6).
- Push the pads tight up against pad spring before pad pin is installed.
- 4. Install pad pin plug. Tighten to 18-25 in-lbs (2.0-2.9 Nm).

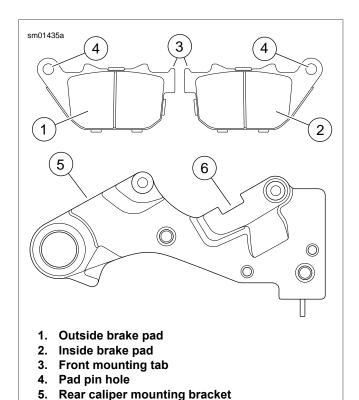

6. Slot

# **A**WARNING

Figure 1-61. Rear Brake Pads: XR 1200X

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

Pump brake pedal to move piston out until it contacts outside brake pad. Verify piston location against pad.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### NOTE

Position rear brake master cylinder reservoir level when filling or checking fluid level

- Check brake fluid level in master cylinder reservoir. If necessary, add DOT 4 BRAKE FLUID to reservoir until fluid reaches upper fluid level.
- 7. Replace reservoir cover.

# **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 8. Test brake system.
  - a. Turn ignition switch ON. Pump brake pedal to verify operation of the stop lamp.
  - Test ride motorcycle at low speed. If the brakes feel spongy, bleed the system. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.

## NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.

# SPARK PLUGS

## REMOVAL

# **A**WARNING

Disconnecting spark plug cable with engine running can result in electric shock and death or serious injury. (00464b)

### NOTE

Allow the engine to cool before servicing.

- 1. Disconnect spark plug cables.
- 2. Remove spark plugs.

## INSPECTION

#### NOTE

Discard plugs with eroded electrodes, heavy deposits or a cracked insulator.

See Figure 1-62. Compare plug deposits to Table 1-16.

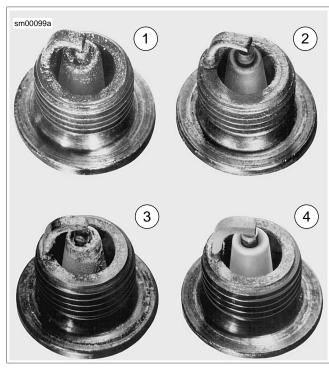


Figure 1-62. Spark Plug Deposits

Table 1-16. Spark Plug Deposit Analysis

PLUG*	DEPOSITS	POSSIBLE CAUSE
1	Wet, black and shiny	Worn pistons Worn piston rings Worn valves Worn valve guides Worn valve seals Weak battery Faulty ignition system
2	Dry, fluffy or sooty and black	Air-fuel mixture too rich
3	Light brown and glassy** May be accompanied by cracks in the insulator or by electrode erosion.	Air-fuel mixture too lean Hot running engine Valves not seating Improper ignition timing
4	White, gray or tan and powdery	Balanced combustion Clean off deposits at regular intervals.

<sup>\*</sup> See Figure 1-62.

## **CLEANING**

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

If the plugs require cleaning between tune-ups:

- 1. Clean electrodes and insulator with electrical contact cleaner. Dry plug with compressed air.
- 2. Use a thin file to flatten electrodes.

## NOTE

Electrodes with sharp edges require 25-40 percent less voltage than ones with rounded edges.

- Check condition of threads in cylinder head. Use a penetrating oil and clean out with a thread chaser. Verify that plug threads are clean.
- 4. If necessary, replace with new spark plugs.

## INSTALLATION

FASTENER	TORQUE VALUE	
Spark plug	12-18 ft-lbs	16.3-24.4 Nm

- Verify proper gap before installing **new** or cleaned spark plugs.
  - a. Select a wire-type feeler gauge within specification. Refer to Table 1-17.

<sup>\*\*</sup> The glassy deposit on a spark plug may cause high-speed misfiring.

#### NOTE

The spark plug gap is within specification when there is a slight drag on the gauge.

- Pass the wire gauge between the center and the outer electrodes.
- If necessary use the proper tool to bend the outer electrode to bring the gap to within specification.
- Apply ANTI-SEIZE LUBRICANT to the spark plug threads. Tighten to 12-18 ft-lbs (16.3-24.4 Nm).
- See Figure 1-63. Connect spark plug cables. Verify cables are connected to coil, spark plugs and anchor clips or harness caddies.

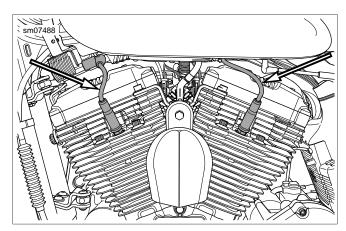


Figure 1-63. Spark Plug Cable Routing: All Models

Table 1-17. Spark Plug Gap

MODEL	TYPE	in	mm
XL	6R12	0.038-0.043	0.97-1.09
XR	10R12X	0.032-0.038	0.81-0.97

## SPARK PLUG CABLE INSPECTION

- Inspect spark plug cables. Replace if necessary.
  - Check for cracks or loose terminals.
  - Check for loose fit on ignition coil and spark plugs.
- Check cable boots/caps for cracks or tears. Replace boots/caps that are worn or damaged.
- See Figure 1-64. Check spark plug cable resistance with an ohmmeter. Replace cables not meeting resistance specifications. Refer to Table 1-18.

Table 1-18. Spark Plug Cable Resistance

CABLE	RESISTANCE (OHMS)	
Front	1,750-4,836	
Rear	4,843-15,420	

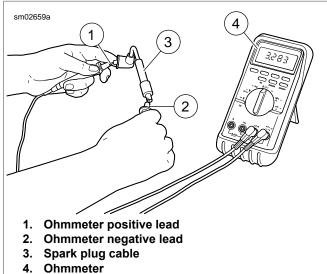


Figure 1-64. Testing Resistance

# STEERING HEAD BEARINGS

## **FALL-AWAY**

FASTENER	TORQUE VALUE		
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	
Fork bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	

## Measurement

- 1. Raise the front wheel off the floor.
- Remove the components that interfere with front fork swing.
- Disconnect the clutch cable.
- 4. Cover the front fender tip with a strip of masking tape.
- Install a pointer mounted to a floor stand. With the front wheel pointed straight ahead, position the pointer at the center of the fender.
- 6. Tap the fender on one side until the front fork begins to pivot (fall-away) without being tapped. Mark that point. Repeat in the opposite direction.
- 7. Measure the distance between the two fall-away marks.
- If fall-away is not within specification, adjust the fork stem bolt. Refer to <u>Table 1-19</u>.

Table 1-19. Fall-Away Specifications

MODEL	MINIMUM		MAXIMUM	
	in	mm	in	mm
XL models	1.0	25	2.0	50
XR 1200X	2.0	50	4.0	100

## **Adjustment**

- 1. See <u>Figure 1-65</u>. Loosen the two lower bracket pinch screws (2) and the fork stem pinch screw (1).
- 2. Adjust fall-away:
  - a. If fall-away is more than the maximum, loosen the fork stem bolt (3).
  - b. If fall-away is less than the minimum, tighten the fork stem bolt.
- 3. Tighten the fork stem pinch screw to 30-35 ft-lbs (40.7-47.5 Nm) and tighten the lower bracket pinch screws to 30-35 ft-lbs (40.7-47.5 Nm).
- 4. Verify fall-away.

# **LUBRICATION**

See <u>Figure 1-65</u>. Disassemble the steering head assembly and lubricate the tapered roller bearings with SPECIAL PURPOSE GREASE. See <u>2.21 FORK STEM AND BRACKET ASSEMBLY</u>.

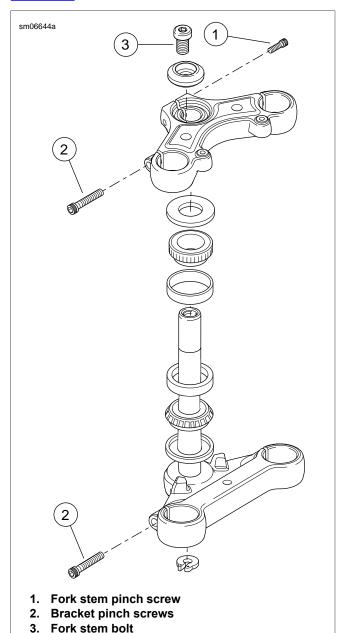


Figure 1-65. Steering Head Assembly (typical)

# **CRITICAL FASTENERS**

1.20

# **INSPECTION**

# **Checking Torques on Fasteners**

Inspect critical fasteners at the scheduled service intervals. Replace any damaged or missing fasteners.

- Attempt to turn the fastener using a torque wrench set to the minimum torque specification for that fastener. Refer to Table 1-20.
  - a. If the fastener does not rotate, the fastener torque has been maintained. No further attention is necessary.
  - b. If the fastener rotates, remove it to determine if it has a locking agent.
  - c. If it has a locking agent, clean all locking material from the threaded hole. Replace the fastener with a **new** one or clean the original fastener threads and apply the appropriate locking agent (see appropriate procedure).
  - d. Install fastener. Tighten to specification.
- 2. If the fastener does not have a locking agent, install fastener. Tighten to specification.

Table 1-20. Critical Fasteners

SYSTEM	FASTENER	TOR	QUE
Hand controls	Switch housing screws, upper and lower	35-45 <b>in-lbs</b>	4.0-5.1 Nm
	Clutch lever handlebar clamp screws	108-132 <b>in-lbs</b>	12.2-14.9 Nm
	Master cylinder handlebar clamp screws	108-132 <b>in-lbs</b>	12.2-14.9 Nm
Engine	Stabilizer link screws	25-35 ft-lbs	33.9-47.5 Nm
	Stabilizer link frame bracket mounting screws, upper front	25-35 ft-lbs	33.9-47.5 Nm
	Stabilizer link engine bracket mounting screws, upper front	55-65 ft-lbs	74.6-88.2 Nm
	Stabilizer link frame bracket mounting screws, lower front	25-35 ft-lbs	33.9-47.5 Nm
	Isolator mounting bolt, front	95-105 ft-lbs	129-142 Nm
	Fork pivot/engine mount bolts	60-70 ft-lbs	81.4-95.0 Nm
	Isolator mounting bracket screws, front (left side)	25-35 ft-lbs	33.9-47.5 Nm
	Isolator mounting bracket screws, rear (left side)	25-35 ft-lbs	33.9-47.5 Nm
Brakes	Brake line banjo bolts	20-25 ft-lbs	27.1-33.9 Nm
	Brake disc mounting screws, front	16-24 ft-lbs	21.7-32.6 Nm
	Brake disc mounting screws, rear	30-45 ft-lbs	40.7-61.1 Nm
	Reservoir cover screws, front	9-17 <b>in-lbs</b>	1.0-2.0 Nm
	Master cylinder mounting screws, rear: XL	17-22 ft-lbs	23.1-29.9 Nm
	Master cylinder mounting screws, rear: XR	72-96 <b>in-lbs</b>	8.1-10.9 Nm
	Master cylinder bracket-to-frame mounting screws, rear: XL	17-22 ft-lbs	23.1-29.9 Nm
	Master cylinder/footrest bracket-to-frame mounting screws, rear: XR	45-50 ft-lbs	61-67.8 Nm
	Brake caliper mounting bolts, front	28-38 ft-lbs	38.0-51.6 Nm
Axle nuts	Front	60-65 ft-lbs	81-88 Nm
	Rear	95-105 ft-lbs	129-142 Nm

1-56 2013 Sportster Service: Maintenance

**Table 1-20. Critical Fasteners** 

SYSTEM	FASTENER	TORQUE	
Front fork/handlebar	Lower bracket pinch screws	30-35 ft-lbs	40.7-47.5 Nm
	Fork upper bracket pinch screws	30-35 ft-lbs	40.7-47.5 Nm
	Fork stem bolt	23-27 ft-lbs, loosen, 72-96 <b>in-lbs</b>	31.2-36.6 Nm, loosen, 8.1-10.9 Nm
	Fork stem pinch screw	30-35 ft-lbs	40.7-47.5 Nm
	Axle pinch screw, front: XL	21-27 ft-lbs	28.5-36.6 Nm
	Axle pinch screw, front: XR	41-48 ft-lbs	55.6-65.1 Nm
	Handlebar clamp mounting screw	12-18 ft-lbs	16.3-24.4 Nm
	Riser mounting bolts	30-40 ft-lbs	40.7-54.3 Nm
Final drive	Sprocket mounting bolts, rear	60 ft-lbs, loosen 180 degrees, 80 ft-lbs	81.3 Nm, loosen 180 degrees, 108 Nm

2013 Sportster Service: Maintenance 1-57

# **ENGINE MOUNTS AND STABILIZER LINKS**

1.21

# **INSPECTION**

Check engine mounts and stabilizer links as follows:

- 1. See Figure 1-66. Check for cracks or tears in engine mount isolator rubber (17, 18).
- 2. Check for lateral movement at each end of the three stabilizer links (8). Any lateral movement indicates the need
- to replace the stabilizer link. Rotational movement does not indicate excess wear.
- Check that all engine mount bolts and stabilizer link screws are tight. See <u>2.25 STABILIZER LINKS</u>, <u>2.26 FRONT ENGINE MOUNT/ISOLATOR</u>, or <u>2.27 REAR ENGINE MOUNT/ISOLATOR</u> for torque specifications.
- Check that the mounts are supporting the weight of the motor.

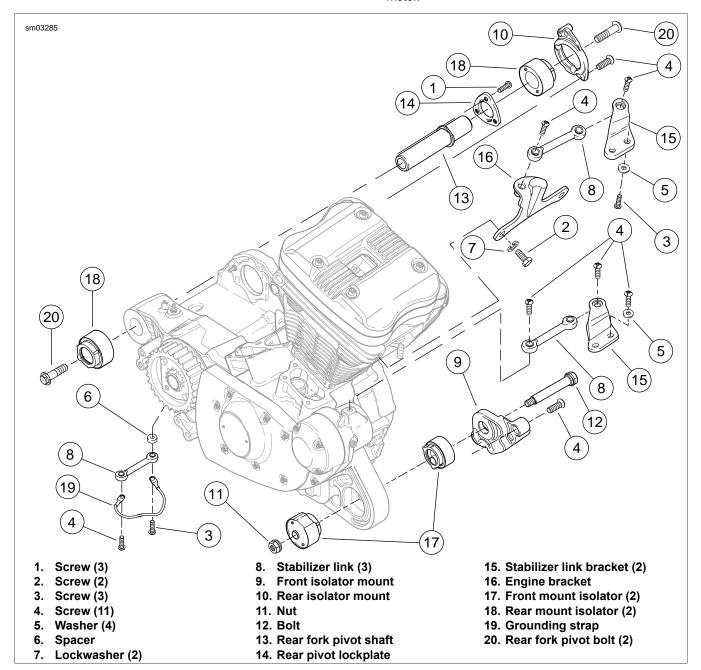


Figure 1-66. Engine Mounting Assemblies: All Models (typical)

1-58 2013 Sportster Service: Maintenance

# **BATTERY MAINTENANCE**

# **GENERAL**

# **AWARNING**

Batteries contain sulfuric acid, which could cause severe burns to eyes and skin. Wear a protective face shield, rubberized gloves and protective clothing when working with batteries. KEEP BATTERIES AWAY FROM CHILDREN. (00063a)

# **A**WARNING

Never remove warning label attached to top of battery. Failure to read and understand all precautions contained in warning, could result in death or serious injury. (00064a)

# **WARNING**

Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (00019e)


## **NOTICE**

Keep battery clean and lightly coat terminals with petroleum jelly to prevent corrosion. Failure to do so could result in damage to battery terminals. (00217a)

AGM batteries are permanently sealed, maintenance-free, valve-regulated, lead/calcium and sulfuric acid batteries. The batteries are shipped pre-charged and ready to be put into service. Do not attempt to open these batteries for any reason.

#### NOTE

For charging information, see 1.22 BATTERY MAINTENANCE, Charging Battery. For testing information, see the electrical diagnostic manual.

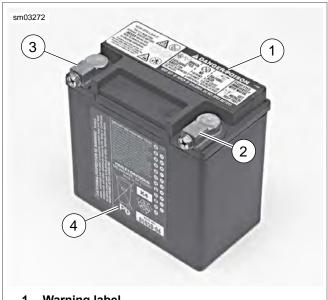

- 1. Warning label
- 2. Positive (+) terminal
- Negative (-) terminal 3.
- Warranty/date code label

Figure 1-67. Battery



- Contents are corrosive
- Wear safety glasses
- Contents are explosive

- Keep flames away
- Read instructions
- Keep away from children

Figure 1-68. Battery Warning Label

Table 1-21. Antidotes for Battery Acid

CONTACT	TREATMENT
External	Flush with water.
Internal	Drink large quantities of milk or water, followed by milk of magnesia, vegetable oil or beaten eggs. Get immediate medical attention.
Eyes	Flush with water. Get immediate medical attention.

## **BATTERY DISCONNECTION AND REMOVAL**

# **A**WARNING


Disconnect negative (-) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00049a)

1. Open left side cover.

### NOTE

**Models with sirens:** Verify that fob is present and turn ignition key to IGNITION before removing main fuse or disconnecting battery.

- 2. See Figure 1-69. Using a swivel socket (2), remove nut that secures the negative (-) battery cable (1) connector to ground stud (4) on crankcase boss behind starter motor assembly (3). Remove cable connector from stud.
- 3. See <u>Figure 1-70</u>. Pull end of negative (-) cable (2) forward gently to free it from cable holder (1).
- 4. See <u>Figure 1-71</u>. Press main fuse holder (1) toward the rear of the motorcycle until it pops off its mounting pin on battery strap (4). Remove main fuse holder from battery strap.
- 5. Press data link connector (6) toward the rear of the motorcycle until it pops off its mounting pin on battery strap. Remove the connector from battery strap.
- 6. Remove battery strap screw (5). Unhook battery strap from battery tray mount on top of battery and remove strap.
- 7. Lift up protective rubber boot covering battery positive (+) terminal (3). Remove screw from battery positive (+) terminal and remove positive (+) battery cable.
- 8. Disconnect positive (+) battery cable from cable holder (2).
- 9. Slide the battery (with attached negative cable) out the left side until the negative battery cable is accessible.
- Disconnect the negative battery cable at the battery (-) terminal. Leave the cable on the vehicle.
- 11. Remove battery from battery tray. Note routing of negative (-) battery cable around frame downtube.
- If battery is to be stored out of the motorcycle, close left side cover.

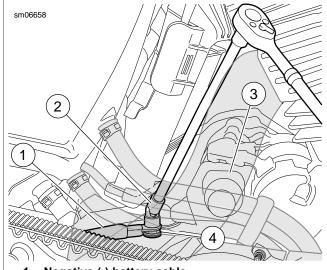

- 1. Negative (-) battery cable
- 2. Swivel socket
- 3. Starter motor assembly
- 4. Ground stud

Figure 1-69. Negative (-) Battery Connection


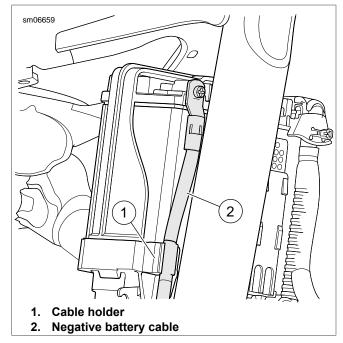


Figure 1-70. Negative (-) Battery Cable Holder

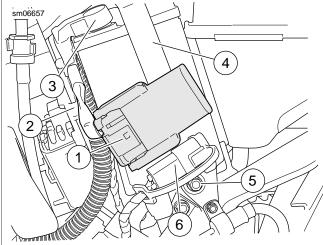

- 1. Main fuse and holder
- 2. Positive (+) battery cable holder
- 3. Positive (+) battery terminal (under protective rubber boot)
- 4. Battery strap
- 5. Screw
- 6. Data link connector

Figure 1-71. Main Fuse and Battery Location: All Models

## **CLEANING AND INSPECTION**

#### NOTE

Battery top must be clean and dry. Dirt and electrolyte on top of the battery causes battery to self-discharge.

- Clean battery top with a solution of baking soda (sodium bicarbonate) and water (5 teaspoons baking soda per quart or liter of water).
- When the solution stops bubbling, rinse off the battery with clean water.
- 3. Clean cable connectors and battery terminals using a wire brush or sandpaper. Remove any oxidation.
- 4. Inspect the battery screws, and cables for breakage, loose connections and corrosion.
- 5. Check the battery terminals for melting or damage caused by over-tightening.
- 6. Inspect the battery for discoloration, raised top or a warped or distorted case. This might indicate that the battery has been frozen, overheated or overcharged.
- 7. Inspect the battery case for cracks or leaks.

## **VOLTMETER TEST**

# WARNING

Batteries contain sulfuric acid, which could cause severe burns to eyes and skin. Wear a protective face shield, rubberized gloves and protective clothing when working with batteries. KEEP BATTERIES AWAY FROM CHILDREN. (00063a)

# **AWARNING**

Never remove warning label attached to top of battery. Failure to read and understand all precautions contained in warning, could result in death or serious injury. (00064a)

## **Voltmeter Test**

The voltmeter test provides a general indicator of battery condition. Check the voltage of the battery to verify that it is fully charged.

- If the open circuit (disconnected) voltage reading is below 12.6 V:
  - a. Charge the battery.
  - Check the voltage after the battery has set for at least one hour.
- 2. If the voltage reading is 12.7 V or above:
  - Perform a battery diagnostic test. See the electrical diagnostic manual for the load test procedure.
  - b. Refer to Table 1-22.

Table 1-22. Voltmeter Test For Battery Charge Conditions

VOLTAGE (OCV)	STATE OF CHARGE
12.7 V	100%
12.6 V	75%
12.3 V	50%
12.0 V	25%
11.8 V	0%

## CHARGING BATTERY

# **Safety Precautions**

An automatic, constant monitoring battery charger/tender with a charging rate of 5 amps or less at less than 14.6 volts is recommended. The use of constant current chargers (including trickle chargers) to charge sealed AGM batteries is not recommended.

Any overcharge will cause dry-out and premature battery failure. Always review charger instructions before charging a battery. In addition to the manufacturer's instructions, follow these general safety precautions:

- Always wear eye, face and hand protection.
- Always charge batteries in a well-ventilated area.
- Turn the charger off before connecting or disconnecting the leads to the battery to avoid dangerous sparks.
- Never try to charge a visibly damaged or frozen battery.
- Connect the charger leads to the battery. Red positive lead to the positive terminal. Black negative lead to the negative terminal. If the battery is still in the vehicle, con-

- nect the negative lead to the chassis ground. Verify that the ignition and all electrical accessories are turned off.
- Verify that charger leads to battery are not separated, frayed or loose.
- If the battery temperature exceeds 110 °F (43 °C) during charging, discontinue charger and allow the battery to cool.

# **Using a Battery Charger**

Charge the battery if:

- Vehicle lights appear dim.
- · Electric starter sounds weak.
- Battery has not been used for an extended period of time.

# **A**WARNING

Explosive hydrogen gas, which escapes during charging, could cause death or serious injury. Charge battery in a well-ventilated area. Keep open flames, electrical sparks and smoking materials away from battery at all times. KEEP BATTERIES AWAY FROM CHILDREN. (00065a)

### **NOTICE**

If battery releases an excessive amount of gas during charging, decrease the charging rate. Overheating can result in plate distortion, internal shorting, drying out or damage. (00413b)

 Check charge state with voltmeter test. If battery voltage is less than 12.7 volts, see the next step.

### NOTES

- Most constant monitoring battery chargers are completely automatic. They can be left connected to both AC power and to the battery that is being charged. When leaving this type of charger connected for extended periods of time, periodically check the battery to see if it is unusually warm. This is an indication that the battery may have a weak cell or internal short. Read the manufacturer's instructions for the charger.
- Do not use battery chargers that produce excessively high voltage designed for flooded batteries or excessively high current designed for much larger batteries. Charging should be limited to 5 amps maximum at no more than 14.6 volts.

## **A**WARNING

Unplug or turn OFF battery charger before connecting charger cables to battery. Connecting cables with charger ON can cause a spark and battery explosion, which could result in death or serious injury. (00066a)

## **NOTICE**

Do not reverse the charger connections described in the following steps or the charging system of the motorcycle could be damaged. (00214a)

Connect red battery charger lead to the positive terminal and black battery charger lead to the negative terminal of the battery.

#### NOTE

If the battery is still in the vehicle, connect the negative lead to the chassis ground. Be sure that the ignition and all electrical accessories are turned off.

3. Step away from the battery and turn on the charger.

## **AWARNING**

Unplug or turn OFF battery charger before disconnecting charger cables from battery. Disconnecting clamps with charger ON can cause a spark and battery explosion, which could result in death or serious injury. (00067a)

- After the battery is fully charged, turn the charger OFF.
  Disconnect the black battery charger lead to the negative
  terminal of the battery.
- 5. Disconnect the red battery charger lead to the positive terminal of the battery.
- Mark the charging date on the battery.
- 7. Perform a battery diagnostic test to determine the condition of the battery. See the electrical diagnostic manual.
- If charging a battery because voltmeter test reading was below 12.6 V, perform voltmeter test. See the electrical diagnostic manual.

# BATTERY INSTALLATION AND CONNECTION

FASTENER	TORQUE VALUE	
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm
Battery strap screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm
Battery cable connector nut	55-75 <b>in-lbs</b>	6.2-8.5 Nm

## **NOTICE**

Connect the cables to the correct battery terminals. Failure to do so could result in damage to the motorcycle electrical system. (00215a)

- 1. Open left side cover.
- 2. Apply a light coat of petroleum jelly or corrosion retardant material to the negative (-) battery terminal.
- 3. Slide fully charged battery into battery tray.
- 4. Insert screw through negative battery cable and into negative battery terminal. Thread screw into terminal. Tighten screw to 60-70 **in-lbs** (6.8-7.9 Nm).
- 5. Verify that the negative (-) battery cable is disconnected from the ground stud on crankcase.
- Hook top of battery strap (4) to battery tray mount on top of battery. Install strap screw (5). Tighten to 36-60 in-lbs (4.1-6.8 Nm).

- 7. Route main positive battery cable through holders on electrical bracket.
- 8. Hook main fuse holder (1) to top pin on battery strap and slide forward until it snaps into place.
- 9. Hook data link connector (6) to bottom pin on battery strap and slide forward until it snaps into place.
- 10. See <u>Figure 1-70</u>. Press negative (-) battery cable (2) into cable holder (1).

## **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

- See <u>Figure 1-71</u>. With negative battery cable disconnected, insert positive terminal screw through main fuse cable then main positive battery cable. Install screw into positive battery terminal (3). Tighten to 60-70 in-lbs (6.8-7.9 Nm).
- Apply a light coat of petroleum jelly or corrosion retardant material to the positive (+) battery terminal. Place protective rubber boot over terminal.
- 13. See <u>Figure 1-69</u>. Place negative (-) battery cable connector onto ground stud (4) on crankcase boss behind starter motor assembly (3). Thread nut onto stud.
- 14. See <u>Figure 1-72</u> or <u>Figure 1-73</u>. Press negative (-) battery cable connector (1) against cable stop (2) on crankcase and tighten nut (3) to 55-75 **in-lbs** (6.2-8.5 Nm).
- 15. Close left side cover.

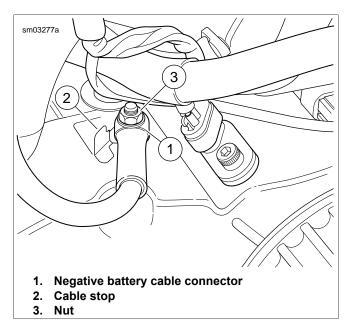


Figure 1-72. Attaching Negative (-) Battery Cable to Ground Stud Crankcase: XL Models

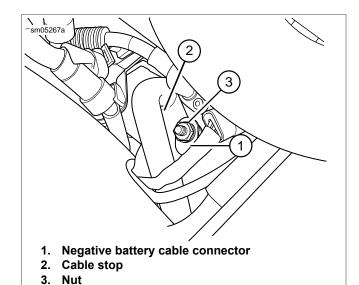


Figure 1-73. Attaching Negative (-) Battery Cable to Ground Stud Crankcase: XR 1200X

### STORAGE

PART NUMBER	TOOL NAME
99863-01A	GLOBAL BATTERY CHARGER

# **A**WARNING

Batteries contain sulfuric acid, which could cause severe burns to eyes and skin. Wear a protective face shield, rubberized gloves and protective clothing when working with batteries. KEEP BATTERIES AWAY FROM CHILDREN. (00063a)

If the motorcycle is stored with the security system armed, connect an automatic, constant monitoring battery charger/tender to maintain battery charge. Refer to the Harley-Davidson Parts and Accessories catalog.

If the motorcycle is stored with the battery installed, without a GLOBAL BATTERY CHARGER, and with the security system **not** armed, remove main fuse.

If the motorcycle will not be operated for several weeks, such as during the winter season, remove the battery from the motorcycle and fully charge.

See Figure 1-74. A battery that is removed from the vehicle is affected by self-discharge. A battery that is stored in the vehicle is affected by self-discharge and, more significantly, by parasitic loads. A parasitic load is caused by things like diode leakage or maintaining computer memory with the vehicle turned off.

Batteries self-discharge at a faster rate at higher ambient temperatures. To reduce the self-discharge rate, store battery in a cool, dry place.

Charge the battery every two weeks if stored in the vehicle. Charge the battery once per month if stored out of the vehicle.

### NOTE

Use the GLOBAL BATTERY CHARGER (Part No. 99863-01A) to maintain battery charge for extended periods of time without risk of overcharging or boiling.

## <u>HOME</u>

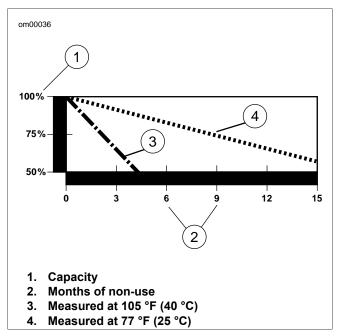


Figure 1-74. Effective Rate of Temperature on Battery Self-discharging Rate

# 1.23

# **EXHAUST SYSTEM**

# **EXHAUST SYSTEM LEAK CHECK**

- 1. Check entire exhaust system for loose or missing fasteners, damaged pipe clamps or brackets, and obvious signs of leakage (carbon tracks at pipe joints, etc.).
- 2. Check for loose or damaged heat shields. Repair or replace as necessary.
- 3. Check for exhaust leaks:
  - a. Start engine.
  - b. Cover muffler end with a clean dry shop towel.
  - c. Listen for exhaust leakage.
  - d. Remove shop towel.
- 4. Correct any leaks detected. See <u>4.13 EXHAUST SYSTEM:</u> XL MODELS or <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.

2013 Sportster Service: Maintenance 1-65

# WHEEL ALIGNMENT

# WHEEL ALIGNMENT

PART NUMBER	TOOL NAME
HD-48856-A	AXLE ALIGNMENT PLUGS

FASTENER	TORQUE VALUE	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm

# **Checking Wheel Alignment**

# **AWARNING**

Check vehicle alignment according to following procedures. Incorrect alignment can adversely affect stability and handling, which could result in death or serious injury. (00287a)

### NOTE

Some models may require muffler removal.

- See <u>Figure 1-75</u>. Insert alignment plugs (1, 2) from the AXLE ALIGNMENT PLUGS (Part No. HD-48856-A) into right and left ends of rear axle. Turn handle until plug is firmly held in the axle.
- XL Models: See <u>Figure 1-76</u>. Fabricate an alignment tool using a piece of 1/8 in (3.175 mm) diameter aluminum welding rod 21.5 in (546 mm) long:
  - a. Grind one end down to a blunt point.
  - Use pliers to bend rod at a 90 degree angle, 2.25 in (57 mm) from the blunt point.
  - Place a snug-fitting rubber grommet (2) on rod to act as a slide measurement indicator.
- 3. **XR 1200X:** See <u>Figure 1-77</u>. Fabricate an alignment tool using a piece of 1/8 in (3.175 mm) diameter aluminum welding rod 22.375 in (568 mm) long:
  - a. Grind one end down to a blunt point.
  - b. Use pliers to bend rod as shown.
  - c. Place a snug-fitting rubber grommet (2) on rod to act as a slide measurement indicator.
- Gauge distance between rear fork pivot bolt and rear axle alignment plug center:
  - See <u>Figure 1-78</u>. Insert blunt point of alignment tool in rear fork pivot bolt dimple (2) on right side of rear fork (3).
  - b. Slide rubber grommet along tool shaft until it aligns with hole in center of alignment plug (5).
  - c. Without moving grommet, position alignment tool on left side of rear fork.
- Verify measurements match on both sides of axle. Adjust if necessary.

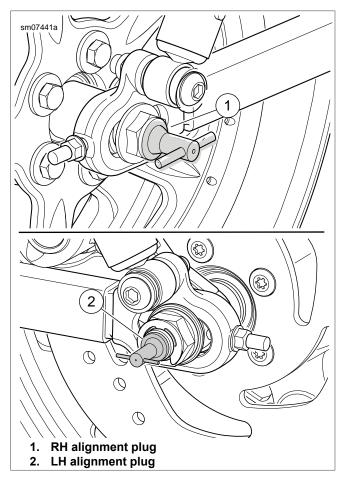


Figure 1-75. Axle Alignment Plugs

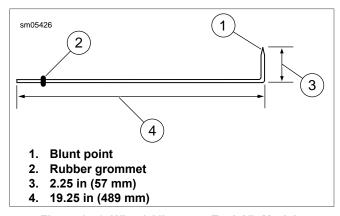


Figure 1-76. Wheel Alignment Tool: XL Models

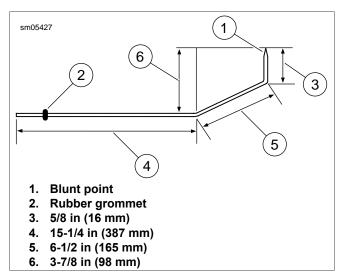


Figure 1-77. Wheel Alignment Tool: XR 1200X

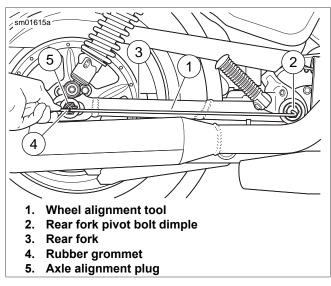


Figure 1-78. Checking Wheel Alignment Using Wheel Alignment Tool: XL Models

# **Adjusting Wheel Alignment**

- 1. Remove and discard E-clip.
- Loosen rear axle nut.
- On side of rear fork that has longer distance from pivot bolt to axle center, turn nut on axle adjuster counterclockwise to shorten distance. Adjust axle until left and right side alignment measurements are equal.

## NOTES

- Keep axle adjuster mechanisms firmly seated (under tension) on each side of rear fork during wheel alignment procedures above. Do so by applying moderate upward force on lower span of drive belt. This tensions drive belt, which holds rear axle forward against both adjuster mechanisms.
- Do not tighten rear axle nut or install new E-clip until after checking drive belt tension.
- Verify drive belt deflection after aligning rear wheel. Adjust if required. See <u>1.12 DRIVE BELT AND SPROCKETS</u>, <u>Drive Belt Deflection</u>.

#### NOTE

If rear axle has been moved, verify slack in rear brake line between clamp and rear caliper. If necessary, reposition brake line. See <u>1.12 DRIVE BELT AND SPROCKETS</u>, <u>Drive Belt Deflection</u>.

# **AWARNING**

Do not exceed specified torque when tightening axle nut. Exceeding torque can cause wheel bearings to seize during vehicle operation, which could result in death or serious injury. (00408e)

- Tighten axle nut to 95-105 ft-lbs (129-142 Nm) and install new E-clip.
- 6. Install muffler if removed.

# SUSPENSION ADJUSTMENTS

## FRONT FORK: XR 1200X

# WARNING

Adjust both forks equally. Improper fork adjustment can lead to loss of control, which could result in death or serious injury. (00124c)

## **NOTICE**

Compression and rebound adjusting valves may be damaged if too much force is used at either end of the adjustment range. (00237a)

# **Spring Preload**

- See Figure 1-79. With a hex key, turn the preload adjuster counterclockwise until it stops. This is the minimum preload setting.
- Calculate the total load and turn the adjuster clockwise to specification. Refer to Table 1-23.

# Rebound Damping

- See Figure 1-80. Turn the rebound damping adjuster (1) clockwise H (hard) until it stops. This is the maximum rebound setting.
- Turn adjuster counterclockwise S (soft) to specification. Refer to Table 1-24.

# Compression Damping

- See Figure 1-80. Turn the compression damping adjuster (2) clockwise H (hard) until it stops. This is the maximum compression setting.
- Turn the adjuster counterclockwise S (soft) to specification. Refer to Table 1-24.




Figure 1-79. Spring Preload Adjuster: XR 1200X

Table 1-23. Recommended Spring Preload: XR 1200X

LOAD*	TURNS** FROM MINIMUM
Less than 165 lb (75.0 kg)	0-4
165-195 lb (75.0-89.0 kg)	4-6
195-225 lb (89.0-102.0 kg)	6-8
225-255 lb (102.0-116.0 kg)	8-10
255 lb (116.0 kg) to maximum added weight allowed. Refer to Table 2-4.	More than 10

\*Add the weight of the rider, passenger, riding gear, accessories, and cargo.

- \*\*Turns are clockwise turns in from minimum.
- To increase preload, turn the adjuster clockwise.
- To decrease preload, turn the adjuster counterclockwise.

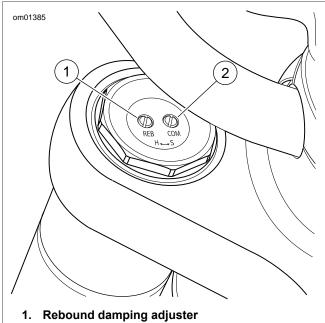

- Compression damping adjuster

Figure 1-80. Fork Rebound and Compression Damping Adjusters: XR 1200X

Table 1-24. Recommended Fork Rebound and Compression Damping: XR 1200X

DAMPING*	TURNS FROM MAX**	
Rebound (REB)	3	
Compression (COM)	5	

\*Turns are counterclockwise out from maximum.

- To increase damping, turn adjuster clockwise (H).
- To decrease damping, turn adjuster counterclockwise (S).

# SHOCK ABSORBER PRELOAD: ALL MODELS

PART NUMBER	TOOL NAME
94448-82B	SHOCK ADJUSTMENT SPANNER

## WARNING

Adjust both shock absorbers equally. Improper adjustment can adversely affect stability and handling, which could result in death or serious injury. (00036b)

## **NOTICE**

Do not turn the shock absorber adjustment collar clockwise beyond adjustment setting 5. Doing so may result in equipment damage. (00166b)

### **NOTES**

- Five position shocks: See Figure 1-83. Do not turn the preload cam past position five (5) to position one (1) or from position one (1) to position five (5).
- Three position shocks: Do not turn the preload cam past position three to position one or from position one (1) to position three.

**XL Models:** See <u>Figure 1-81</u>. Using SHOCK ADJUSTMENT SPANNER (Part No. 94448-82B), turn the adjustment cam to specification.

- Five position shocks: Refer to <u>Table 1-25</u>.
- Three position shocks: Refer to <u>Table 1-26</u>.

**XR 1200X:** See <u>Figure 1-82</u>. Use the spanner wrench with extension handle from the tool kit to turn the adjustment cam to specification. Refer to <u>Table 1-25</u>.

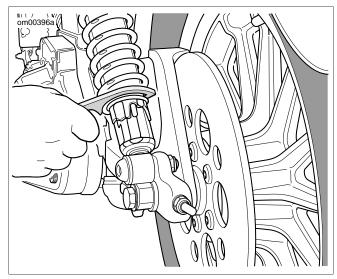


Figure 1-81. Shock Absorber Preload Adjustment: XL Models

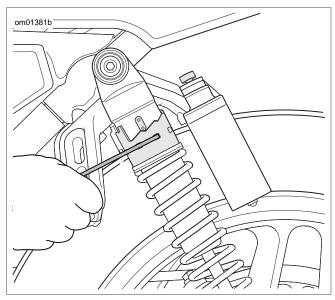


Figure 1-82. Shock Absorber Preload Adjustment: XR 1200X

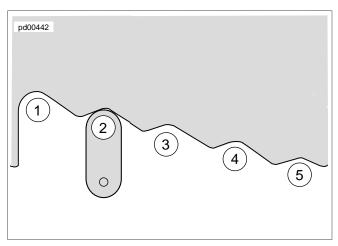


Figure 1-83. Shock Preload Cam Positions (typical)

XL 883L/N, XL1200X/V and certain XL1200CP models are configured for solo operation. If you choose to add a passenger and/or cargo to the vehicle, the ride quality may be compromised. See a Harley-Davidson dealer for two-up seats, passenger pegs and suspension options.

Table 1-25. Recommended Shock Preload: Five Position

LOAD*	POSITION**
Less than 165 lb (75.0 kg)	1
165-195 lb (75.0-89.0 kg)	2
195-225 lb (89.0-102.0 kg)	3
225-255 lb (102.0-116.0 kg)	4
255 lb (116.0 kg) to maximum added weight allowed. Refer to <u>Table 2-3</u> and <u>Table 2-4</u> .	5

- \* Add the weight of the rider, passenger, riding gear, accessories, and cargo.
- \*\* See Figure 1-83.

Table 1-26. Recommended Shock Preload: Three Position

LOAD*	POSITION
Less than 165 lb (75.0 kg)	1
165-225 lb (75.0-102.0 kg)	2
225 lb (102.0 kg) to maximum added weight allowed. Refer to <u>Table 2-4</u> and <u>Table 2-3</u> .	3

<sup>\*</sup> Add the weight of the rider, passenger, riding gear, accessories, and cargo.

Table 1-27. Maximum Added Weight Allowed: Sportster Models

MODEL	MAX LOAD	
	lb	kg
XL 883L	437	198.2
XL 883N	435	197.3
XL 883R	427	193.7
XL 1200C/C ANV/CP	418	189.6
XL 1200CA	427	193.7
XL 1200CB	427	193.7
XL 1200X	433	196.4
XL 1200V	445	201.8
XR 1200X	427	193.7

# SHOCK ABSORBER REBOUND AND COMPRESSION: XR 1200X

# **AWARNING**

Adjust both shock absorbers equally. Improper adjustment can adversely affect stability and handling, which could result in death or serious injury. (00036b)

## **NOTICE**

Compression and rebound adjusting valves may be damaged if too much force is used at either end of the adjustment range. (00237a)

# Shock Absorber Rebound Damping Adjustment

- See <u>Figure 1-84</u>. Turn the rebound adjuster in the direction of the embossed H (hard) until it stops. This is the maximum rebound damping setting.
- Turn the rebound adjuster toward the embossed S (soft) the recommended number of clicks. Refer to Table 1-28.

# **Shock Absorber Compression Damping Adjustment**

 See <u>Figure 1-85</u>. Using fingers, turn the compression adjuster clockwise H (hard) until it stops. This is the maximum compression damping setting.  Turn the compression adjuster counterclockwise (H to S) (hard to soft) the recommended number of clicks. Refer to Table 1-28.

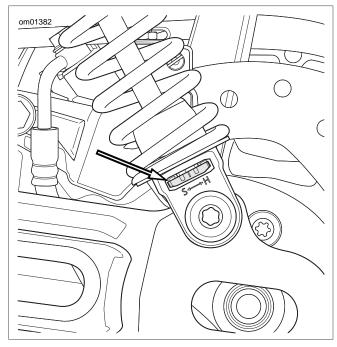


Figure 1-84. Rebound Damping Adjuster: XR 1200X

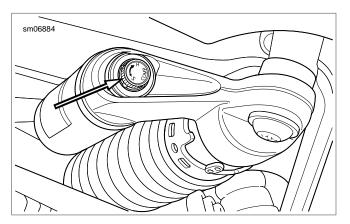


Figure 1-85. Compresson Damping Adjuster: XR 1200X

Table 1-28. Recommended Rear Shock Rebound and Compression Damping: XR 1200X

DAMPING	CLICKS FROM MAX (H to S)
Rebound (REB)	5
Compression (COMP)	7

## **SUSPENSION TUNING: XR 1200X**

After the suspension has been set to the recommend settings and the tires have been inflated to recommended pressures, ride the motorcycle and adjust the suspension damping as required. Refer to <u>Table 1-29</u>.

Table 1-29. Suspension Damping Adjustment Guidelines: XR 1200X

MOTORCYCLE BEHAVIOR	SUGGESTED REMEDY
Soft or unsettled feeling around corners or after bumps	Increase rebound damping.
Leaping feeling or topping after large bumps	Increase rebound damping.
Harsh/sharp feedback over bumps	Decrease rebound damping.
Feels like motorcycle drops down over chatter bumps	Decrease rebound damping.
Excessive bottoming through potholes	Increase compression damping.
Excessive dive when applying front brake	Increase compression damping (forks).
Hard feeling or inadequate absorption over bumps	Decrease compression damping.
Feels excessively stiff or busy around corners	Decrease compression damping.

2013 Sportster Service: Maintenance 1-71

# **HEADLAMP ALIGNMENT**

# **HEADLAMP ALIGNMENT**

# WARNING

The automatic-on headlamp feature provides increased visibility of the rider to other motorists. Be sure headlamp is on at all times. Poor visibility of rider to other motorists can result in death or serious injury. (00030b)

#### NOTE

Adjust the headlamps of motorcycles with multiple beam headlamps to converge into one pattern.

- 1. Check the tire pressure.
- 2. Adjust the rear shocks for the rider and intended load.
- 3. Fill fuel tank or add an equal amount of ballast.

## NOTE


Choose a wall in minimum light.

- 4. See Figure 1-86. Park the motorcycle in a line (1) perpendicular to the wall.
- Position motorcycle so that front axle is 25 ft (7.6 m) from wall.
- 6. Draw a vertical line (2) on the wall.
- 7. With the motorcycle loaded, point the front wheel straight forward at wall. Measure the distance (4) from the floor to the center of the high beam bulb.
- 8. Draw a horizontal line (5) through the vertical line on the wall. Place line 2.1 in (53.3 mm) lower than the measured bulb centerline.

#### NOTE

The headlamp is aligned when the light beam hot spot is centered over the intersection of the lines.

9. Verify headlamp alignment. Adjust as necessary.

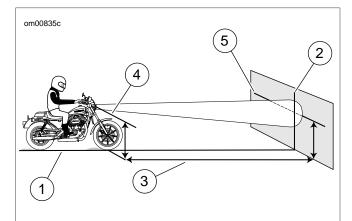

- 1. Perpendicular line
- 2. Vertical line
- 3. 25 ft (7.6 m)
- 4. High beam bulb centerline
- Horizontal line 2.1 in (53.3 mm) lower than bulb centerline

Figure 1-86. Headlamp Alignment: Sportster Models

## **HEADLAMP: ADJUSTMENT**

FASTENER	TORQUE VALUI	
Headlamp horizontal adjust- ment: XL 1200X/C/C ANV/CP/CA/CB/V	30-35 ft-lbs	40.7-47.5 Nm
Headlamp vertical adjustment: XL 1200X/C/C ANV/CP/CA/CB/V	30-35 ft-lbs	40.7-47.5 Nm
Headlamp clamp nut: XL 883L/N/R, XR 1200X	120-240 <b>in-lbs</b>	14-27 Nm

# Adjustment: XL 1200X/C/C ANV/CP/CA/CB/V

- 1. Set horizontal adjustment:
  - a. See <u>Figure 1-87</u>. Loosen the horizontal adjustment screw (3).
  - b. Turn the headlamp right or left as necessary to direct the light beam straight ahead.
  - Tighten the horizontal adjustment screw to 30-35 ftlbs (40.7-47.5 Nm).
- 2. Set vertical adjustment:
  - a. Loosen the locknut (1) for the vertical adjustment bolt.
  - b. Tilt headlamp up or down to properly aim it at the horizontal line on the wall.
  - Tighten headlamp locknut to 30-35 ft-lbs (40.7-47.5 Nm).

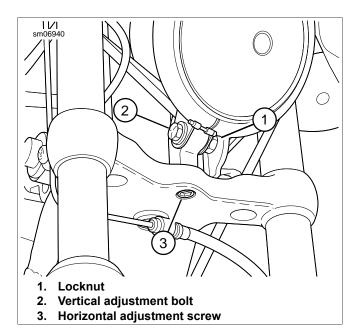


Figure 1-87. Headlamp Adjustment: XL 1200X/C/C ANV/CP/CA/CB/V

# Adjustment: XL 883R/L/N, XR 1200X

- 1. See <u>Figure 1-88</u>. Remove snap plug (1) on top of head-lamp bracket (2).
- 2. Loosen headlamp clamp nut (3).

- 3. Tilt headlamp up or down to properly aim it in relation to the horizontal line and, at the same time, turn it right or left to direct light beam straight ahead.
- 4. Tighten headlamp clamp nut to 120-240 **in-lbs** (14-27 Nm) after lamp is properly positioned.
- 5. Install snap plug in headlamp bracket.

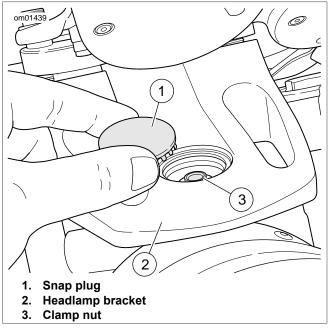


Figure 1-88. Headlamp Adjustment: XL 883R/L/N, XR 1200X (XR 1200X shown)

STORAGE 1.27

## PLACING IN STORAGE

PART NUMBER	TOOL NAME
98716-87A	STORAGE COVER

# **AWARNING**

Do not store motorcycle with gasoline in tank within the home or garage where open flames, pilot lights, sparks or electric motors are present. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00003a)

- 1. Change the engine oil. See <u>1.6 ENGINE OIL AND FILTER</u>, <u>Changing Oil and Filter</u>.
- Check the transmission lubricant level. See <u>1.10 TRANS-MISSION LUBRICANT, Transmission Lubrication</u>.

# **A**WARNING

Avoid spills. Slowly remove filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028a)

# **AWARNING**

Use care when refueling. Pressurized air in fuel tank can force gasoline to escape through filler tube. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00029a)

- Fill fuel tank. Add fuel stabilizer following manufacturer's instructions.
- Remove the spark plugs, inject a few squirts of engine oil into each cylinder and crank the engine 5-6 revolutions. Replace the spark plugs.
- Inspect rear belt deflection. See <u>1.24 WHEEL ALIGN-MENT</u>.
- Inspect rear belt and sprockets. See <u>1.12 DRIVE BELT</u> AND SPROCKETS.
- Inspect air cleaner filter. See <u>1.7 AIR FILTER, XL Models</u> except XL 1200V or <u>1.7 AIR FILTER, XR 1200X</u>.
- Lubricate controls. See <u>1.14 CABLE AND CHASSIS LUBRICATION</u>.
- 9. Inspect operation of all electrical equipment and switches.
- 10. Check tire inflation and inspect tires for wear and/or damage. See <u>1.8 TIRES AND WHEELS</u>. If the motorcycle will be stored for an extended period of time, securely support the motorcycle under the frame so that all weight is off the tires.

# **AWARNING**

Be sure that brake fluid or other lubricants do not contact brake pads or discs. Such contact can adversely affect braking ability, which could cause loss of control, resulting in death or serious injury. (00290a)

11. Wash painted and chrome-plated surfaces. Apply a light film of oil to exposed unpainted surfaces.

# **A**WARNING

Unplug or turn OFF battery charger before connecting charger cables to battery. Connecting cables with charger ON can cause a spark and battery explosion, which could result in death or serious injury. (00066a)

## **A**WARNING

Explosive hydrogen gas, which escapes during charging, could cause death or serious injury. Charge battery in a well-ventilated area. Keep open flames, electrical sparks and smoking materials away from battery at all times. KEEP BATTERIES AWAY FROM CHILDREN. (00065a)

12. Remove battery from vehicle. Charge battery until the correct voltage is obtained. Charge the battery every other month if it is stored at temperatures below 60 °F (16 °C). Charge battery once a month if it is stored at temperatures above 60 °F (16 °C). See <a href="1.22 BATTERY MAINTENANCE">1.22 BATTERY MAINTENANCE</a>.

## **A**WARNING

Unplug or turn OFF battery charger before disconnecting charger cables from battery. Disconnecting clamps with charger ON can cause a spark and battery explosion, which could result in death or serious injury. (00067a)

13. If the motorcycle is to be covered, use a material that will breathe, such as STORAGE COVER (Part No. 98716-87A) or light canvas. Plastic materials that do not breathe promote the formation of condensation, which leads to corrosion.

## REMOVAL FROM STORAGE

# **A**WARNING

The clutch failing to disengage can cause loss of control, which could result in death or serious injury. Prior to starting after extended periods of storage, place transmission in gear and push vehicle back and forth several times to assure proper clutch disengagement. (00075a)

- Charge and install battery. If main fuse was removed, plug it in.
- Remove and inspect the spark plugs. Replace if necessary.
- 3. Clean the air cleaner element.
- 4. If fuel tank was drained, fill fuel tank with fresh gasoline.

- 5. Start the engine and run until it reaches normal operating temperature.
- 6. Check engine oil level. Check the transmission lubricant level. Fill to proper levels with correct fluids, if required.
- 7. Perform all of the checks in the PRE-RIDING CHECKLIST in the Owner's Manual.

2013 Sportster Service: Maintenance 1-75

# 1.28

# **TROUBLESHOOTING**

## GENERAL

## WARNING

The Troubleshooting section of this manual is a guide to diagnose problems. Read the appropriate sections of this manual before performing any work. Improper repair and/or maintenance could result in death or serious injury. (00528b)

Use the symptoms listed for general troubleshooting. More than one condition may be present at a time. Check all possible items to keep motorcycle in good operating condition.

#### NOTE

See the electrical diagnostic manual for additional information.

## **ENGINE**

# Starter Motor Does Not Operate or Does Not Turn Engine Over

- 1. Engine run switch in OFF position.
- 2. Ignition switch not in IGNITION position.
- Discharged battery, loose or corroded connections (solenoid chatters).
- 4. Starter control circuit, relay, or solenoid faulty.
- Electric starter shaft pinion gear not engaging or overrunning clutch slipping.
- 6. TSM/TSSM/HFSM Bank Angle Sensor tripped and ignition switch not cycled OFF then back to IGNITION position.
- 7. Security system activated.
- 8. Motorcycle in gear and clutch not pulled in.
- 9. Main fuse not in place.
- 10. Jiffy stand down and transmission in gear (HDI models).

# **Engine Turns Over But Does Not Start**

- Fuel tank empty.
- 2. Fuel filter clogged.
- 3. Plugged fuel injectors.
- 4. Discharged battery, loose or damaged battery terminal connections.
- 5. Fouled spark plugs.
- Spark plug cables in bad condition and shorting, cable connections loose or cables connected to incorrect cylinders
- 7. Ignition timing incorrect due to faulty coil, ECM or sensors (TMAP, CKP) and/or TSM/TSSM/HFSM.
- 8. Bank Angle Sensor tripped and ignition/light key switch not cycled OFF then back to IGNITION.
- Damaged wire or loose wire connection at ignition coil, battery or ECM connector.

- 10. Sticking or damaged valve(s) or wrong length pushrod(s).
- 11. Engine lubricant too heavy (winter operation).

#### NOTE

For cold weather starts, always disengage clutch.

## Starts Hard

- Spark plugs in bad condition, have improper gap or are partially fouled.
- 2. Spark plug cables in bad condition.
- 3. Battery nearly discharged.
- Damaged wire or loose wire connection at battery terminal, ignition coil or ECM connector.
- 5. Ignition not functioning properly (possible sensor failure).
- 6. Faulty ignition coil.
- Fuel tank filler cap vent plugged or fuel line closed off restricting fuel flow.
- 8. Water or dirt in fuel system.
- 9. Intake air leak.
- 10. Partially plugged fuel injectors.
- Valves sticking.
- 12. Engine lubricant too heavy (winter operation).

#### NOTE

For cold weather starts, always disengage clutch.

## Starts But Runs Irregularly or Misses

- 1. Spark plugs in bad condition or partially fouled.
- 2. Spark plug cables in bad condition and shorting or leaking.
- Spark plug gap too close or too wide.
- Faulty ignition coil, ECM, or sensor (TMAP, CKP, ET or O2).
- 5. Battery nearly discharged.
- Damaged wire or loose connection at battery terminals, ignition coil or ECM connector.
- 7. Intermittent short circuit due to damaged wire insulation.
- 8. Water or dirt in fuel system.
- 9. Fuel tank vent system plugged.
- 10. Air leak at intake manifold or air cleaner.
- 11. Partially plugged fuel injectors.
- 12. Damaged intake or exhaust valve(s).
- 13. Weak or damaged valve springs.
- 14. Incorrect valve timing.

# **Spark Plug Fouls Repeatedly**

- 1. Incorrect spark plug.
- 2. Piston rings badly worn or damaged.

1-76 2013 Sportster Service: Maintenance

- 3. Fuel mixture too rich.
- 4. Valve guides or seals badly worn or damaged.

# **Pre-Ignition or Detonation (Knocks or Pings)**

- Excessive carbon deposit on piston head or in combustion chamber.
- 2. Incorrect heat range spark plug.
- 3. Faulty spark plug(s).
- Ignition timing advanced. ECM or sensors (CKP, ET or TMAP) defective.
- 5. Fuel octane rating too low.
- 6. Intake manifold vacuum leak.

# **Check Engine Light Illuminates During Operation**

Fault detected. See the electrical diagnostic manual for this motorcycle.

# Overheating

- 1. Insufficient oil supply or oil not circulating.
- 2. Insufficient air flow over engine.
- 3. Leaking valve(s).
- 4. Heavy carbon deposits.
- Ignition timing retarded. ECM or sensor (CKP, TMAP) defective.

## **Valve Train Noise**

- Low oil pressure caused by oil feed pump not functioning properly or oil passages obstructed.
- 2. Faulty hydraulic lifter(s).
- 3. Bent pushrod(s).
- 4. Incorrect pushrod length.
- 5. Cam(s), cam gear(s), or cam bushing(s) worn.
- Rocker arm binding on shaft.
- 7. Valve sticking in guide.

### **Excessive Vibration**

- 1. Stabilizer links worn or loose, or stabilizer link brackets loose or damaged.
- 2. Isolators worn or isolator bolts loose or damaged.
- Isolator mounting brackets (left side of vehicle) loose or damaged.
- 4. Rubber mounts loose or worn.
- 5. Rear fork pivot shaft fasteners loose.
- 6. Front engine mounting bolts loose.
- 7. Exhaust system binding or hitting frame.
- 8. Engine/transmission and rear wheel not aligned properly.
- 9. Damaged frame.

- 10. Ignition timing advanced due to faulty sensor inputs (CKP, TMAP)/poorly tuned engine.
- Primary chain badly worn or links tight as a result of insufficient lubrication or misalignment.
- 12. Wheels not aligned, rims bent, or tires worn or damaged.
- 13. Internal engine problem.

## **LUBRICATION SYSTEM**

PART NUMBER	TOOL NAME	
HD-35457	BLACK LIGHT LEAK DETECTOR	

## Oil Does Not Return To Oil Tank

- 1. Oil tank empty.
- Oil pump gerotors damaged. The oil pump is not functioning.
- 3. Restricted oil hoses or fittings.
- Restricted oil filter.

# Engine Uses Too Much Oil Or Smokes Excessively

- 1. Piston rings badly worn or damaged.
- 2. Valve guide(s) or seal(s) worn or damaged.
- 3. Restricted oil filter.
- Oil tank overfilled.
- 5. Restricted oil return hose to tank.
- 6. Restricted breather operation.
- 7. Plugged crankcase scavenge port.
- 8. Oil diluted with gasoline.

# Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.

- Loose parts.
- 2. Imperfect seal at gaskets, pushrod cover, washers, etc.

#### NOTE

To aid locating leaks, use BLACK LIGHT LEAK DETECTOR (Part No. HD-35457).

- 3. Restricted oil return hose to tank.
- 4. Restricted breather passage(s) to air cleaner.
- 5. Restricted oil filter.
- Oil tank overfilled.
- 7. Porosity.

# **Low Oil Pressure**

- 1. Oil tank underfilled.
- 2. Faulty low oil pressure switch.
- 3. Worn oil pump gerotor(s).
- 4. Worn pinion shaft drive gear.

- 5. Restricted feed hose from oil tank.
- 6. Restricted high-pressure feed hose to oil filter housing.
- 7. Oil diluted with gasoline.
- 8. Oil bypass plunger stuck open.

## **High Oil Pressure**

- Oil tank overfilled.
- 2. Restricted oil tank return hose.
- Oil bypass plunger stuck closed.

## **ELECTRICAL SYSTEM**

#### NOTE

For diagnostic information see the electrical diagnostic manual.

# **Alternator Does Not Charge**

- 1. Voltage regulator module not grounded.
- 2. Engine ground wire loose or damaged.
- 3. Faulty voltage regulator module.
- 4. Loose or damaged wires in charging circuit.
- 5. Faulty stator and/or rotor.

# **Alternator Charge Rate Is Below Normal**

- 1. Weak or damaged battery.
- 2. Loose connections.
- 3. Faulty voltage regulator module.
- 4. Faulty stator and/or rotor.

# **Speedometer Operates Erratically**

- Contaminated vehicle speed sensor (remove sensor and clean off metal particles).
- 2. Loose connections.

## **TRANSMISSION**

## **Shifts Hard**

- 1. Clutch dragging slightly.
- 2. Transmission lubricant level too high.
- 3. Transmission lubricant too heavy (winter operation).
- Shifter return spring (inside primary chaincase) bent or broken.
- Bent shifter rod.
- 6. Shifter forks sprung or damaged.
- 7. Corners worn off gear dogs and shifter dog rings.

# **Jumps Out Of Gear**

- Shifter engaging parts (inside transmission) badly worn and rounded.
- 2. Shifter forks bent.
- 3. Shifter drum damaged/worn.
- 4. Damaged gears.

## **Clutch Slips**

- 1. Clutch controls improperly adjusted.
- 2. Worn friction plates.
- 3. Insufficient clutch spring tension.

# Clutch Drags Or Does Not Release

- Lubricant level too high in primary chaincase.
- 2. Clutch controls improperly adjusted.
- 3. Clutch plates warped.
- 4. Insufficient clutch spring tension.
- 5. Primary chain badly misaligned or too tight.

### Clutch Chatters

Friction plates or steel plates worn, warped or dragging.

#### HANDLING

- 1. Tires improperly inflated. Do not overinflate.
- 2. Loose wheel axle nuts. Tighten to torque specification.
- 3. Improper vehicle alignment: rear wheel out of alignment with frame and front wheel.
- Rims and tires out-of-true sideways.
- 5. Rims and tires out-of-round or eccentric with hub.
- 6. Loose spokes (models with laced wheels).
- 7. Irregular or peaked front tire tread wear.
- 8. Damaged tires or improper front-rear tire combination.
- 9. Tire and wheel unbalanced.
- Steering head bearings improperly adjusted or pitted or worn bearings and races.
- 11. Shock absorbers damaged/worn not functioning normally.
- 12. Heavy front end loading. Non-standard equipment on the front end (such as heavy radio receivers, extra lighting equipment, or luggage) tends to cause unstable handling.
- 13. Engine mounts/stabilizer links loose, worn or damaged.
- 14. Rear fork pivot assembly: improperly tightened or assembled, or loose, pitted or damaged pivot bearings.

# **BRAKES**

# **Brake Does Not Hold Normally**

- 1. Brake fluid reservoir low, system leaking or pads worn.
- 2. Brake system contains air bubbles.
- Master cylinder/caliper piston seals worn or parts damaged.
- 4. Brake pads contaminated with grease or oil.
- 5. Brake pads badly worn.
- 6. Brake disc badly worn or warped.
- Brake drags insufficient brake pedal or hand lever free play, caliper piston worn or damaged, or excessive brake fluid in reservoir.

1-78 2013 Sportster Service: Maintenance

- 8. Brake fades due to heat build up brake pads dragging or excessive braking.
- 9. Brake fluid leak when under pressure.

2013 Sportster Service: Maintenance 1-79

# **NOTES**

# **TABLE OF CONTENTS**

SUBJECT	PAGE NO.
2.1 FASTENER TORQUE VALUES	2-1
2.2 SPECIFICATIONS	2-9
2.3 VEHICLE IDENTIFICATION NUMBER (VIN)	2-12
2.4 TIRES	
2.5 WHEELS	2-18
2.6 WHEEL LACING	
2.7 CHECKING AND TRUING WHEELS	2-33
2.8 FRONT BRAKE MASTER CYLINDER	2-37
2.9 FRONT BRAKE CALIPER: XL MODELS	2-45
2.10 FRONT BRAKE CALIPER: XR 1200X	
2.11 REAR BRAKE MASTER CYLINDER: XL MODELS	2-58
2.12 REAR BRAKE MASTER CYLINDER: XR 1200X	2-64
2.13 REAR BRAKE MASTER CYLINDER RESERVOIR	
2.14 REAR BRAKE CALIPER: XL MODELS	
2.15 REAR BRAKE CALIPER: XR 1200X	2-79
2.16 BRAKE LINES	2-86
2.17 BLEEDING BRAKES	2-94
2.18 LEFT SIDE COVER	
2.19 FRONT FORK: XL MODELS	2-98
2.20 FRONT FORK: XR 1200X	
2.21 FORK STEM AND BRACKET ASSEMBLY	2-109
2.22 BELT GUARD AND DEBRIS DEFLECTOR	
2.23 REAR FORK	
2.24 SHOCK ABSORBERS.	
2.25 STABILIZER LINKS	
2.26 FRONT ENGINE MOUNT/ISOLATOR	
2.27 REAR ENGINE MOUNT/ISOLATOR	
2.28 THROTTLE CABLES: ALL MODELS.	
2.29 CLUTCH CONTROL	2-129
2.30 HANDLEBAR	2-134
2.31 FRONT FENDER	2-138
2.32 FRONT LICENSE PLATE: INDIA MODELS	
2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V	
2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V	2-147
2.35 REAR FENDER: XR 1200X	2-152
2.36 SAREE GUARD: INDIA MODELS	
2.37 REAR LICENSE PLATE: INDIA MODELS	
2.38 JIFFY STAND.	
2.39 SEAT	
2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS	2-161
2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS	2-163
2.42 RIDER FOOT CONTROLS: XR 1200X	2-166
2.43 PASSENGER FOOTRESTS	2-169
2.44 FORK LOCK	
2.45 MEDALLIONS SERIALIZED BADGES AND TANK EMBLEMS	

# **FASTENER TORQUE VALUES**

# FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE VALUE		NOTES
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.5 WHEELS, General
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.5 WHEELS, Front Wheel
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Axle, front, pinch screw: XL Models	21-27 ft-lbs	28.5-36.6 Nm	2.5 WHEELS, Front Wheel
Axle, front, pinch screw: XL Models	21-27 ft-lbs	28.5-36.6 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Axle, front, pinch screw: XR 1200X	41-48 ft-lbs	55.6-65.1 Nm	2.5 WHEELS, Front Wheel
Axle, front, pinch screw: XR 1200X	41-48 ft-lbs	55.6-65.1 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	2.5 WHEELS, General
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	2.5 WHEELS, Rear Wheel
Belt guard screw: XL Models	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Belt Guard: XL Models
Belt guard screw: XR 1200X	72-96 <b>in-lbs</b>	8.1-10.8 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Belt Guard: XR 1200X
Brake caliper, front, bridge bolt	12-18 ft-lbs	16.9-24.5 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Assembly
Brake caliper, front, mounting bolt	28-38 ft-lbs	38.0-51.6 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Brake caliper, front, mounting bolt	28-38 ft-lbs	38.0-51.6 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Assembly
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Assembly
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake caliper bleeder valve	35-61 in-lbs	4.0-6.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Brake caliper bleeder valve	35-61 in-lbs	4.0-6.9 Nm	2.17 BLEEDING BRAKES, Procedure
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel/Cast front wheel
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel/Laced front wheel
Brake disc, rear, screw	30-45 ft-lbs	40.7-61.1 Nm	2.5 WHEELS, Rear Wheel
Brake hose clamp to battery tray screw	30-40 in-lbs	3.4-4.5 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake hose clamp to rear fork screw	30-40 in-lbs	3.4-4.5 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake line/switch, rear, tee bracket screw: XL Models	72-120 <b>in-lbs</b>	8.14-13.6 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake line/switch, rear, tee bracket screw: XR 1200X	17-22 <b>in-lbs</b>	1.9-2.5 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X

FASTENER	TORQUE	VALUE	NOTES
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.12 REAR BRAKE MASTER CYLINDER: XR 1200X, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Brake line clamp screw, fork bracket	45-65 in-lbs	5.1-7.4 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line clamp screw, steering stem, XL Models	120-168 <b>in-lbs</b>	13.6-19.0 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line clamp screw, steering stem, XR 1200X	96-144 <b>in-lbs</b>	11-16 Nm	2.16 BRAKE LINES, Front Brake Line
Brake master cylinder, front, reservoir cover screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	2.17 BLEEDING BRAKES, Procedure
Brake master cylinder, rear, mounting screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake master cylinder, rear, mounting screw: XR 1200X	72-96 <b>in-lbs</b>	8.1-10.9 Nm	2.12 REAR BRAKE MASTER CYLINDER: XR 1200X, Installation
Brake master cylinder, rear, pushrod nut: XR 1200X	130-173 <b>in-lbs</b>	14.7-19.6 Nm	2.12 REAR BRAKE MASTER CYLINDER: XR 1200X, Assembly
Brake master cylinder, rear, pushrod shoulder nut	130-173 <b>in-lbs</b>	14.7-19.6 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Assembly
Brake master cylinder clamp, front, screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Brake master cylinder mounting bracket, rear, screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake master cylinder mounting bracket, rear, screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake master cylinder reservoir, rear, mounting screw	20-25 in-lbs	2.3-2.8 Nm	2.13 REAR BRAKE MASTER CYLINDER RESERVOIR, Installation: XL Models
Brake master cylinder reservoir, rear, mounting screw	36-60 in-lbs	4.1-6.8 Nm	2.13 REAR BRAKE MASTER CYLINDER RESERVOIR, Installation: XR 1200X
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.23 REAR FORK, Installation
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installing Brake Pads in Caliper

FASTENER	TORQUE	VALUE	NOTES
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Assembly
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installing Brake Pads in Caliper
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Brake pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to bell crank screw	120-180 in-lbs	13.6-20.4 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to bell crank screw	120-180 in-lbs	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to brake pedal screw	120-180 in-lbs	13.6-20.4 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to brake pedal screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Caliper bolt pin: XL Models	15-18 ft-lbs	19.6-24.5 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Caliper to mouting bracket: XL Models	87-130 <b>in-lbs</b>	9.8-14.7 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Clutch cable fitting	36-108 in-lbs	4.1-12.2 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.2-13.6 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Clutch lever anti-rattle spring screw	8-13 <b>in-lbs</b>	0.9-1.5 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Cylinder head exhaust port nut	96-120 <b>in-lbs</b>	10.9-13.6 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Debris deflector screw: XL Models	36-60 <b>in-lbs</b>	4.1-6.8 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Debris Deflector: XL Models
Debris deflector screw: XR 1200X	72-96 <b>in-lbs</b>	8.1-10.8 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Debris Deflector: XR 1200X
Engine mount, front, bolt	95-105 ft-lbs	129-142 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Exhaust pipe clamp bracket screw	30-33 ft-lbs	40.7-44.7 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Fender, inner screw: XR 1200X	72-120 <b>in-lbs</b>	8.1-13.6 Nm	2.35 REAR FENDER: XR 1200X, Installation
Fender, rear, mounting fastener	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L
Fender, rear, mounting fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE	VALUE	NOTES
Fender brace, rear, screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Fender bracket to forks, front: XR 1200X	15-19 ft-lbs	21-25 Nm	2.31 FRONT FENDER, All Models
Fender support, rear, screw	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Fender to bracket, front: XR 1200X	30-60 in-lbs	4.1-6.8 Nm	2.31 FRONT FENDER, All Models
Fender to fork brace, front: XL 1200X	30-42 <b>in-lbs</b>	3.4-4.7 Nm	2.31 FRONT FENDER, All Models/Tighten in cross pattern.
Fender to forks, front: XL except XL 1200X	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.31 FRONT FENDER, All Models
Footrest bracket fastener: XR 1200X	45-50 ft-lbs	61-68 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Footrest clevis fastener: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Right Footrest and Rear Brake Pedal Assembly
Footrest clevis fastener: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.23 REAR FORK, Installation
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1- 12.2 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1- 12.2 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Right Footrest and Rear Brake Pedal Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	2.19 FRONT FORK: XL MODELS, Installation
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	2.19 FRONT FORK: XL MODELS, Installation
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	2.20 FRONT FORK: XR 1200X, Installation
Fork, front, oil drain screw: XL 883N/R	13-17 <b>in-lbs</b>	1.5-2.0 Nm	2.19 FRONT FORK: XL MODELS, Changing Fork Oil: XL Models
Fork, front, stem bolt, 1st torque	23-27 ft-lbs	31.2-36.6 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation

FASTENER	TORQUE	E VALUE	NOTES
Fork, front, stem bolt, final torque	72-96 in-lbs	8.1-10.9 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Fork, lower front, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	2.23 REAR FORK, Installation
Fork brace to forks: XL 1200X	18-22 ft-lbs	25-30 Nm	2.31 FRONT FENDER, All Models
Fork cap to outer tube: XR 1200X	21-29 ft-lbs	29-39 Nm	2.20 FRONT FORK: XR 1200X, Assembly
Fork piston rod hex nut: XR 1200X	19-22 ft-lbs	26-30 Nm	2.20 FRONT FORK: XR 1200X, Assembly
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm	2.19 FRONT FORK: XL MODELS, Changing Fork Oil: XL Models
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm	2.19 FRONT FORK: XL MODELS, Installation
Fork slider tube fastener: XL Models	132-216 in-lbs	14.9-24.4 Nm	2.19 FRONT FORK: XL MODELS, Assembly
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Gear shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar control lever clamp screw	108-132 in-lbs	12.2-14.9 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Handlebar control lever clamp screw	108-132 in-lbs	12.2-14.9 Nm	2.30 HANDLEBAR, Installation
Handlebar riser bolt, lower	30-40 ft-lbs	40.7-54.3 Nm	2.30 HANDLEBAR, Installation
Handlebar riser bolt, lower	30-40 ft-lbs	40.7-54.3 Nm	2.30 HANDLEBAR, Installation
Handlebar riser cover screw	8-12 <b>in-lbs</b>	0.9-1.4 Nm	2.30 HANDLEBAR, Installation
Hub plate mounting screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel/XL 883N
Isolator, front, mounting bracket screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Isolator, front, mounting bracket screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
License plate, rear, keps nut, XL 1200C/C ANV/CP/CA/CB	20-25 in-lbs	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 1200C/C ANV/CP/CA/CB
License plate bolt	20-25 in-lbs	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 883R/L
License plate bracket, rear, fasteners: XL 1200C/C ANV/CP/CA/CB	20-25 in-lbs	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 1200C/C ANV/CP/CA/CB
License plate fasteners, front: XL 1200X/C/C ANV (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.32 FRONT LICENSE PLATE: INDIA MODELS, Front License Plate: XL Models (India)
License plate fasteners, front: XL 883L/N/R (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.32 FRONT LICENSE PLATE: INDIA MODELS, Front License Plate: XL Models (India)

FASTENER	TORQUE	VALUE	NOTES
License plate screw: XL 883L/R (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.37 REAR LICENSE PLATE: INDIA MODELS, Rear License Plate: XL Models (India)
License plate screw: XL 883N, XL 1200X (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.37 REAR LICENSE PLATE: INDIA MODELS, Rear License Plate: XL Models (India)
License plate support bracket screws	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 883R/L
Mirror stem locknut	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Mirror stem locknut	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Muffler bracket to footrest bracket screw: XR 1200X	15-19 ft-lbs	20.4-25.8 Nm	2.43 PASSENGER FOOTRESTS, XR 1200X
Passenger footrest support bracket fastener: XL Models	45-50 ft-lbs	61-68 Nm	2.43 PASSENGER FOOTRESTS, XL Models
Passenger footrest support bracket fastener: XR 1200X	45-50 ft-lbs	61-68 Nm	2.43 PASSENGER FOOTRESTS, XR 1200X
Passenger pillion retainer post screw: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	2.35 REAR FENDER: XR 1200X, Installation
Rear caliper mounting bolt	14-18 ft-lbs	19.6-24.5 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Rear caliper pin bolt	14-18 ft-lbs	19.6-24.5 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Rider footrest support bracket mounting screw	45-50 ft-lbs	61-68 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Rod guide case to inner tube: XR 1200X	66 ft-lbs	90 Nm	2.20 FRONT FORK: XR 1200X, Assembly
Saree guard, left-front, passenger footrest support bracket fastener	16-20 ft-lbs	21.7-27.1 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Seat mounting screw: XL Models	20-40 in-lbs	2.3-4.5 Nm	2.39 SEAT, Seat: XL Models
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 1200C/C ANV/CP/CA/CB
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Shifter rod to shift lever screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shifter rod to shift lever screw	120-180 in-lbs	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly

FASTENER	TORQUE	VALUE	NOTES			
Shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly			
Shift linkage fastener	120-180 <b>in-lbs</b>	13.6-20.3 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly			
Shift pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly			
Shift rod jamnuts	84-132 <b>in-lbs</b>	9.5-14.9 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Adjusting Shift Pedal: Forward Controls Models			
Shift rod jamnuts	84-132 <b>in-lbs</b>	9.5-14.9 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Adjusting Shift Lever			
Shift rod screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Adjusting Shift Pedal: Forward Controls Models			
Shift rod screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Adjusting Shift Lever			
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.5 WHEELS, Rear Wheel			
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation			
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Belt Guard: XL Models			
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.24 SHOCK ABSORBERS, Installation/Apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads.			
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.24 SHOCK ABSORBERS, Installation			
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)/Saree Guards: Apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT to the threads.			
Single caliper cast front wheel hub plate screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Sealed Wheel Bearings			
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm	2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels			
Sprocket cover, forward and lower screw	80-120 <b>in-lbs</b>	9.0-13.6 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation			
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation			
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation			
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.7 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation			
Sprocket mounting screw, 1st torque	60 ft-lbs	81.3 Nm	2.5 WHEELS, Rear Wheel			
Sprocket mounting screw, final torque	80 ft-lbs	108.0 Nm	2.5 WHEELS, Rear Wheel			
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation			
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Lower Front Stabilizer Link			
Stabilizer link, upper front, engine bracket mounting screw	55-65 ft-lbs	74.6-88.2 Nm	2.25 STABILIZER LINKS, Upper Front Stabilizer Link			

FASTENER	TORQUE	VALUE	NOTES
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Upper Front Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Upper Front Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Lower Front Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Rear Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Stop lamp, rear, switch: XL Models	132-168 in-lbs	14.9-18.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Stop lamp, rear, switch: XR 1200X	132-168 <b>in-lbs</b>	14.9-18.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Strut cover fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Strut cover fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Switch housing screw	35-45 in-lbs	4.0-5.1 Nm	2.28 THROTTLE CABLES: ALL MODELS, Assembly and Installation
Switch housing screw	35-45 in-lbs	4.0-5.1 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	2.30 HANDLEBAR, Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	2.30 HANDLEBAR, Installation
Tailsection bolts: XR 1200X	72-120 in-lbs	8.1-13.6 Nm	2.35 REAR FENDER: XR 1200X, Installation
Turn signal clamp, front, screw	96-120 <b>in-lbs</b>	10.9-13.6 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Turn signal stalk locknut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L
Turn signal stalk locknut	96-156 in-lbs	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 1200C/C ANV/CP/CA/CB
Turn signal stalk locknut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Turn signal stalk locknut	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Valve stem, tubeless type, nut	12-15 <b>in-lbs</b>	1.4-1.7 Nm	2.4 TIRES, Installation
Valve stem, tube type, nut	3-7 in-lbs	0.3-0.8 Nm	2.4 TIRES, Installation

# **SPECIFICATIONS**

### **TABLES**

### **Chassis**

Table 2-1. Dimensions: XL 883 Models

ITEM	XL 8	883R	XL	883L	XL 883N	
	in	mm	in	mm	in	mm
Wheel base	60.0	1524	59.3	1506	59.8	1519
Road clearance	5.6	142	3.8	97	3.9	99
Seat height*	27.3	693	25.5	648	25.7	653
*With 180 lb (81.7 kg) rider on s	seat.	1	1			1

Table 2-2. Dimensions: XL 1200 Models and XR 1200X

ITEM	XL 1200	1200C/C ANV		XL 1200C/C ANV XL		XL 1200CA XL 1200CB		00CB	XL 1200X		XL 1200V		XR 1200X	
	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm		
Wheel base	59.8	1520	59.8	1520	59.8	1520	59.8	1519	60.0	1524	60.0	1524		
Road clearance	4.3	110	4.3	110	4.3	110	3.9	99	4.7	120	5.9	150		
Seat height*	26.6	676	26.6	676	26.6	676	26.0	660	26.6	676	29.2	742		
*With 180 lb (81.7	*With 180 lb (81.7 kg) rider on seat.													

# **A**WARNING

Do not exceed the motorcycle's Gross Vehicle Weight Rating (GVWR) or Gross Axle Weight Rating (GAWR). Exceeding these weight ratings can lead to component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00016f)

- GVWR is the sum of the weight of the motorcycle, accessories, and the maximum weight of the rider, passenger and cargo that can be safely carried.
- GAWR is the maximum amount of weight that can be safely carried on each axle.
- The GVWR and GAWR are shown on the information plate, located on the frame down tube.

- The maximum additional weight allowed on the motorcycle equals the Gross Vehicle Weight Rating (GVWR) minus the running weight. For example, a motorcycle with GVWR of 1200 lbs (544 kg) having a running weight of 800 lbs (363 kg), would allow a maximum of an additional 400 lbs (181 kg) combined weight of the rider, passenger, riding gear, cargo and installed accessories.
- For important information regarding tire data and tire inflation, see <u>1.8 TIRES AND WHEELS</u>.

Table 2-3. Weights: XL 883 Models

ITEM	XL	883L	XL 8	883R	XL 883N		
	lb	kg	lb	kg	lb	kg	
Running weight*	563	255.4	573	260.0	565	256.3	
Maximum added weight allowed**	437	198.2	427	193.7	435	197.3	
GVWR	1000	453.6	1000	453.6	1000	453.6	
GAWR front	339	154.0	335	152.0	335	152.0	
GAWR rear	661	300.0	665	301.6	665	301.6	

<sup>\*</sup>The total weight of the motorcycle as delivered with all oil/fluids and approximately 90% of fuel.

<sup>\*\*</sup>The total weight of accessories, cargo, riding gear, passenger and rider cannot exceed this weight.

Table 2-4. Weights: XL 1200 Models and XR 1200X

ITEM	XL 1200C/C ANV		XL 12	00CA	XL 12	00CB	XL 1	200X	XL 1	200V	XR 1	200X
	lb	kg	lb	kg	lb	kg	lb	kg	lb	kg	lb	kg
Running weight*	582	264.0	573	260.0	573	260.0	567	257.2	555	251.7	573	259.9
Maximum added weight allowed**	418	189.6	427	193.7	427	193.7	433	196.4	445	201.8	427	193.7
GVWR	1000	453.6	1000	453.6	1000	453.6	1000	453.6	1000	453.6	1000	453.6
GAWR, front	335	152.0	335	152.0	335	152.0	335	152.0	335	152.0	340	154.2
GAWR, rear	665	301.6	665	302.0	665	302.0	665	301.6	665	301.6	660	299.4

<sup>\*</sup>The total weight of the motorcycle as delivered with all oil/fluids and approximately 90% of fuel.

Table 2-5. Capacities: XL 883 Models

ITEM	XL 8	883R	XL 8	383L	XL 883N		
	U.S.	METRIC	U.S.	METRIC	U.S.	METRIC	
Fuel tank (total)	3.3 gal	12.5 L	4.5 gal	17.0 L	3.3 gal	12.5 L	
Oil tank with filter	2.8 qt	2.6 L	2.8 qt	2.6 L	2.8 qt	2.6 L	
Transmission (approximate)	1.0 qt	0.95 L	1.0 qt	0.95 L	1.0 qt	0.95 L	
Low fuel warning light	0.8 gal	3.0 L	1.0 gal	3.8 L	0.8 gal	3.0 L	

Table 2-6. Capacities: XL 1200 Models and XR 1200X

ITEM	XL 1200C/C A	NV/CP/CA/CB	//CP/CA/CB XL 1200X/V			XR 1200X		
	U.S.	METRIC	U.S.	METRIC	U.S.	METRIC		
Fuel tank (total)	4.5 gal	17.0 L	2.1 gal	7.9 L	3.5 gal	13.2 L		
Oil tank with filter	2.8 qt	2.6 L	2.8 qt	2.6 L	2.8 qt	2.6 L		
Transmission (approximate)	1.0 qt	0.95 L	1.0 qt	0.95 L	1.0 qt	0.95 L		
Low fuel warning light	1 gal	3.8 L	0.65 gal	2.5 L	0.8 gal	3.0 L		

Table 2-7. Brake Disc Specifications: XL Models

SPECIFICATION	in	mm
Diameter (front)	11.500	292
Diameter (rear)	10.236	260
Minimum thickness (front)	0.200	5.08
Minimum thickness (rear)	0.230	5.84
Maximum disc runout (front and rear)	0.008	0.20

Table 2-8. Brake Disc Specifications: XR 1200X

SPECIFICATION	in	mm
Diameter (front)	11.500	292
Diameter (rear)	10.236	260
Minimum thickness (front)	0.187	4.75
Minimum thickness (rear)	0.230	5.84
Maximum disc runout (front and rear)	0.006	0.15

2-10 2013 Sportster Service: Chassis

<sup>\*\*</sup>The total weight of accessories, cargo, riding gear, passenger and rider cannot exceed this weight.

# **Wheels and Tires**

# **A**WARNING

Use only Harley-Davidson specified tires. See a Harley-Davidson dealer. Using non-specified tires can adversely affect stability, handling or braking, which could result in death or serious injury. (00024b)

**Table 2-9. Tubeless Cast Wheels: Tire Fitment** 

MODEL	WHEEL SIZE RIM SIZE		SPECIFI	ED TIRE
	AND POSITION	AND CONTOUR	TYPE	SIZE
XL 883L	18 in - front	T18 x 3.5 MT	Michelin Scorcher "11F"	120/70ZR18
	17 in - rear	T17 x 4.5 MT	Michelin Scorcher "11"	150/60ZR17
XL 883R XL 883N	19 in - front	T19 x 2.15 MT	Michelin Scorcher "31"	100/90B19
XL 883R XL 883N	16 in - rear	T16 x 3.00 D	Michelin Scorcher "31"	150/80B16
XL 1200C/C ANV	16 in - front	T16 x 3.00 MT	Michelin Scorcher "31"	130/90B16
XL 1200CP/CA	16 in - rear	T16 x 3.00 MT	Michelin Scorcher "31"	150/80B16
XR 1200X	18 in - front	E18 x 3.5 MT	Michelin Scorcher "11F"	120/70ZR18
	17 in - rear	E17 x 5.5 MT	Michelin Scorcher "11"	180/55ZR17

Table 2-10. Tube Type Steel Laced Wheels: Tire Fitment

MODEL	WHEEL	RIM SIZE	TUBE SIZE	SPEC	CIFIED TIRE
		AND CONTOUR		TYPE	SIZE
XL 1200X	16 in - front	T16 x 3.00 D	MT90-16	Michelin Scorcher "31"	130/90B16
XL 1200X	16 in - rear	T16 x 3.00 D	MT90-16	Michelin Scorcher "31"	150/80B16
XL 1200V	21 in - front	T21 x 2.15 TLA	MH90-21	Dunlop D402F	MH90 21 M/C 54H WW
	16 in - rear	T16 x 3.00 D	MT/MU90-16	Dunlop D401	150/80/B16 16 M/C 71H WWW
XL 1200C/C	16 in - front	T16 x 3.00 D	MT90-16	Michelin Scorcher "31"	130/90B16
ANV/CP/CB	16 in - rear	T16 x 3.00 D	MT90-16	Michelin Scorcher "31"	150/80B16

2013 Sportster Service: Chassis 2-11

# **VEHICLE IDENTIFICATION NUMBER (VIN)**

### General

See <u>Figure 2-2</u>. A unique 17-digit serial or Vehicle Identification Number (VIN) is assigned to each motorcycle. Refer to <u>Table 2-11</u>.

### Location

See <u>Figure 2-1</u>. The full 17-digit VIN is stamped on the right side of the frame near the steering head. In some destinations, a printed VIN label is also attached to the right front downtube.

### **Abbreviated VIN**

An abbreviated VIN showing the vehicle model, engine type, model year, and sequential number is stamped on the left side of the crankcase between the engine cylinders.

#### NOTE

Always give the full 17-digit Vehicle Identification Number when ordering parts or making any inquiry about your motorcycle.

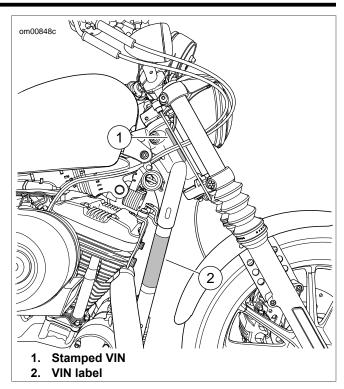


Figure 2-1. VIN Locations: Sportster Models

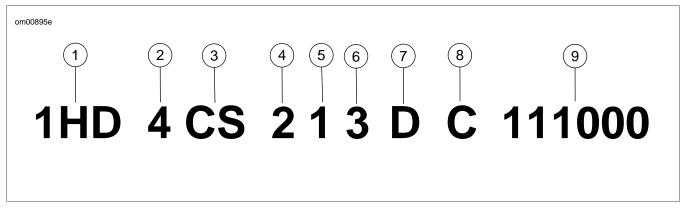


Figure 2-2. Typical Harley-Davidson VIN: 2013 Sportster Models

Table 2-11. Harley-Davidson VIN Breakdown: 2013 Sportster Models

POSITION	DESCRIPTION	POSSIBLE VALUES
1	World manufacturer identifier	1HD=Originally manufactured for sale <b>within</b> the United States 5HD=Originally manufactured for sale <b>outside</b> of the United States 932=Originally manufactured in and for sale only in Brazil market MEG=Originally manufactured in and for sale only in India market
2	Motorcycle type	1=Heavyweight motorcycle (901 cm³ or larger) 4=Middleweight motorcycle (351 cm³ to 900 cm³)
3	Model	See VIN model table
4	Engine type	2=Evolution® 883 cm³ air-cooled, fuel-injected 3=Evolution® 1202 cm³ air-cooled, fuel-injected 6=Evolution® 1202 cm³ precision-cooled, fuel-injected

2-12 2013 Sportster Service: Chassis

Table 2-11. Harley-Davidson VIN Breakdown: 2013 Sportster Models

POSITION	DESCRIPTION	POSSIBLE VALUES	
5	Introduction date/Configuration and calibration recognition	Normal Introduction 1=Domestic (DOM) 3=California (CAL) A=Canada (CAN) C=HDI E=Japan (JPN) G=Australia (AUS) J=Brazil (BRZ) L=Asia Pacific (APC) N=India (IND)	Mid-year or Special Introduction 2, 4=Domestic (DOM) 5, 6=California (CAL) B=Canada (CAN) D=HDI F=Japan (JPN) H=Australia (AUS) K=Brazil (BRZ) M=Asia Pacific (APC) P=India (IND)
6	VIN check digit	Can be 0-9 or X	
7	Model year	D=2013	
8	Assembly plant	C=Kansas City, MO U.S.A. D=H-D Brazil-Manaus, Brazil (CKD) N=Haryana India (Bawal District Rewari)	
9	Sequential number	Varies	

Table 2-12. VIN Model Codes: 2013 Sportster Models

CODE	MODEL	NAME	CODE	MODEL	NAME
CR	XL 883L	SuperLow <sup>®</sup>	LE	XL 883N	Iron 883™
CS	XL 883R	883 Roadster	LF	XL 1200V	Seventy-Two™
СТ	XL 1200C XL 1200C ANV	1200 Custom	LH	XL 1200CP	1200 Custom
LC	XL 1200X	Forty-Eight™	LJ	XL 1200CA	1200 Custom Limited A
LD	XR 1200X	XR1200X™	LK	XL 1200CB	1200 Custom Limited B

2013 Sportster Service: Chassis 2-13

TIRES 2.4

### REMOVAL

#### NOTE

Take care when removing and installing tire to prevent cosmetic damage to wheel. This is especially true with wheels that feature painted surfaces.

- Remove wheel from motorcycle. See <u>2.5 WHEELS</u>, <u>Front Wheel</u> or <u>2.5 WHEELS</u>, <u>Rear Wheel</u>.
- 2. Deflate tire.

#### NOTE

**Tube Type Wheels:** do not completely remove tire from rim to replace the tube only. Removing one side allows the tube to be replaced and allows for inspection of tire.

- Loosen both tire beads from rim flange. Use a bead breaker machine if available.
- 4. Remove tire.

### **CLEANING, INSPECTION AND REPAIR**

- 1. Clean the inside of tire and outer surface of tube.
- 2. If rim is dirty or rusty, clean with a stiff wire brush.
- Check wheels for lateral and radial runout before installing a tire. See 2.7 CHECKING AND TRUING WHEELS.
- Inspect the tire for wear and damage.
- 5. Inspect tread depth. Replace worn tires.
- 6. Replace tube and rim seal prior to installing tire.

# **AWARNING**

Replace punctured or damaged tires. In some cases, small punctures in the tread area may be repaired from within the removed tire by a Harley-Davidson dealer. Speed should NOT exceed 50 mph (80 km/h) for the first 24 hours after repair, and the repaired tire should NEVER be used over 80 mph (130 km/h). Failure to follow this warning could lead to tire failure and result in death or serious injury. (00015b)

- 7. Repair tread on tubeless tires if puncture is 1/4 in (6.4 mm) or smaller. Repairs must be made from inside the tire.
- Always combine a patch and plug when repairing damaged tires.

### INSTALLATION

FASTENER	TORQUE VALUE	
Valve stem, tube type, nut	3-7 <b>in-lbs</b>	0.3-0.8 Nm
Valve stem, tubeless type, nut	12-15 <b>in-lbs</b>	1.4-1.7 Nm

### Mounting

# **AWARNING**

Harley-Davidson front and rear tires are not the same. Interchanging front and rear tires can cause tire failure, which could result in death or serious injury. (00026a)

# **AWARNING**

Do not exceed manufacturer's recommended pressure to seat beads. Exceeding recommended bead seat pressure can cause tire rim assembly to burst, which could result in death or serious injury. (00282a)

# **A**WARNING

Be sure tires are properly inflated, balanced, undamaged, and have adequate tread. Inspect your tires regularly and see a Harley-Davidson dealer for replacements. Riding with excessively worn, unbalanced, improperly inflated, overloaded or damaged tires can lead to tire failure and adversely affect stability and handling, which could result in death or serious injury. (00014b)

Mount tires with arrows molded into the tire sidewall with the arrow pointing in the direction of forward rotation.

Locate the colored balance dot on the sidewall next to the valve stem.

For tire pressures, see <u>1.8 TIRES AND WHEELS, Air Pressure</u>.

# **Tube Type Tires**

# **A**WARNING

Match tires, tubes, rim strips or seals, air valves and caps to the correct wheel. Contact a Harley-Davidson dealer. Mismatching can lead to tire damage, allow tire slippage on the wheel or cause tire failure, which could result in death or serious injury. (00023c)

- Replace the tube whenever the tire is replaced.
- Only patch inner tubes as an emergency measure. Replace a patched tube as soon as possible.
- For correct tire and tube types, see <u>1.8 TIRES AND</u> WHEELS, Specified Tires.

- 1. See Figure 2-3. On laced wheels, install a rim strip into the rim well.
  - Verify that the spokes do not protrude through the nipples.
  - b. Align the valve stem hole in rim strip with valve stem hole in rim.
- 2. Install tube and tire.
- 3. Install valve stem nut. Tighten to 3-7 **in-lbs** (0.3-0.8 Nm).




Figure 2-3. Installing Rim Strip

# **Tubeless Tires**

# **AWARNING**

Only install original equipment tire valves and valve caps. A valve, or valve and cap combination, that is too long or too heavy can strike adjacent components and damage the valve, causing rapid tire deflation. Rapid tire deflation can cause loss of vehicle control, which could result in death or serious injury. (00281a)

- 1. See Figure 2-4. Replace damaged or leaking valve stems.
- 2. XL 883L/N/R Cast Wheels:
  - a. Install rubber grommet (5) on valve stem (1).
  - b. Insert valve stem into rim hole.
  - c. Install metal washer (4).
  - d. Install nut (3). Tighten to 12-15 in-lbs (1.4-1.7 Nm).
- 3. **XL 1200C/C ANV/CP/CA Cast Wheels:** Press the snapin valve stem (2) into the rim hole.
- 4. Install tire.

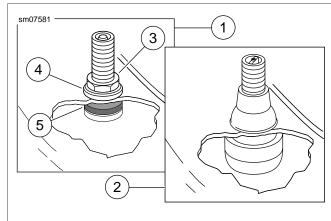

- 1. Bolt-on valve stem
- 2. Snap-in valve stem
- 3. Nut
- 4. Metal washer
- 5. Rubber grommet

Figure 2-4. Tubeless Tire Valve Stems

### **CHECKING TIRE RUNOUT**

### **Lateral Runout**

- 1. Check tire pressure.
- See <u>Figure 2-5</u>. Turn the wheel on the axle and measure tire lateral runout from a fixed point to a smooth area on the tire sidewall. Avoid measuring on raised letters or vents.
- Tire lateral runout should not exceed 0.090 in (2.29 mm).
   If tire runout exceeds specification, remove tire from rim and check rim lateral runout. See <u>2.7 CHECKING AND TRUING WHEELS</u>.
  - a. If rim lateral runout is within specification, the tire is at fault and must be replaced.
  - If rim lateral runout is not within specification, correct by adjusting selected spokes on laced wheels or replace cast wheels. See <u>2.7 CHECKING AND</u> <u>TRUING WHEELS</u>.
- Install the tire. Check tire lateral runout of replacement tire.

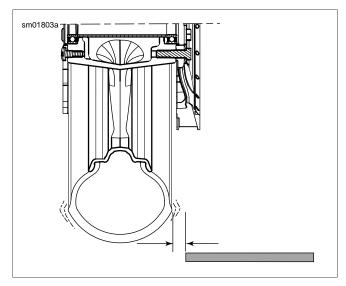


Figure 2-5. Tire Lateral Runout

# **Radial Runout**

- 1. Check tire pressure.
- See <u>Figure 2-6</u>. Turn the wheel on the axle and measure tire radial runout at the tread centerline.
- Tire radial runout should not exceed 0.090 in (2.29 mm).
   If tire runout exceeds this specification, remove tire from rim and check rim radial runout. See 2.7 CHECKING AND TRUING WHEELS.
  - If rim radial runout is within specification, the tire is at fault and must be replaced.
  - If rim radial runout is not within specification, correct by adjusting selected spokes on laced wheels or replace cast wheels. See <u>2.7 CHECKING AND TRUING WHEELS</u>.
- 4. Install the tire. Check tire radial runout of replacement tire.

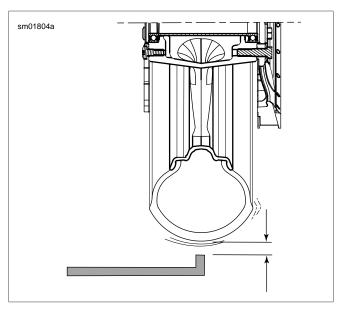


Figure 2-6. Tire Radial Runout

### WHEEL BALANCING

#### NOTE

Install tire after balancing. See See <u>2.5 WHEELS, Front Wheel</u> or <u>2.5 WHEELS, Rear Wheel</u>.

# Static vs Dynamic

Wheel balancing is recommended to improve handling. Balancing wheels reduces vibration especially at high speeds.

Static balancing will produce satisfactory results for normal highway speeds. Dynamic balancing can produce better results for deceleration.

# Weights

The maximum weight permissible to accomplish balance is 3.5 oz (99.2 g) (total weight applied to the rim). If more than 3.5 oz (99.2 g) of weight is required, rotate the tire 180 degrees on the rim and again balance the assembly. Balance wheels to within 0.5 oz (14 g).

All wheel weights currently supplied by Harley-Davidson are made from zinc which is lighter than lead. The weight of each zinc segment is 0.18 oz (5 g) as compared to 0.25 oz (7 g) for lead. Weights are stamped for easy identification.

#### NOTES

- If adding more than 1.5 oz (43 g) of weight at one location, divide the amount so that half is applied to each side of rim.
- On cast wheels without a flat area near the bead, place the weights crosswise through the opening.
- See <u>Figure 2-8</u>. Place weights on a smooth surface of the wheel rim such that centrifugal force will help keep them in place. Make sure the area of application is completely clean, dry, and free of oil and grease.

#### NOTE

See <u>Figure 2-7</u>. When installing wheel weights, consider cosmetics. Keep snaking (1) within 0.040 in (1.02 mm) (2) of straight. Also keep the angle alignment of individual segments (3) within 3 degrees.

2. Remove paper backing from the weight. Press firmly in place and hold for ten seconds.

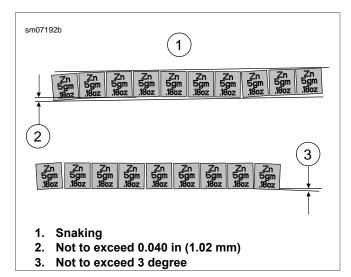


Figure 2-7. Weight Segment Alignment

# <u>HOME</u>

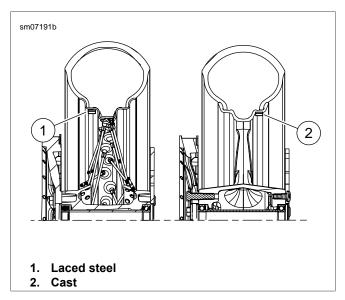


Figure 2-8. Wheel Weight Placement

WHEELS 2.5

### **GENERAL**

FASTENER	TORQUE VALUE	
Axle, front, nut	60-65 ft-lbs	81-88 Nm
Axle, rear, nut	95-105 ft-lbs	129-142 Nm

Good handling and maximum tire mileage are directly related to the care of wheels and tires. Regularly inspect wheels and tires for damage and wear. If handling problems occur, see <u>1.28 TROUBLESHOOTING</u> or refer to <u>Table 2-13</u> for a list of probable causes.

Keep tires inflated to the recommended air pressure. Always balance the wheel after replacing a tube or tire.

Table 2-13. Wheel Service Chart

CHECK FOR	REMEDY	
Loose axle nuts.	Tighten front axle nut to 60-65 ft-lbs (81-88 Nm).	
	Tighten rear axle nut to 95-105 ft-lbs (129-142 Nm).	
Excessive side-play or radial (up-and-down) play in wheel hubs.	Replace wheel hub bearings. See <u>2.5 WHEELS</u> , <u>Sealed Wheel Bearings</u> .	
Loose spokes.	Tighten or replace spokes. See <u>2.6 WHEEL LACING</u> and <u>2.7 CHECKING AND TRUING WHEELS</u> .	
Alignment of rear wheel in frame or with front wheel.	Check rear wheel alignment as described in this section or repair rear fork as described in <u>2.23 REAR FORK</u> .	
Rims and tires lateral runout more than 1/32 in (0.76 mm).	True wheels, replace rims or replace spokes. See 2.6 WHEEL	
Rims and tires vertical runout not be more than 1/32 in (0.76 mm).	LACING and 2.7 CHECKING AND TRUING WHEELS.	
Irregular or peaked front tire wear.	Replace as described in <u>2.5 WHEELS</u> and <u>2.4 TIRES</u> .	
Correct tire inflation.	Inflate tires to correct pressure. See <u>1.8 TIRES AND WHEELS</u> .	
Correct tire and wheel balance.	Static balance may be satisfactory if dynamic balancing facilities are not available. However, dynamic balancing is strongly recommended.	
Steering head bearings.	Replace pitted or worn bearings. Adjust fall-away. See 2.21 FORK STEM AND BRACKET ASSEMBLY.	
Damper tubes.	Check for leaks. See <u>2.19 FRONT FORK: XL MODELS</u> or <u>2.20 FRONT FORK: XR 1200X</u> .	
Shock absorbers.	Check damping action and mounting stud bushings. See 2.24 SHOCK ABSORBERS.	
Rear fork bearings.	Check for looseness. See <u>2.23 REAR FORK</u> .	

# WHEEL BEARING END PLAY

- 1. Raise the wheel off the ground.
- 2. See <u>Figure 2-9</u>. Mount a magnetic base dial indicator on the brake disc.
- 3. Set the indicator contact point on the end of the axle.
- Move the wheel back as far as it will go. Hold the wheel in position and zero the dial indicator.
- Move the wheel forward as far as it will go. Note the reading of the dial indicator. Verify the reading.
- 6. If end play is greater than specification, remove the wheel and replace both wheel bearings. Refer to <u>Table 2-14</u>.

2-18 2013 Sportster Service: Chassis

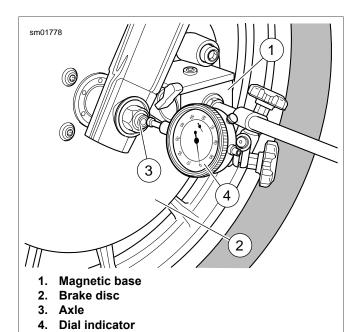


Figure 2-9. Check Wheel Bearing End Play

Table 2-14. Wheel Bearing End Play

DIRECTION	in	mm
Lateral	0.002	0.05

# **FRONT WHEEL**

FASTENER	TORQUE VALUE	
Hub plate mounting screw	16-24 ft-lbs	21.7-32.6 Nm
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm
Axle, front, nut	60-65 ft-lbs	81-88 Nm
Axle, front, pinch screw: XL Models	21-27 ft-lbs	28.5-36.6 Nm
Axle, front, pinch screw: XR 1200X	41-48 ft-lbs	55.6-65.1 Nm

# Removal

1. Raise the front wheel off the ground.

#### NOTES

- Do not operate the front brake lever with the front wheel removed or the caliper pistons may be forced out. Seating the pistons requires disassembly of the caliper.
- On models with dual disc brakes, remove both calipers.
- See <u>Figure 2-10</u>. Remove brake caliper mounting screws
   (3). Slide caliper (4) off brake disc and secure caliper out of the way.
- 3. **XL 1200X/C/C ANV/CP/CA/CB:** Remove the front fender. See <u>2.31 FRONT FENDER</u>.

- 4. Remove axle nut (1) and flat washer (2) from axle on left side of vehicle.
- See <u>Figure 2-11</u>. On right side of vehicle, loosen nut (4) on pinch screw (1). Pull axle out of hub while supporting wheel.
- Remove spacer and front wheel assembly.

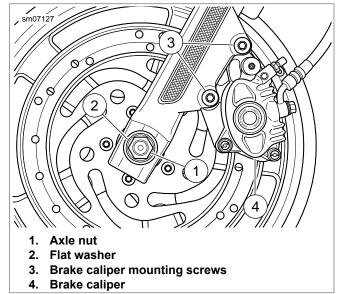


Figure 2-10. Left Side Front Wheel Mounting

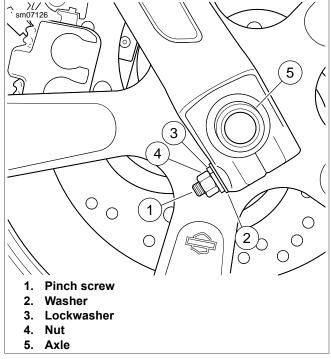


Figure 2-11. Right Side Front Wheel Mounting

# **Disassembly: Cast Front Wheel**

- 1. If necessary, remove tire. See 2.4 TIRES.
- 2. Remove five screws and left side brake disc.

- 3. If necessary, remove five screws and right side brake disc (dual front disc models) or hub plate (single front disc models).
- If necessary, remove roller bearings and hub spacer. See 2.5 WHEELS, Sealed Wheel Bearings.

# **Assembly Cast Single Disc**

# WARNING


Be sure that brake fluid or other lubricants do not contact brake pads or discs. Such contact can adversely affect braking ability, which could cause loss of control, resulting in death or serious injury. (00290a)

- See Figure 2-12. Install hub spacer (7) and new wheel bearings (6). See <u>2.5 WHEELS, Sealed Wheel Bearings</u>.
- XL 883N: Install hub plate (8) on right side of wheel. Secure with **new** screws and tighten in an alternating pattern to 16-24 ft-lbs (21.7-32.6 Nm).

#### NOTE

See <u>Figure 2-13</u>. Orient brake discs with the word LEFT (1) facing out. Verify that the bulb shaped end (2) of the slots points opposite the direction of rotation (3).

Install brake disc. Secure with **new** screws and tighten in an alternating pattern to 16-24 ft-lbs (21.7-32.6 Nm).

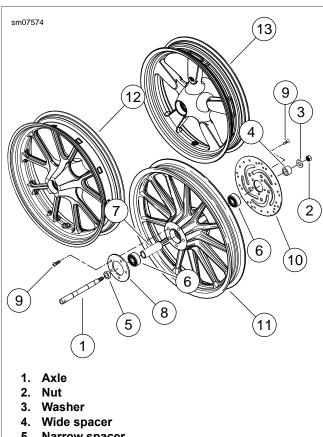

- 5. Narrow spacer
- 6. Bearings (2)
- 7. Hub spacer
- 8. Hub plate: XL 883N
- 9. Fastener (10)
- 10. Brake disc
- 11. XL 883N
- 12. XL 883L
- 13. XL 1200C/C ANV/CP/CA

Figure 2-12. Single Disc Wheels: XL Models

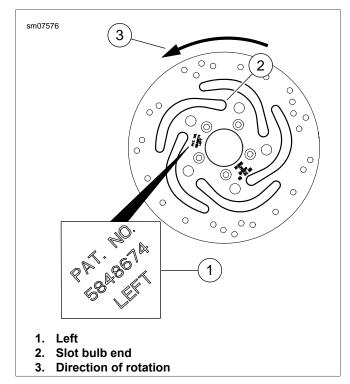


Figure 2-13. Single Disc Orientation

# Assembly Cast Dual Disc: XL 883R

 See <u>Figure 2-14</u>. Install hub spacer (7) and <u>new</u> wheel bearings (6). See <u>2.5 WHEELS</u>, <u>Sealed Wheel Bearings</u>.

#### NOTE

See <u>Figure 2-15</u>. The words LEFT (1) and RIGHT (2) on the discs will be located on the left and right sides.

- Hold brake discs together with inboard sides facing each other (minimum thickness and part number stampings are on outboard side of brake disc). The bulb shaped end (3) of each slot is on the trailing edge of the slot in the direction of rotation (4).
- 3. Rotate one brake disc as necessary, until all vent holes are aligned with those of the other brake disc.
- 4. Keeping the paint marks on the edge of both discs aligned, install both brake discs onto hub. Secure with **new** screws.
- Holding brake discs aligned, use a felt marking pen or paint pen to draw a line across the edge of both brake discs.
- Tighten in an alternating pattern to 16-24 ft-lbs (21.7-32.6 Nm).
- 7. Verify that wheel is true. See <u>2.7 CHECKING AND TRUING WHEELS, Cast Wheel Runout</u>.

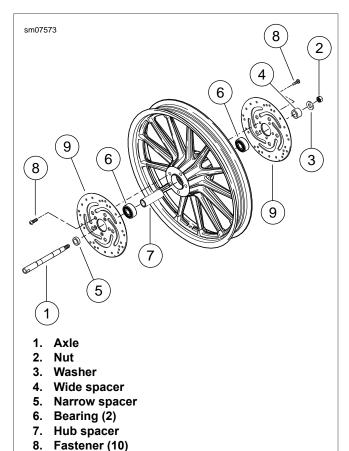


Figure 2-14. Dual Disc Wheel: XL 883R

9.

Brake disc (2)

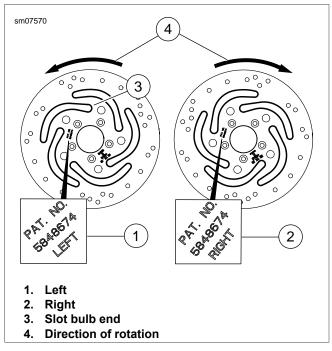


Figure 2-15. Dual Disc Orientation: XL 883R

# **Assembly Cast Dual Disc: XR 1200X**

See <u>Figure 2-16</u>. . XR 1200X models are equipped with a floating front brake disc. They are non-directional and do not need to be matched with opposite disc.

Tighten in an alternating pattern to 16-24 ft-lbs (21.7-32.6 Nm).

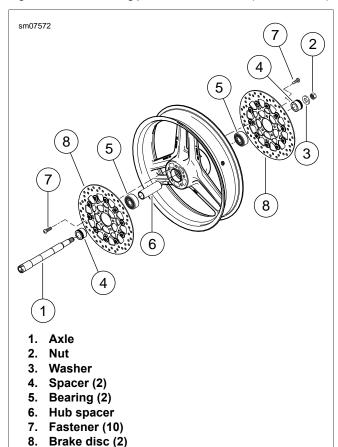


Figure 2-16. Dual Disc Wheel: XR 1200X

### **Disassembly: Laced Front Wheel**

- See <u>Figure 2-17</u>. If necessary, remove five screws (1) and brake disc (9).
- If necessary, remove wheel bearings (4) and hub spacer (6). See <u>2.5 WHEELS</u>, <u>Sealed Wheel Bearings</u>.

#### NOTE

If only rim is to be replaced, tape spokes together to hold position on hub and remove spokes from rim. Install taped hub/spoke assembly to **new** rim and tighten spokes. Then remove tape and true wheels. See <u>2.6 WHEEL LACING</u> and <u>2.7 CHECKING AND TRUING WHEELS</u>.

3. If it is necessary to disassemble wheel, loosen spoke nipples and spokes and slide each spoke out of hub.


# **Assembly: Laced Front Wheel**

- See <u>Figure 2-17</u>. Install hub spacer (6) and **new** wheel bearings (4) if removed. See <u>2.5 WHEELS</u>, <u>Sealed Wheel</u> <u>Bearings</u>.
- If hub and rim were disassembled, reassemble and true wheel. See <u>2.6 WHEEL LACING</u> and <u>2.7 CHECKING AND TRUING WHEELS</u>.

# **AWARNING**

Be sure that brake fluid or other lubricants do not contact brake pads or discs. Such contact can adversely affect braking ability, which could cause loss of control, resulting in death or serious injury. (00290a)

- Install brake disc (9). Secure with new screws (1) and tighten in an alternating pattern to 16-24 ft-lbs (21.7-32.6 Nm).
- 4. Verify that wheel is true.

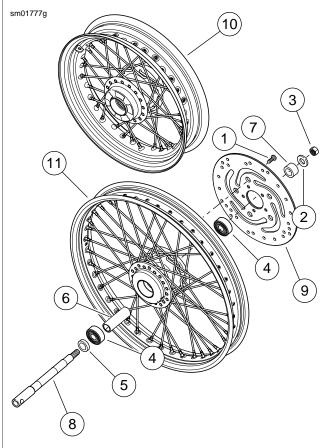

- 1. Screw
- 2. Washer
- 3. Nut
- 4. Roller bearing
- 5. Bearing spacer, narrow
- 6. Hub spacer
- 7. Bearing spacer, wide
- 8. Front axle
- 9. Brake disc
- 10. Wheel: 16 in XL 1200X/CP/CB certain markets
- 11. Wheel: 21 in XL 1200V

Figure 2-17. Laced Front Wheel

# Installation

- Apply a light coat of ANTI-SEIZE LUBRICANT to the axle, bearing bores, and hub spacer bore.
- 2. Position wheel between forks. Verify that bearing spacers on right and left side of wheel bearings are in position.

- With pinch screw loose, insert threaded end of axle through right side fork. Push axle through fork and wheel hub until it begins to emerge from left side of hub.
- 4. Push axle through left fork, until axle shoulder contacts external bearing spacer on right fork side.
- Install flat washer and axle nut over threaded end of axle. Insert screwdriver or steel rod through hole in axle on right side of vehicle. While holding axle stationary, tighten axle nut to 60-65 ft-lbs (81-88 Nm).
- 6. **Dual Disc Models:** Align calipers to brake discs:
  - a. Make sure axle pinch screw nut is loose.
  - b. Position right fork leg against bearing spacer.
  - c. **XL Models:** Tighten axle pinch screw to 21-27 ft-lbs (28.5-36.6 Nm).
  - d. XR 1200X: Tighten axle pinch screw to 41-48 ft-lbs (55.6-65.1 Nm).
- 7. XL 1200X/C/C ANV/CP/CA/CB: Install front fender. See 2.31 FRONT FENDER.
- Install brake caliper(s). See <u>2.9 FRONT BRAKE CALIPER:</u> XL MODELS or <u>2.10 FRONT BRAKE CALIPER:</u> XR 1200X.

# **A**WARNING

Check wheel bearing end play after tightening axle nut to specified torque. Excessive end play can adversely affect stability and handling and can cause loss of control, which could result in death or serious injury. (00285b)

# **A**WARNING

Whenever a wheel is installed and before moving the motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00284a)

9. Pump brake lever to move pistons out until they contact outside brake pad(s). Verify piston location against pad.

# **REAR WHEEL**

FASTENER	TORQUE	VALUE
Brake disc, rear, screw	30-45 ft-lbs	40.7-61.1 Nm
Sprocket mounting screw, 1st torque	60 ft-lbs	81.3 Nm
Sprocket mounting screw, final torque	80 ft-lbs	108.0 Nm
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm
Axle, rear, nut	95-105 ft-lbs	129-142 Nm

#### Removal

- Secure motorcycle upright on a suitable lift. Raise rear end of motorcycle high enough to permit wheel removal.
- XL Models: Remove rear muffler. See <u>4.13 EXHAUST SYSTEM</u>: XL MODELS.

- XL Models: Remove right lower shock absorber nut and pull screw out slightly. This will help avoid damage to sprocket when rear wheel is removed.
- 4. See Figure 2-18. Remove E-clip (2), axle nut (1) and washer (3).
- Loosen adjuster screws several turns to relieve belt tension.
- Gently tap end of axle (4) with a soft hammer to loosen. Pull axle free of rear fork assembly.
- 7. Slide wheel forward and slip belt off sprocket.

#### NOTE

It is not necessary to disassemble rear brake caliper in order to remove rear wheel.

- XR 1200X: Disengage brake hose from clamps on lower side of rear fork. Carefully slide caliper and bracket assembly forward to disengage from brake disk and boss on rear fork. Support assembly from frame using rope or bungee cord.
- Remove spacers and roll rear wheel assembly back out of fork.
- 10. Remove rear wheel assembly.

#### NOTE

Do not operate rear brake pedal with rear wheel removed or caliper piston may be forced out of piston bore. Seating piston requires disassembly of caliper.

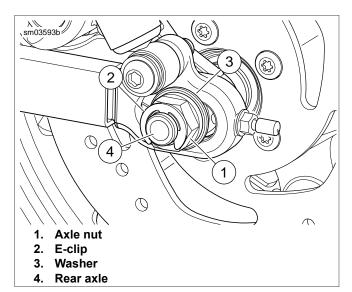


Figure 2-18. Rear Wheel Mounting

# Disassembly

- Sportster models sold in certain markets are equipped with rear wheel compensating sprockets. See <u>C.1 COM-PENSATING SPROCKET</u>.
- Mark parts to indicate location. Do not mix parts upon assembly.
- 1. If necessary, remove tire. See 2.4 TIRES.

- See <u>Figure 2-19</u> or <u>Figure 2-20</u>. If necessary, remove screws to detach rear brake disc from left side of wheel.
- 3. If necessary, remove screws and washers to detach rear sprocket from right side of wheel.
- 4. If necessary, remove wheel bearings and hub spacer. See <u>2.5 WHEELS</u>, <u>Sealed Wheel Bearings</u>.

#### NOTE

**Laced Wheel:** If only rim is to be replaced, tape spokes together to hold position on hub and remove spokes from rim. See 1.12 DRIVE BELT AND SPROCKETS.

Laced Wheel: If it is necessary to disassemble wheel, loosen the spoke nipples and spokes and slide each spoke out of hub.

# **Cleaning and Inspection**

1. Inspect all parts for damage or excessive wear.

# **AWARNING**

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

- Inspect brake pads and disc. See <u>1.16 BRAKE PADS AND DISCS</u>: XL MODELS OR <u>1.17 BRAKE PADS AND DISCS</u>: XR 1200X.
- Inspect rear belt and sprocket. See <u>1.12 DRIVE BELT</u> AND SPROCKETS.


# **Assembly**

- Laced Wheel: if wheel was disassembled, reassemble hub, rim, spokes and nipples, and tighten spokes. See 1.12 DRIVE BELT AND SPROCKETS.
- Install hub spacer and new wheel bearings, if removed.
   See 2.5 WHEELS, Sealed Wheel Bearings.
  - a. Cast or disc wheel: See Figure 2-19.
  - b. Laced wheel: See Figure 2-20.
- If brake disc was removed, install brake disc on valve stem side of wheel. Secure with **new** screws and tighten to 30-45 ft-lbs (40.7-61.1 Nm).

### NOTE


Sportster models sold in certain markets are equipped with rear wheel compensating sprockets. See <u>C.1 COMPENSATING SPROCKET</u>.

- If rear sprocket was removed, install sprocket on side of wheel opposite valve stem.
  - Secure with **new** screws and washers. Tighten to 60 ft-lbs (81.3 Nm).
  - Loosen each screw 180 degrees and tighten to 80 ftlbs (108.0 Nm).
- Verify that wheel assembly is true. See <u>2.7 CHECKING</u> <u>AND TRUING WHEELS</u>.
- 6. Install tire. See 2.4 TIRES.

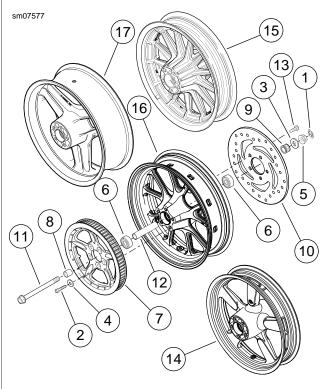

- 1. E-clip
- 2. Screw (5)
- 3. Washer
- 4. Washer (5)
- 5. Axle nut
- 6. Roller bearing (2)
- 7. Sprocket
- 8. Spacer, wide
- 9. Spacer, narrow
- 10. Brake disc
- 11. Axle
- 12. Hub spacer
- 13. Screw (5)
- 14. Wheel: 16 in XL 1200C/C ANV/CP/CA (certain markets)
- 15. Wheel: 16 in XL 883N/R 16. Wheel: 17 in XL 883L 17. Wheel: 17 in XR 1200X

Figure 2-19. Cast Rear Wheel

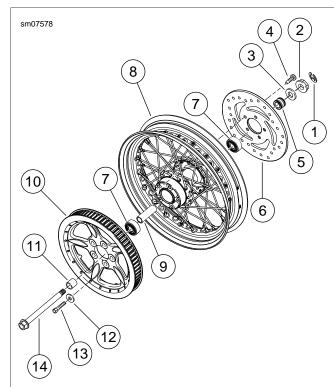

- 1. E-clip
- 2. Axle nut
- 3. Washer
- 4. Fastener
- 5. Spacer
- 6. Brake disc
- 7. Roller bearing (2)
- 8. Wheel: 16 in XL 1200X/V/CP/CB and XL 1200C/C ANV/CA certain markets
- 9. Spacer, wide
- 10. Sprocket
- 11. Spacer, narrow
- 12. Washer
- 13. Fastener
- 14. Axle

Figure 2-20. Laced Rear Wheel

### Installation

- See <u>Figure 2-19</u> or <u>Figure 2-20</u>. Apply a light coat of ANTI-SEIZE LUBRICANT to the axle, bearing bores, and hub spacer bore.
- Place wheel centrally in the rear fork assembly. Engage the brake disc in the caliper on XL models.
- XR 1200X: With the wheel as far forward as possible, install the caliper/bracket assembly in place, engaging the brake disk and the boss on the rear fork.
- Slide wheel forward and slip belt over sprocket and then slide the wheel back.
- Position sprocket side spacer between wheel and rear fork
- Insert axle through right side of rear fork and right side axle adjuster, sprocket side spacer, wheel assembly, disc side spacer, rear caliper bracket, and left side of rear fork and left side axle adjuster.

- 7. Install washer and axle nut on left end of axle. Do not tighten nut at this time.
- 8. **XL Models:** Slide right lower shock absorber screw back in place. Install nut and tighten to 45-50 ft-lbs (61-68 Nm).

#### NOTE

If rear brake caliper was disassembled or removed, see 2.14 REAR BRAKE CALIPER: XL MODELS or 2.15 REAR BRAKE CALIPER: XR 1200X.

- Check for proper belt tension and rear wheel alignment.
   See <u>1.24 WHEEL ALIGNMENT</u>.
- Tighten axle nut to 95-105 ft-lbs (129-142 Nm). Install Eclip.

### **A**WARNING

Check wheel bearing end play after tightening axle nut to specified torque. Excessive end play can adversely affect stability and handling and can cause loss of control, which could result in death or serious injury. (00285b)

- Check wheel bearing end play. See <u>2.5 WHEELS, Wheel</u> Bearing End Play.
- 12. **XL Models:** Install rear muffler. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u>.

# **A**WARNING

Whenever a wheel is installed and before moving the motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00284a)

 Pump brake pedal to move piston out until it contacts outside brake pad. Verify piston location against pad.

### **SEALED WHEEL BEARINGS**

PART NUMBER	TOOL NAME
HD-44060-C	WHEEL BEARING
	INSTALLER/REMOVER

FASTENER	TORQUI	E VALUE
Single caliper cast front wheel hub plate screw	16-24 ft-lbs	21.7-32.6 Nm

### Inspection

- Inspect the play of the wheel bearings by finger while they are in the wheel. Rotate the inner bearing race and check for abnormal noise. Make sure bearing rotates smoothly.
- Check wheel bearings and axle spacers for wear and corrosion. Excessive play or roughness indicates worn bearings. Replace bearings in sets only.

### Removal

 If not already done, remove wheel from motorcycle. See 2.5 WHEELS. On models with a single front brake caliper, remove hub plate from wheel on side opposite front brake disc.

#### NOTE

See <u>Figure 2-21</u>. Some wheel hubs may not provide adequate support for the puller bridge. In these cases, center a used brake disc over the hub to support the puller bridge while removing the bearing.

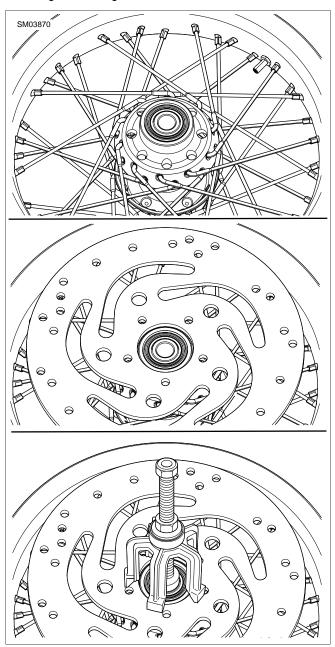


Figure 2-21. Brake Disk as Puller Aid

- See <u>Figure 2-22</u>. Obtain WHEEL BEARING INSTALLER/REMOVER (Part No. HD-44060-C) and assemble.
  - a. Sparingly apply graphite lubricant to threads of forcing screw (1) for prolonged service life and smooth operation.
  - b. Install nut (2), washer (3) and bearing (4) on screw. Insert assembly through hole in bridge (5).
  - Drop ball bearing inside collet (6). Fasten collet and ball bearing to forcing screw.

- Hold end of forcing screw and turn collet to expand edges of collet.
- 4. See <u>Figure 2-23</u>. When expanded collet has gripped bearing edges, hold end of forcing screw (1) and turn the nut (2) to remove bearing from wheel.
- 5. Remove spacer from inside wheel hub.
- 6. Repeat procedure for opposite side bearing. Discard both bearings upon removal.

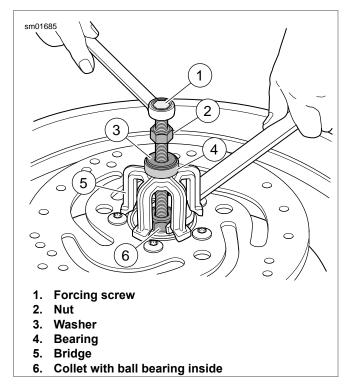


Figure 2-22. Wheel Bearing Removal Tool

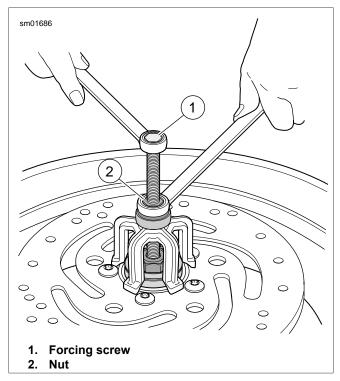


Figure 2-23. Removing Bearing

# Installation

#### NOTES

- When installing wheel bearings, use specialty tool WHEEL BEARING INSTALLER/REMOVER (Part No. HD-44060-C).
- Always install first bearing on primary brake disc side. If front wheel has two brake discs, install bearing on the left side first.
- Obtain WHEEL BEARING INSTALLER/REMOVER (Part No. HD-44060-C) and assemble.
  - Sparingly apply graphite lubricant to threads of threaded rod for prolonged service life and smooth operation.
  - b. See <u>Figure 2-24</u>. Place threaded rod (1) through support plate (2). Insert assembly through wheel.
  - See <u>Figure 2-25</u>. Place **new** bearing on rod (1) with lettered side facing out.
  - d. Assemble installer (5), bearing (4), washer (3) and nut (2) over rod.
- Hold hex end of threaded rod and turn nut to install wheel bearing. Bearing is fully seated when nut can no longer be turned. Remove tool.

- 3. Install spacer inside wheel hub.
- 4. Reverse tool and install opposite side wheel bearing.
- Install hub plate opposite brake disc and secure with new screws. Tighten to 16-24 ft-lbs (21.7-32.6 Nm).

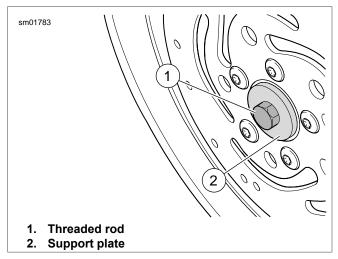


Figure 2-24. Assembling Installation Tool

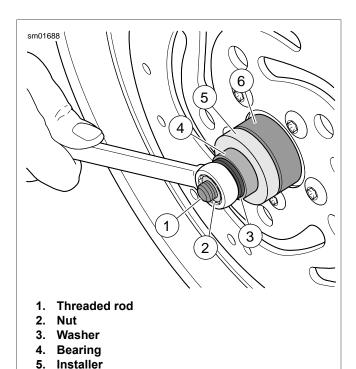


Figure 2-25. Installing Bearing

6. Wheel bearing

# WHEEL LACING

### WHEEL LACING: ANGLE FLANGE HUB

#### NOTES

- See <u>Figure 2-26</u>. The following procedure is valid for wheels that use an angle flange hub regardless of rim style or diameter.
- The primary brake side of the hub has one or two grooves cut into the disc mounting surface.

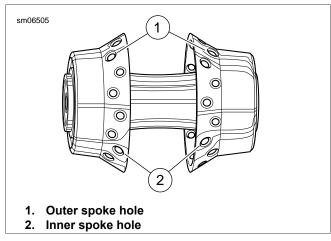


Figure 2-26. Angle Flange Hub

- 1. Place hub on workbench:
  - a. Front: primary brake side up.
  - b. Rear: brake side down.
- 2. Install all spokes in the lower flange.
- 3. See <u>Figure 2-27</u>. Flip hub over. Gather all outer spokes and hold upright with a rubber band. Repeat with the inner spokes using a second rubber band.
- 4. Install spokes in remaining flange.
- 5. Rotate the lower flange spokes as far as they will go:
  - a. Outer spokes clockwise.
  - b. Inner spokes counterclockwise.
- Center the rim over the hub and spokes assembly and support on wooden blocks approximately 1.5 in (38.1 mm) thick.
  - If valve is not located in the center of the rim, place valve hole facing up.
  - b. If the valve located in the center of the rim can be placed either side up.

#### NOTE

Install nipples until approximately 1/8 in (3.2 mm) of spoke thread shows.

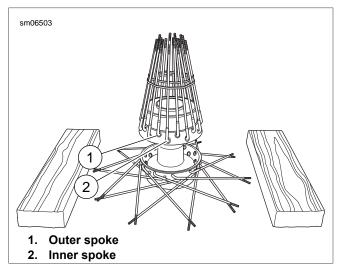


Figure 2-27. Spokes Gathered

- Install lower flange outer spokes and loosely install spoke nipples:
  - a. Rim with side valve hole: See Figure 2-28. Start at the valve stem hole (1).
  - Rim with center valve hole: See Figure 2-29. Start at the first hole counterclockwise (1) from valve stem hole.
- 8. Install remaining outer spokes in every 4th hole.
- Install lower flange inner spokes and loosely install spoke nipples:
  - a. Starting at the 2nd hole counterclockwise (2) from first spoke installed, install inner spoke.
  - b. Install remaining inner spokes in every 4th hole.
- Carefully release upper flange inner spokes and fan out around rim, rotating them clockwise.
- 11. Starting at the first hole counterclockwise (3) from first spoke installed, install inner spoke. Install all remaining inner spokes in every 4th hole.
- 12. Carefully release upper flange outer spokes and fan out around rim, rotating them counterclockwise.
- 13. Install outer spokes in remaining holes (4).
- 14. Verify spoke heads are seated. See <u>2.7 CHECKING AND TRUING WHEELS</u>.
  - a. Evenly hand-tighten spoke nipples until snug.
  - b. Only tighten until slack is removed.
  - c. Proper torque will be applied when the wheel is trued.
  - d. Adjust offset and true the wheel.

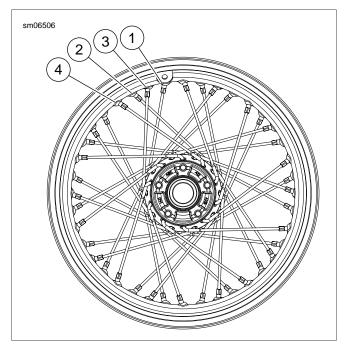


Figure 2-28. Side Valve Rim

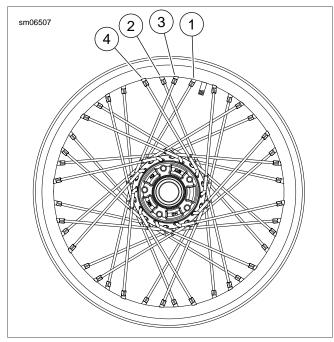


Figure 2-29. Center Valve Rim

# WHEEL LACING: STRAIGHT FLANGE HUB, SINGLE HOLE CIRCLE

- See <u>Figure 2-31</u>. The following procedure is valid for laced wheels that use a straight flange, single spoke hole circle hub regardless of rim style or diameter.
- The primary brake side of the hub has one or two grooves cut into the disc mounting surface.

- See <u>Figure 2-30</u>. Divide spokes into inner and outer groups.
  - a. Inner spokes (2) have long heads.
  - b. Outer spokes (1) have short heads.
- Lubricate all spoke threads and nipple shoulders with tire mounting lubricant.
- 3. Place hub on bench with the primary brake disc side up.
- 4. Fit the first two spokes.
  - See <u>Figure 2-31</u>. Insert one outer spoke (1) (short head) into any bottom flange hole and swing it clockwise.
  - b. Insert an inner spoke (2) (long head) in the next hole counterclockwise from the outer spoke.
  - Swing the inner spoke counterclockwise over the outer spoke.
- 5. Find the hole (3) in the upper flange directly above the first two spokes. Insert a long head inner spoke.
- Insert all remaining spokes in the upper flange, alternating the inner and outer spokes.
- 7. Flip the hub (primary brake side down). Install remaining spokes alternating inner and outer spokes.
- See <u>Figure 2-32</u>. Group all spokes on the upper flange into two bundles of equal numbers. Secure each group with throttle grips.

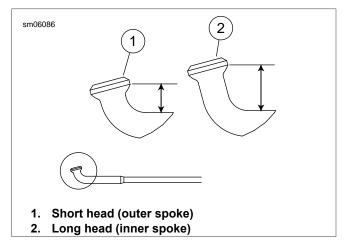


Figure 2-30. Spoke Heads

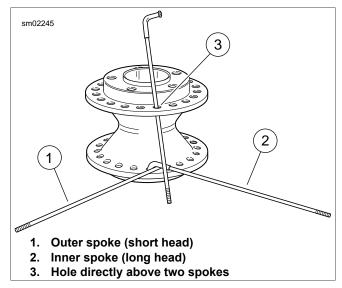


Figure 2-31. Lacing Single Row Wheel Hub

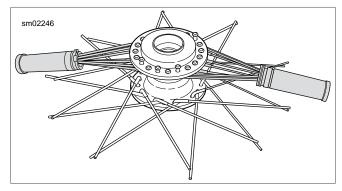


Figure 2-32. Bundling Top Spokes

#### NOTE

Outer spokes must not cross an outer spoke. Inner spokes must not cross an inner spoke.

- 9. Angle all lower flange spokes as far as they will go without overlapping a LIKE spoke:
  - a. Outer spokes (short head) clockwise.
  - b. Inner spokes (long head) counterclockwise.
- 10. Support the rim on wooden blocks approximately 0.75 in (19 mm) thick.
- 11. Place the hub and spoke assembly into the rim and centered in the rim.

### NOTE

Install nipples until approximately 1/8 in (3.2 mm) of spoke thread shows.

12. See Figure 2-33. Beginning with the 2nd hole counterclockwise (1) from valve stem hole, install lower flange outer spokes (short head) in every 4th hole. Loosely install spoke nipples.

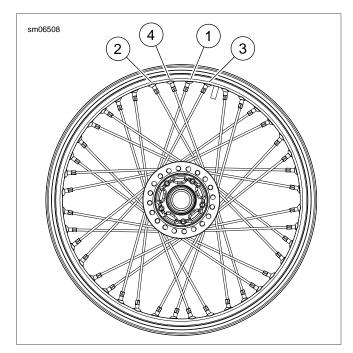


Figure 2-33. 40 Spoke Single Row Straight Flange Hub

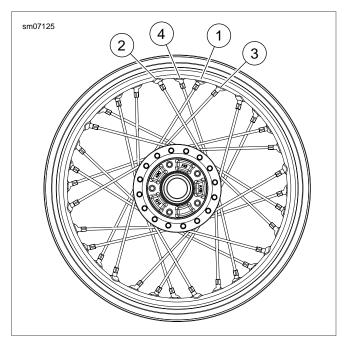


Figure 2-34. 32-Spoke Single Row Straight Flange Hub

- 13. Beginning with 4th hole counterclockwise (2) from valve stem hole, install lower flange inner spokes (long head) in every 4th hole. Loosely install spoke nipples. Each inner spoke will cross four outer spokes.
- 14. See <u>Figure 2-35</u>. Carefully release each top bundle and fan the spokes around the rim edge.

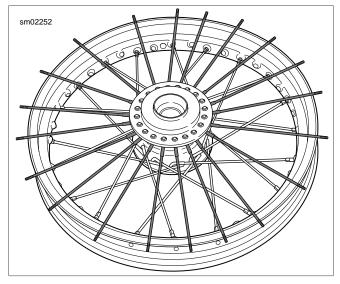


Figure 2-35. Fanning Top Flange Spokes

15. Rotate all the upper flange inner spokes (long head) clockwise, one at a time, leaving the outer spokes (short head) resting on the rim.

#### NOTE

Be sure outer spokes do not fall under the inner spoke and become trapped.

- See <u>Figure 2-33</u>. Beginning with the first hole counterclockwise (3) from valve stem hole, install upper flange inner spokes (long head) in every 4th hole.
- 17. Rotate outer spokes (short head) counterclockwise and install in the remaining holes (4) in the rim.
- 18. Verify spoke heads are seated. Evenly hand-tighten spoke nipples until snug. Only tighten until slack is removed.
- Adjust rim offset and true the wheel. Tighten the nipples to specification. See <u>2.7 CHECKING AND TRUING</u> <u>WHEELS</u>.

# WHEEL LACING: STRAIGHT FLANGE HUB, DUAL HOLE CIRCLE

- See <u>Figure 2-37</u>. This procedure is valid for 40-spoke wheels that use a straight flange, dual spoke hole circle hub regardless of rim style or diameter.
- The primary brake side of the hub has one or two grooves cut into the disc mounting surface.
- 1. See <u>Figure 2-36</u>. Divide spokes into inner and outer groups.
  - a. Inner spokes (2) have long heads.
  - b. Outer spokes (1) have short heads.
- 2. Lubricate all spoke threads and nipple shoulders with tire mounting lubricant.
- 3. Place hub on bench with the primary brake disc side up.

- 4. Install first two spokes:
  - See <u>Figure 2-37</u>. Insert one outer spoke (short head) into any upper flange outer hole. Swing it counterclockwise.
  - b. Insert an inner spoke (long head) in the next hole counterclockwise from the outer spoke.
  - Swing the inner spoke clockwise under the outer spoke.
- Insert all remaining spokes in the upper flange, alternating the inner and outer spokes.
- Flip the wheel hub (primary brake side down) and install remaining spokes in the same manner, again alternating inner and outer spokes.
- See <u>Figure 2-38</u>. Group all spokes on the upper flange into two bundles of ten. Secure each group with throttle grips.

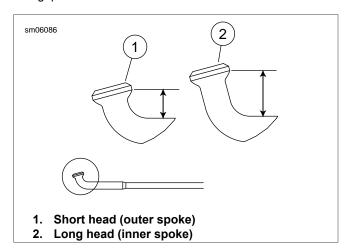


Figure 2-36. Spoke Heads

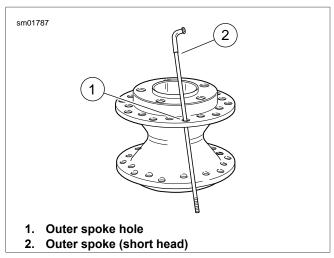


Figure 2-37. Lacing Dual Row Wheel Hub

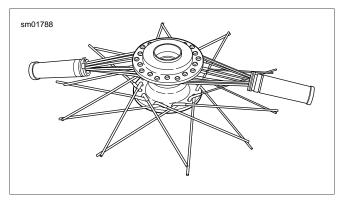


Figure 2-38. Bundling Top Spokes

- Angle all lower flange spokes as far as they will go without overlapping a LIKE spoke (inner must not cross inner; outer must not cross outer):
  - a. Outer spokes (short head) clockwise.
  - b. Inner spokes (long head) counterclockwise. All inner spokes lay over outer spokes.
- Support the rim on wooden blocks approximately 0.75 in (19 mm) thick.
- Place the hub and spoke assembly into the rim and centered in the rim.

#### NOTE

Install nipples until approximately 1/8 in (3.2 mm) of spoke thread shows.

See <u>Figure 2-39</u>. Beginning with the 1st hole counterclockwise (1) from valve stem hole, install lower flange outer spokes (short head) in every 4th hole. Loosely install spoke nipples.

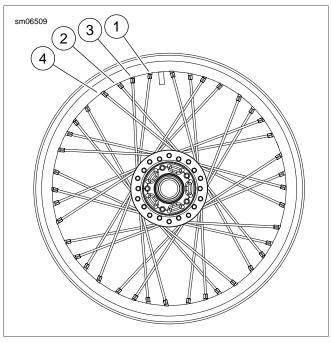


Figure 2-39. Flat Flange Hub, Dual Row

- 12. Beginning with 3rd hole counterclockwise (2) from valve stem hole, install lower flange inner spokes (long head) in every 4th hole. Loosely install spoke nipples. Each inner spoke will cross four outer spokes.
- 13. See Figure 2-40. Carefully release each top bundle and fan the spokes around the rim edge.

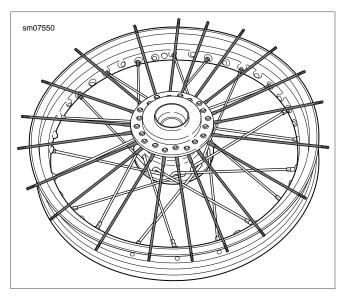


Figure 2-40. Fanning Top Flange Spokes

14. Rotate all the upper flange inner spokes (long head) clockwise, one at a time, leaving the outer spokes (short head) resting on the rim.

#### NOTE

Be sure outer spokes do not fall under the inner spoke and become trapped.

- See <u>Figure 2-39</u>. Beginning with the 2nd hole counterclockwise (3) from valve stem hole, install upper flange inner spokes (long head) in every 4th hole.
- 16. Rotate outer spokes (short head) counterclockwise. Install in the remaining holes (4) in the rim.
- 17. Verify spoke heads are seated. See <u>2.7 CHECKING AND TRUING WHEELS</u>.
  - a. Evenly hand-tighten spoke nipples until snug.
  - b. Only tighten until slack is removed.
  - c. Proper torque will be applied when the wheel is trued.
  - d. Adjust offset and true the wheel.

# **CHECKING AND TRUING WHEELS**

# **CAST WHEEL RUNOUT**

PART NUMBER	TOOL NAME
HD-99500-80	WHEEL TRUING AND BALANCING STAND

### **Wheel Stand**

- 1. Check the wheel bearings before measuring runout. See 2.5 WHEELS, Sealed Wheel Bearings.
- 2. Install the truing arbor in the wheel hub and mount the wheel in a WHEEL TRUING AND BALANCING STAND (Part No. HD-99500-80).
- 3. Tighten the arbor nuts so that the hub will turn on its bearings.
- 4. Mount a gauge rod or a dial indicator to the base of the truing stand.

# **Lateral Runout**

- 1. See <u>Figure 2-41</u>. Point the gauge rod or indicator at the rim bead flange.
- Rotate the wheel and measure the lateral distance at several locations around the rim. Replace the wheel if lateral runout exceeds specification. Refer to <u>Table 2-15</u>.

### **Radial Runout**

- 1. See <u>Figure 2-42</u>. Point the gauge rod or indicator at the rim tire bead safety hump.
- 2. Rotate the wheel and measure radial distance at several locations. Replace the wheel if radial runout exceeds specification. Refer to Table 2-15.

Table 2-15. Wheel Rim Runout

RUNOUT	in	mm
Lateral	0.030	0.76
Radial	0.030	0.76

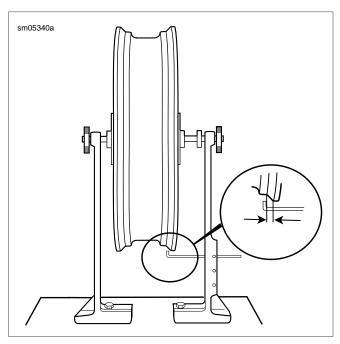


Figure 2-41. Lateral Runout

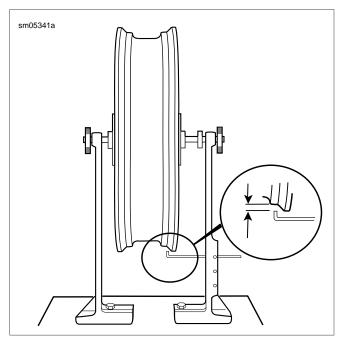


Figure 2-42. Radial Runout

# **LACED WHEEL RIM OFFSET**

PART NUMBER	TOOL NAME
HD-94681-80	SPOKE NIPPLE WRENCH
HD-99500-80	WHEEL TRUING STAND

1. See <u>Figure 2-43</u>. Place a piece of tape to mark the center of each group of four spokes as shown. The groups should

2013 Sportster Service: Chassis 2-33

be directly opposite one another and approximately 90 degrees apart. Using different colors of tape or numbering each group is helpful.

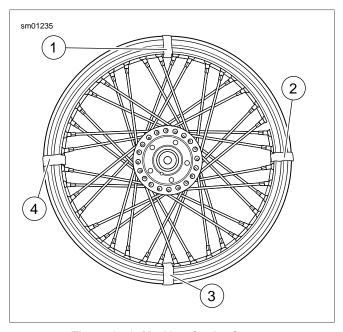


Figure 2-43. Marking Spoke Groups

2. See Figure 2-44. Mount wheel in WHEEL TRUING STAND (Part No. HD-99500-80) using truing arbor. Tighten arbor nuts so hub will turn on its bearings.

#### NOTE

The primary brake disc side of the hub has one or two grooves cut into the disc mounting surface.

- 3. Lay a straightedge across the primary brake disc mounting surface of hub and one of the marked spoke groups.
- 4. See <u>Figure 2-45</u>. Measure the distance from the straightedge to the location shown, based on rim design, to determine distance A. Refer to <u>Table 2-16</u>.

- Always loosen the appropriate spokes before tightening the other two. Reversing this procedure will cause the rim to become out-of-round.
- Tighten or loosen spokes one flat at a time and recheck measurement.
- Always work on groups that are opposite each other to maintain radial runout.
- 5. If the dimension is not correct, adjust the four spokes using SPOKE NIPPLE WRENCH (Part No. HD-94681-80). For example: if the **right** side is **less** than specification, **loosen** the two spokes on the hub **right** side. Then **tighten** the two spokes attached to the hub **left** side. Turn all four spokes an equal number of turns until offset is to specification.
- Repeat the previous step for all groups on the wheel. Verify the offset.
- True the wheel. See <u>2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels</u>.

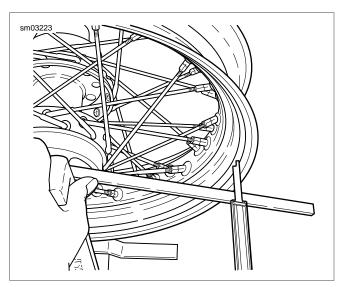


Figure 2-44. Checking Wheel Hub Offset Dimension (typical)

Table 2-16. Laced Wheel Hub Offset Dimensions

RIM		DIMENSION A		
TYPE	NO.*	SIZE	in	mm
Rear	1	16	1.472-1.492	37.39-37.90
Front	2	16	1.139-1.163	28.94-29.55
	3	21	0.837-0.857	18.14-18.90
* See Figu	ıre 2-45.			

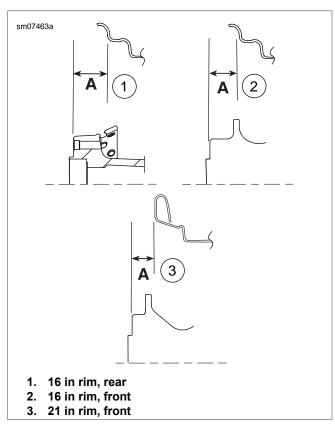


Figure 2-45. Laced Wheel Hub Offset Dimensions

### TRUING LACED WHEELS

PART NUMBER	TOOL NAME
HD-48985	SPOKE TORQUE WRENCH
HD-94681-80	SPOKE NIPPLE WRENCH
HD-99500-80	WHEEL TRUING STAND

FASTENER	TORQUE	VALUE
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm

#### NOTES

- Dial indicators are more accurate than gauge rods.
- Radial truing should be performed before lateral truing.

### **Radial Runout**

- See <u>Figure 2-46</u>. With the wheel mounted in WHEEL TRUING STAND (Part No. HD-99500-80), adjust the truing stand gauge (3) near to the rim's tire bead safety hump (4). If using a dial indicator, place the tip on the safety bead hump.
- 2. If working with a straight flange hub, seat each spoke head in the hub flange using a flat nose punch and mallet.

#### **NOTES**

- Always loosen the appropriate spokes, using SPOKE NIPPLE WRENCH (Part No. HD-94681-80), before tightening the other two. Reversing this procedure will cause the rim to become out of round.
- Tighten or loosen spoke, one flat at a time, and recheck measurement. Small changes in the spokes can make large changes in the runout.
- Always work on groups that are opposite each other to maintain radial runout.
- 3. Spin the rim slowly and check distance (2). The rim should be true within 0.030 in (0.76 mm).
  - a. If the rim contacts the gauge on or near a marked group of spokes, loosen the spokes in the group on the opposite side of the rim. Then tighten the spokes in the group where the rim makes contact an equal number of turns.
  - b. If the rim contacts the gauge between two marked groups, loosen the spokes in both groups on the opposite side of the rim. Then tighten the spoke groups on the side of the rim that makes contact an equal number of turns.
- 4. When the wheel is centered and trued, start at the valve stem hole and tighten any loose spoke nipples one turn at a time until they are snug.
- 5. Working alternately across the wheel, use SPOKE TORQUE WRENCH (Part No. HD-48985) evenly tighten all spokes to specification listed in <u>Table 2-17</u>.
- If working with a straight flange hub, verify each spoke head is seated in the hub flange using a flat nose punch and mallet.
- 7. Verify radial runout is still within specification.

8. After you have verified that radial runout is still within specification, proceed to lateral runout.

# **A**WARNING

Spokes that are too tight can draw nipples through the rim or distort hub flanges. Spokes that are too loose can continue to loosen when put in service. Either condition can adversely affect stability and handling, which could result in death or serious injury. (00286a)

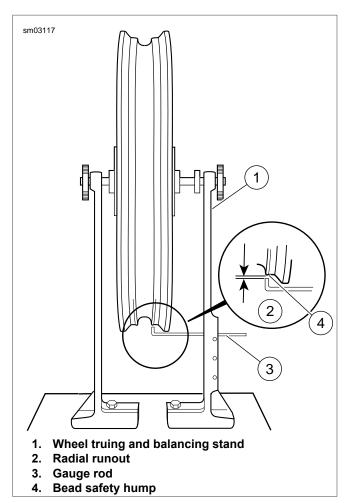


Figure 2-46. Checking Radial Runout

**Table 2-17. Spoke Nipple Torque Specification** 

RIM TYPE	MINIMUM TORQUE	
All	55 <b>in-lbs</b> (6.2 Nm)	

### **Lateral Runout**

### NOTE

Dial indicators are more accurate than gauge rods.

- See <u>Figure 2-47</u>. With the wheel mounted in WHEEL TRUING STAND (Part No. HD-99500-80), adjust the gauge rod (3) near the rim bead flange.
- 2. Rotate the rim slowly and check lateral runout (2). If runout exceeds 0.030 in (0.76 mm), adjust spokes as follows.

#### **NOTES**

- Always loosen the appropriate spokes before tightening the other two. Reversing this procedure will cause the rim to become out of round.
- Tighten or loosen spoke, one flat at a time, and recheck measurement. Small changes in the spokes can make large changes in the runout.
- Again working in groups of four, loosen two spokes on the tight side and tighten the two spokes on the loose side.
- 4. Repeat with each group until wheel is within specification.
- Verify all spoke nipples are tightened to the specification.
   Refer to <u>Table 2-17</u>.
- 6. If the tire is removed from the rim, file or grind off ends of spokes that protrude through the nipples to prevent puncturing tube or rim seal when tire is mounted.

### NOTE

After installation, verify the wheel is approximately centered between the fork fender bosses.

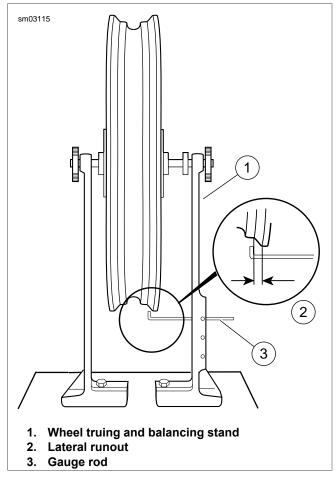


Figure 2-47. Checking Lateral Runout

# FRONT BRAKE MASTER CYLINDER

### **GENERAL**

The front brake master cylinder designed for dual disc (two caliper) operation has a larger bore than the master cylinder designed for single disc (one caliper) operation.

See <u>Figure 2-48</u>. The bore size is cast into the side of the master cylinder body facing the handlebar.

- The single disc master cylinder has "11" (11 mm) cast into the body.
- The dual disc master cylinder has "1/2" (1/2 in) cast into the body.

#### NOTE

Use only CCI #20 BRAKE GREASE to lubricate master cylinder bores, pistons, primary cups and secondary cups. Use only KS62F assembly grease on caliper pistons and piston seals. Use only G40M BRAKE GREASE on the caliper pins and boots, brake lever pivot hole, and the end of the piston that contacts the brake lever.

# **A**WARNING

Do not use parts from single caliper repair kits (9/16 inch bore) on dual caliper models. Likewise, do not use parts from dual caliper repair kits (11/16 inch bore) on single caliper models. Using incorrect parts can cause brake failure, which could result in death or serious injury. (00278a)

### NOTICE

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 BRAKE FLUID contacts painted surfaces, IMMEDI-ATELY flush area with clear water.

### INSPECTION

- Check the fluid level in the front brake reservoir. If it is low, refill and bleed brake system. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.
- Check for fluid leaks in the brake line, around banjo fittings or front brake caliper pistons or bleeder valve. Repair and bleed brake system.
  - a. For brake line replacement procedure, see
     2.16 BRAKE LINES.
  - b. To repair front brake caliper, see procedure in 2.9 FRONT BRAKE CALIPER: XL MODELS or 2.10 FRONT BRAKE CALIPER: XR 1200X.
  - See <u>2.17 BLEEDING BRAKES</u> for hydraulic brake system bleeding procedure.

- Check front brake friction pads and disc(s) for excessive wear or damage. Replace if necessary.
  - a. See <u>1.16 BRAKE PADS AND DISCS: XL MODELS</u> or <u>1.17 BRAKE PADS AND DISCS: XR 1200X</u> for specifications and brake pad replacement procedure.
  - See <u>2.5 WHEELS</u> for brake disc replacement procedure.
- Eliminate any air in the hydraulic brake assembly by bleeding the system. See <u>2.17 BLEEDING BRAKES</u>.

If none of these conditions exist but the front brake system does not operate properly, the front brake master cylinder is defective. Repair or replace if necessary.

### **REMOVAL**

- See <u>Figure 2-49</u>. Loosen turn signal clamp screw (3) and remove turn signal assembly (5) from front brake master cylinder housing (1).
- Remove locknut, washer (4) and mirror (2) from master cylinder housing.


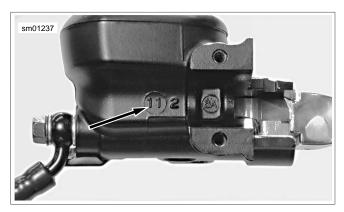


Figure 2-48. Verifying Front Brake Master Cylinder Bore Size (single disc master cylinder)

2013 Sportster Service: Chassis 2-37

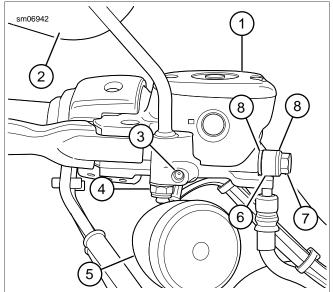

- 1. Front brake master cylinder and reservoir
- 3. Turn signal clamp screw
- 4. Locknut and washer
- 5. Turn signal assembly
- 6. Front brake banjo fitting
- 7. Banjo bolt
- 8. Sealing washer

Figure 2-49. Front Brake Master Cylinder (typical)


# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

- See Figure 2-50 and Figure 2-51. Drain brake fluid:
  - Remove bleeder nipple cap (2) from bleeder valve (3) on front brake caliper (1).
  - Install a length of 5/16 in (7.9 mm) ID clear plastic tubing over caliper bleeder valve (3). Place free end in a suitable container.
  - Open bleeder valve about 1/2 turn.
  - Pump brake hand lever several times to drain brake fluid.
  - Close bleeder valve.

### NOTE

Dispose of brake fluid in accordance with local regulations.

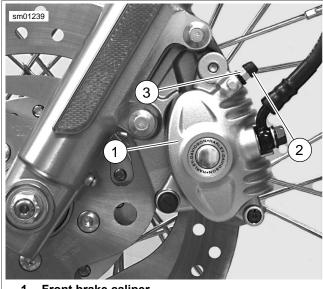

- 1. Front brake caliper
- 2. Bleeder nipple cap
- Bleeder valve

Figure 2-50. Front Caliper Bleeder Valve (typical)

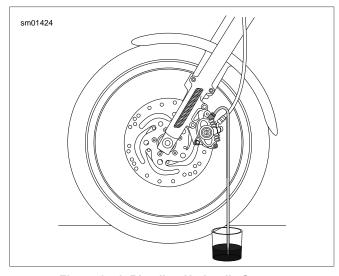


Figure 2-51. Bleeding Hydraulic System

- See Figure 2-49. Remove banjo bolt (7) and two washers (8) to disconnect front brake line banjo fitting (6) from master cylinder (1). Discard washers.
- See Figure 2-52. Squeeze front brake lever and place a 5/32 in (4 mm) thick cardboard insert between brake lever and lever bracket. Release brake lever.



Figure 2-52. Install Cardboard Insert Before Removing Master Cylinder Assembly

#### **NOTICE**

Do not remove or install the master cylinder assembly without first positioning a 5/32-inch (4 mm) thick insert between the brake lever and lever bracket. Removing or installing the master cylinder assembly without the insert in place may result in damage to the rubber boot and plunger on the front stoplight switch. (00324a)

#### NOTE

Use the eyelet of an ordinary cable strap if the cardboard insert is not available.

6. See Figure 2-53. Remove the two screws (6) and washers (7) securing the handlebar clamp (8) to the master cylinder housing (5). Remove the brake lever/master cylinder assembly and clamp from the handlebar.

### **DISASSEMBLY**

# **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- See <u>Figure 2-53</u>. Remove retaining ring (17) from pivot pin (9) groove at bottom of master cylinder bracket. Discard retaining ring.
- Remove pivot pin and brake hand lever (18) from master cylinder assembly.
- 3. Remove and discard dust boot (16).

#### NOTE

See <u>Figure 2-54</u>. Clamp front brake master cylinder in a vise by the mirror mounting boss only. Use brass or aluminum jaw covers or other protective device on vise jaws to prevent damage to master cylinder.

4. See <u>Figure 2-54</u>. Clamp master cylinder in a vise so that banjo fitting hole is pointing straight down.

# **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- 5. See <u>Figure 2-53</u>. Press down on end of piston and remove retaining ring (15). Discard retaining ring.
- 6. Single disc piston assembly: remove stop plate (22).
- Remove and discard piston assembly (12, 13, 14) and piston spring (11).

### NOTES

- See <u>Figure 2-53</u>. Both primary (12) and secondary (13) cups are fitted into grooves in the piston body (14). The piston spring (11) fits onto the end of the piston.
- Always clean the cover before removal. This prevents dirt and other contaminants from entering the master cylinder reservoir.
- 8. Remove two screws (1), cover (2), diaphragm plate (3) and diaphragm (4) from the master cylinder reservoir.

2013 Sportster Service: Chassis 2-39

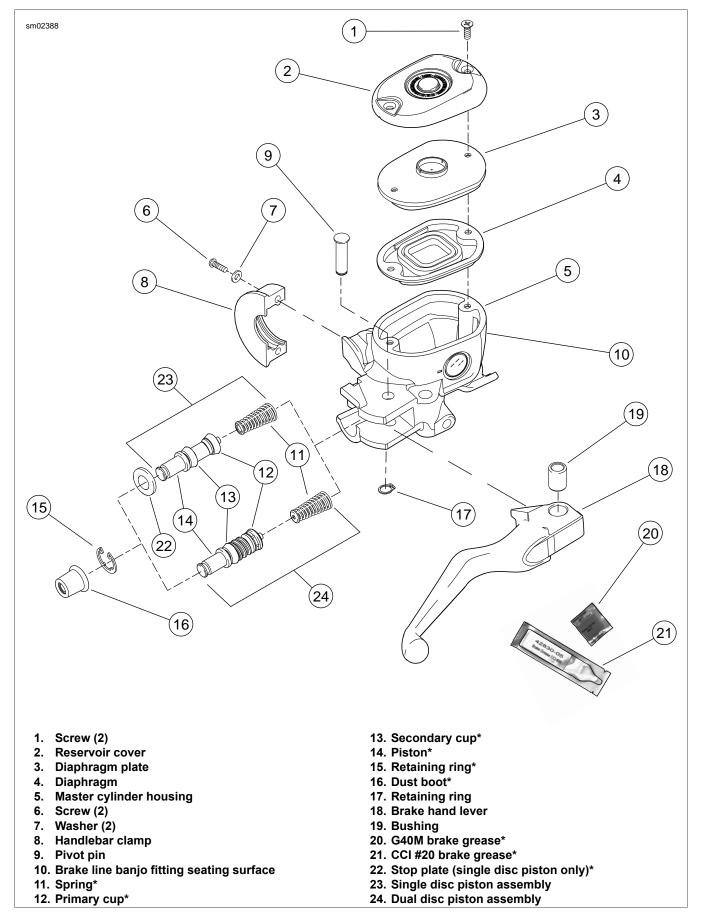


Figure 2-53. Front Brake Master Cylinder Assembly (\*Provided in Service Parts Kit)

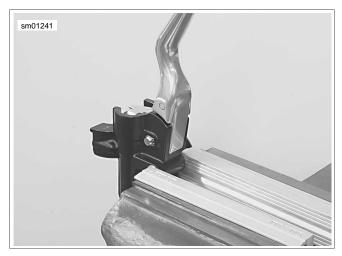


Figure 2-54. Clamping Front Master Cylinder

### **CLEANING, INSPECTION AND REPAIR**

### **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

#### NOTE

Do not use a wire or similar instrument to clean drilled passages in bottom of reservoir.

- Clean brake system components with denatured alcohol.
   Do not contaminate with mineral oil or other solvents.
  - a. Wipe dry with a clean, lint free cloth.
  - Blow out drilled passages and piston bore with low pressure compressed air from a clean air supply.

### **AWARNING**

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

- Carefully inspect all parts for wear or damage. Replace as necessary.
  - a. Inspect the piston bore in the master cylinder housing for scoring, pitting or corrosion.
  - b. Inspect the outlet port that mates with the brake line banjo fitting. This is a critical sealing surface.
  - c. Inspect diaphragm for damage.


### **ASSEMBLY**

# **AWARNING**

Do not use parts from single caliper repair kits (9/16 inch bore) on dual caliper models. Likewise, do not use parts from dual caliper repair kits (11/16 inch bore) on single caliper models. Using incorrect parts can cause brake failure, which could result in death or serious injury. (00278a)

#### NOTES

- Always reassemble the master cylinder using new parts from the correct service repair kit.
- CCI #20 BRAKE GREASE is recommended for lubrication of cylinder bore, cups and seals prior to assembly.
- See <u>Figure 2-54</u>. Clamp front brake master cylinder in a vise by the mirror mounting boss only. Use brass or aluminum jaw covers or other protective device on vise jaws to prevent damage to master cylinder.
- 1. See <u>Figure 2-54</u>. Clamp master cylinder in a vise so that banjo fitting hole is pointing straight down.
- See <u>Figure 2-53</u>. Coat piston bore of master cylinder housing (5), piston (14), primary cup (12) and secondary cup (13) with CCI #20 BRAKE GREASE (21) supplied in the service parts kit.
- See <u>Figure 2-55</u>. Install piston assembly into master cylinder.
  - a. Press small end of piston spring (4) onto mounting boss (6) on piston (1).
  - Slide piston/spring assembly, flared end of spring first, into master cylinder bore so that spring seats against counter bore (recess) at bottom of cylinder.
  - Single disc piston: Slide stop plate (7) down over end of piston.

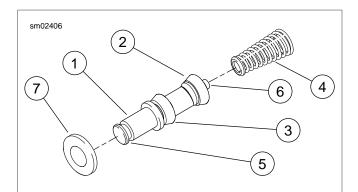

- 1. Piston
- 2. Primary cup
- 3. Secondary cup
- 4. Piston spring
- 5. Dust boot groove
- 6. Piston spring mounting boss
- 7. Stop plate (single disc piston only)

Figure 2-55. Front Brake Master Cylinder Piston (Typical-Single Disc Piston Shown)

# **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- 4. See Figure 2-53.
  - a. Dual disc master cylinder: Press down on piston (14) and install new retaining ring (15). Verify that retaining ring is fully seated in groove.
  - Single disc master cylinder: Press down on piston (14) and stop plate (22), and install new retaining ring (15). Verify that retaining ring is fully seated in groove.
- Install new dust boot (16). Large lip of dust boot fits down inside end of piston bore. Small lip of dust boot fits into groove in end of piston (item 5, <u>Figure 2-55</u>).
- 6. Apply approximately 0.1 g G40M BRAKE GREASE (from service parts kit) to each of the following two locations:
  - a. Pivot hole in brake hand lever (18).
  - b. End of piston (14).
- Align hole in brake hand lever with hole in master cylinder bracket. From top of assembly, slide pivot pin (9) through bracket and hand lever.

# **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- 8. Install **new** retaining ring (17) in pivot pin groove. Verify that retaining ring is fully seated in groove.
- Remove master cylinder assembly from vise. Install cover (2), diaphragm plate (3) and diaphragm (4) on master cylinder reservoir. Install two screws (1) to fasten cover to reservoir, but do not tighten at this time.
- See <u>Figure 2-56</u>. Squeeze front brake lever and place a 5/32 in (4 mm) thick cardboard insert between brake lever and lever bracket. Release brake lever.



Figure 2-56. Install 5/32 in (4 mm) Cardboard Insert Before Installing Master Cylinder Assembly


### **INSTALLATION**

FASTENER	TORQUE VALUE	
Brake master cylinder clamp, front, screw	108-132 in-lbs	12.2-14.9 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Mirror stem locknut	96-144 in-lbs	10.9-16.3 Nm
Cylinder head exhaust port nut	96-120 <b>in-lbs</b>	10.9-13.6 Nm

#### **NOTICE**

Do not remove or install the master cylinder assembly without first positioning a 5/32-inch (4 mm) thick insert between the brake lever and lever bracket. Removing or installing the master cylinder assembly without the insert in place may result in damage to the rubber boot and plunger on the front stoplight switch. (00324a)

- See <u>Figure 2-57</u>. Position brake lever/master cylinder assembly inboard of switch housing assembly (1). Engage tab (5) on lower switch housing in slot (4) at top of brake lever bracket (3).
- See <u>Figure 2-53</u>. Align holes in handlebar clamp (8) with master cylinder housing (5). Start two screws (6) with washers (7). Beginning with top screw, tighten to 108-132 in-lbs (12.2-14.9 Nm).

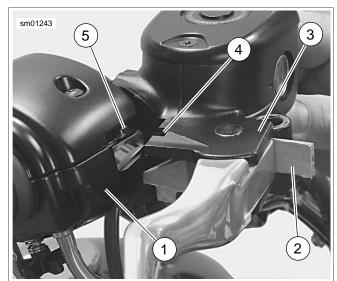

- 1. Switch housing assembly
- 2. 5/32 in (4 mm) cardboard insert
- 3. Brake lever bracket
- 4. Slot
- 5. Tab

Figure 2-57. Fitting Brake Lever/Master Cylinder To Right Handlebar Switch Housing

#### NOTICE

Avoid leakage. Be sure gaskets, banjo bolt(s), brake line and master cylinder bore are clean and undamaged before assembly. (00322a)

### NOTE

See <u>Figure 2-58</u>. The master cylinder housing positive stops for banjo fittings are different on XL Models and the XR 1200X. Never intermix model components. When tightening the banjo bolt, verify that the banjo fitting is correctly oriented and contacts the positive stop.

See <u>Figure 2-59</u>. Position a **new** washer (8) on each side of hydraulic brake line banjo fitting (6). Insert banjo bolt (7) through washers and fitting. Thread bolt into master cylinder housing. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).


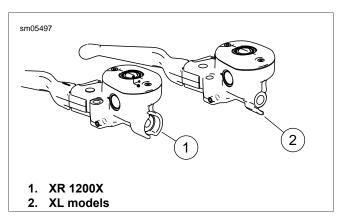


Figure 2-58. Front Brake Master Cylinder Identification

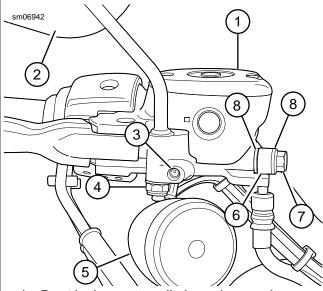

- 1. Front brake master cylinder and reservoir
- 2. Mirro
- 3. Turn signal clamp screw
- 4. Locknut and washer
- 5. Turn signal assembly
- 6. Front brake banjo fitting
- 7. Banjo bolt
- 8. Sealing washer

Figure 2-59. Front Brake Master Cylinder (typical)

 See <u>Figure 2-53</u>. Position motorcycle so that top of master cylinder reservoir is level. Remove two screws (1), front master cylinder reservoir cover (2), diaphragm plate (3) and diaphragm (4).

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTES

- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Cover handlebar switches with a shop towel before adding brake fluid to front master cylinder reservoir. Spilling brake fluid on handlebar switches may render them inoperative.
- See <u>Figure 2-60</u>. Do not use sight glass (2) to determine maximum fluid level. Sight glass should only be used as a visual indicator that fluid level is low and needs attention.

- A ridge (1) is cast into the inside of the reservoir to help determine the correct maximum fluid level.
- Fill master cylinder only with DOT 4 BRAKE FLUID from a sealed container.
- Do not overfill reservoir. Do not reuse old brake fluid.
- See <u>Figure 2-60</u>. Add enough DOT 4 BRAKE FLUID to reservoir to bring fluid level even with ridge (1) cast into inside of reservoir, about 1/4 in (6.35 mm) below top edge.



Figure 2-60. Filling Front Master Cylinder Reservoir

# **A**WARNING

A plugged or covered relief port can cause brake drag or lock-up, which could lead to loss of control, resulting in death or serious injury. (00288a)

 Verify proper operation of master cylinder relief port. Slowly actuate brake hand lever with reservoir cover removed. A slight spurt of fluid will break fluid surface in reservoir

- compartment if all internal components are working properly.
- 7. Bleed brake system. See 2.17 BLEEDING BRAKES.

#### NOTE

On dual caliper models, bleed both calipers.

### **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

8. See <u>Figure 2-59</u>. Install mirror (2), secure with locknut and washer (4). Position mirror for rearward visibility. Tighten locknut to 96-144 **in-lbs** (10.9-16.3 Nm).

#### NOTE

**XL 1200X:** Install mirror upside down. Check clearance between mirrors and gas tank while turning handlebar lock to lock.

- All Models except XL 1200X: Install turn signal assembly (5). Position so lens faces directly forward. Verify turn signal does not strike fuel tank when the handlebar is turned full right. Tighten clamp screw (3) to 96-120 in-lbs (10.9-13.6 Nm).
- 10. Verify operation of stop lamp.

### **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 11. Test brake system.
  - a. Test ride motorcycle at low speed. If brake feels spongy, repeat bleeding procedure.
  - Test ride the motorcycle. If the brakes feel spongy, bleed the system again. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.

# FRONT BRAKE CALIPER: XL MODELS

### REMOVAL

#### NOTE

If only replacing brake pads, do not remove front brake caliper(s). For brake pad replacement only, see <u>1.16 BRAKE PADS AND DISCS: XL MODELS</u>.

### A CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTE


If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

- 1. See Figure 2-61. Remove bleeder nipple cap (9) from bleeder valve (8) on front brake caliper (4).
- See Figure 2-62. Install end of a length of 5/16 in (7.9 mm)
   ID clear plastic tubing over caliper bleeder valve, while placing free end in a suitable container. Open bleeder valve about 1/2 turn. Pump brake hand lever repeatedly to drain brake fluid. Close bleeder valve.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- See <u>Figure 2-61</u>. Remove the banjo bolt (1) and both washers (2) to detach front brake line (3) from caliper (4). Discard washers.
- 4. Remove pad pin plug (7).
- See <u>Figure 2-63</u>. Loosen, but do not remove, brake pad pin.
- See <u>Figure 2-61</u>. Remove both mounting bolts (6) (12 pt/10 mm). Pull caliper and mounting bracket assembly rearward to disengage from brake disc.

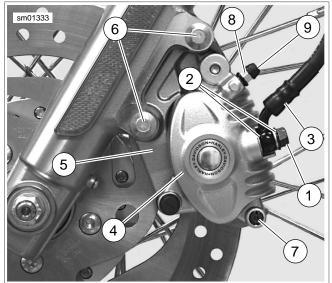

- 1. Banjo bolt
- 2. Washer (2)
- 3. Front brake line
- 4. Brake caliper
- 5. Caliper mounting bracket
- 6. Mounting bolt (2) (12 pt/10 mm)
- 7. Pad pin plug
- 8. Bleeder valve
- 9. Bleeder nipple cap

Figure 2-61. Front Caliper Assembly

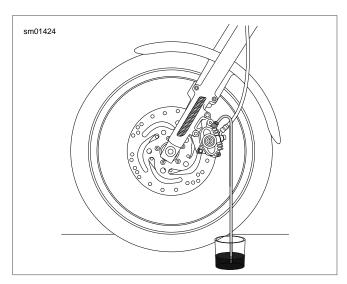


Figure 2-62. Bleeding Hydraulic System

2013 Sportster Service: Chassis 2-45

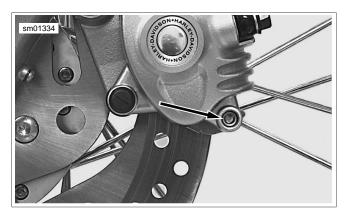


Figure 2-63. Brake Pad Pin (Plug Removed)

### **DISASSEMBLY**

- See <u>Figure 2-64</u>. Remove brake pad pin (14) and brake pads (8) from caliper body (15).
- 2. Slide brake caliper off mounting bracket (1).
- 3. Remove pad spring (16). Do not remove bleeder valve (10) at this time.
- 4. See Figure 2-65. Install a discarded brake pad in the caliper (1) with the backing plate (4) facing the pistons. Position the brake pad so the friction material (3) is against the back of the caliper, as shown.
- 5. Loosely install brake pad pin (2) to hold brake pad in place.

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

#### NOTE

Do not damage banjo bolt sealing surface or threads of banjo bolt hole in brake caliper. Use an air nozzle with a rubber tip.

# **A**CAUTION

When removing piston with compressed air, piston can develop considerable force and fly out of caliper bore. Keep hands away from piston to avoid possible injury. (00530b)

- 6. See <u>Figure 2-66</u>. Gently apply low pressure compressed air to banjo bolt hole (3) to force pistons from caliper bores.
- 7. Remove brake pad pin and brake pad.
- 8. See <u>Figure 2-64</u>. Remove both pistons (17) from caliper bores by hand. If necessary, wiggle pistons gently to completely remove.

#### NOTE

Damaged piston bores will leak when reassembled. Do not use metal objects to remove or install objects from piston bores. Prevent damage to pistons, seals and bores by only using a wooden toothpick when servicing calipers.

- See <u>Figure 2-67</u>. Using a wooden toothpick (1), remove dust seal (2) and piston seal (3) from each caliper bore. Discard seals.
- 10. See <u>Figure 2-64</u>. If necessary, remove bleeder valve (10).



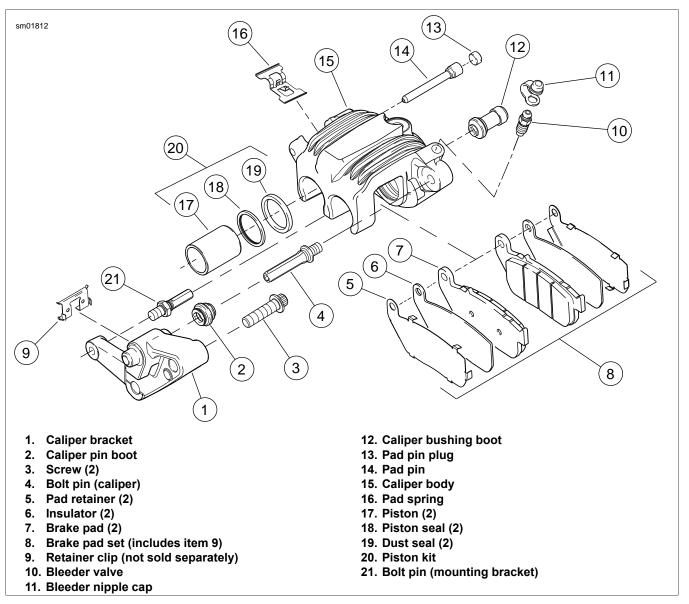


Figure 2-64. Front Brake Caliper Assembly

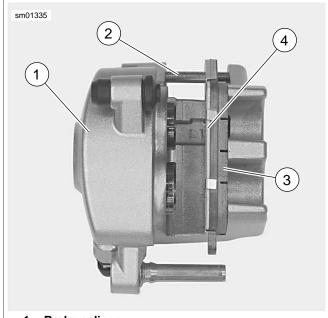

- 1. Brake caliper
- 2. Brake pad pin
- Brake pad friction material
- Brake pad backing plate

Figure 2-65. Preparing Caliper for Piston Removal

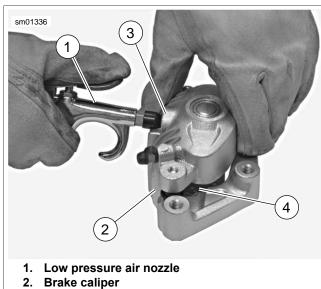

- Banjo bolt hole
- Brake pad

Figure 2-66. Removing Pistons

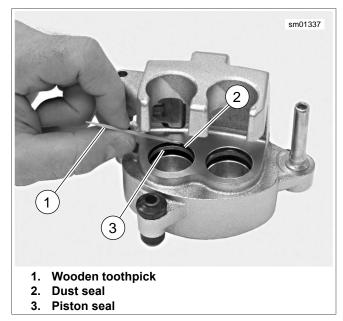


Figure 2-67. Caliper Seals

### **CLEANING, INSPECTION AND REPAIR**

# WARNING

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

- See Figure 2-64. Wipe old lubrication from inside of caliper pin boot (2) and caliper bushing boot (12) with a soft, clean
- Clean all other rubber parts with DOT 4 BRAKE FLUID. Do not contaminate with mineral oil or other solvents. Clean all metal parts with denatured alcohol. Wipe parts dry with a clean, lint-free cloth.

# **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Blow out drilled passages and piston bore with low pressure compressed air from a clean air supply. Do not use a wire or similar instrument to clean drilled passages.

- 4. Carefully inspect all components. Replace any parts that appear damaged or worn.
  - a. Check pistons (17) for pitting, scratching or corrosion on outside surfaces.
  - Inspect caliper piston bores. Do not hone bores. If bores show pitting or corrosion, replace caliper.
  - c. Inspect pad pin (14) for grooving and wear. Measure the pad pin diameter in an unworn area, and then in the area of any grooving or wear. If wear is more than 0.011 in (0.28 mm), replace pad pin.
  - d. Inspect caliper bolt pin (4). If damaged or excessively worn, replace brake caliper assembly.
  - Inspect caliper bushing boot and caliper pin boot. If worn or damaged, replace.
  - Always replace all seals after disassembly.

### **AWARNING**

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

- 5. Inspect brake pads and brake disc. Replace if necessary.
  - a. See <u>1.16 BRAKE PADS AND DISCS: XL MODELS</u> for specifications.
  - See <u>2.5 WHEELS</u> for brake disc replacement procedure.

### **ASSEMBLY**

FASTENER	TORQUE VALUE	
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm

#### NOTE

Use ONLY KS62F assembly grease for lubrication. Use of DOT 4 BRAKE FLUID will result in increased brake lever travel.

- Lubricate the following parts prior to assembly using a light coat of KS62F assembly grease from the service parts kit. All other surfaces must be dry for assembly.
  - a. Nose radius of pistons. See Figure 2-68.
  - b. All surfaces of piston seals and dust seals.

### NOTE

Damaged piston bores will leak when reassembled. Do not use metal objects to remove or install objects in piston bores. Prevent damage to bores by only using a wooden toothpick when servicing calipers.

- See <u>Figure 2-67</u>. Install a **new** piston seal (3) and a **new** dust seal (2) into each piston bore.
- 3. See Figure 2-68. Carefully insert pistons by hand, nose radius first, into caliper bores. If installation shows resistance, remove piston(s) and check that seals are properly installed and fully seated in grooves.
- See <u>Figure 2-64</u>. Install bleeder valve (10) on caliper housing if removed. Tighten bleeder valve to 35-61 in-lbs (4.0-6.9 Nm).

See <u>Figure 2-69</u>. Install pad spring in channel. Press firmly into place.



Figure 2-68. Piston Nose Radius


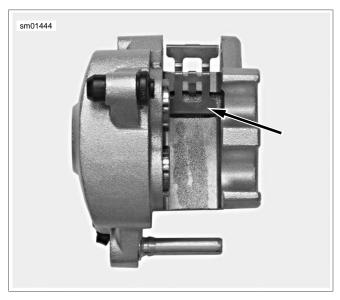


Figure 2-69. Front Caliper Pad Spring


# LUBRICATING FRONT CALIPER BOLT PINS AND BOOTS

- See <u>Figure 2-70</u>. Apply approximately 0.4 g of G40M BRAKE GREASE inside caliper bushing boot (3) and caliper pin boot (4).
- 2. See Figure 2-71. Apply G40M BRAKE GREASE inside boot lip (8) to prevent sticking between boots (3, 4) and bolt pins (5, 6).
- 3. Assemble brake caliper and mounting bracket, carefully sliding bolt pins into boots. Slide brake caliper all the way onto mounting bracket until boot lips fit over tapered shoulders (7) of bolt pins.

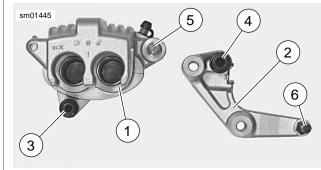

- 1. Front brake caliper
- 2. Caliper mounting bracket
- 3. Caliper bushing boot
- 4. Caliper pin boot
- 5. Caliper bolt pin
- 6. Bracket bolt pin

Figure 2-70. Lubricating Caliper Boots and Pins

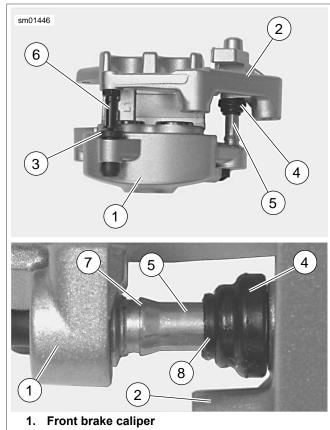

- 2. Caliper mounting bracket
- 3. Caliper bushing boot
- 4. Caliper pin boot
- 5. Caliper bolt pin
- 6. Bracket bolt pin
- 7. Tapered shoulder
- 8. Boot lip

Figure 2-71. Assembling Front Brake Caliper and Mounting Bracket

### **INSTALLING BRAKE PADS IN CALIPER**

FASTENER	TORQUE VALUE	
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm

### NOTE


Rear brake pads cannot be used on front brake calipers.

- See <u>Figure 2-72</u>. Insert one set of brake pads (1) into caliper with friction material on pad facing opening for brake disc. Curved portion of pad fits into recessed area of caliper. Make sure brake pad front mounting tab (2) fits into slot (5) in caliper mounting bracket (4).
- See <u>Figure 2-64</u>. Press brake pads (8) tightly up against pad spring (16) and install pad pin (14). Tighten to 131-173 in-lbs (14.8-19.6 Nm).

#### NOTE

If pad pin does not fit, check the following:

- You are using a set of pads, not two identical pads.
- Pad spring orientation must match <u>Figure 2-69</u>.
- See <u>Figure 2-72</u>. Pad front mounting tabs (2) must be fully seated in mounting bracket slot (5).
- Pads must be pushed tight up against pad spring before pad pin is installed.
- 3. See <u>Figure 2-64</u>. Install pad pin plug (13). Tighten to 18-25 **in-lbs** (2.0-2.9 Nm).

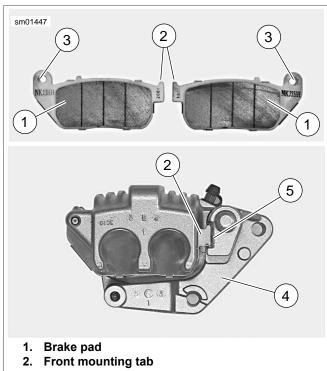

- 3. Pad pin hole
- 4. Front caliper mounting bracket
- 5. Slot

Figure 2-72. Front Brake Pads

### **INSTALLATION**

FASTENER	TORQUE VALUE	
Axle, front, nut	60-65 ft-lbs	81-88 Nm
Axle, front, pinch screw: XL Models	21-27 ft-lbs	28.5-36.6 Nm
Brake caliper, front, mounting bolt	28-38 ft-lbs	38.0-51.6 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Brake master cylinder, front, reservoir cover screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

- 1. **Dual Caliper Models:** Align calipers to brake discs.
  - a. Tighten axle nut to 60-65 ft-lbs (81-88 Nm).
  - b. Loosen axle pinch screw nut.
  - c. Position right fork leg against bearing spacer. Tighten axle pinch screw to 21-27 ft-lbs (28.5-36.6 Nm).
- 2. See Figure 2-73. Place brake caliper (4) with mounting bracket (5) over brake disc with bleeder valve (8) facing upwards. Install mounting bolts (6) into mounting holes on fork leg. Tighten to 28-38 ft-lbs (38.0-51.6 Nm).

### NOTICE

Avoid leakage. Be sure gaskets, banjo bolt(s), brake line and caliper bore are clean and undamaged before assembly. (00321a)

### NOTE

Brake caliper housing has a positive stop for banjo fitting. When tightening banjo bolt into brake caliper in the next step, rotate banjo fitting clockwise until it contacts positive stop.

 Position a **new** washer (2) on each side of hydraulic brake line (3) banjo fitting. Insert banjo bolt (1) through washers and fitting. Thread bolt into caliper housing. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).

- 4. **Dual Caliper Models:** Repeat previous two steps for other brake caliper.
- 5. Remove cover screws, top cover and gasket from front brake master cylinder reservoir.

#### NOTES

- See <u>Figure 2-74</u>. Do not use sight glass to determine maximum fluid level. Sight glass should only be used as a visual indicator that fluid level is low and needs attention.
- Cover handlebar switches with a shop towel before adding brake fluid to front master cylinder reservoir. Spilling brake fluid on handlebar switches may render them inoperative.
- Use only DOT 4 BRAKE FLUID from a sealed container.
- Do not overfill reservoir. Do not reuse old brake fluid.
- 6. See <u>Figure 2-74</u>. Add enough DOT 4 BRAKE FLUID to reservoir to bring fluid level even with ridge cast into inside of reservoir, about 1/4 in (6.35 mm) below top edge.

### **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

7. Bleed brake system. See 2.17 BLEEDING BRAKES.

#### NOTE

On dual caliper models, bleed both calipers.

# **A**WARNING

A plugged or covered relief port can cause brake drag or lock-up, which could lead to loss of control, resulting in death or serious injury. (00288a)

- Verify proper operation of master cylinder relief port. Turn handlebar to level reservoir. Squeeze brake lever slowly with reservoir cover removed. A slight spurt of fluid will break the surface if all internal components are working properly.
- 9. See Figure 2-74. Add enough DOT 4 BRAKE FLUID to reservoir to bring fluid level even with ridge cast into inside of reservoir, about 1/4 in (6.35 mm) below top edge.
- 10. Install gasket and cover on master cylinder with screws. Tighten to 9-17 **in-lbs** (1.0-2.0 Nm).


### WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 11. Test brake system.
  - a. Turn ignition switch ON. Squeeze brake hand lever to verify operation of the stop lamp.
  - Test ride the motorcycle. If the brakes feel spongy, bleed the system again. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.

### NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.

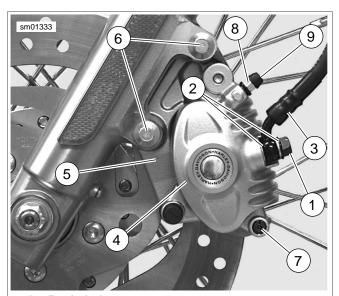

- 1. Banjo bolt
- 2. Washer (2)
- 3. Front brake line
- 4. Brake caliper
- 5. Caliper mounting bracket
- 6. Mounting bolt (2) (12 pt/10 mm)
- 7. Pad pin plug
- 8. Bleeder valve
- 9. Bleeder nipple cap

Figure 2-73. Front Caliper Assembly



Figure 2-74. Filling Front Master Cylinder Reservoir

# FRONT BRAKE CALIPER: XR 1200X

### REMOVAL

#### NOTE

Do not remove front brake calipers if only replacing brake pads See 1.17 BRAKE PADS AND DISCS: XR 1200X.

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

- 1. See <u>Figure 2-75</u>. Remove bleeder nipple cap from bleeder valve (1) on front brake caliper.
- See Figure 2-76. Install end of a length of 5/16 in (7.9 mm)
   ID clear plastic tubing over caliper bleeder valve, while
   placing free end in a suitable container. Open bleeder
   valve about 1/2 turn. Pump brake hand lever repeatedly
   to drain brake fluid. Close bleeder valve.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- 3. See <u>Figure 2-75</u>. Remove the banjo bolt (2) (metric) and both washers (3) to detach front brake line from caliper. Discard washers.
- 4. Remove both mounting bolts (4) (metric). Pull caliper assembly rearward to remove from brake disc.

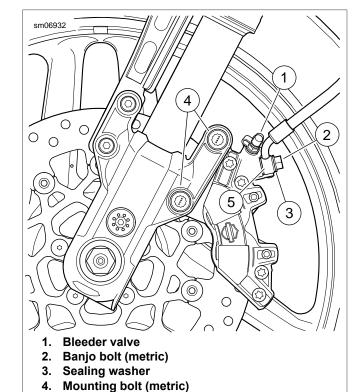


Figure 2-75. Front Caliper Assembly: XR 1200X

5.

Banjo fitting

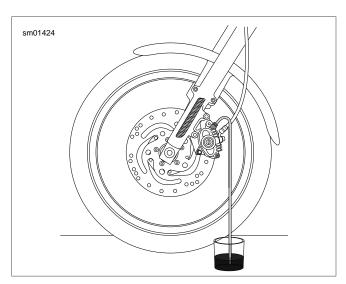


Figure 2-76. Bleeding Hydraulic System

2013 Sportster Service: Chassis 2-53

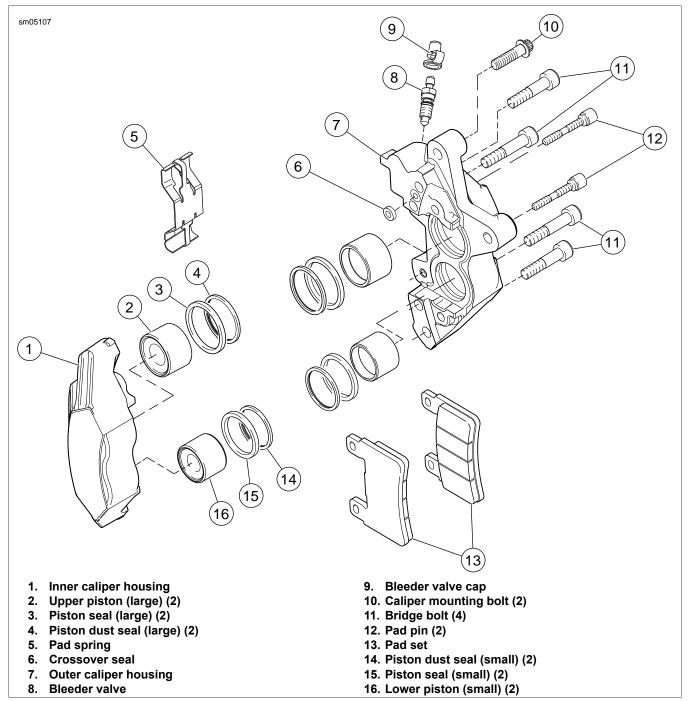


Figure 2-77. Front Brake Caliper Assembly

### **DISASSEMBLY**

- 1. See <u>Figure 2-78</u>. Remove brake pad pins (1) and antirattle spring (2).
- 2. Slide one brake pad out of caliper assembly. Do not remove bleeder valve (3) at this time.
- 3. With one brake pad in the caliper, loosely install brake pad pins (1) to hold brake pad in place.

### WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

### NOTE

Do not damage banjo bolt sealing surface or threads of banjo bolt hole in brake caliper. Use an air nozzle with a rubber tip.

# **A**CAUTION


When removing piston with compressed air, piston can develop considerable force and fly out of caliper bore. Keep hands away from piston to avoid possible injury. (00530b)

- 4. See Figure 2-78. Gently apply low pressure compressed air to banjo bolt hole (4) to force pistons from caliper bores.
- Remove brake pad pins and brake pad.
- Remove bridge bolts (5, 6) and separate caliper housings.
- Remove pistons from each housing by hand. If necessary, wiggle pistons gently to completely remove.

#### NOTE


Damaged piston bores will leak when reassembled. Do not use metal objects to remove or install objects from piston bores. Prevent damage to pistons, seals and bores by only using a wooden toothpick when servicing calipers.

- 8. See Figure 2-79. Using a wooden toothpick (1), remove dust seal (2) and piston seal (3) from each caliper bore. Discard seals.
- See Figure 2-78. If necessary, remove bleeder valve (3).

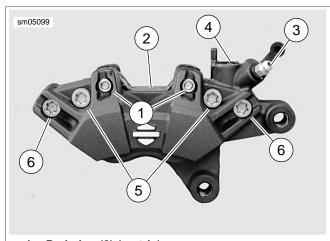

- 1. Pad pins (2) (metric)
- 2. Spring
- 3. Bleeder valve
- 4. Banio bolt hole
- 5. Bridge bolt, long (2)
- Bridge bolt, short (2)

Figure 2-78. Preparing Caliper for Piston Removal

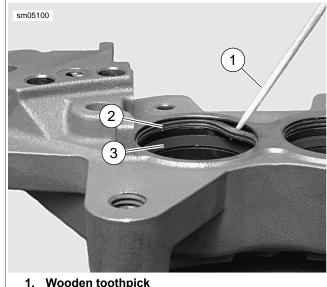

- 1. Wooden toothpick
- **Dust seal**
- Piston seal

Figure 2-79. Caliper Seals

### **CLEANING, INSPECTION AND REPAIR**

# **AWARNING**

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

Clean all rubber parts with DOT 4 BRAKE FLUID. Do not contaminate with mineral oil or other solvents. Clean all metal parts with denatured alcohol. Wipe parts dry with a clean, lint-free cloth.

### WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- 2. Blow out drilled passages and piston bore with low pressure compressed air from a clean air supply. Do not use a wire or similar instrument to clean drilled passages.
- 3. Carefully inspect all components. Replace as necessary.
  - Check pistons for pitting, scratches or corrosion on outside surfaces.
  - Inspect piston bores. Do not hone bores. Replace as necessary.

### NOTE

The pad pins are manufactured with a relief near the center of their length, where the pad spring touches. Do not use

this area as a measurement point to determine pad pin wear.

- c. Inspect pad pin for grooving and wear at the pad contact points. Measure the pad pin diameter in an unworn area and in an area of any grooving or wear. If wear exceeds 0.011 in (0.28 mm), replace pad pin.
- Inspect pad spring for wear or cracks. Replace if necessary.
- e. Always replace all seals after disassembly.

# **A**WARNING

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

- 4. Inspect brake pads and brake disc. Replace if necessary.
  - a. Specifications: See <u>1.17 BRAKE PADS AND DISCS:</u> XR 1200X.
  - b. Brake Disc: See 2.5 WHEELS.

### **ASSEMBLY**

FASTENER	TORQUE VALUE	
Brake caliper, front, bridge bolt	12-18 ft-lbs	16.9-24.5 Nm
Brake pad pin	131-173 <b>in-lbs</b>	14.8-19.6 Nm
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm

- Lubricate the following parts using a light coat of G40M BRAKE GREASE. All other surfaces must be dry.
  - a. Nose radius of pistons.
  - b. All surfaces of piston seals and dust seals.

### NOTES

- Damaged piston bores will leak when reassembled. Do not use metal objects to remove or install objects in piston bores. Prevent damage to bores by only using a wooden toothpick when servicing calipers.
- Pistons and bores differ slightly in diameter: one large and one small in each housing.
- See <u>Figure 2-79</u>. Install a **new** piston seal (3) and a **new** dust seal (2) into each piston bore.
- See <u>Figure 2-80</u>. Carefully insert pistons (2, 3) by hand, nose radius first, into caliper bores. If installation shows resistance, remove piston(s) and check that seals are properly installed and fully seated in grooves. Press pistons completely into bores.
- 4. Install **new** crossover seal (1).
- See <u>Figure 2-78</u>. Install bridge bolts (5, 6).
  - Apply a drop of LOCTITE 569 THREAD SEALANT to the threads of the bridge bolts.
  - Assemble caliper housings and secure with bridge bolts. Verify the bridge bolts are in the correct locations based on length.
  - c. Tighten bridge bolts to 12-18 ft-lbs (16.9-24.5 Nm).

- 6. See Figure 2-81. Install brake pads and pad spring. Verify the spring is oriented as shown with the arrow and word "UP" (2) facing the banjo bolt hole (1). Secure with pad pins (3).
- 7. Tighten pad pins to 131-173 in-lbs (14.8-19.6 Nm).
- 8. Install bleeder valve on caliper housing if removed. Tighten bleeder valve to 35-61 **in-lbs** (4.0-6.9 Nm).


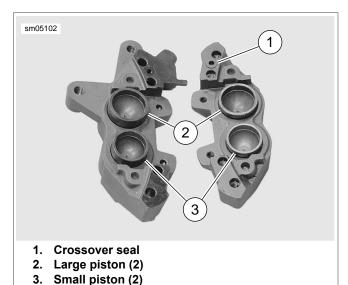


Figure 2-80. Caliper Housings and Pistons

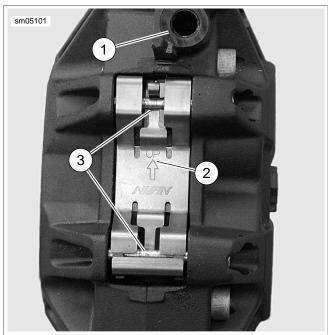

- 1. Banjo bolt hole
- 2. Arrow and word "UP"
- 3. Pad pins (2)

Figure 2-81. Front Caliper Pad Spring Orientation

NOTE

Bleed both calipers.

FASTENER	TORQUE VALUE	
Axle, front, nut	60-65 ft-lbs	81-88 Nm
Axle, front, pinch screw: XR 1200X	41-48 ft-lbs	55.6-65.1 Nm
Brake caliper, front, mounting bolt	28-38 ft-lbs	38.0-51.6 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTE

If DOT 4 BRAKE FLUID contacts painted surfaces, IMMEDIATELY flush area with clear water.

- 1. Align calipers to brake discs.
  - a. Tighten axle nut to 60-65 ft-lbs (81-88 Nm).
  - b. Loosen axle pinch screw nut.
  - Position right fork leg against bearing spacer. Tighten axle pinch screw to 41-48 ft-lbs (55.6-65.1 Nm).
- 2. See <u>Figure 2-82</u>. Place brake caliper over brake disc with bleeder valve (1) facing upwards. Install mounting bolts (4) and tighten to 28-38 ft-lbs (38.0-51.6 Nm).

#### **NOTICE**

Avoid leakage. Be sure gaskets, banjo bolt(s), brake line and caliper bore are clean and undamaged before assembly. (00321a)

#### NOTE

Brake caliper housing has a positive stop for banjo fitting. When tightening banjo bolt into brake caliper in the next step, rotate banjo fitting clockwise until it contacts positive stop.

- Position a new washer (3) on each side of hydraulic brake line banjo fitting (5). Insert banjo bolt (2) through washers and fitting. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).
- 4. Bleed brake system. See 2.17 BLEEDING BRAKES.

# **A**WARNING

A plugged or covered relief port can cause brake drag or lock-up, which could lead to loss of control, resulting in death or serious injury. (00288a)

- Verify operation of master cylinder relief port. With motorcycle positioned with master cylinder reservoir is level, squeeze brake lever slowly with reservoir cover removed. A slight spurt of fluid will break the surface if all internal components are working properly.
- Install gasket and cover on master cylinder. Install screws. Tighten to 9-17 in-lbs (1.0-2.0 Nm).


### **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 7. Test brake system.
  - Turn ignition switch ON. Squeeze brake hand lever to verify operation of the stop lamp.
  - Test ride the motorcycle. If the brakes feel spongy, bleed the system again. See <u>2.17 BLEEDING</u> BRAKES.

#### NOTE

Avoid making hard stops for the first 100 mi (160 km) to allow the **new** pads to become conditioned to the brake discs.

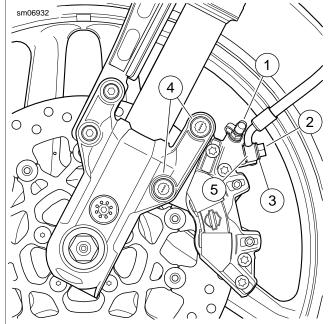

- 1. Bleeder valve
- 2. Banjo bolt (metric)
- 3. Sealing washer
- 4. Mounting bolt (metric)
- 5. Banjo fitting

Figure 2-82. Front Caliper Assembly: XR 1200X

# REAR BRAKE MASTER CYLINDER: XL MODELS

2 11

### GENERAL

The rear brake master cylinder is mounted transverse to the centerline, beneath the rear fork pivot shaft assembly.

If the rear brake feels spongy or excessive pedal travel exists or the brake does not work at all, proceed to Inspection.

#### **NOTES**

- Use only CCI #20 BRAKE GREASE to lubricate master cylinder bores, pistons, primary cups and secondary cups.
- Use only KS62F assembly grease on caliper pistons and piston seals.
- Use only G40M BRAKE GREASE on the caliper pins and boots.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTE

If DOT 4 BRAKE FLUID contacts painted surfaces, IMMEDI-ATELY flush area with clear water.

### **INSPECTION**

- 1. Check the fluid level in the rear brake reservoir. If it is low, refill and bleed brake system. See 2.17 BLEEDING BRAKES.
- Check for fluid leaks in the brake line, around banjo fittings or rear brake caliper piston or bleeder valve. Repair brake
  - Brake Line: See 2.16 BRAKE LINES.
  - Brake Caliper: See 2.14 REAR BRAKE CALIPER: XL MODELS.
- Check rear brake friction pads and disc for excessive wear or damage. Replace as necessary.
  - Brake Pads: See 1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear.
  - Brake Discs: See 2.5 WHEELS.

- Check mechanical brake linkage from brake pedal to master cylinder for damage. Replace as necessary.
  - Models with Mid-Mount Controls: See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - Models with Forward Controls: See 2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS.
- Eliminate any air in the hydraulic brake assembly by bleeding the system. See 2.17 BLEEDING BRAKES.

If none of these conditions exist but the rear brake system does not operate properly, the rear master cylinder is defective. Replace or repair as necessary.

### **REMOVAL**

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

- Drain rear brake master cylinder reservoir and remove hose clamp and feed hose from master cylinder feed hose port fitting. Discard hose clamp. See 2.13 REAR BRAKE MASTER CYLINDER RESERVOIR
- Remove bleeder nipple cap from bleeder valve on rear brake caliper. Install end of a length of 5/16 in (7.9 mm) ID clear plastic tubing over caliper bleeder valve, while placing free end in a suitable container.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- Open bleeder valve about 1/2-turn. Pump brake pedal to drain brake fluid. Close bleeder valve but do not tighten.
- Models with EVAP Controls: Remove EVAP canister and mounting bracket. See 4.20 EVAPORATIVE EMIS-SIONS CONTROL, Charcoal Canister.

# WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.


See Figure 2-83. Remove retaining ring (1) from clevis pin (2). Remove clevis pin and disengage master cylinder yoke (3) from bell crank (4). Discard retaining ring.

### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

2-58 2013 Sportster Service: Chassis

- Remove banjo bolt (5) and washers (6) from master cylinder. Lift banjo fitting away from master cylinder. Discard washers.
- Remove two screws (7) and two washers (8) securing rear master cylinder to master cylinder mounting bracket (9) and remove rear master cylinder.
- If it is necessary to remove master cylinder mounting bracket:
  - Remove retaining ring (10) and clevis pin (11). Disconnect bell crank from mounting bracket.
  - b. Remove two screws (12).
  - c. Remove screw (13) and mounting bracket.

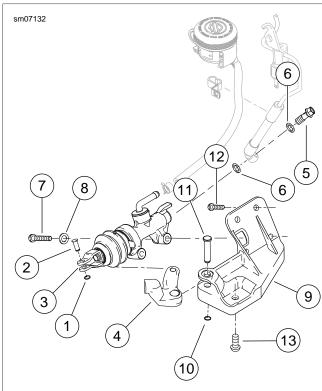

- 1. Retaining ring
- 2. Clevis pin
- 3. Yoke
- 4. Bell crank
- 5. Banjo bolt
- 6. Sealing washer
- 7. Screw
- 8. Washer
- 9. Mounting bracket
- 10. Retaining ring
- 11. Clevis pin
- 12. Screw
- 13. Screw

Figure 2-83. Rear Brake Master Cylinder

### DISASSEMBLY

#### **NOTES**

 Do not disassemble the rear master cylinder unless problems are being experienced. Discard all seals during the

- disassembly procedure. Install a complete rebuild kit when the unit is reassembled.
- Clamp rear brake master cylinder in a vise by its mounting bosses only. Use brass or aluminum jaw covers or other protective device on vise jaws to prevent damage to master cylinder.
- See <u>Figure 2-84</u>. Clamp rear brake master cylinder in a vise with yoke (1) pointing up.
- 2. Remove external boot (2). Remove spring pin (3) from end of pushrod (4). Discard spring pin.

#### NOTE

Grip yoke by the edges with an adjustable wrench. Do not grip yoke by the flats or the yoke may become deformed.

3. Hold yoke with an adjustable wrench. Using an open-end wrench, loosen shoulder nut. Remove yoke.

### **AWARNING**

Wear safety glasses or goggles when removing or installing spring. Spring tension can cause spring, attached components and/or hand tools to fly out which could result in death or serious injury. (00477c)

- Press down on spring retainer (5) to compress external return spring (6). While spring is compressed, remove shoulder nut from pushrod. Carefully release pressure on external return spring. Remove spring retainer and external return spring.
- 5. Remove and discard inner boot (8).


#### NOTE

Do not remove boot collar nut and pushrod retainer from pushrod.

### **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- See <u>Figure 2-86</u>. Thread shoulder nut back onto pushrod several turns, to protect pushrod threads. Press down on pushrod to compress piston spring (1). Remove retaining ring (2).
- 7. Remove pushrod (3) with boot collar nut (4) and pushrod retainer (5), piston (6) with secondary cup (7), primary cup (8) and piston spring. Discard retaining ring, piston with secondary cup, primary cup and piston spring.
- Remove dust cover (9), retaining ring (10), feed port fitting (11) and O-ring (12). Discard retaining ring and O-ring.

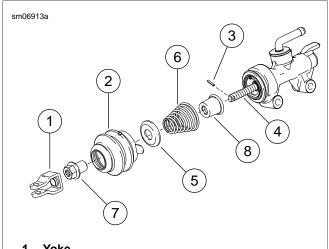

- 1. Yoke
- **External boot** 2.
- Spring pin 3.
- Pushrod 4.
- 5. Spring retainer
- 6. External spring
- 7. Shoulder nut
- 8. Inner boot

Figure 2-84. Rear Brake Master Cylinder


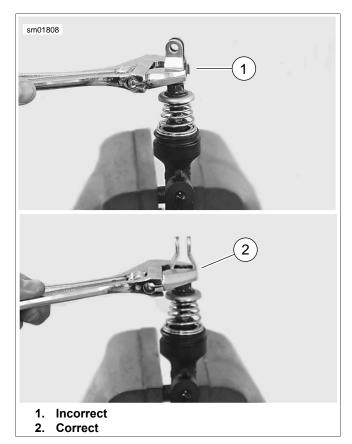


Figure 2-85. Tightening Yoke

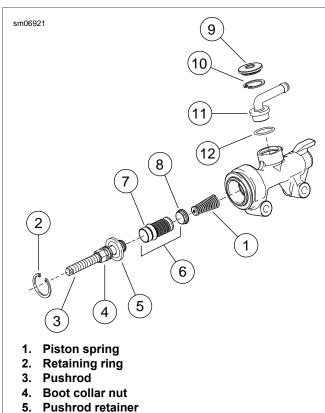

- **Piston**
- 7. Secondary cup
- Primary cup 8.
- 9. Dust cover
- 10. Retaining ring
- 11. Feed port fitting
- 12. O-ring

Figure 2-86. Rear Brake Master Cylinder

### **CLEANING AND INSPECTION**

# **A**WARNING

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

# **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Blow out drilled passages and piston bore in master cylinder body with low pressure compressed air from a clean air supply. Do not use a wire or similar instrument to clean drilled passages.

- 2. Carefully inspect all components.
  - Inspect piston bore for damage. Replace as necessary.
  - Inspect outlet port that mates with brake line banjo fitting. This is a critical sealing surface. Replace as necessary.
- 3. Verify that vent holes in master cylinder are completely open and free of dirt or debris.

### **ASSEMBLY**

FASTENER	TORQUE VALUE	
Brake master cylinder, rear, pushrod shoulder nut	130-173 in-lbs	14.7-19.6 Nm

### **NOTES**

- When assembling rear brake master cylinder, always use new parts from the service parts kit. See the parts catalog.
- Lubricate cylinder bore, cups and seals with CCI #20 BRAKE GREASE before assembly.
- Stand master cylinder on wooden block or clean, lint-free towel to protect seating surfaces.
- Coat new O-ring with DOT 4 BRAKE FLUID. Install O-ring and feed port fitting into feed port on top of master cylinder.

# **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- 2. Secure with **new** retaining ring. Verify that retaining ring is fully seated in groove.
- Slide dust cover onto feed port fitting. Press into place in master cylinder feed port. Turn feed port fitting so it points toward banjo fitting end of master cylinder body.

### NOTE


Clamp rear brake master cylinder in a vise by its mounting bosses only. Use brass jaw covers or other protective device on vise jaws to prevent damage to master cylinder.

- Clamp master cylinder in a vise with banjo fitting end pointing down.
- See <u>Figure 2-87</u>. Lubricate master cylinder bore, new piston (1) with new secondary cup (3), and new primary cup (2) with CCI #20 BRAKE GREASE supplied in the service parts kit.

### **AWARNING**

Wear safety glasses or goggles when removing or installing spring. Spring tension can cause spring, attached components and/or hand tools to fly out which could result in death or serious injury. (00477c)

- 6. Press small end of **new** piston spring (4) onto mounting boss (8) on piston (1).
- Slide piston/spring assembly, flared end of spring first, into cylinder bore so that spring seats against counter bore (recess) at bottom of cylinder.
- 8. Apply approximately 0.1 g of G40M BRAKE GREASE to ball end of pushrod (5). Insert ball end of pushrod into cupped end of piston.

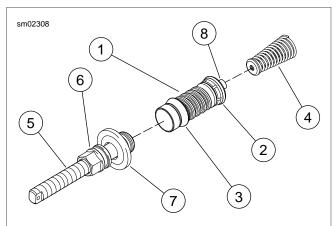


- 1. Piston
- 2. Primary cup
- 3. Secondary cup
- 4. Piston spring
- 5. Pushrod
- 6. Boot collar nut
- 7. Pushrod retainer
- 8. Piston spring mounting boss

Figure 2-87. Rear Master Cylinder Piston, Pushrod and Spring Assembly

# **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- Temporarily thread shoulder nut onto pushrod several turns to protect pushrod threads. Press down on pushrod to compress piston spring. Slide pushrod retainer down into master cylinder bore.
- Secure pushrod assembly with **new** retaining ring. Verify that retaining ring is fully seated in groove. Remove shoulder nut from pushrod.
- 11. See Figure 2-88. Apply approximately 0.1 g of G40M BRAKE GREASE around groove (4) in boot collar nut (3). Carefully slide inner boot (5) down onto pushrod (2) and into end of master cylinder bore. Press lip of inner boot down around groove in boot collar nut.
- 12. Install external return spring and spring retainer. Thread shoulder nut shoulder-first onto pushrod several turns past flats.
- 13. Thread yoke onto pushrod, at least 2-3 turns past flats. Install **new** spring pin into end of pushrod.

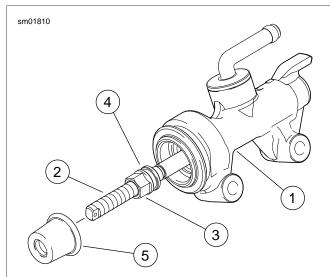

- I. Rear brake master cylinder assembly
- 2. Pushrod
- 3. Boot collar nut
- 4. Groove
- 5. Inner boot

Figure 2-88. Lubricating and Installing Inner Boot

- 14. See <u>Figure 2-89</u>. Measure from centerline of clevis pin hole (1) in yoke to centerline of master cylinder mounting boss hole (2) closest to yoke.
- 15. Turn yoke on pushrod to 3.40-3.48 in (86.3-88.3 mm).

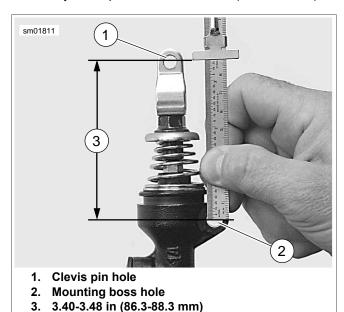



Figure 2-89. Adjusting Pushrod Length

#### NOTE

Grip yoke by the edges with adjustable wrench. Do not grip yoke by the flats or the yoke may become deformed.

 Holding yoke with an adjustable wrench, turn shoulder nut back against yoke. Tighten to 130-173 in-lbs (14.7-19.6 Nm).

- 17. See <u>Figure 2-90</u>. Remove master cylinder assembly from vise. Slide external boot (2) over yoke/pushrod assembly and external return spring.
- 18. Install the external boot.
  - a. Position external boot tabs (3) at the 3 o'clock and 9 o'clock position when master cylinder body (1) is held upright. The drain hole is at bottom of boot when master cylinder is mounted.
  - Fit lip on large end of the external boot to groove in end of master cylinder.
  - Seat the spring retainer in groove in small end of external boot.

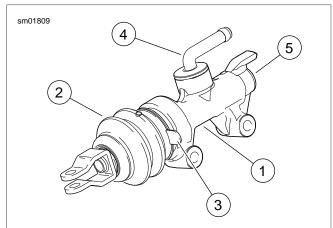

- 1. Rear master cylinder assembly
- 2. External boot
- 3. Tabs (2)
- 4. Feed port fitting
- 5. Banjo fitting hole

Figure 2-90. Assembled Rear Master Cylinder

### **INSTALLATION**

FASTENER	TORQUE VALUE	
Brake master cylinder mounting bracket, rear, screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm
Brake master cylinder mounting bracket, rear, screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm
Brake master cylinder, rear, mounting screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm

# **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- 1. See Figure 2-83. Install mounting bracket (9):
  - Attach mounting bracket to frame loosely with screws (12, 13) and tighten two screws (12) to 17-22 ft-lbs (23.1-29.9 Nm).
  - b. Tighten screw (13) to 17-22 ft-lbs (23.1-29.9 Nm).
- Install bell crank (4) with clevis pin (11). Secure with new retaining ring (10).
- Install rear master cylinder assembly on mounting bracket with screws (7) and washers (8). Tighten to 17-22 ft-lbs (23.1-29.9 Nm).
- 4. Fit yoke (3) onto bell crank (4). Install clevis pin (2) and secure with **new** retaining ring (1).

#### NOTE

Master cylinder housing has a positive stop for banjo fitting. When tightening banjo bolt into master cylinder in the next step, rotate banjo fitting clockwise until it contacts positive stop.

- Position a **new** sealing washer (6) on each side of hydraulic brake line banjo fitting. Insert banjo bolt (5) through washers and fitting. Thread bolt into master cylinder housing. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).
- Install rear brake master cylinder feed hose on master cylinder feed hose port fitting. Secure with **new** hose clamp. See <u>2.13 REAR BRAKE MASTER CYLINDER</u> <u>RESERVOIR</u>.
- 7. **Models with EVAP Controls:** Install the EVAP canister and mounting bracket. See <u>4.20 EVAPORATIVE EMISSIONS CONTROL</u>, Charcoal Canister.

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### **NOTES**

- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Rear brake master cylinder reservoir must be in a level position when filling and checking fluid level.
- Reservoir cover may be removed from rear brake master cylinder reservoir to more easily verify fluid level in reservoir.
- Use only DOT 4 BRAKE FLUID from a sealed container.
- Do not overfill reservoir. Do not reuse old brake fluid.
- 8. Position motorcycle upright (not resting on jiffy stand).
- 9. Remove reservoir cap.
- Fill rear master cylinder reservoir with DOT 4 brake fluid until the fluid level reaches the UPPER mark on the reservoir.
- 11. Bleed brake system. See 2.17 BLEEDING BRAKES.

# **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

12. Test operation of the stop lamp.

# **A**WARNING

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

### **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

13. Test ride motorcycle at low speed.

2013 Sportster Service: Chassis 2-63

# **REAR BRAKE MASTER CYLINDER: XR 1200X**

2.12

### **GENERAL**

The rear brake master cylinder is mounted to the right side rider footrest/rear brake pedal bracket.

If the rear brake feels spongy or excessive pedal travel exists or the brake does not work at all, proceed with Inspection which follows.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

### INSPECTION

- Check the level of fluid in the rear brake reservoir. If it is low, refill and bleed brake system. See <u>2.17 BLEEDING</u> BRAKES.
- Check for fluid leaks in the brake line, around banjo fittings or rear brake caliper piston or bleeder valve. Repair and bleed brake system.
  - For brake line replacement procedure, see 2.16 BRAKE LINES.
  - b. To repair rear brake caliper, see procedure in 2.15 REAR BRAKE CALIPER: XR 1200X.
  - c. See <u>2.17 BLEEDING BRAKES</u> for hydraulic brake system bleeding procedure.
- Check rear brake friction pads and disc for excessive wear or damage. Replace as necessary.
  - a. See <u>1.17 BRAKE PADS AND DISCS: XR 1200X</u> for specifications.
  - b. See <a href="1.17">1.17</a> BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear for brake pad replacement procedure.
  - See <u>2.5 WHEELS</u> for brake disc replacement procedure.
- 4. Eliminate any air in the hydraulic brake assembly by bleeding the system. See <u>2.17 BLEEDING BRAKES</u>.

If none of these conditions exist but the rear brake system does not operate properly, repair or replace as necessary.

### **REMOVAL**

# **ACAUTION**

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

- See <u>Figure 2-91</u>. Drain rear brake master cylinder reservoir (7) and remove feed hose (8) from master cylinder feed hose port fitting. Discard hose clamp. See <u>2.13 REAR</u> BRAKE MASTER CYLINDER RESERVOIR.
- Install end of a length of 5/16 in (7.9 mm) ID clear plastic tubing over rear caliper bleeder valve and place free end of tubing in a suitable container.
- 3. Open bleeder valve about 1/2-turn. Pump brake pedal to drain brake fluid. Close bleeder valve but do not tighten.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

# **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)


4. Remove retaining ring (1) from clevis pin (2). Remove clevis pin and disengage master cylinder yoke (3) from brake pedal. Discard retaining ring.

#### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

- 5. Remove banjo bolt (6) and washers (5). Lift banjo fitting away from master cylinder. Discard washers.
- Remove two screws (4) securing rear master cylinder to master cylinder mounting bracket and remove rear master cylinder.
- If it is necessary to remove master cylinder/footpeg mounting bracket, remove fasteners (9). See <u>2.42 RIDER</u> <u>FOOT CONTROLS: XR 1200X</u>.

2-64 2013 Sportster Service: Chassis

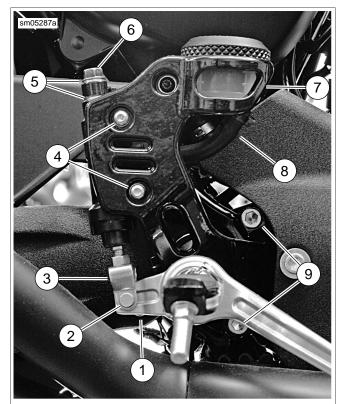

- 1. Retaining ring
- 2. Clevis pin
- 3. Yoke
- 4. Screw and washer (2)
- 5. Washer (2)
- 6. Banjo bolt
- 7. Reservoir
- 8. Feed hose
- 9. Fastener (2)

Figure 2-91. Rear Brake Master Cylinder and Reservoir

### DISASSEMBLY

### **NOTES**

- Do not disassemble the rear master cylinder unless problems are being experienced. Discard all seals during the disassembly procedure. Install a complete rebuild kit when the unit is reassembled.
- Clamp rear brake master cylinder in a vise by its mounting bosses only. Use brass or aluminum jaw covers or other protective device on vise jaws to prevent damage to master cylinder.
- 1. See <u>Figure 2-92</u>. Clamp rear brake master cylinder in a vise with yoke pointing up.

#### NOTE

Grip yoke by the edges with an adjustable wrench. Do not grip yoke by the flats or the yoke may become deformed.

- 2. Hold yoke with an adjustable wrench. Using an open-end wrench, loosen shoulder nut. Remove yoke.
- 3. See Figure 2-93. Remove nut (4) from pushrod (5).
- 4. Remove and discard boot (6).

### **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### **NOTES**

- Do not remove boot collar nut from pushrod.
- Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.
- 5. Thread nut (4) back onto pushrod several turns, to protect pushrod threads.
- Press down on pushrod to compress piston spring (10). Remove retaining ring (7), pushrod (5) with boot collar nut, piston (8) with secondary cup, primary cup (9) and piston spring (10). Discard retaining ring, piston/cup assembly and piston spring.
- 7. Remove dust cover (12), retaining ring (13), feed port fitting (15) and O-ring (14). Discard retaining ring and O-ring.

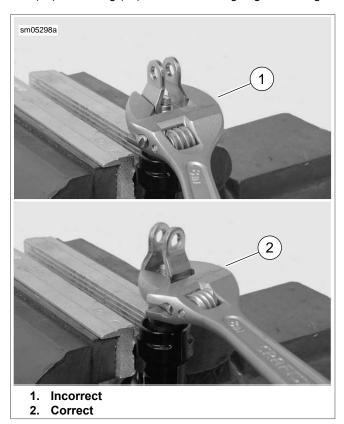


Figure 2-92. Holding Yoke

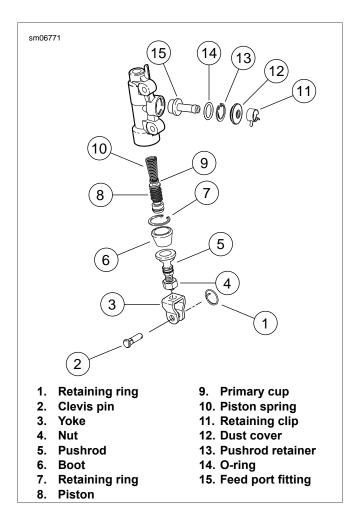


Figure 2-93. Rear Brake Master Cylinder

### **CLEANING, INSPECTION AND REPAIR**

### WARNING

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

### **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

 Thoroughly clean master cylinder body and all brake system components. Blow out drilled passages and piston bore with low pressure compressed air from a clean air supply. Do not use a wire or similar instrument to clean drilled passages.

- Carefully inspect all parts for wear or damage and replace as necessary.
  - Inspect piston bore in master cylinder housing for scratches, grooves, scoring, pitting or corrosion.
     Replace housing if any of these conditions are found.
  - Inspect outlet port that mates with brake line banjo fitting. This is a critical sealing surface. If necessary, replace housing.
- Verify that vent holes in master cylinder are completely open and free of dirt or debris.

### **ASSEMBLY**

FASTENER	TORQUE VALUE	
Brake master cylinder, rear, pushrod nut: XR 1200X	130-173 in-lbs	14.7-19.6 Nm

#### **NOTES**

- When assembling rear brake master cylinder, always use new parts from the service parts kit. Consult the PARTS CATALOG for the correct kit part number.
- CCI #20 BRAKE GREASE is recommended for lubrication of cylinder bore, cups and seals prior to assembly.
- Stand master cylinder on wooden block or clean, lint-free towel to protect seating surfaces.

### WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- See <u>Figure 2-93</u>. Coat **new** O-ring (14) with DOT 4 BRAKE FLUID. Install O-ring and feed port fitting (15) into feed port on master cylinder body. Secure with **new** retaining ring (13). Verify that retaining ring is fully seated in groove.
- 2. Slide dust cover (12) onto feed port fitting and press into place in master cylinder feed port.

#### NOTE


Clamp rear brake master cylinder body in a vise by its mounting bosses only. Use brass jaw covers or other protective device on vise jaws to prevent damage to master cylinder.

- Clamp master cylinder in a vise with banjo fitting end pointing down.
- See <u>Figure 2-94</u>. Lubricate master cylinder bore, new piston (1) with new secondary cup (3), and new primary cup (2) with CCI #20 BRAKE GREASE supplied in the service parts kit.

### **AWARNING**

Wear safety glasses or goggles when removing or installing spring. Spring tension can cause spring, attached components and/or hand tools to fly out which could result in death or serious injury. (00477c)

5. Press small end of **new** piston spring (4) onto mounting boss (8) on piston.

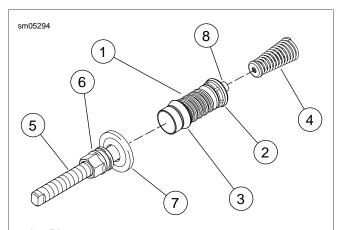

- 1. Piston
- 2. Primary cup
- 3. Secondary cup
- 4. Piston spring
- 5. Pushrod
- 6. Boot collar nut
- 7. Pushrod retainer
- 8. Piston spring mounting boss

Figure 2-94. Rear Master Cylinder Piston, Pushrod and Spring Assembly

- Slide piston/spring assembly, flared end of spring first, into cylinder bore so that spring seats against counter bore (recess) at bottom of cylinder.
- 7. Apply approximately 0.1 g of G40M BRAKE GREASE to ball end of pushrod.

### WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- 8. See <u>Figure 2-93</u>. Temporarily thread nut (4) onto pushrod (5) several turns to protect pushrod threads.
- Insert pushrod into master cylinder body. Press down on pushrod to compress piston spring (10). Slide pushrod retainer down into master cylinder bore and hold in place.
- 10. Secure pushrod assembly with **new** retaining ring (7). Verify that retaining ring is fully seated in groove. Remove nut (4) from pushrod.

- 11. Apply approximately 0.1 g of G40M BRAKE GREASE around groove in boot collar nut. Carefully slide boot (6) down onto pushrod and into end of master cylinder bore. Press lip of boot down around groove in boot collar nut.
- 12. Thread nut (4) onto pushrod (5), several turns past flats.
- 13. Thread yoke (3) onto pushrod, at least 2-3 turns past flats.
- See <u>Figure 2-95</u>. Measure distance (3) from centerline of clevis pin hole (1) in yoke to centerline of master cylinder mounting boss hole (2) closest to yoke. This distance must be 2.64-2.76 in (67.1-70.1 mm). Adjust yoke until this distance is obtained.

#### NOTE

Grip yoke by the edges with adjustable wrench. do not grip yoke by the flats or the yoke may become deformed.

- While holding yoke with an adjustable wrench, turn shoulder nut back against yoke. Tighten to 130-173 in-lbs (14.7-19.6 Nm).
- 16. Remove master cylinder assembly from vise.

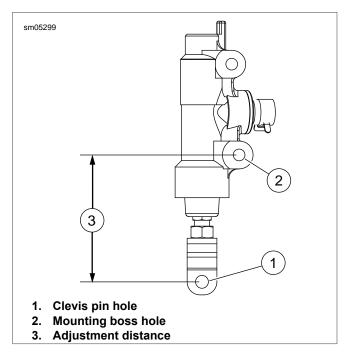


Figure 2-95. Adjusting Pushrod Length

### **INSTALLATION**

FASTENER	TORQUE VALUE	
Brake master cylinder, rear, mounting screw: XR 1200X	72-96 in-lbs	8.1-10.9 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm

### **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- See <u>Figure 2-91</u>. Assemble and install master cylinder/footpeg mounting bracket if it was removed. See <u>2.42 RIDER FOOT CONTROLS: XR 1200X</u>.
- Install rear master cylinder assembly to mounting bracket with screws and washers (4). Tighten to 72-96 in-lbs (8.1-10.9 Nm).
- 3. Fit yoke (3) onto foot pedal. Install clevis pin (2). Secure with **new** retaining ring (1).

#### NOTE

Master cylinder housing has a positive stop for banjo fitting. When tightening banjo bolt into master cylinder in the next step, rotate banjo fitting clockwise until it contacts positive stop.

- Position a **new** washer (5) on each side of hydraulic brake line banjo fitting. Insert banjo bolt (6) through washers and fitting. Thread banjo bolt into master cylinder housing. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).
- Install rear brake master cylinder feed hose (8) on master cylinder feed hose port fitting. Secure with new hose clamp.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTES

- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- Rear brake master cylinder reservoir must be in a level position when filling and checking fluid level.
- Reservoir cover may be removed from rear brake master cylinder reservoir to more easily verify fluid level in reservoir.
- Use only DOT 4 BRAKE FLUID from a sealed container.
- Do not overfill reservoir. Do not reuse old brake fluid.

- 6. Position motorcycle upright (not resting on jiffy stand).
- 7. See Figure 2-96. Remove reservoir cap (2).
- Fill rear master cylinder reservoir (1) with DOT 4 BRAKE FLUID until the fluid level reaches the UPPER mark (3) on the reservoir.
- 9. Bleed brake system. See <u>2.17 BLEEDING BRAKES</u>.
- 10. Turn ignition switch ON. Test operation of stop lamp.


### **A**WARNING

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

# **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

 Test ride motorcycle at low speed. If brake feels spongy, repeat bleeding procedure.

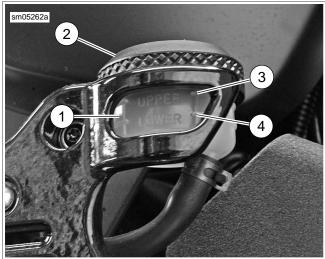

- 1. Reservoir
- 2. Reservoir cap
- 3. Upper fluid level
- 4. Lower fluid level

Figure 2-96. Rear Brake Master Cylinder Reservoir: XR 1200X

# REAR BRAKE MASTER CYLINDER RESERVOIR

### **REMOVAL: XL MODELS**

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.


- 1. Position motorcycle upright on suitable lift.
- 2. See <u>Figure 2-97</u>. Grasp reservoir cover (2) and gently pull straight out from reservoir (1).
- 3. Remove screw with captive washer (3).
- 4. Remove reservoir cap (4). Hold reservoir upside down over a suitable container and drain brake fluid.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- 5. Loosen hose clamp (5). Pull feed hose (6) from reservoir. Slide hose clamp off free end of feed hose.
- 6. See <u>Figure 2-98</u>. Slide feed hose (2) down through clamp (3). Hold free end of hose down over container and drain any brake fluid remaining in hose.
- 7. Loosen hose clamp (4). Pull feed hose off feed hose port (5) on master cylinder (1).
- Cover feed hose port with a clean, lint-free cloth to keep dirt and debris out of master cylinder.




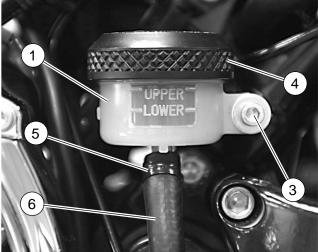

- 1. Rear brake master cylinder reservoir
- 2. Reservoir cover
- 3. Mounting screw with captive washer
- 4. Reservoir cap
- 5. Hose clamp
- 6. Master cylinder feed hose

Figure 2-97. Reservoir Mount

2013 Sportster Service: Chassis 2-69

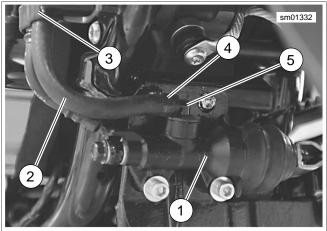

- 1. Rear brake master cylinder
- 2. Master cylinder feed hose
- 3. Clamp
- 4. Hose clamp
- 5. Feed hose port

Figure 2-98. Master Cylinder Feed Hose

### **INSTALLATION: XL MODELS**

FASTENER	TORQUE VALUE	
Brake master cylinder reservoir, rear, mounting screw	20-25 in-lbs	2.3-2.8 Nm

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 BRAKE FLUID contacts painted surfaces, IMMEDI-ATELY flush area with clear water.

- See <u>Figure 2-98</u>. Slide end of feed hose (2) onto feed hose port (5) on master cylinder (1). Secure feed hose to fitting with hose clamp (4).
- 2. Slide free end of feed hose up through clamp (3).
- See <u>Figure 2-97</u>. Slide hose clamp (5) onto free end of feed hose (6).
- Push feed hose onto fitting on reservoir (1). Secure with a hose clamp.

5. Install reservoir using screw with captive washer (3). Tighten to 20-25 **in-lbs** (2.3-2.8 Nm).

#### NOTES

- Level the rear brake master cylinder reservoir.
- Use only DOT 4 BRAKE FLUID from a sealed container.
- Do not overfill reservoir. Do not reuse old brake fluid.
- Position motorcycle upright (not resting on jiffy stand). Fill
  master cylinder reservoir with DOT 4 BRAKE FLUID until
  the fluid level reaches the UPPER mark on the reservoir.
- 7. Bleed brake system. See 2.17 BLEEDING BRAKES.
- 8. Install reservoir cover (2).
- 9. Verify tail lamp, and stop lamp.
- Test ride motorcycle. If brake feels spongy, repeat bleeding procedure.

### **REMOVAL: XR 1200X**

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)


#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

- Position motorcycle upright on suitable lift.
- 2. See Figure 2-99. Loosen reservoir cap (2).
- 3. Remove screw (6).
- 4. Remove reservoir cap (2). Hold reservoir upside down over a suitable container and drain brake fluid.
- 5. Loosen hose clamp (3) and pull feed hose (4) from reservoir. Slide hose clamp off free end of feed hose.
- Loosen hose clamp (5) and pull feed hose off master cylinder. Cover feed hose port with a clean, lint-free cloth to keep dirt and debris out of master cylinder.

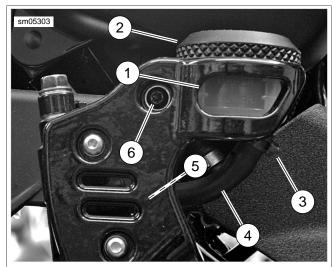

- 1. Rear brake master cylinder reservoir
- 2. Reservoir cap
- 3. Hose clamp
- 4. Feed hose
- 5. Hose clamp (master cylinder)
- 6. Screw

Figure 2-99. Rear Brake Master Cylinder Reservoir: XR 1200X

### **INSTALLATION: XR 1200X**

FASTENER	TORQUE VALUE	
Brake master cylinder reservoir, rear, mounting screw	36-60 in-lbs	4.1-6.8 Nm

### **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

- See <u>Figure 2-99</u>. Slide end of feed hose (4) onto feed hose port on master cylinder. Secure feed hose to fitting with hose clamp (5).
- 2. Slide hose clamp (3) onto free end of feed hose (4).
- 3. Push feed hose onto fitting on reservoir (1). Secure with a hose clamp.
- Install reservoir using screw (6). Tighten to 36-60 in-lbs (4.1-6.8 Nm).

#### **NOTES**

- Level the rear brake master cylinder reservoir.
- Use only DOT 4 BRAKE FLUID from a sealed container.
- Do not overfill reservoir. Do not reuse old brake fluid.
- Position motorcycle upright (not resting on jiffy stand). Fill
  master cylinder reservoir with DOT 4 BRAKE FLUID until
  the fluid level reaches the UPPER mark on the reservoir.
- Bleed brake system. See <u>2.17 BLEEDING BRAKES</u>.
- 7. Install reservoir cover (2).
- 8. Verify operation of brake lamp.
- Test ride motorcycle. If brake feels spongy, repeat bleeding procedure.

### REMOVAL

#### NOTE

If only replacing brake pads, do not remove rear brake caliper. For brake pad replacement only, see <u>1.16 BRAKE PADS AND DISCS: XL MODELS</u>.

### A CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)


### NOTES

- Do not remove rear caliper from mounting bracket unless caliper mounting pins and boots require service. Removing caliper from mounting bracket increases the risk of contaminants falling into caliper boots and bushings. This could result in damage to the caliper during vehicle operation.
- It is further not required or recommended to remove or loosen the caliper mounting pins.
- It is not necessary or recommended to remove the rear brake caliper from the caliper mounting bracket to perform caliper service.
- If DOT 4 brake fluid contacts painted surfaces, IMMEDI-ATELY flush area with clear water.
- 1. Position vehicle upright on a suitable lift.
- Place a suitable container under the rear caliper brake line banjo fitting to catch any brake fluid that may leak out. Do not reuse brake fluid.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- See <u>Figure 2-100</u>. Remove the banjo bolt (1) and both washers (2) to detach rear brake line (3) from brake caliper (4). Discard washers.
- 4. Remove pad pin plug.
- 5. See Figure 2-101. Remove brake pad pin.
- 6. See Figure 2-102. Remove brake pads (15).
- 7. Remove rear wheel. See 2.5 WHEELS, Rear Wheel.
- 8. Remove rear brake caliper and caliper mounting bracket.

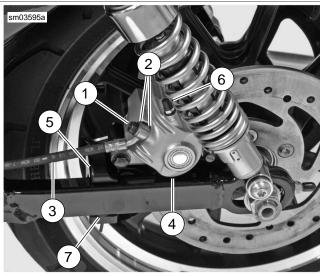

- 1. Banjo bolt
- 2. Washer (2)
- 3. Rear brake line
- 4. Brake caliper
- 5. Caliper mounting bracket
- 6. Bleeder valve
- 7. Damper

Figure 2-100. Rear Caliper Assembly

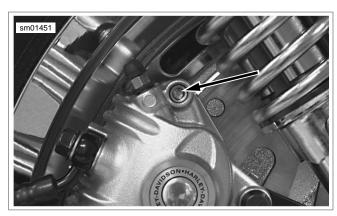


Figure 2-101. Brake Pad Pin (plug removed)

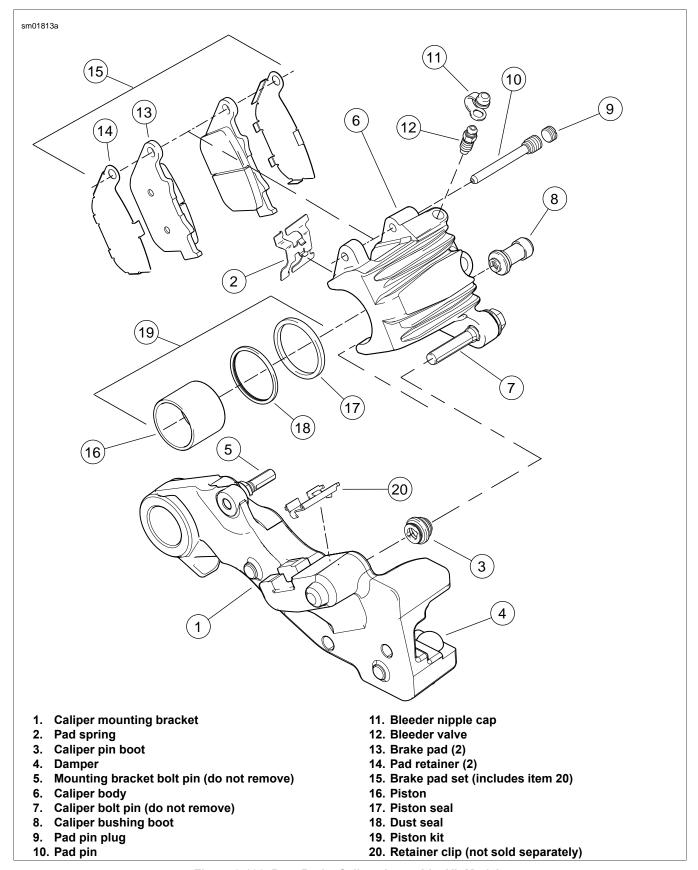


Figure 2-102. Rear Brake Caliper Assembly: XL Models

### **DISASSEMBLY**

- See <u>Figure 2-102</u>. Remove pad spring (2). Do not remove bleeder valve (12) at this time.
- 2. See Figure 2-103. Install a discarded brake pad in the caliper with the backing plate (4) facing the piston. Position the brake pad so the friction material (3) is against the back of the caliper, as shown.
- 3. Loosely install brake pad pin (2) to hold brake pad in place.

# **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

### **A**CAUTION

When removing piston with compressed air, piston can develop considerable force and fly out of caliper bore. Keep hands away from piston to avoid possible injury. (00530b)

#### NOTE


Do not damage banjo bolt sealing surface or threads of banjo bolt hole in brake caliper. Use an air nozzle with a rubber tip.

- 4. See <u>Figure 2-104</u>. Gently apply low pressure compressed air to banjo bolt hole (3) to force piston from caliper bore.
- 5. Remove brake pad pin and brake pad from caliper.
- See <u>Figure 2-102</u>. Remove piston (16) from caliper bore by hand. If necessary, gently wiggle piston to completely remove.

### NOTE


A damaged piston bore will leak when reassembled. Do not use metal objects to remove or install components in piston bore. Prevent damage to piston, seal and bore by only using a wooden toothpick when servicing caliper.

- See <u>Figure 2-105</u>. Using a wooden toothpick (1), remove dust seal (2) and piston seal (3) from caliper bore. Discard seals.
- 8. See <u>Figure 2-102</u>. If necessary, remove bleeder valve (12).

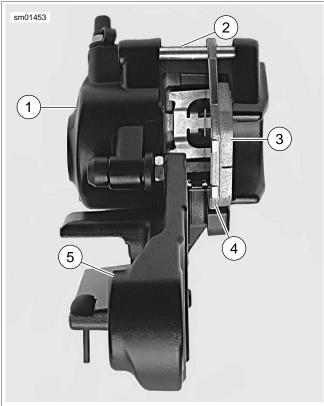


- 1. Brake caliper
- 2. Brake pad pin
- 3. Brake pad friction material
- 4. Brake pad backing plate
- 5. Brake caliper mounting bracket

Figure 2-103. Preparing Caliper for Piston Removal

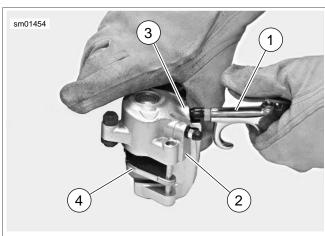

- 1. Low pressure air nozzle
- 2. Brake caliper
- 3. Banjo bolt hole
- 4. Brake pad

Figure 2-104. Removing Piston (caliper removed from mounting bracket)

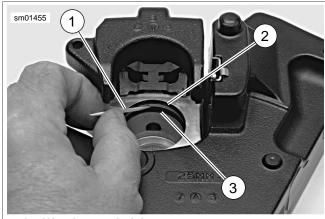

- 1. Wooden toothpick
- 2. Dust seal
- 3. Piston seal

Figure 2-105. Caliper Seals

# **CLEANING, INSPECTION AND REPAIR**

# **AWARNING**

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

- 1. Clean piston bore with denatured alcohol.
- Clean all rubber parts with DOT 4 BRAKE FLUID. Do not contaminate with mineral oil or other solvents. Wipe parts dry with a clean, lint free cloth.

# **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- 3. Blow out drilled passages and piston bore with low pressure compressed air from a clean air supply. Do not use a wire or similar instrument to clean drilled passages.
- 4. Carefully inspect all components. Replace as necessary.
  - a. Check piston for pitting, scratching or corrosion on outside surfaces.
  - Inspect caliper piston bore. Do not hone bore. If bore shows pitting or corrosion, replace caliper.
  - c. Inspect pad pin for grooving and wear. Measure the pad pin diameter in an unworn area, and then in the area of any grooving or wear. If wear is more than 0.011 in (0.28 mm), replace pad pin.
  - d. Always replace all seals after disassembly.

# **A**WARNING


Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)


- Inspect brake pads and brake disc. Replace if necessary.
  - See <u>1.16 BRAKE PADS AND DISCS: XL MODELS</u> for specifications.
  - See <u>2.5 WHEELS</u> for brake disc replacement procedure.

# LUBRICATING REAR CALIPER BOLT PINS AND BOOTS

- 1. Apply approximately 0.4 g of G40M BRAKE GREASE inside caliper bushing boot and caliper pin boot.
- See <u>Figure 2-106</u>. Apply G40M BRAKE GREASE inside boot lip (8) to prevent sticking between boots (3, 4) and bolt pins (5, 6).
- Insert mounting bracket bolt pin (6) into caliper bushing boot (3).

2013 Sportster Service: Chassis 2-75

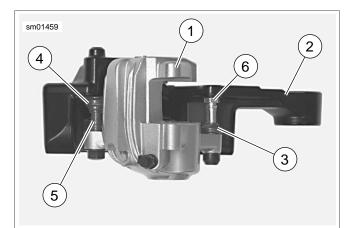

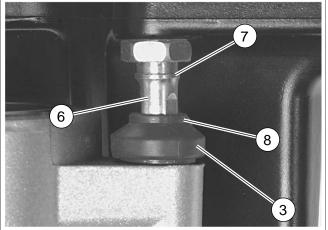

- 1. Rear brake caliper
- 2. Caliper mounting bracket
- 3. Caliper bushing boot
- 4. Caliper pin boot
- 5. Bolt pin (caliper)
- 6. Bolt pin (mounting bracket)
- 7. Tapered shoulder
- 8. Boot lip

Figure 2-106. Assembling Rear Brake Caliper to Mounting Bracket

#### **ASSEMBLY**

#### NOTE

Use ONLY KS62F assembly grease for lubrication. Use of DOT 4 brake fluid will result in increased brake pedal travel.

- Lubricate the following parts prior to assembly using a light coat of KS62F assembly grease from the service parts kit. All other surfaces must be dry for assembly.
  - a. Nose radius of piston. See Figure 2-107.
  - b. All surfaces of piston seal and dust seal.

#### NOTE

A damaged piston bore will leak when reassembled. Do not use metal objects to remove or install components in piston bore. Prevent damage to bore by only using a wooden toothpick when servicing caliper.

 See Figure 2-105. Install a new piston seal (3) and a new dust seal (2) into piston bore.

- 3. Carefully insert piston by hand, nose radius first (see Figure 2-102), into caliper bore. If installation shows resistance, remove piston and check that seals are properly installed and fully seated in grooves.
- See <u>Figure 2-102</u>. Install bleeder valve (12) on caliper housing if removed. Do not tighten bleeder valve at this time
- 5. See <u>Figure 2-108</u>. Install pad spring in channel. Press firmly into place.



Figure 2-107. Piston Nose Radius



Figure 2-108. Rear Caliper Pad Spring

#### **INSTALLATION**

FASTENER	TORQUE	VALUE
Caliper to mouting bracket: XL Models	87-130 <b>in-lbs</b>	9.8-14.7 Nm
Caliper bolt pin: XL Models	15-18 ft-lbs	19.6-24.5 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm

- See <u>Figure 2-109</u>. Before installing caliper, make sure that retainer clip is properly installed on mounting bracket.
- See <u>Figure 2-102</u>. Install rear caliper onto the mounting bracket:
  - a. Apply a small amount of LOCTITE 272 HIGH STRENGTH/HIGH TEMPERATURE THREAD-LOCKER AND SEALANT (red/orange) to mounting bracket bolt pin (5) threads.
  - b. Place the rear caliper assembly (6) onto the mounting bracket (1). Using an open end wrench, thread mounting bracket bolt pin into caliper mounting bracket. Tighten to 87-130 in-lbs (9.8-14.7 Nm).
  - c. Apply a small amount of LOCTITE 272 HIGH STRENGTH/HIGH TEMPERATURE THREAD-LOCKER AND SEALANT (red/orange) to threads of caliper bolt pin (7).
  - d. Slide caliper bolt pin through front mounting hole in caliper (6). Carefully insert bolt pin shaft into caliper pin boot (3) in mounting bracket (1).
  - e. Screw bolt pin into caliper. Tighten to 15-18 ft-lbs (19.6-24.5 Nm).
- Install rear brake caliper and mounting bracket assembly onto vehicle.

#### NOTE

Brake caliper housing has a positive stop for banjo fitting. When tightening banjo bolt into brake caliper in the next step, rotate banjo fitting clockwise until it contacts positive stop.

See <u>Figure 2-110</u>. Position a **new** washer (2) on each side of hydraulic brake line (3) banjo fitting. Insert banjo bolt (1) through washers and fitting. Thread bolt into caliper housing. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).

#### NOTE

Front brake pad sets cannot be used on rear brake calipers.

- Insert brake pads into caliper with friction material on pad facing brake disc. Curved portion of pad fits into recessed area of caliper. Make sure brake pad front mounting tab (fits into slot in caliper mounting bracket.
- See <u>Figure 2-102</u>. Press brake pads (15) tightly up against pad spring (2) and install pad pin (10). Tighten to 131-173 in-lbs (14.8-19.6 Nm).

#### NOTE

If pad pin does not fit, check the following:

- You are using a set of pads, not two identical pads.
- See <u>Figure 2-108</u>. Pad spring orientation must match.
- Pad front mounting tabs must be fully seated in mounting bracket slot.
- Pads must be pushed tight up against pad spring before pad pin is installed.
- See <u>Figure 2-102</u>. Install pad pin plug (9). Tighten to 18-25 in-lbs (2.0-2.9 Nm).

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### **NOTES**

- If DOT 4 BRAKE FLUID contacts painted surfaces, IMMEDIATELY flush area with clear water.
- Rear brake master cylinder reservoir must be in a level position when filling and checking fluid level.
- See <u>Figure 2-111</u>. Reservoir cover (2) may be removed from rear brake master cylinder reservoir (1) to more easily verify fluid level in reservoir.
- 8. See <u>Figure 2-111</u>. To remove reservoir cover, grasp cover (2) and gently pull straight out from reservoir (1).
- Remove rear brake master cylinder reservoir cap (5). Add DOT 4 BRAKE FLUID to reservoir until fluid reaches upper fluid level (3). Do not overfill reservoir. Do not reuse brake fluid.

# WARNING

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

10. Bleed brake system. See 2.17 BLEEDING BRAKES.

# **AWARNING**

A plugged or covered relief port can cause brake drag or lock-up, which could lead to loss of control, resulting in death or serious injury. (00288a)

- 11. Verify proper operation of master cylinder relief port.
  - a. Press against rear brake caliper to push caliper piston back into its bore. This pushes brake fluid back through master cylinder and verifies that relief port is not plugged.
  - b. Pump brake pedal until caliper piston pushes pads against disc and pressure is returned to brake system.
- 12. Add DOT 4 BRAKE FLUID to reservoir until fluid reaches upper fluid level.
- 13. Install reservoir cover if removed.

# **AWARNING**

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 14. Test brake system.
  - a. Turn ignition switch ON. Pump brake pedal to verify operation of stop lamp.
  - Test ride motorcycle at low speed. If brakes feel spongy, bleed system again. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.

#### NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.



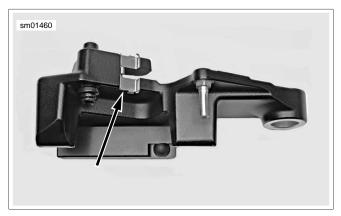


Figure 2-109. Retainer Clip

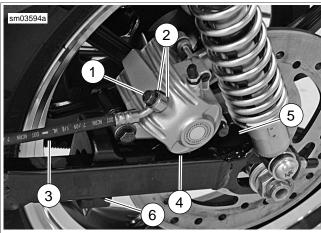

- 1. Banjo bolt
- 2. Sealing washer (2)
- 3. Rear brake line
- 4. Brake caliper
- 5. Caliper mounting bracket
- 6. Damper

Figure 2-110. Rear Caliper Assembly

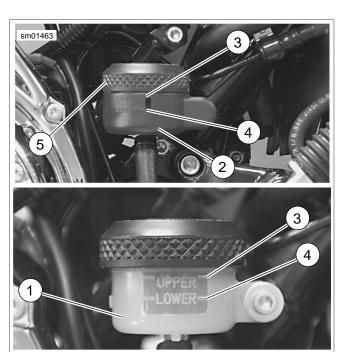

- 1. Rear brake master cylinder reservoir
- 2. Reservoir cover
- 3. Upper fluid level
- 4. Lower fluid level
- 5. Reservoir cap

Figure 2-111. Rear Brake Master Cylinder Reservoir

# **REMOVAL**

#### NOTE

If only replacing brake pads, do not remove rear brake caliper. See <u>1.17 BRAKE PADS AND DISCS: XR 1200X</u>.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE


If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

- 1. Position motorcycle on a suitable lift.
- Place a suitable container under the rear caliper brake line banjo fitting to catch any brake fluid that may leak out. Do not reuse brake fluid.

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- 3. Disconnect left shock absorber from rear fork. Rotate shock absorber out of the way.
- Loosen rear axle nut and turn adjuster nuts to allow the rear wheel to move forward to the adjustment limit.
- See <u>Figure 2-112</u>. Remove the banjo bolt (2) and both washers (3) to detach rear brake line (1) from brake caliper. Discard washers.
- 6. Remove mounting bolt (5) and bolt pin (6).
- 7. Remove caliper assembly.

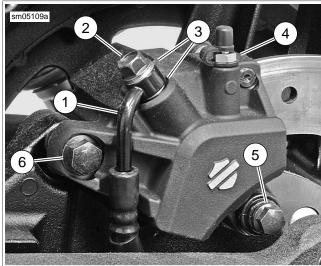

- 1. Rear brake line
- 2. Banjo bolt
- 3. Washer (2)
- 4. Bleeder valve
- 5. Mounting bolt
- 6. Bolt pin

Figure 2-112. Rear Caliper Assembly

2013 Sportster Service: Chassis 2-79

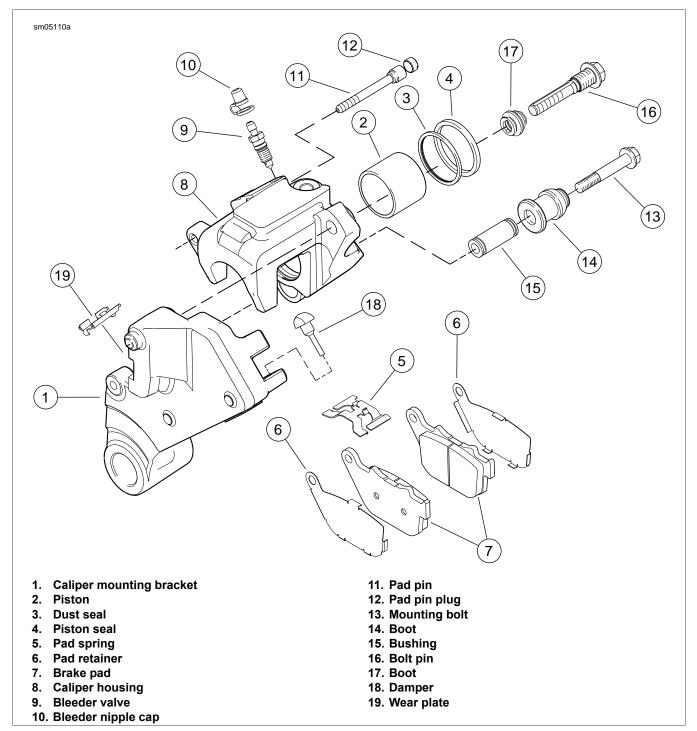


Figure 2-113. Rear Brake Caliper: XR 1200X

# **DISASSEMBLY**

- 1. See Figure 2-114. Remove brake pad pin plug to expose brake pad pin (1). Remove brake pad pin and pads (2).
- 2. See Figure 2-115. Remove pad spring (1).
- 3. Remove bushing (2) from boot (3). Remove boot from mounting hole (4). Do not remove bleeder valve at this time.
- 4. See <u>Figure 2-116</u>. Install a discarded brake pad (1) in the caliper with the backing plate facing the piston. Position

- the brake pad so the friction material is against the back of the caliper, as shown.
- 5. Loosely install brake pad pin (2) to hold brake pad in place.

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

# **A**CAUTION

When removing piston with compressed air, piston can develop considerable force and fly out of caliper bore. Keep hands away from piston to avoid possible injury. (00530b)

#### NOTE

Do not damage banjo bolt sealing surface or threads of banjo bolt hole in brake caliper. Use an air nozzle with a rubber tip.

- 6. Gently apply low pressure compressed air to banjo bolt hole (3) to force piston from caliper bore.
- 7. Remove brake pad pin and brake pad from caliper.
- 8. Remove piston from caliper bore by hand. If necessary, gently wiggle piston to completely remove.

#### NOTE

A damaged piston bore will leak when reassembled. Do not use metal objects to remove or install components in piston bore. Prevent damage to piston, seal and bore by only using a wooden toothpick when servicing caliper.

- See <u>Figure 2-117</u>. Using a wooden toothpick (1), remove dust seal (2) and piston seal (3) from caliper bore. Discard seals.
- 10. If necessary, remove bleeder valve.


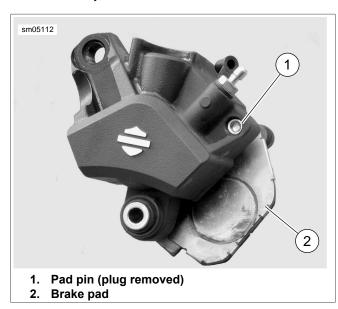


Figure 2-114. Pad Pin

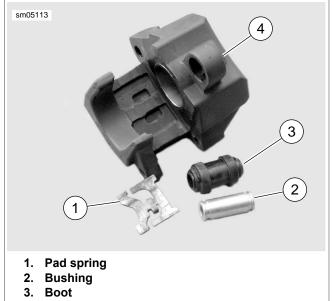

4. Mounting hole

Figure 2-115. Spring, Bushing and Boot


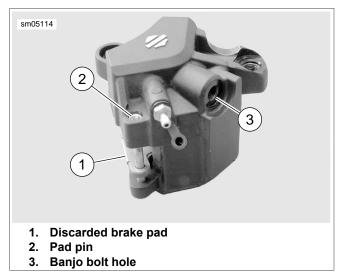


Figure 2-116. Removing Piston: XR 1200X

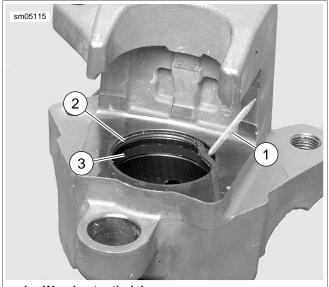

- 1. Wooden toothpick
- 2. Dust seal
- 3. Piston seal

Figure 2-117. Caliper Seals

# **CLEANING, INSPECTION AND REPAIR**

# WARNING

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

- 1. Clean piston bore with denatured alcohol.
- 2. Clean all rubber parts with DOT 4 BRAKE FLUID. Do not contaminate with mineral oil or other solvents. Wipe parts dry with a clean, lint free cloth.

# WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

3. Blow out drilled passages and piston bore with low pressure compressed air from a clean air supply. Do not use a wire or similar instrument to clean drilled passages.

- 4. Carefully inspect all components. Replace any parts that appear damaged or worn.
  - Check piston for pitting, scratching or corrosion on outside surfaces.
  - b. Inspect caliper piston bore. Do not hone bore. If bore shows pitting or corrosion, replace caliper.
  - c. Inspect pad pin for grooving and wear. Measure the pad pin diameter in an unworn area and then in the area of any grooving or wear. If wear is more than 0.011 in (0.28 mm), replace pad pin.
  - d. Always replace all seals after disassembly.
- Inspect bushing boot and bolt pin boot for deterioration or damage. Replace as necessary.
- Inspect wear plate on caliper mount for wear. Replace as necessary.

# **AWARNING**

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

- 7. Inspect brake pads and brake disc. Replace if necessary.
  - See <u>1.17 BRAKE PADS AND DISCS: XR 1200X</u> for specifications.
  - See <u>2.5 WHEELS</u> for brake disc replacement procedure.

# **ASSEMBLY**

- 1. See <u>Figure 2-118</u>. If removed, install bushing boot (3) in caliper.
- 2. Apply approximately 0.4 g of G40M BRAKE GREASE inside caliper bushing boot (3).
- 3. Insert caliper bushing (2) into boot. Verify that the lips of boot are engaged in grooves at either end of bushing.
- Install pad spring (1) in caliper housing. Verify that the spring is installed in the orientation shown.

#### NOTE

Use ONLY KS62F assembly grease for lubrication of internal brake parts. Use of DOT 4 brake fluid will result in increased brake pedal travel.

- Lubricate the following parts prior to assembly using a light coat of KS62F assembly grease from the service parts kit. All other surfaces must be dry for assembly.
  - a. Nose radius of piston.
  - b. All surfaces of piston seal and dust seal.

#### NOTE

A damaged piston bore will leak when reassembled. Do not use metal objects to remove or install components in piston bore. Prevent damage to bore by only using a wooden toothpick when servicing caliper.

6. See <u>Figure 2-119</u>. Install a **new** piston seal (3) and a **new** dust seal (2) into piston bore.

- 7. Carefully insert piston by hand, nose radius first, into caliper bore. If installation shows resistance, remove piston and check that seals are properly installed and fully seated in grooves.
- Install bleeder valve if removed. Do not tighten bleeder valve at this time.


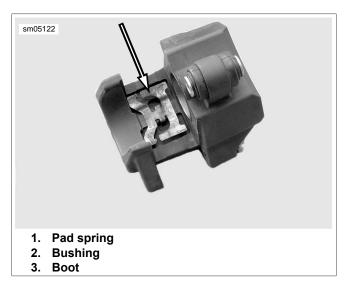


Figure 2-118. Assemble Caliper

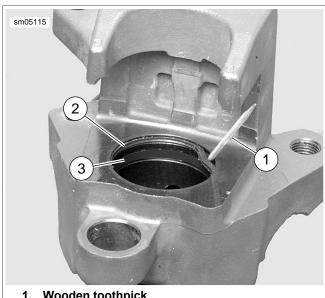

- Wooden toothpick
- 2. Dust seal
- Piston seal

Figure 2-119. Caliper Seals

#### INSTALLATION

FASTENER	TORQUE VALUE	
Rear caliper pin bolt	14-18 ft-lbs	19.6-24.5 Nm
Rear caliper mounting bolt	14-18 ft-lbs	19.6-24.5 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm

- See Figure 2-120. If removed, install bolt pin boot (1).
- Apply approximately 0.4 g of G40M BRAKE GREASE inside bolt pin boot.
- 3. If removed, install wear plate (2) on mounting bracket.
- See Figure 2-121. Apply a drop of LOCTITE 272 HIGH STRENGTH/HIGH TEMPERATURE THREADLOCKER AND SEALANT (red/orange) to threads of bolt pin (6).
- 5. Place rear caliper assembly onto mounting bracket. Install bolt pin (6), being careful not to pinch or roll boot over.
- 6. See Figure 2-122. Verify that the lip of the boot (1) properly engages the groove (2) in the bolt pin.
- 7. Tighten bolt pin to 14-18 ft-lbs (19.6-24.5 Nm).
- 8. See Figure 2-121. Install mounting bolt (5) and tighten to 14-18 ft-lbs (19.6-24.5 Nm).

#### NOTE

Brake caliper housing has a positive stop for banjo fitting. When tightening banjo bolt into brake caliper in the next step, rotate banjo fitting clockwise until it contacts positive stop.

- Position a **new** washer (3) on each side of hydraulic brake line (1) banjo fitting. Insert banjo bolt (2) through washers and fitting and thread bolt into caliper housing. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).
- 10. Install brake pads. See 1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear.
- 11. Secure lower end of shock absorber to rear fork. Tighten to 45-50 ft-lbs (61-68 Nm).
- 12. Adjust drive belt and check vehicle alignment. See 1.24 WHEEL ALIGNMENT.

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### **NOTES**

- If DOT 4 BRAKE FLUID contacts painted surfaces, IMMEDIATELY flush area with clear water.
- Rear brake master cylinder reservoir must be in a level position when filling and checking fluid level.
- Remove rear brake master cylinder reservoir cap. Add DOT 4 BRAKE FLUID to reservoir until fluid reaches upper fluid level (3). Do not overfill reservoir. Do not reuse brake fluid.
- 14. Bleed brake system. See 2.17 BLEEDING BRAKES.

# **AWARNING**

A plugged or covered relief port can cause brake drag or lock-up, which could lead to loss of control, resulting in death or serious injury. (00288a)

- 15. Verify proper operation of master cylinder relief port.
  - a. Press against rear brake caliper to push caliper piston back into its bore. This pushes brake fluid back through master cylinder and verifies that relief port is not plugged.
  - Pump brake pedal until caliper piston pushes pads against disc and pressure is returned to brake system.
- 16. Add DOT 4 BRAKE FLUID to reservoir until fluid reaches upper fluid level.

# WARNING

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)


# WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

- 17. Test brake system.
  - a. Turn ignition switch ON. Pump brake pedal to verify operation of stop lamp.
  - Test ride motorcycle at low speed. If brakes feel spongy, bleed system again. See <u>2.17 BLEEDING</u> <u>BRAKES</u>.


# NOTE

Avoid making hard stops for the first 100 mi (160 km). This allows the **new** pads to become conditioned to the brake discs.

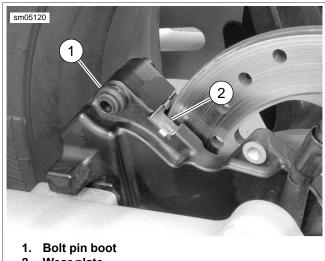

2. Wear plate

Figure 2-120. Caliper Mount

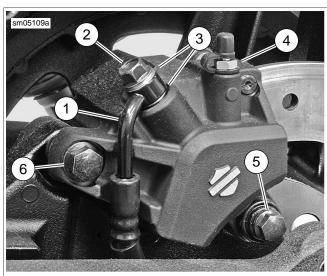

- 1. Rear brake line
- 2. Banjo bolt
- 3. Washer (2)
- 4. Bleeder valve
- 5. Mounting bolt
- 6. Bolt pin

Figure 2-121. Rear Caliper Assembly

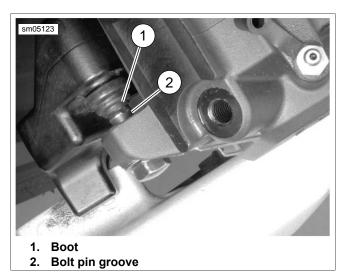


Figure 2-122. Bolt Pin and Boot

BRAKE LINES 2.16

#### FRONT BRAKE LINE

FASTENER	TORQUE	VALUE
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Brake line clamp screw, fork bracket	45-65 <b>in-lbs</b>	5.1-7.4 Nm
Brake line clamp screw, steering stem, XL Models	120-168 <b>in-lbs</b>	13.6-19.0 Nm
Brake line clamp screw, steering stem, XR 1200X	96-144 in-lbs	11-16 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm

# Removal

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

Dispose of brake fluid in accordance with local regulations.

- 1. Drain the brake fluid. See <u>2.17 BLEEDING BRAKES</u>, <u>Procedure</u>.
- 2. Remove the brake line clamp screw from fork bracket.
  - a. XL Models: Upper fork bracket
  - b. XR 1200X: Lower fork bracket
- Remove brake line clamp at steering stem under the lower fork bracket.
  - a. Dual Disc Models: Remove screw with captive washer and clamp to remove brake line manifold.
  - Single Disc Models: Remove screw with captive washer and clamp.

#### NOTE

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

4. Remove the banjo bolt and sealing washers from the master cylinder assembly. Discard sealing washers.

- Remove the banjo bolt and sealing washers to detach the brake line from the front brake caliper(s). Discard sealing washers.
- 6. Inspect the brake line. Replace as necessary.

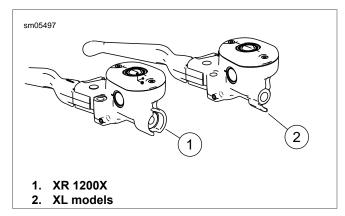


Figure 2-123. Front Brake Master Cylinder Identification

#### Installation

#### **NOTES**


- See <u>Figure 2-123</u>. The XR 1200X and XL models are equipped with different master cylinder housings. Do not mix parts.
- When tightening banjo bolt to the master cylinder or caliper, verify the banjo fitting contacts the positive stop.
- 1. Route the brake line. See <u>2.16 BRAKE LINES, Front Brake Line Routing</u>.
- See <u>Figure 2-124</u> or <u>Figure 2-125</u>. Loosely install the master cylinder banjo bolt (2) and fitting with **new** sealing washers (1).
- 3. Loosely install the upper clamp (3) with the screw (4):
  - a. XL Models: To the upper fork bracket.
  - b. XR 1200X: To the lower fork bracket.
- 4. Loosely install the lower clamp.
  - Single Disc Models: To the lower fork bracket stem with screw with captive washer.
  - b. Dual Disc Models: See <u>Figure 2-125</u>. Thread the screw (5) with captive washer through the brake line manifold (7) and guide (6) into the steering head stem.
- Loosely install the banjo bolt and banjo fitting with new sealing washers to the brake caliper(s).

- 6. Tighten the fasteners to specification:
  - Master cylinder banjo bolt to 20-25 ft-lbs (27.1-33.9 Nm)
  - b. Clamp-to-fork bracket to 45-65 in-lbs (5.1-7.4 Nm)
  - XL Models: brake line-to-steering stem clamp screw to 120-168 in-lbs (13.6-19.0 Nm)
  - d. **XR 1200X:** brake line-to-steering stem clamp screw 96-144 **in-lbs** (11-16 Nm)
  - e. Banjo bolt-to-brake caliper(s) to 20-25 ft-lbs (27.1-33.9 Nm)
- 7. Fill and bleed brakes with **new** DOT 4 BRAKE FLUID. See 2.17 BLEEDING BRAKES, Procedure.

# **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

8. Test ride motorcycle. Repeat brake bleeding, if necessary.

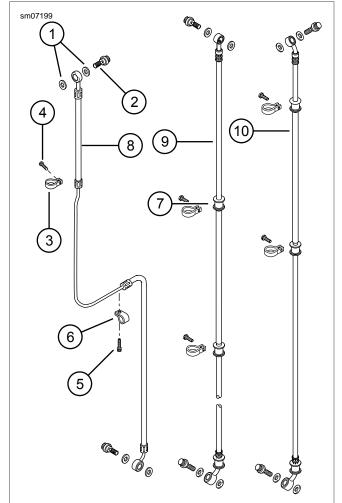

- 1. Sealing washer
- 2. Banjo bolt
- 3. Clamp
- 4. Screw
- 5. Screw w/captive washer
- 6. Clamp
- 7. Grommet
- 8. Brakeline: XL 883L/N, XL 1200C/C ANV/X, XL 1200CP w/Pull Back
- 9. Brakeline: XL 1200V/CP/CB w/Mini-Ape
- 10. Brakeline: XL 1200CP/CA w/Drag Bar

Figure 2-124. Brakelines: Single Disc Models

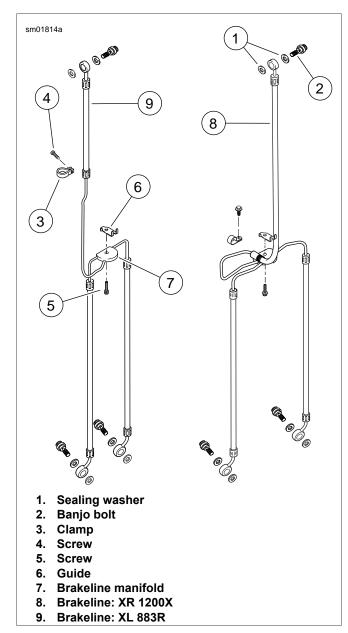


Figure 2-125. Brakelines: Dual Disc Models

# FRONT BRAKE LINE ROUTING

# **AWARNING**

Do not bend metal brake line. Bending brake line could cause metal fatigue and brake failure, which could result in death or serious injury. (00543b)

# **XL 883R**

1. Fit the upper clamp to the metal fitting at the top of the single metal tube section.

# NOTE

The brake line on dual disc models self-aligns. It creates a gap between the metal tubing section and the lower fork bracket. Visually confirm the gap.

Route the brake line behind the handlebar and the fork brackets. Separate the two brake lines and route down to the calipers.

# XL 883L/N, XL 1200X, XL 1200C/C ANV/CP w/Pull Back

- 1. See <u>Figure 2-126</u>. Fit the upper and lower clamps to the metal fittings at the ends of the metal tube section.
- Route the brake line downward in front of the right side of the handlebar and inward behind fork brackets.
- Continue routing the brake line downward crossing to left side of the vehicle under front fork lower bracket to the brake caliper.
- 4. **Single Disc Models:** See Figure 2-127. Adjust the location of the brake line in the lower P-clamp until there is a 1/4 in (6.35 mm) gap between the brake line metal tubing and the lower fork bracket pinch bolt.

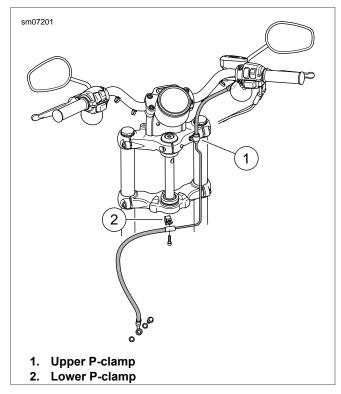


Figure 2-126. Brakeline Routing: XL 883L/N, XL 1200X, XL 1200C/C ANV/CP w/Pull Back

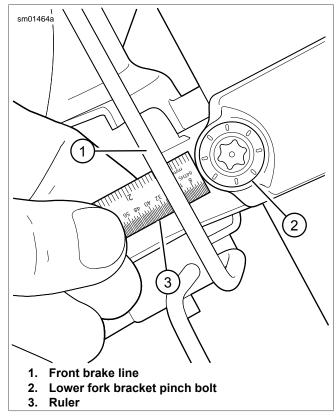


Figure 2-127. Measuring Front Brake Line Clearance

# XL 1200V/CP/CB w/Mini-Ape

- 1. Fit the upper and lower clamps to the brake line grommets.
- 2. See <u>Figure 2-128</u>. Match the straight banjo bolt fitting to the master cylinder and route the brake line over the top of the mini-ape and behind the fork brackets.
- 3. Cross the brake line under the lower fork bracket and down the fork leg to the brake caliper.

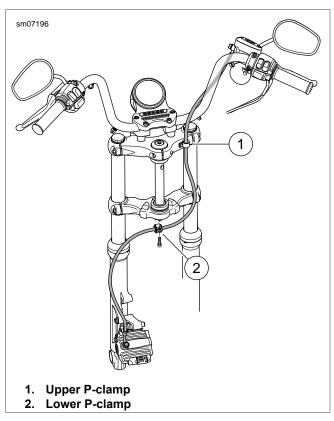


Figure 2-128. Brake Line Routing: XL 1200V/CP/CB w/Mini-Ape

# XL 1200CP/CA with Drag Bar

- 1. See <u>Figure 2-129</u>. Fit the upper and lower clamps to the brake line grommets.
- 2. Match the banjo bolt fitting to the master cylinder and route the brake line behind the fork brackets.
- 3. Cross the brake line under the lower fork bracket and down the fork leg to the brake caliper.

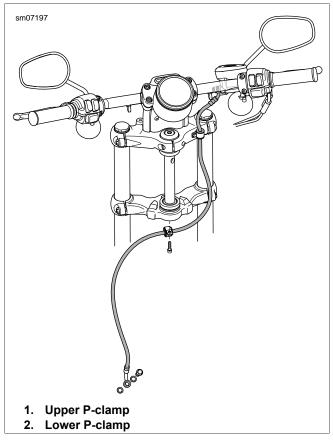


Figure 2-129. Brake Line Routing: XL 1200CP/CA w/Drag
Bar

# **XR 1200X**

 See <u>Figure 2-130</u>. Fit the upper clamp to the metal fitting at the top of the single metal tube section.

#### NOTE

The brake line on dual disc models will self-align. It creates a gap between the metal tubing section and the lower fork bracket. Visually confirm the gap.

- Route the brake line behind the handlebar and the fork brackets.
- Separate the two brake lines and route down to the calipers.

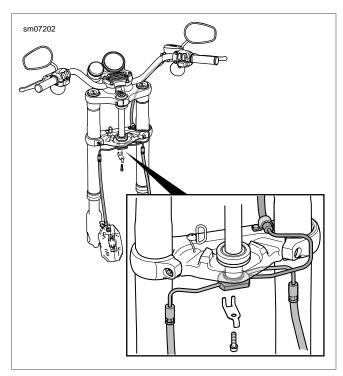


Figure 2-130. Brakeline Routing: XR 1200X

# **REAR BRAKE LINE: XL MODELS**

FASTENER	TORQUE	VALUE
Stop lamp, rear, switch: XL Models	132-168 <b>in-lbs</b>	14.9-18.9 Nm
Brake line/switch, rear, tee bracket screw: XL Models	72-120 in-lbs	8.14-13.6 Nm
Brake hose clamp to battery tray screw	30-40 in-lbs	3.4-4.5 Nm
Brake hose clamp to rear fork screw	30-40 <b>in-lbs</b>	3.4-4.5 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

#### Removal

- Drain rear brake master cylinder reservoir. See <u>2.13 REAR BRAKE MASTER CYLINDER RESERVOIR</u>.
- 2. Drain the rear brake line:
  - a. Remove bleeder nipple cap from bleeder valve on rear brake caliper.
  - b. Install end of a length of 5/16 in (7.9 mm) ID clear plastic tubing over caliper bleeder valve. Place the free end in a suitable container.
  - c. Open bleeder valve 1/2 turn.
  - d. Pump brake pedal to drain brake fluid.
  - e. Close bleeder valve.
- 3. See Figure 2-131. Unplug harness connectors [121] from stop lamp switch (7).
- Remove banjo bolt (2) and washers (1) to detach rear brake line (3) from master cylinder body and rear brake caliper. Discard washers.
- Remove screw (5) to detach brake line clamp (4) with bushing (12) from rear fork.
- Remove screw (10) to detach brake line clamp (9) from battery tray bracket.
- Remove screw (11) securing brake line/switch tee (6) to battery tray bracket.
- 8. Feed brake line up through clamp (8).
- Hold hex body of brake line/switch tee with an open-end wrench. Remove stop lamp switch from brake line/switch tee.

# Installation

- See <u>Figure 2-131</u>. Thread stop lamp switch (7) into brake line/switch tee (6) on **new** rear brake line (3). Hold hex body of brake line/switch tee with an open-end wrench. Tighten stop lamp switch to 132-168 **in-lbs** (14.9-18.9 Nm).
- 2. Feed rear brake line down through B-clamp (8).
- Position brake line/switch tee mounting bracket on battery tray bracket. Secure with screw (11). Tighten to 72-120 in-lbs (8.14-13.6 Nm).
- Install clamp (9) and screw (10) to secure rear brake hose to battery tray bracket. Tighten screw to 30-40 in-lbs (3.4-4.5 Nm).

#### NOTE

When installing clamp (4), bushing (12) and screw (5), adjust the brake hose length between rear caliper and clamp so there is no extra length. Do not twist or stretch brake hose. Make sure bushing sits squarely in clamp and around hose.

 Install clamp (4) with bushing (12) and screw (5), to secure rear brake hose to rear fork. Tighten screw to 30-40 in-lbs (3.4-4.5 Nm).

#### NOTE

Master cylinder and brake caliper housings have a positive stop for banjo fitting. When tightening banjo bolt into master cylinder and brake caliper in the next step, rotate banjo fitting clockwise until it contacts positive stop.

 Position **new** washers (1) on each side of banjo fittings by rear brake master cylinder and rear brake caliper. Insert banjo bolts (2) through washers and banjo fittings. Tighten to 20-25 ft-lbs (27.1-33.9 Nm).

# **A**WARNING

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

#### VOTE

Rear brake master cylinder reservoir must be in a level position when filling and checking fluid level.


- Position motorcycle upright (not resting on jiffy stand). Fill
  rear brake master cylinder reservoir with DOT 4 BRAKE
  FLUID and bleed brake system. See <u>2.17 BLEEDING</u>
  BRAKES.
- Tighten bleeder valve to 35-61 in-lbs (4.0-6.9 Nm). Install bleeder nipple cap.

# WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

- 9. Verify tail lamp, and stop lamp.
- Test ride motorcycle. If rear brake feels spongy, bleed system again. See <u>2.17 BLEEDING BRAKES</u>.

2013 Sportster Service: Chassis 2-91

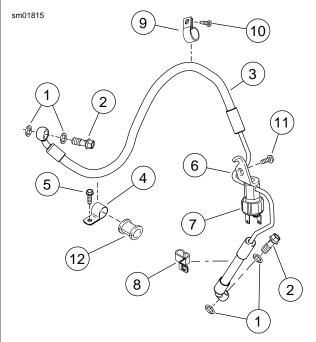

- 1. Washer (4)
- 2. Banjo bolt (2)
- 3. Rear brake line
- 4. Clamp
- 5. Screw
- 6. Brake line/switch tee
- 7. Stop lamp switch assembly
- 8. Clamp
- 9. Clamp
- 10. Screw
- 11. Screw
- 12. Bushing

Figure 2-131. Rear Brake Line: XL Models

# **REAR BRAKE LINE: XR 1200X**

FASTENER	TORQUE	VALUE
Stop lamp, rear, switch: XR 1200X	132-168 <b>in-lbs</b>	14.9-18.9 Nm
Brake line/switch, rear, tee bracket screw: XR 1200X	17-22 <b>in-lbs</b>	1.9-2.5 Nm
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

#### **NOTICE**


D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### NOTE

If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

#### Removal

- Drain rear brake master cylinder reservoir. See <u>2.13 REAR</u> BRAKE MASTER CYLINDER RESERVOIR.
- 2. Drain brake fluid:
  - a. Remove cap from bleeder valve on rear brake caliper.
  - Install a length of 5/16 in (7.9 mm) ID clear plastic tubing over caliper bleeder valve. Place free end in a suitable container.
  - c. Open bleeder valve 1/2 turn.
  - d. Pump brake pedal to drain brake fluid.
  - e. Close bleeder valve.
- 3. See Figure 2-132. Unplug harness connectors [121] from stop lamp switch (2).
- Remove banjo bolts (4) and washers (5) to detach rear brake line (3) from master cylinder body and rear brake caliper. Discard washers.
- 5. Remove fasteners (7) to detach brake line clamps (6) from rear fork.
- 6. Remove fasteners (8) securing brake line bracket/switch tee (1) to lower frame.
- 7. Hold hex body of brake line bracket/switch tee with an open-end wrench. Remove stop lamp switch from brake line bracket/switch tee assembly.
- 8. If necessary, remove clamp and bushing (9).

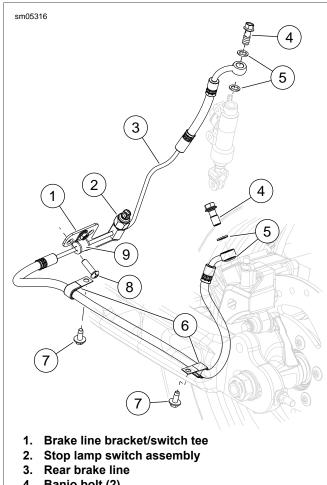

- 4. Banjo bolt (2)
- 5. Washer (4)
- 6. Clamp (2)
- 7. Fastener (2)
- 8. Fastener (2)
- Clamp and bushing

Figure 2-132. Rear Brake Line: XR 1200X

# Installation

- See Figure 2-132. Thread stop lamp switch (2) into brake line bracket/switch tee (1) on rear brake line (3). Hold hex body of brake line bracket/switch tee with an open-end wrench. Using a 1.0-in six-point deep socket, tighten stop lamp switch assembly to 132-168 in-lbs (14.9-18.9 Nm).
- 2. If removed, install clamp and bushing (9).

# WARNING

Do not bend metal brake line. Bending brake line could cause metal fatigue and brake failure, which could result in death or serious injury. (00543b)

- Route brake line assembly to master cylinder and brake caliper. Loosely install new washers (5) and banjo bolts (4) to hold line in place.
- Position brake line bracket/switch tee on lower frame and secure with fasteners (8). Tighten to 17-22 in-lbs (1.9-2.5
- Connect harness connectors [121] to stop lamp switch (2).

#### **NOTES**

- Make sure stop lamp switch harness does not contact grounding strap.
- Master cylinder and brake caliper housings have a positive stop for banjo fitting. When tightening banjo bolt into master cylinder and brake caliper in the next step, rotate banjo fitting clockwise until it contacts positive stop.
- With new washers (5) on each side of banjo fittings, tighten banjo bolts (4) to 20-25 ft-lbs (27.1-33.9 Nm).
- Secure brake line to bottom of rear fork with clamps (6) and fasteners (7).

# **AWARNING**

After servicing brakes and before moving motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00279a)

Rear brake master cylinder reservoir must be in a level position when filling and checking fluid level.

- Position motorcycle upright (not resting on jiffy stand). Fill rear brake master cylinder reservoir with DOT 4 BRAKE FLUID and bleed brake system. See 2.17 BLEEDING BRAKES.
- 9. Tighten bleeder valve to 35-61 in-lbs (4.0-6.9 Nm). Install bleeder nipple cap.
- 10. Verify tail lamp, and stop lamp.
- 11. Test ride motorcycle. If rear brake feels spongy, bleed system again. See 2.17 BLEEDING BRAKES.

# **BLEEDING BRAKES**

# **GENERAL**

# WARNING

Use denatured alcohol to clean brake system components. Do not use mineral-based solvents (such as gasoline or paint thinner), which will deteriorate rubber parts even after assembly. Deterioration of these components can cause brake failure, which could result in death or serious injury. (00291a)

# **A**CAUTION

Direct contact of D.O.T. 4 brake fluid with eyes can cause irritation. Avoid eye contact. In case of eye contact flush with large amounts of water and get medical attention. Swallowing large amounts of D.O.T. 4 brake fluid can cause digestive discomfort. If swallowed, obtain medical attention. Use in well ventilated area. KEEP OUT OF REACH OF CHILDREN. (00240a)

### **NOTICE**

D.O.T. 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239b)

#### **NOTICE**

Do not allow dirt or debris to enter the master cylinder reservoir. Dirt or debris in the reservoir can cause improper operation and equipment damage. (00205c)

Front brake hand lever and rear brake foot pedal must have a firm feel when brakes are applied. If not, bleed system as described.

# **PROCEDURE**

PART NUMBER	TOOL NAME
SNAP-ON BB200A	BASIC VACUUM BRAKE BLEEDER

FASTENER	TORQUE	VALUE
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm
Brake master cylinder, front, reservoir cover screws	9-17 in-lbs	1.0-2.0 Nm

# NOTE

If the brake system was completely drained, use the BASIC VACUUM BRAKE BLEEDER (Part No. Snap-On BB200A). Refer to the instructions provided with the tool. If a vacuum brake bleeder is not available, use the following procedure.

 Remove bleeder valve cap. Install end of clear plastic tubing over bleeder valve and place free end in a clean container. Position vehicle or handlebar so master cylinder reservoir is level.

#### NOTE

Protect paint from brake fluid spills. Wrap a clean shop cloth around the outside of the master cylinder reservoir.

3. Remove cover from master cylinder reservoir.

# **A**WARNING

A plugged or covered relief port can cause brake drag or lock-up, which could lead to loss of control, resulting in death or serious injury. (00288a)

- Refer to <u>Table 2-18</u>. Add brake fluid as necessary. Verify operation of the master cylinder relief port by actuating the brake pedal or lever. A slight spurt of fluid will break the surface.
- 5. Operate the brake lever or pedal to build hydraulic pres-

#### NOTE

Pay careful attention to the level of the fluid in the master cylinder reservoir and add fluid before it empties to avoid drawing air into the brake lines.

- 6. While holding pressure with the brake lever or pedal:
  - a. Open bleeder valve about 3/4 turn.
  - Close bleeder valve as soon as the lever or pedal has moved full range of travel.
  - Allow brake lever or pedal to return slowly to its released position.
- Repeat steps until all air bubbles are purged and a solid column of fluid is observed in the bleeder tube.
- Tighten bleeder valve to specification. Install bleeder valve cap.

#### NOTE

If bleeding a dual caliper brake system, repeat steps to bleed the second brake line and caliper.

9. Check and fill reservoir to specified level.

#### NOTE

Check master cylinder cover gasket bellows. Verify that the master cylinder cover gasket bellows is not extended or brake fluid will be ejected from the reservoir.

- Refer to <u>Table 2-19</u>. Verify gasket and sealing surfaces are free of debris. Install master cylinder reservoir cover:
  - a. Front Master Cylinder Reservoir: Orient the cover with the vent holes facing the rear. Install cover screws and tighten to specification.
  - Rear Master Cylinder Reservoir: Install cover screws and tighten to specification.

#### NOTE

Dispose of used brake fluid in accordance with local regula-

11. Verify stop lamp operation.

2-94 2013 Sportster Service: Chassis

# **A**WARNING

After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

12. Test ride motorcycle. Repeat the bleeding procedure if brakes feel spongy.

Table 2-18. Fluid Level

ITEM	SPECIFICATION
Front reservoir	Boss or ridge
Rear reservoir	Ledge or range window

**Table 2-19. Torque Specifications** 

COMPONENT	TORQUE
Bleeder	35-61 <b>in-lbs</b> (4.0-6.9 Nm)
Front cover	9-17 <b>in-lbs</b> (1.0-2.0 Nm)
Rear cover	Hand tighten

2013 Sportster Service: Chassis 2-95

# **LEFT SIDE COVER**

# **GENERAL**

See Figure 2-133. The left side cover provides access to the battery (1), fuses (3, 4) and diagnostic connector (5).


XL Models: The left side cover is secured by two barrel clips secured to two upper slots that fit into socket clips mounted to the frame.

XR 1200X:The left side cover is secured by two molded-in posts that fit into grommets.

The side cover is also secured by a bottom slot that fits onto a mounting tab on the battery tray.

#### NOTE

The left side cover does not need to be completely removed to access the battery or fuses.

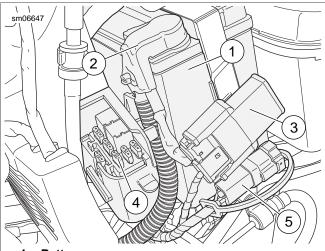

- **Battery**
- Positive (+) battery terminal (under protective rubber boot)
- Main fuse and holder
- System fuses and relays
- 5. Diagnostic connector (data link)

Figure 2-133. Main Fuse and Battery Location: All Models


# **OPENING LEFT SIDE COVER**

Place a clean, dry cloth over rear brake master cylinder reservoir and left passenger foot peg (if equipped). This will protect left side cover from damage.

#### NOTE

On XL models, disengage the rear clip first for easier opening.

See Figure 2-134 or Figure 2-135. Grasp top corners of side cover. Gently pull away from plastic socket clips (XL models) or grommets (XR 1200X) on frame.

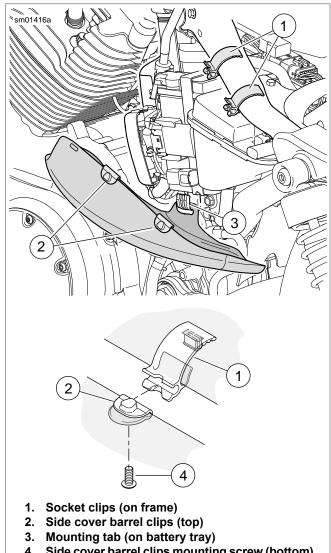

Side cover barrel clips mounting screw (bottom)

Figure 2-134. Left Side Cover: XL Models

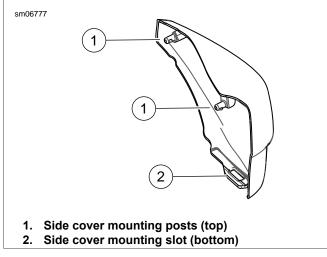


Figure 2-135. Left Side Cover: XR 1200X

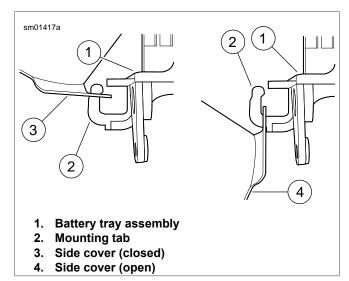


Figure 2-136. Left Side Cover Bottom Mount: All Models

 See <u>Figure 2-136</u>. Rotate top of cover away from motorcycle and down slightly. Mounting slot on cover will slide down mounting tab (2) on battery tray assembly (1). Side cover (4) will rest on top of rear brake master cylinder reservoir and left passenger footrest (if equipped).

#### **NOTICE**

Leaning or placing tools on side cover could cause damage to cover and/or mounting tab on battery tray. (00523b)

# **CLOSING LEFT SIDE COVER**

- Grasp top corners of side cover. While rotating top of cover up toward motorcycle, gently pull cover up so that mounting slot slides up mounting tab.
- 2. Press top of side cover into place:
  - a. XL models: See <u>Figure 2-134</u>. Line up barrel clips on side cover with socket clips on motorcycle frame, aligning with front clip first. Press top of side cover into clips until you hear an audible snap.
  - XR 1200X: See Figure 2-135. Line up molded-in posts in top of side cover with mounting grommets on motorcycle frame. Press posts in side cover into grommets until snug.

#### NOTE

Side cover should snap into place with minimal pressure. Using excessive force or striking side cover to close it can damage mounting clips (XL models) or molded-in posts (XR 1200X).

#### REMOVING LEFT SIDE COVER

 See <u>Figure 2-134</u> or <u>Figure 2-135</u>. Grasp top corners of side cover. Gently pull away from plastic mounting clips (XL models) or grommets (XR 1200X) on frame.

#### NOTE

On XL models, disengage the rear clip first for easier opening.

 See <u>Figure 2-137</u>. Lift side cover up and tilt cover to the rear of the motorcycle. With a slight back and forth rocking motion, pull up gently until cover disengages from mounting tab on battery tray.

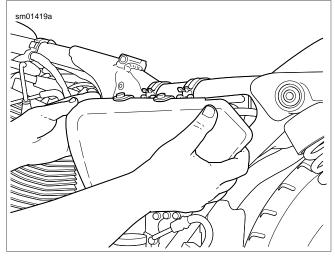


Figure 2-137. Removing Left Side Cover: All Models (XL Model Shown)

#### INSTALLING LEFT SIDE COVER

- Position side cover over battery tray assembly. Align slot in bottom of cover to mounting tab on battery tray.
- 2. Gently guide the side cover down over mounting tab.
- Close the left side cover. See <u>2.18 LEFT SIDE COVER</u>, <u>Closing Left Side Cover</u>.

# FRONT FORK: XL MODELS

#### CHANGING FORK OIL: XL MODELS

FASTENER	TORQUE	VALUE
Fork, front, oil drain screw: XL 883N/R	13-17 <b>in-lbs</b>	1.5-2.0 Nm
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm

# Drain Forks: XL 883N/R

- 1. Place a drain pan under bottom of the fork slider.
- 2. See Figure 2-138. With the motorcycle upright (not resting on jiffy stand) and with the front fork pointed straight ahead, remove the drain screw and washer (1) from the bottom of the slider tube (4).
- Drain fork oil by repeatedly compressing front suspension slowly.

#### **NOTES**

- If fork oil is emulsified, aerated or light brown in color, it has been contaminated by water. Replace the fork oil seals.
- Dispose of fork oil in accordance with local regulations.
- Replace the drain screw and washer. Tighten to 13-17 in-lbs (1.5-2.0 Nm).

Fill Forks: XL 883N/R


# WARNING

Incorrect amount of fork oil can adversely affect handling and lead to loss of vehicle control, which could result in death or serious injury. (00298a)

#### NOTE

Extend the forks to relieve the spring preload by raising the motorcycle off the ground.

- See <u>Figure 2-138</u>. Remove fork slider tube cap (2) with O-ring (3) from each slider tube (4). Replace the O-ring if damaged or worn.
- 2. Fill each fork with type TYPE "E" HYDRAULIC FORK OIL to specification. Refer to <u>Table 2-20</u>.
- Install each slider tube cap. Tighten to 22-58 ft-lbs (29.9-78.7 Nm).

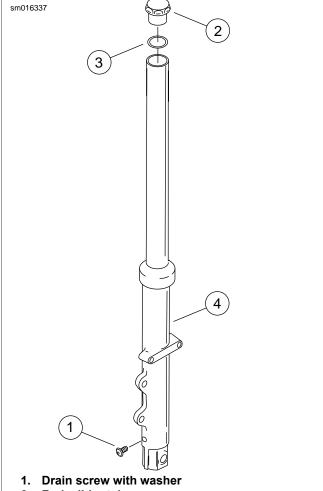

- 2. Fork slider tube cap
- 3. O-ring
- 4. Slider tube

Figure 2-138. Draining Front Fork Oil: XL 883N/R

Table 2-20. Fork Oil Specifications: XL Models

MODEL	oz	mL
XL 883L	12.3	364
XL 883N	13.6	401
XL 883R	12.4	366
XL 1200V/C/C ANV/CP/CA/CB	12.4	366
XL 1200X	11.4	337

# Drain Forks: XL 883L and XL 1200X/C/C ANV/CP/CA/CB/V

- Remove the fork from the fork brackets. See <u>2.19 FRONT</u> <u>FORK: XL MODELS, Removal</u>.
- 2. Remove the fork cap.
- 3. Turn the fork upside down over a pan and pump the slider to drain out the fork oil.

#### **REMOVAL**

- Remove front brake caliper(s). See <u>2.9 FRONT BRAKE</u> CALIPER: XL MODELS.
- 2. Remove front wheel assembly. See 2.5 WHEELS.
- Remove front fender mounting screws and locknuts. Remove fender. See 2.31 FRONT FENDER.
- See <u>Figure 2-139</u>. Loosen, but do not remove, slider tube caps (1).
- Loosen front fork upper and lower bracket pinch screws (2 and 3). Remove fork assemblies from fork brackets.

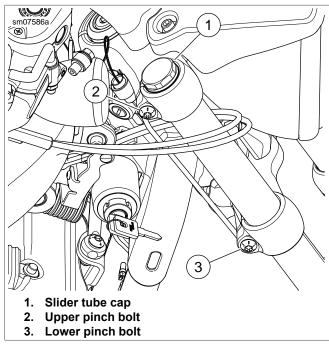


Figure 2-139. Fork Tube Bracket

# **DISASSEMBLY**

# **Drain Fork Oil**

- 1. See <u>Figure 2-141</u>. Remove tube cap (7) from slider tube (9). Remove O-ring (6) from tube cap.
- Place a pan under the fork. Remove the drain screw and washer (19) from slider. Drain the fork oil.

# Fork Disassembly

- 1. See Figure 2-141. Remove spring (5) from slider tube.
- All except XL 883L and XL 1200X: Remove spring collar (20) and spring washer (21) from slider tube.
- 3. All except XL 883N: Remove cover (11).

#### NOTE

See <u>Figure 2-144</u>. The XL 883N is equipped with fork gaiters (2) instead of metal covers. The lower lip (3) of the gaiter fits into the groove at the upper end of the slider (1). The upper end of the gaiter fits tightly around the slider tube, just below the lower bracket (4).

- XL 883N: See Figure 2-144. Peel back lower lip (3) of fork gaiter (2) from slider groove and slide fork gaiter up and off end of slider tube.
- 5. See <u>Figure 2-141</u>. Remove dust seal (12). Compress internal circle clip (13). Remove clip from groove in top of slider bore.
- 6. Remove screw (18) and washer (17) from bottom of slider.

#### NOTE

Since there is little resistance to damper tube (3) rotation within slider tube (9) when removing screw (18), use an air impact wrench for best results.

- Withdraw slider tube (9) from slider until lower bushing (10) on slider tube contacts upper bushing (1) in slider.
- 8. Tap out the oil seal (14), the spacer (2) and the upper bushing with the lower bushing on the slider.
- Remove sleeve (15). Sleeve will be found within slider or on bottom end of damper tube (3).
- Insert a small diameter rod through opening in bottom of slider tube to remove damper tube assembly.
- 11. Remove rebound spring (8) from damper tube.
- 12. Remove damper tube ring(s) (4) from damper tube.
- Remove lower bushing from damper tube only if replacement is necessary.

#### CLEANING, INSPECTION AND REPAIR

- Thoroughly clean and inspect all parts. Replace as necessary.
- See <u>Figure 2-140</u>. Inspect the O-ring (6) for damage, wear or general deterioration. Replace as necessary.
- Replace all other removed seals.
- 4. Inspect damper tube ring(s) (4). Replace as necessary.
- Check dust seal (12) where it contacts slider tube (9). Dust seal should provide continuous contact against slider tube and should not show excessive wear.
- Check slider tube where it is contacted by seal. Tube surface should be shiny, smooth and free of scoring or abrasions.
- Verify small hole in lower end of slider tube groove is unobstructed.

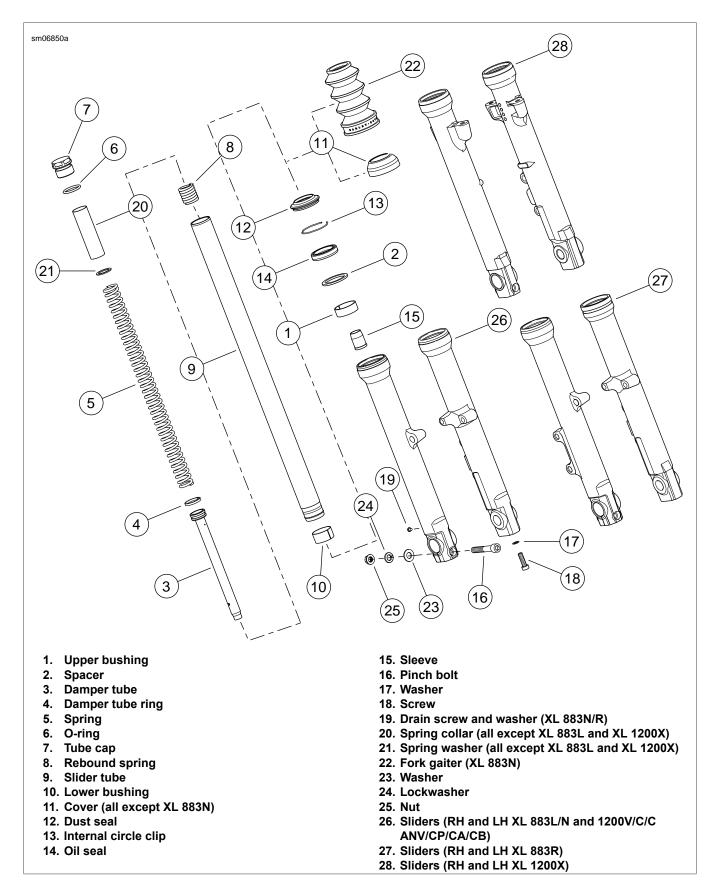


Figure 2-140. Front Slider Tube/Slider Assembly: XL Models

#### **ASSEMBLY**

PART NUMBER	TOOL NAME
	FORK SEAL AND BUSHING INSTALLATION TOOL

FASTENER	TORQUE	VALUE
Fork slider tube fastener: XL	132-216	14.9-24.4 Nm
Models	in-lbs	

- See <u>Figure 2-140</u>. If lower bushing (10) was removed, install **new** lower bushing in groove of slider tube (9). Expand bushing only enough to fit over tube.
- Install damper tube ring(s) (4) into groove(s) of damper tube (3).
- 3. Place rebound spring (8) over damper tube (3). Insert damper tube into slider tube.
- Insert spring (5) into slider tube with the tapered end down.
   Push damper tube through opening at bottom of slider tube using spring. Place sleeve (15) over end of damper tube.
- All except XL 1200X: Install spring washer (21) and spring collar (20) into slider tube.
- Install slider tube assembly into slider. Install screw (18) with washer (17) at bottom of slider. Move slider tube through its full range of travel within slider several times to verify proper component alignment. Then, applying downward force on spring, final tighten screw to 132-216 in-lbs (14.9-24.4 Nm).

#### NOTES

- See <u>Figure 2-141</u>. Coat the lips (3) of the oil with HARLEY-DAVIDSON SEAL GREASE.
- Apply HARLEY-DAVIDSON SEAL GREASE to the mating surfaces of the dust cover and the oil seal.
- 7. See Figure 2-140. Place upper bushing (1), spacer (2) (concave side down) and oil seal (14) (lettering side up) over slider tube. Place FORK SEAL AND BUSHING INSTALLATION TOOL (Part No. HD-36583) over slider tube. Install bushing, spacer and seal into slider bore by tapping components downward with the installation tool.
- Install internal circle clip (13) into groove in top of slider bore.
- 9. Install dust seal (12) at top of slider.
- 10. All except XL 883N: Install cover (11).
- 11. **XL 883N:** See Figure 2-144. Slide a fork gaiter (2) down each slider tube. Peel back the lower lip (3) and slip over the end of fork slider (1). Fit the lower lip down over groove in upper end of fork slider. Slide the upper end of fork gaiter down as far as possible.
- 12. All except XL 883L and XL 1200X/V/C/C ANV/CP/CA/CB: See Figure 2-140. Install the drain screw and washer (19) into lower end of slider.
- 13. Fill the fork tube with fork oil. See <u>2.19 FRONT FORK: XL MODELS</u>, Fill with Fork Oil.

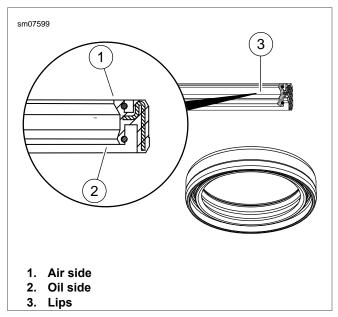


Figure 2-141. Oil Seal

# **FILL WITH FORK OIL**

PART NUMBER	TOOL NAME
HD-59000-B	OIL LEVEL GAUGE

- 1. Position fork tube assembly upright. Compress the assembly fully.
- Pour approximately 14 fl oz (414 mL) of TYPE "E" HYDRAULIC FORK OIL into fork.
- 3. Pump the slider tube 8-10 times to expel air and compress the assembly fully.
- 4. See Figure 2-142. Use the OIL LEVEL GAUGE (Part No. HD-59000-B) to set the fork oil level.
  - a. Adjust the length of the draw off tube to specification(1). Refer to <u>Table 2-21</u>.
  - b. Lock the tube (2) to the collar (3) with the thumb lock (4).
  - Fit the collar to the fork tube.
  - d. Draw off the excess oil.
- 5. Install spring and other components.

#### NOTE

Apply HARLEY-DAVIDSON SEAL GREASE to the O-ring.

Install slider tube cap with O-ring. Screw tube cap all the way into slider tube. Finger-tighten only.

Table 2-21. Fork Oil Level Specifications: XL Models

MODEL	in	mm
XL 883N	3.11	79
XL 883L	4.80	122
XL 1200X	6.34	161
XL 883R/XL 1200V	4.92	125
XL 1200C/C ANV/CP/CA/CB	4.72	120

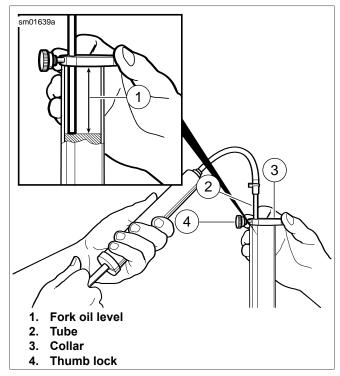


Figure 2-142. Oil Level Gauge

# **INSTALLATION**

FASTENER	TORQUE	E VALUE
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm

- See <u>Figure 2-143</u>. Insert each fork assembly through front fork lower and upper brackets. Position slider tubes so that top of each tube cap extends 0.42-0.50 in (10.7-12.7 mm) (1) above top surface of front fork upper bracket.
- 2. Tighten front fork lower bracket pinch screws (2) to 30-35 ft-lbs (40.7-47.5 Nm).
- Now tighten slider tube caps (3) to 22-58 ft-lbs (29.9-78.7 Nm).
- 4. Tighten front fork upper bracket pinch screws (4) to 30-35 ft-lbs (40.7-47.5 Nm).

- 5. **XL 883N:** See Figure 2-144. Slide upper end of each fork gaiter (2) up until it contacts underside of front fork lower bracket (4).
- Install front fender. See <u>2.31 FRONT FENDER</u>.
- Install front wheel assembly and front brake caliper. See 2.5 WHEELS.


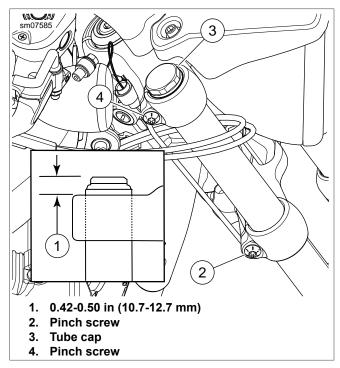


Figure 2-143. Tube Cap Extension

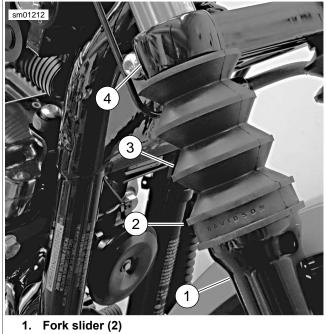

- 2. Fork gaiter (2)
- 3. Fork gaiter lower lip
- 4. Front fork lower bracket

Figure 2-144. Fork Gaiter: XL 883N Only

# **FRONT FORK: XR 1200X**

# **REMOVAL**

PART NUMBER	TOOL NAME
HD-48287	TRIPLE TREE WEDGE TOOL

- Remove front brake calipers. See <u>2.10 FRONT BRAKE</u> CALIPER: XR 1200X.
- 2. Remove front wheel assembly. See <u>2.5 WHEELS</u>.
- Remove front fender and bracket assembly. See 2.31 FRONT FENDER.
- See <u>Figure 2-145</u>. Remove upper and lower fork bracket pinch bolts.
- 5. Using TRIPLE TREE WEDGE TOOL (Part No. HD-48287), insert wedge in fork brackets to relieve clamping pressure on fork tubes.
- 6. Remove fork from upper and lower fork brackets.
- 7. Repeat steps for other side.

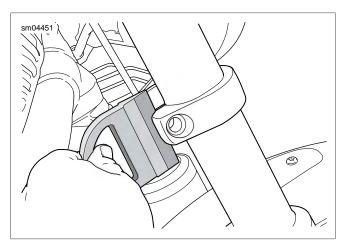


Figure 2-145. Insert Triple Tree Wedge (typical)

# **DISASSEMBLY**

PART NUMBER	TOOL NAME
HD-41177	FORK HOLDING TOOL
HD-50083	ROD CASE GUIDE SOCKET
HD-50084	FORK CAP WRENCH

# **Initial Disassembly**

# **A**WARNING

Wear safety glasses or goggles when servicing fork assembly. Do not remove slider tube caps without relieving spring preload or caps and springs can fly out, which could result in death or serious injury. (00297a)

#### NOTE

Count and record the number of rotations out (counterclockwise) for the preload adjuster.

- 1. See Figure 2-146. Back the preload off the fork spring.
- Clamp the outer tube in the FORK HOLDING TOOL (Part No. HD-41177).
- See <u>Figure 2-147</u>. Loosen the fork cap with the FORK CAP WRENCH (Part No. HD-50084).
- See <u>Figure 2-148</u>. Pull the cap and piston rod up out of the outer tube and loosen the rod case guide with the ROD CASE GUIDE SOCKET (Part No. HD-50083).

#### NOTE

Hold the rod case guide. Turn the axle clamp casting to unthread the case guide from the inner tube.

 See <u>Figure 2-149</u>. Remove the piston rod assembly from the inner tube.

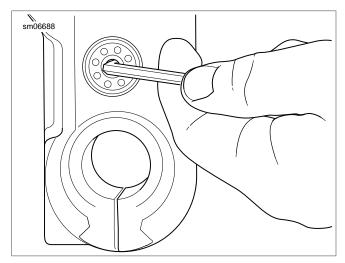


Figure 2-146. Preload Adjuster

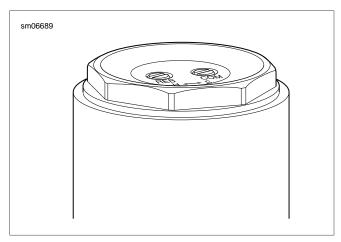


Figure 2-147. Loosen Fork Cap

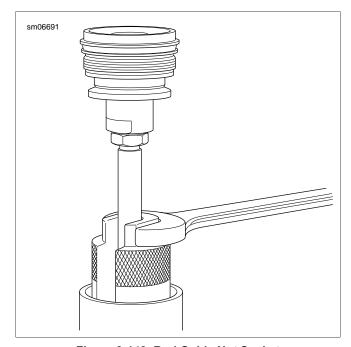


Figure 2-148. Rod Guide Nut Socket

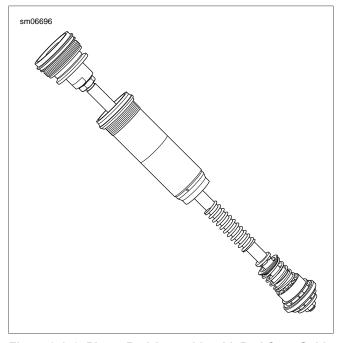


Figure 2-149. Piston Rod Assembly with Rod Case Guide

# **Drain the Fork Oil**

- 1. See Figure 2-150. Drain the oil into a pan. Remove:
  - a. The upper spring collar
  - b. The spring
  - c. The lower spring collar
- 2. Pump the inner tube 10 or more times to empty the oil from the fork.

#### NOTE

Dispose of fork oil in accordance with local regulations.

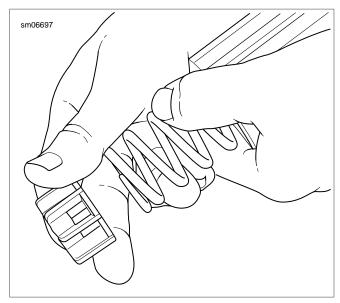


Figure 2-150. Remove the Upper Spring Collar and the Spring

# **Complete Disassembly**

- 1. See <u>Figure 2-151</u>. Remove the stopper ring (18) from the groove inside the outer tube (13).
- 2. Slide the inner tube (20) out of the outer tube.
- 3. From the inner tube remove:
  - a. Slide bushing (14)
  - b. Guide bushing (15)
  - c. Seal spacer (16)
  - d. Oil seal (17)
  - e. The stopper ring
  - f. The dust seal (19)

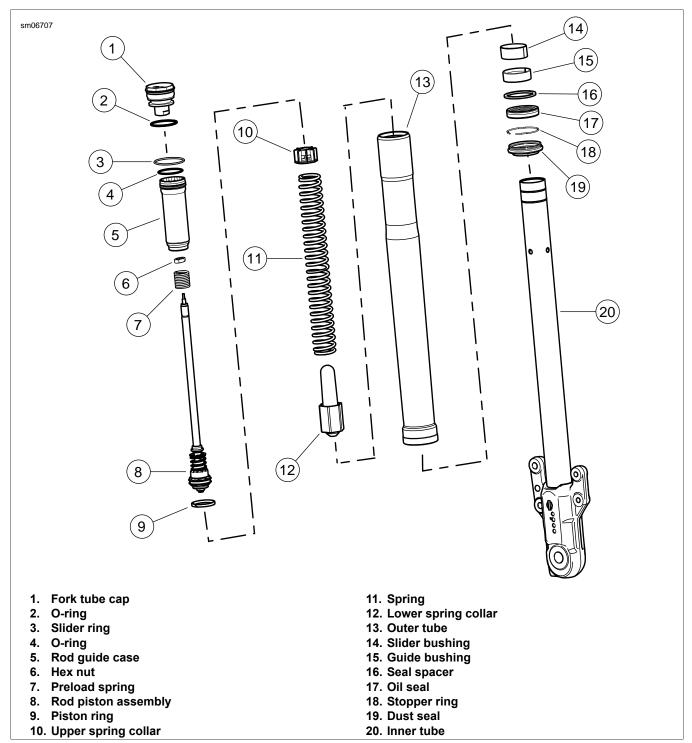


Figure 2-151. Fork Assembly: XR 1200X

# **CLEANING AND INSPECTION**

- 1. Thoroughly clean components.
- 2. Replace all oil seals and O-rings.

- 3. Inspect components. Replace as necessary.
  - a. Fork tube bushing and slider guide bushing for wear.
  - b. Dust cover (where it rubs on fork tube) for wear.
  - c. Springs for damaged coils.
  - d. Fork tube or slider for bends or wear.

# **ASSEMBLY**

PART NUMBER	TOOL NAME
B-42571	FORK SEAL DRIVER AND DUST BOOT INSTALLER
B-59000B	OIL LEVEL GAUGE
HD-41177	FORK HOLDING TOOL
HD-50083	ROD CASE GUIDE SOCKET
HD-50084	FORK CAP WRENCH

FASTENER	TORQUE	VALUE
Fork piston rod hex nut: XR 1200X	19-22 ft-lbs	26-30 Nm
Rod guide case to inner tube: XR 1200X	66 ft-lbs	90 Nm
Fork cap to outer tube: XR 1200X	21-29 ft-lbs	29-39 Nm

# **Piston Rod Service**

1. Separate the hex nut from the fork cap and remove the fork cap and hex nut from the piston rod assembly.

#### **NOTES**

- The piston rod assembly should not be disassembled any further than is described.
- Do not use TYPE "E" HYDRAULIC FORK OIL to lubricate the components for assembly. Use BIG PISTON FORK OII
- 2. See Figure 2-152. Replace the O-ring on the fork cap.
- 3. See Figure 2-153. Replace the rod guide case O-ring (1) and the slider ring (2).
- 4. Replace the rebound spring.
- 5. See Figure 2-154. Replace the fork piston ring.
- Install the hex nut and the fork cap on the piston rod assembly.
- 7. Tighten to 19-22 ft-lbs (26-30 Nm).

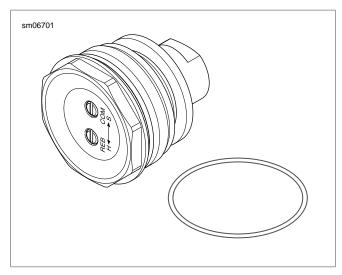


Figure 2-152. Fork Cap and O-Ring

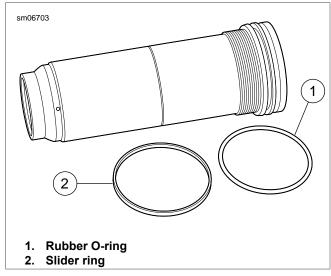


Figure 2-153. Rod Guide Case and O-Rings

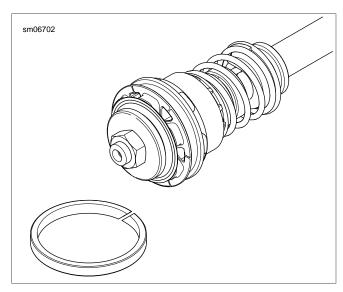


Figure 2-154. Fork Rod Piston and Ring

# **Initial Assembly**

- 1. See Figure 2-155. Install on the inner fork tube:
  - a. Dust seal (1)
  - b. Oil seal stopper ring (2)
  - c. Seal with the stamp side down (3)
  - d. Seal spacer with the chamfer up (4)
  - e. Guide bushing (6)
  - f. Slide bushing (5)

#### NOTE

Do not use TYPE "E" HYDRAULIC FORK OIL to lubricate the components for assembly. Use BIG PISTON FORK OIL to lubricate the components for assembly.

- Spread fork oil or sealing grease inside the lip of the oil seal.
- 3. Slide the inner tube into the outer tube.

- See <u>Figure 2-156</u>. Seat the oil seal with the FORK SEAL DRIVER AND DUST BOOT INSTALLER (Part No. B-42571).
- 5. Snap the stopper ring into the groove in the outer tube.
- 6. Seat the dust seal with the seal driver.

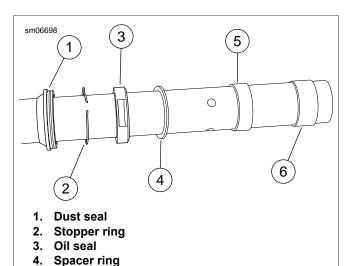


Figure 2-155. Inner Tube Components

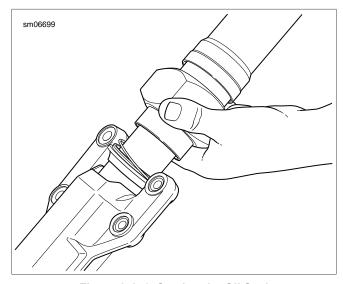


Figure 2-156. Seating the Oil Seal

# Fill with Fork Oil

5. Slide bushing

**Guide bushing** 

 Mount the fork assembly in the FORK HOLDING TOOL (Part No. HD-41177) and fully compress the inner tube.

#### NOTE

Measure the fork spring. Replace as necessary. Refer to Table 2-22.

- 2. Install:
  - a. Lower spring collar
  - b. Fork spring
  - c. Upper spring collar

#### NOTE

Do not use TYPE "E" HYDRAULIC FORK OIL in the XR 1200X forks.

- 3. Fill fork with BIG PISTON FORK OIL until the oil reaches the side hole in the inner tube.
- 4. Pump the outer tube 8-10 times to expel the air from the assembly.

#### NOTE

Do not damage the slide ring on the rod guide case.

- 5. Install the piston assembly:
  - a. Guide the piston rod into the inner tube.
  - b. Hand tighten the rod guide case to the inner tube.
  - Gently pull up on the outer tube to fit the slider ring to the outer tube.
- 6. Using the ROD CASE GUIDE SOCKET (Part No. HD-50083), tighten to 66 ft-lbs (90 Nm).
- Fill fork with addition BIG PISTON FORK OIL until the oil spills over the rod guide case.
- 8. Pump the piston assembly/outer tube several times to expel any additional air.

 See <u>Figure 2-157</u>. Use the OIL LEVEL GAUGE (Part No. B-59000B) to set the level of the oil in the outer fork tube to specification. Refer to <u>Table 2-24</u>.

Table 2-22. Minimum Spring Service Length

MODEL	in	mm
XR 1200X	13.65	346.6

Table 2-23. Fork Oil Volume

MODEL	OZ	cm³
XR 1200X	19.6	580

Table 2-24. Fork Oil Level

MODEL	in	mm
XR 1200X	1.77	45

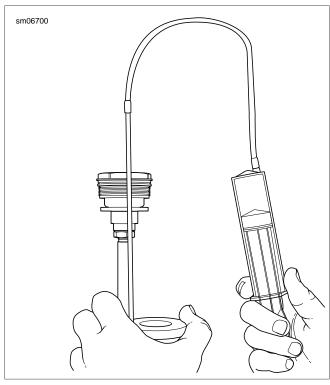


Figure 2-157. Drawing Off Excess Fork Oil

# **Complete Assembly**

- Use the FORK CAP WRENCH (Part No. HD-50084) to install the fork cap and tighten to 21-29 ft-lbs (29-39 Nm).
- 2. Adjust the preload to identical settings on both forks.

# INSTALLATION

PART NUMBER	TOOL NAME
HD-48287	TRIPLE TREE WEDGE TOOL

FASTENER	TORQUE VALUE	
Fork, front, bracket pinch	30-35 ft-lbs	40.7-47.5 Nm
screw		

#### **NOTES**

- Fork tube installation height must match the opposite side exactly for proper vehicle operation, reliability and performance.
- When installing fork leg in fork brackets, do not twist fork leg to avoid damage to cosmetic finishes.
- 1. Identify left and right side fork assemblies.
- 2. Insert fork assembly from the lower fork bracket upward through the upper fork bracket.
- 3. Remove TRIPLE TREE WEDGE TOOL (Part No. HD-48287) used during removal process.
- See <u>Figure 2-158</u>. Measure fork tube installation height. Adjust fork tubes to specification. Refer to <u>Table 2-25</u>.

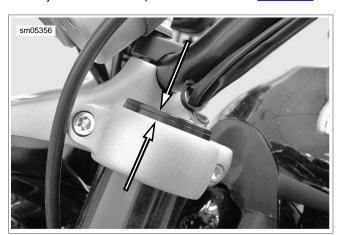


Figure 2-158. Fork Installation Height Measurement

Table 2-25. Fork Installation Height Specifications

MODEL	in	mm
XR 1200X	0.388-0.468	9.86-11.88

- 5. Tighten pinch bolts to 30-35 ft-lbs (40.7-47.5 Nm).
- Install front fender and bracket. See <u>2.31 FRONT</u> <u>FENDER</u>.
- Install front brake caliper hydraulic lines and install front brake calipers. See <u>2.10 FRONT BRAKE CALIPER: XR</u> <u>1200X</u>.
- 8. Install front wheel and align the wheel to the forks. See 2.5 WHEELS.

# FORK STEM AND BRACKET ASSEMBLY

# REMOVAL AND DISASSEMBLY

- 1. Cover the fuel tank.
- 2. Remove the fork assemblies. See <u>2.19 FRONT FORK:</u> XL MODELS or <u>2.20 FRONT FORK: XR 1200X.</u>
- 3. See Figure 2-159. Loosen fork stem pinch screw (7). Remove fork stem bolt (9) and washer (8).
- Lift handlebar assembly from steering head with fork upper bracket (6) attached. Carefully position assembly out of the way. Exercise caution to avoid damaging control cables, wiring harnesses, clutch cable or brake lines.

#### NOTE

Only disconnect handlebar connections if removing as an assembly.

Remove upper seal (5) and upper bearing cone (3). Slide fork stem and lower bracket (1) from frame.

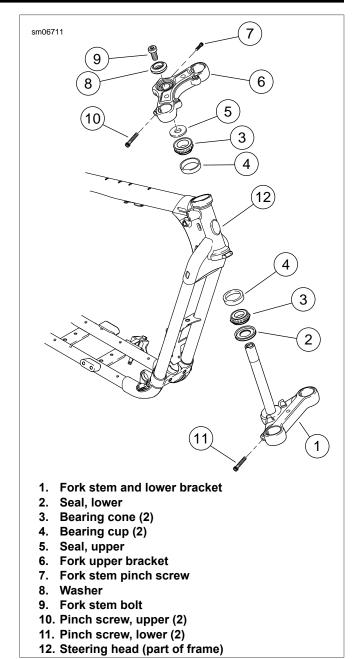


Figure 2-159. Fork Stem and Bracket Assembly: Typical

# **CLEANING, INSPECTION AND REPAIR**

PART NUMBER	TOOL NAME	
HD-33416	UNIVERSAL DRIVER HANDLE	
HD-39301-A	STEERING HEAD BEARING RACE REMOVAL TOOL	

- See <u>Figure 2-159</u>. Clean the seals (2, 5), bearing cones (3), fork stem and lower bracket (1) and steering head (12) with solvent.
- Inspect fork stem and lower bracket (1). Replace as necessary.

#### NOTE

Replace bearings and bearing cups as a set.

- Inspect bearings. Replace as necessary.
  - a. Pitting or scoring
  - b. Wear
  - c. Scoring
- Turn the bearings in the races to check for roughness. Replace as necessary.

#### **NOTICE**

Replace both bearing assemblies even if one assembly appeares to be good. Mismatched bearings can lead to excessive wear and premature replacement. (00532b)

- 5. Replace bearings and bearing cups as follows:
  - a. The lower bearing cone is a slip fit on the fork stem. Remove lower bearing cone by sliding it up and off fork stem. If necessary, gently pry bearing cone off fork stem with a pair of flat blade screw drivers. Remove lower seal (2).
  - b. Drive bearing cups from steering head using STEERING HEAD BEARING RACE REMOVAL TOOL (Part No. HD-39301-A) and UNIVERSAL DRIVER HANDLE (Part No. HD-33416). If bearing cups are removed, the bearings cannot be reused. They must be replaced.

#### ASSEMBLY AND INSTALLATION

PART NUMBER	TOOL NAME	
	STEERING HEAD BEARING RACE INSTALLATION TOOL	

FASTENER	TORQUE VALUE	
Fork, front, stem bolt, 1st torque	23-27 ft-lbs	31.2-36.6 Nm
Fork, front, stem bolt, final torque	72-96 in-lbs	8.1-10.9 Nm
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm

 See <u>Figure 2-159</u>. If bearing cups (4) were removed, obtain new bearings and bearing cups. Install new bearing cups into frame steering head using STEERING HEAD BEARING RACE INSTALLATION TOOL (Part No. HD-39302).

# **A**WARNING

Properly seat bearing cups in steering head bore. Improper seating can loosen fork stem bearings adversely affecting stability and handling, which could result in death or serious injury. (00302a)

- Liberally coat the bearing cones (3) with SPECIAL PUR-POSE GREASE. Work the grease thoroughly into the bearing rollers.
- 3. Place lower bearing seal (2) over fork stem. Install lower bearing cone (3) onto fork stem and bracket (1).
- 4. Insert fork stem and bracket (1) through the steering head. Install bearing cone (3) and seal (5) onto the stem.
- Install the upper bracket (6) including the handlebar assembly and loosely install fork stem bolt (9) with washer (8).
- Install fork slider and tube assemblies. See <u>2.19 FRONT FORK: XL MODELS</u> or <u>2.20 FRONT FORK: XR 1200X</u>.
   Leave both lower fork bracket pinch screws (11) loose.
- 7. Tighten fork stem bolt (9) to 23-27 ft-lbs (31.2-36.6 Nm). Loosen fork stem bolt, then retighten to 72-96 **in-lbs** (8.1-10.9 Nm).
- 8. Tighten lower fork bracket pinch bolt to 30-35 ft-lbs (40.7-47.5 Nm).
- Tighten fork stem pinch screw (7) to 30-35 ft-lbs (40.7-47.5 Nm).
- Adjust steering head bearing fall-away. See 1.19 STEERING HEAD BEARINGS, Fall-Away.

## **BELT GUARD AND DEBRIS DEFLECTOR**

#### **BELT GUARD: XL MODELS**

FASTENER	TORQUI	E VALUE
Belt guard screw: XL Models	120-180 <b>in-lbs</b>	13.6-20.4 Nm
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm

#### Removal

- See <u>Figure 2-160</u>. Remove right side lower shock absorber mount locknut (1).
- 2. Pull shock absorber mounting bolt (2) out slightly until it clears mounting hole in belt guard (4).
- 3. Remove screw (5), washer (6) and nut (7) securing front of belt guard to rear fork (10).

#### Installation

- See <u>Figure 2-160</u>. Slide belt guard (4) into place. Tab on front of belt guard mounts outboard of mounting bracket on rear fork.
- 2. Secure front of belt guard to rear fork (10) with screw (5), washer (6) and nut (7). Tighten to 120-180 **in-lbs** (13.6-20.4 Nm).
- Push lower shock absorber bolt (2) through rear belt guard mounting hole. Thread locknut (1) on screw. Tighten to 45-50 ft-lbs (61-68 Nm).

#### **DEBRIS DEFLECTOR: XL MODELS**


FASTENER	TORQUE	VALUE
Debris deflector screw: XL Models	36-60 in-lbs	4.1-6.8 Nm

#### Removal

- 1. See <u>Figure 2-160</u>. Loosen, but do not remove, three screws with captive washers (9) securing debris deflector (8) to underside of rear fork (10).
- Slide debris deflector forward until keyway slots in deflector clear screw heads.

#### Installation

- 1. See <u>Figure 2-160</u>. Position debris deflector (8) in place on underside of rear fork (10).
- 2. Fit large end of keyway slots in deflector over screw heads and captive washers (9). Slide deflector rearward to lock screws in slots.
- 3. Tighten to 36-60 **in-lbs** (4.1-6.8 Nm).

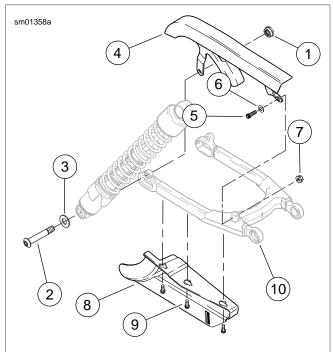

- 1. Locknut
- 2. Mounting bolt
- 3. Washer
- 4. Belt guard
- 5. Screw
- 6. Washer
- 7. Nut
- 8. Debris deflector
- 9. Screw with captive washer (3)
- 10. Rear fork

Figure 2-160. Belt Guard/Debris Deflector: XL Models

#### **BELT GUARD: XR 1200X**

FASTENER	TORQUE	VALUE
Belt guard screw: XR 1200X	72-96 in-lbs	8.1-10.8 Nm

#### Removal

See <u>Figure 2-161</u>. Remove two screws with captive washers (2) securing belt guard to top of rear fork (5).

#### Installation

- See <u>Figure 2-161</u>. Slide belt guard (1) into place on top of rear fork (5).
- 2. Install two screws with captive washers (2).
- 3. Tighten to 72-96 in-lbs (8.1-10.8 Nm).

#### **DEBRIS DEFLECTOR: XR 1200X**

FASTENER	TORQUE	VALUE
Debris deflector screw: XR 1200X	72-96 <b>in-lbs</b>	8.1-10.8 Nm

#### Removal


#### NOTE

Front screw is located inboard of debris deflector.

See <u>Figure 2-161</u>. Remove three screws with captive washers (4) securing debris deflector (3) to underside of rear fork (5).

#### Installation

- 1. See <u>Figure 2-161</u>. Position debris deflector (3) in place on underside of rear fork (5).
- 2. Install three screws (4).
- 3. Tighten to 72-96 **in-lbs** (8.1-10.8 Nm).

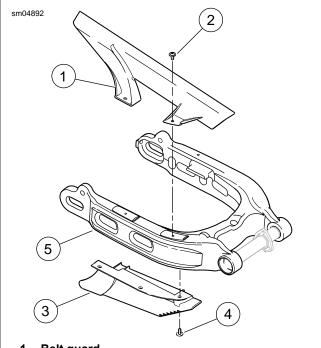

- 1. Belt guard
- 2. Screw with captive washer (2)
- 3. Debris deflector
- 4. Screw with captive washer (3) (front screw inboard of debris deflector)
- 5. Rear fork

Figure 2-161. Belt Guard/Debris Deflector: XR 1200X

REAR FORK 2.23

#### **REMOVAL**

#### NOTE

Label hardware for location and orientation upon removal.

- 1. Position motorcycle on a suitable lift.
- XL models: Remove rear exhaust pipe and muffler. See 4.13 EXHAUST SYSTEM: XL MODELS.
- XR 1200X: Remove exhaust system. See 4.14 EXHAUST SYSTEM: XR 1200X.
- 4. Remove rear wheel. See 2.5 WHEELS.
- Remove rear brake caliper assembly from rear fork. See 2.14 REAR BRAKE CALIPER: XL MODELS or 2.15 REAR BRAKE CALIPER: XR 1200X.
- 6. Remove screw(s) securing brake line clamp(s) to rear fork.
- XR 1200X: Remove fasteners securing brake line to left side of rear fork.
- Remove both shock absorber screws, washers and nuts from rear fork. See <u>2.24 SHOCK ABSORBERS</u>.
- Remove rear belt guard and debris deflector. See
   2.22 BELT GUARD AND DEBRIS DEFLECTOR.
- 10. XL Models: Remove rear brake reservoir cover by grasping cover and gently pulling straight out from reservoir. Remove reservoir mounting screw and pull reservoir back out of the way. See <u>2.13 REAR BRAKE MASTER</u> CYLINDER RESERVOIR.
- XL Models: Loosen, but do not remove, top mounting screw from left passenger footrest bracket. Remove bottom mounting screw. Move brake hoses and clamp forward slightly to gain access to left rear fork/engine mount bolt.
- 12. **XR 1200X:** Remove left and right rider footrests. See 2.42 RIDER FOOT CONTROLS: XR 1200X.
- See <u>Figure 2-162</u>. Support rear fork (3). Remove rear fork/engine mount bolts (1) and pull fork assembly from frame.

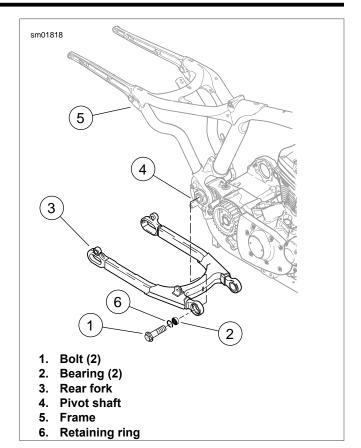


Figure 2-162. Rear Fork Assembly


#### **DISASSEMBLY**

PART NUMBER	TOOL NAME
	BEARING REMOVER/INSTALLER TOOL

#### NOTE

See <u>Figure 2-162</u>. Remove pivot bearings (2) only if replacement is required.

- See <u>Figure 2-163</u>. Using BEARING REMOVER/INSTALLER TOOL (Part No. HD-46281) (4, 5, 6), carefully press bearing assemblies from fork bearing bosses (2):
  - a. Place receiver cup (6) on press bed, with recessed end of cup facing up.
  - Place rear fork pivot bearing boss (2) over cup as shown in the photo.
  - c. Slide pilot (5) through bearing and into receiver cup.
  - d. Insert handle (4) through other rear fork pivot bearing boss and bearing, down into pilot.
  - e. Engage press ram on end of handle and press bearing out.
- 2. Turn rear fork over. Press out the opposite pivot bearing.

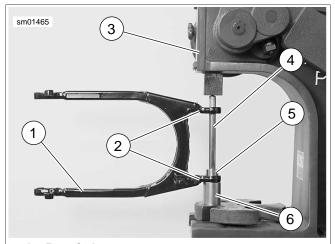

- 1. Rear fork
- 2. Pivot bearing boss
- 3. Press
- 4. Handle
- 5. Pilot
- 6. Receiver cup

Figure 2-163. Removing Rear Fork Pivot Bearings

#### **CLEANING AND INSPECTION**

1. Clean all components in solvent.

## **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- 2. Blow dry with low pressure compressed air.
- Carefully inspect bearings for wear and/or corrosion. Replace as necessary.
- See <u>Figure 2-162</u>. Make sure pivot bearing retaining ring
   is not bent or damaged. If it is, replace it with a **new** retaining ring.
- Make sure retaining ring is fully seated in the groove in each bearing (2).
- 6. Check that rear fork (3) is not bent, twisted or cracked. Replace as necessary.

#### **ASSEMBLY**

PART NUMBER	TOOL NAME
HD-46281	BEARING REMOVER/INSTALLER TOOL

- See <u>Figure 2-162</u>. If necessary, press **new** bearings (2) into position in rear fork, using BEARING REMOVER/INSTALLER TOOL (Part No. HD-46281):
  - a. See <u>Figure 2-164</u>. Place receiver cup (7) on press bed, with recessed end of cup facing up.
  - b. Place rear fork pivot bearing boss (2) over cup as shown in the photo.
  - Place **new** pivot bearing (6) over pivot bearing boss, with retaining ring side of bearing up.
  - d. Slide pilot (5) through **new** pivot bearing, through pivot bearing boss, and into receiver cup.
  - e. Insert handle (4) down into pilot.
  - f. Engage press ram on end of handle and press bearing down until retaining ring bottoms out in rear fork pivot bearing boss.
- Turn rear fork over. Press the other pivot bearing into rear fork pivot bearing boss.

#### **INSTALLATION**

FASTENER	TORQUE	VALUE
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm
Footrest mount fastener	45-50 ft-lbs	61-68 Nm
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm

- 1. Slide rear fork assembly into position on motorcycle.
- See <u>Figure 2-162</u>. Holding rear fork assembly in position, install rear fork/engine mount bolts (1). Tighten to 60-70 ft-lbs (81.4-95.0 Nm).
- XL Models: Position rear brake hose clamp and left passenger footrest bracket in place. Install lower mounting screw. Tighten both mounting screws to 45-50 ft-lbs (61-68 Nm).
- XL Models: Install rear brake reservoir using screw with captive washer. Tighten to 20-25 in-lbs (2.3-2.8 Nm). Place reservoir cover over reservoir and gently press cover into place. See 2.13 REAR BRAKE MASTER CYLINDER RESERVOIR.
- 5. **XR 1200X:** Install left and right rider footrests. See 2.42 RIDER FOOT CONTROLS: XR 1200X.
- 6. Install belt guard and debris deflector. See <u>2.22 BELT</u> GUARD AND DEBRIS DEFLECTOR.
- Install shock absorbers onto rear fork. See <u>2.24 SHOCK</u> ABSORBERS.

- Install rear brake caliper assembly. See <u>2.14 REAR BRAKE CALIPER: XL MODELS</u> or <u>2.15 REAR BRAKE CALIPER: XR 1200X</u>.
- 9. **XR 1200X:** Secure rear brake line to left side of fork. See <u>2.16 BRAKE LINES</u>.
- 10. Install rear wheel and adjust rear belt. See 2.5 WHEELS.
- 11. **XL Models:** Install rear exhaust pipe and muffler. See 4.13 EXHAUST SYSTEM: XL MODELS.
- 12. **XR 1200X:** Install exhaust system. See <u>4.14 EXHAUST SYSTEM: XR 1200X</u>.

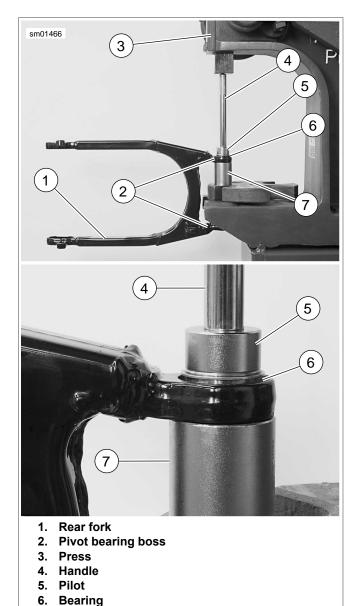


Figure 2-164. Installing Rear Fork Pivot Bearings

7. Receiver cup

## 2.24

## SHOCK ABSORBERS

#### REMOVAL

#### **NOTES**

- If a lift is not available, remove and install one shock absorber at at time.
- If necessary to remove saree guards, see <u>2.36 SAREE</u> <u>GUARD: INDIA MODELS, Saree Guard: XL 883R, XL</u> <u>1200C/C ANV (India)</u>.
- 1. Note the shock absorber settings.
  - a. All Models: Preload.
  - b. XR 1200X: Rebound and compression.
- See <u>Figure 2-165</u>. Remove fastener (1), washer (2) and locknut (3) from bottom end of the shock absorber (4 or 5).
- 3. Remove the fastener (6) and washer (7 or 2) from top end of shock absorber.
- 4. XL Models: Remove the stud cover (8).
- Remove the shock absorber.

#### **CLEANING AND INSPECTION**

#### NOTE

Replace shock absorbers as set if either unit is damaged.


- 1. Clean and inspect all parts for wear and damage.
- 2. Check rubber bushings for wear, cracking and stiffness.
- 3. Examine shock absorber for signs of leakage.

#### INSTALLATION

FASTENER	TORQUE	VALUE
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm

- 1. See Figure 2-165. Assemble the upper fastener stack.
  - a. **XL Models:** Assemble the upper fastener (6), the washer (7) and the stud cover (8).
  - XR 1200X: Assemble the upper fastener (6) and the washer (2).
- Install shock absorber mounting stack through the shock absorber (4 or 5).
- 3. Position bottom end of shock absorber against outboard side of rear fork mount. Insert mounting bolt (1) and washer (2) through the damper bushing (9) and the rear fork mount.
- Thread on the locknut (3).
- Remove the upper mounting bolt and apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads.

- Install the mounting bolt into the frame boss. Tighten to 45-50 ft-lbs (61-68 Nm).
- 7. Tighten the lower shock absorber locknut to 45-50 ft-lbs (61-68 Nm).
- 8. Adjust the shock absorber to the original settings.
  - a. All Models: Preload.
  - b. XR 1200X: Rebound and Compression.

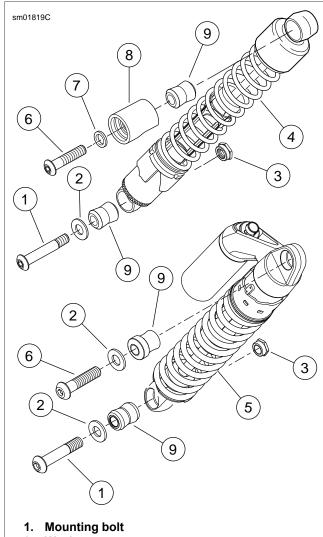

- 2. Washer
- 3. Locknut
- 4. Shock absorber: XL models
- 5. Shock absorber: XR 1200X
- 6. Mounting bolt
- 7. Washer
- 8. Stud cover: XL models
- 9. Damper bushing

Figure 2-165. Shock Absorbers: All Models

# SHOCK DISPOSAL: SCHRADER VALVE MODELS

- 1. Remove the shock.
- 2. See Figure 2-166. Locate the valve.

NOTE

Cap may require pliers to remove.

3. Remove the valve cap.

## **A**WARNING

Discharging pressurized oil and gas can pierce skin and cause flying debris, which could cause serious injury. Wear safety glasses and gloves. (00601b)

- 4. Press the valve stem with a flat blade screwdriver to release the gas.
- 5. Dispose of the shock.

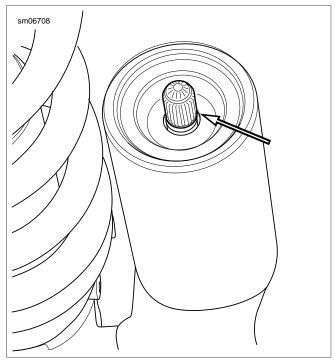


Figure 2-166. Schrader Valve Location: XR 1200X

## STABILIZER LINKS

#### GENERAL

The stabilizer link system allows the engine to move on its rubber engine mounts while maintaining engine-to-frame alignment. The stabilizer links provide a fixed alignment, and no adjustment is necessary or possible.

The spherical ball end of the stabilizer may rotate loosely, but should not have lateral movement. Replace the link if lateral movement exists.

#### **UPPER FRONT STABILIZER LINK**

FASTENER	TORQUE	VALUE
Stabilizer link, upper front, engine bracket mounting screw	55-65 ft-lbs	74.6-88.2 Nm
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm

#### Removal

See <u>Figure 2-167</u>. Remove screws (4) and stabilizer link (2).

#### NOTE

Models with a side-mounted horn do not include a horn bracket (9).

- 2. Remove screws (5), washers (8), horn bracket (9) and upper frame bracket (3) from frame.
- 3. Remove screws (6), lockwashers (7) and engine bracket (1) from front cylinder head.


#### Installation

 See <u>Figure 2-167</u>. Install screws (6), lockwashers (7) and engine bracket (1) to front cylinder head. Tighten to 55-65 ft-lbs (74.6-88.2 Nm).

#### NOTE

Models with a side-mounted horn do not include a horn bracket (9).

- Install upper frame bracket (3), horn bracket (9), screws (5) and washers (8). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- Install stabilizer link (2) with screws (4). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).

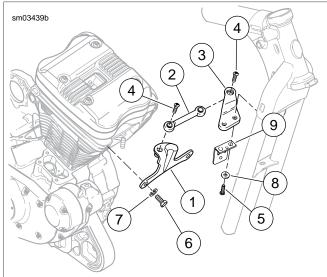

- 1. Engine bracket
- 2. Upper stabilizer link
- 3. Upper frame bracket
- 4. Screw
- 5. Screw (2)
- 6. Screw (2)
- '. Lockwasher (2)
- 8. Washer (2)
- 9. Horn bracket (front mount models)

Figure 2-167. Upper Front Stabilizer Link Assembly

#### LOWER FRONT STABILIZER LINK


FASTENER	TORQUI	E VALUE
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm

#### Removal

- Position motorcycle upright on suitable lift.
- 2. See <u>Figure 2-168</u>. Remove screws (3) and stabilizer link (1).
- 3. Remove screws (4), washers (5) and lower frame bracket (2) from frame.

#### Installation

- See <u>Figure 2-168</u>. Install screws (4), washers (5) and lower frame bracket (2) to frame. Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- 2. Install stabilizer link (1). Secure with screws (3). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).

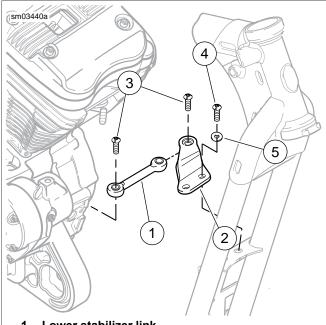

- 1. Lower stabilizer link
- Lower frame bracket
- 3. Screw (2)
- Screw (2)
- Washer (2)

Figure 2-168. Lower Front Stabilizer Link Assembly (typical)

#### REAR STABILIZER LINK

FASTENER	TORQUE	EVALUE
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm

#### Removal

- Motorcycles Equipped with EVAP Controls: Remove EVAP canister and mounting bracket. See 4.20 EVAPOR-ATIVE EMISSIONS CONTROL, Charcoal Canister.
- 2. See Figure 2-169. Remove short screw (3), long screw (4), ground strap (2), stabilizer link (1) and spacer (5).

#### Installation

- See Figure 2-169. Install short screw (3) through ground strap (2) and stabilizer link (1). Thread screw into frame on right side of motorcycle. Do not tighten at this time.
- Install long screw (4) through ground strap, stabilizer link and spacer (5) into engine case.

#### **NOTES**

- XL Models: Orient the ground strap so it does not come into contact with the EVAP canister mounting hardware.
- XR 1200X: Check that the ground strap does not contact the rear stop switch harness before tightening stabilizer link screws.
- Tighten both screws to 25-35 ft-lbs (33.9-47.5 Nm).
- Motorcycles Equipped with EVAP Controls: Install EVAP canister and mounting bracket. See 4.20 EVAPOR-ATIVE EMISSIONS CONTROL, Charcoal Canister.

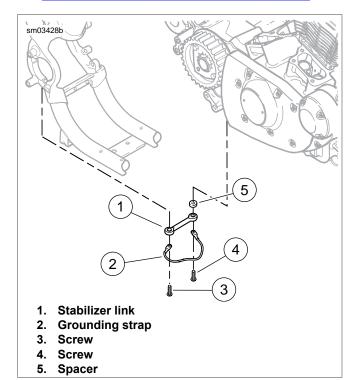


Figure 2-169. Rear Stabilizer Link Assembly (typical)

## FRONT ENGINE MOUNT/ISOLATOR

#### **REMOVAL**


PART NUMBER	TOOL NAME
HD-45968	FAT JACK

- 1. Position motorcycle on a suitable lift.
- Remove the exhaust system. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u> or <u>4.14 EXHAUST SYSTEM: XR 1200X</u>.
- XR 1200X: Remove the air box assembly. See 4.3 AIR CLEANER ASSEMBLY, XR 1200X.
- Loose the rear axle and drive belt. See <u>5.6 DRIVE BELT</u>.
- XL Models with Forward Mount Controls: Remove both forward control assemblies. See <u>2.41 RIDER FOOT</u> CONTROLS: XL FORWARD CONTROLS.
- Support front of engine with FAT JACK (Part No. HD-45968) and suitable blocks.
- See <u>Figure 2-167</u>. Remove screw (4) securing upper front stabilizer link (2) to stabilizer link bracket (3).
- 8. See <u>Figure 2-168</u>. Remove screw (3) securing lower front stabilizer link (1) to stabilizer link bracket (2).
- See <u>Figure 2-169</u>. Remove screw (4) from left end of rear stabilizer link (1) and ground strap (2). Remove spacer (5).

#### NOTE

See <u>Figure 2-170</u>. Jack the engine up or down to remove bolt (3).

- Remove nut (4) and bolt (3) from front engine mount/isolator assembly.
- 11. Remove screws (5) from front isolator mount (2) on left side of motorcycle. Remove isolator mount and left front isolator (1).
- 12. Without damaging the wire harness caddy, raise the front of the engine.
- 13. Without damaging the frame downtube, carefully pry front end of engine to the left approximately 1.0 in (25.4 mm).
- 14. Remove the right front isolator (1) from the crankcase.

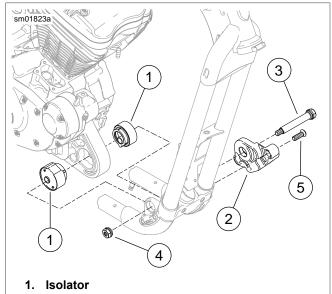

- 2. Front isolator mount
- 3 Bolt
- 4. Nut
- 5. Screw (2)

Figure 2-170. Front Engine Mount/Isolator

#### INSTALLATION

PART NUMBER	TOOL NAME
HD-45968	FAT JACK

FASTENER TORQUE VA		E VALUE
Isolator, front, mounting bracket screw	25-35 ft-lbs	33.9-47.5 Nm
Engine mount, front, bolt	95-105 ft-lbs	129-142 Nm
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm

- See <u>Figure 2-170</u>. Install both front isolators (1) in engine mounting boss on front of crankcase. Note that each isolator has a half-moon tab and fits into engine mounting boss in only one way. Push engine to the right until right isolator contacts frame boss.
- 2. Install front isolator mount (2) over left front isolator.
- 3. Install screws (5) through front isolator mount and thread into frame. Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- 4. Insert bolt (3) through front isolator/engine mount assembly from left side. Thread nut (4) onto bolt. Tighten to 95-105 ft-lbs (129-142 Nm).
- See <u>Figure 2-168</u>. Attach lower front stabilizer link (1) to bracket (2) with screw (3). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).

- 6. See Figure 2-167. Attach upper front stabilizer link (2) to bracket (3) with screw (4). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- See <u>Figure 2-169</u>. Install screw (4) through free end of ground strap (2), rear stabilizer link (1), spacer (5), and into engine crankcase. Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- Remove FAT JACK (Part No. HD-45968) and blocks from under engine.
- Forward Mount Controls: Install both forward control assemblies. See <u>2.41 RIDER FOOT CONTROLS</u>: XL FORWARD CONTROLS.
- 10. Install the exhaust system. See <u>4.13 EXHAUST SYSTEM:</u> XL MODELS or <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.
- 11. **XR 1200X**: Install the air box assembly. See <u>4.3 AIR CLEANER ASSEMBLY, XR 1200X</u>.
- 12. Adjust the drive belt and tighten the rear axle. See <u>5.6 DRIVE BELT</u>.

2013 Sportster Service: Chassis 2-121

## **REAR ENGINE MOUNT/ISOLATOR**

#### REMOVAL

PART NUMBER	TOOL NAME
HD-45967	SHOP DOLLY
HD-45968	FAT JACK

- 1. XR 1200X: Remove the air box assembly. See 4.3 AIR CLEANER ASSEMBLY, XR 1200X.
- Remove exhaust system. See 4.13 EXHAUST SYSTEM: XL MODELS or 4.14 EXHAUST SYSTEM: XR 1200X.
- With the aid of a FAT JACK (Part No. HD-45968), support motorcycle on SHOP DOLLY (Part No. HD-45967).

#### NOTE

Position vehicle on SHOP DOLLY so that FAT JACK may be used (with the aid of suitable blocks) to support engine when rear engine mount is removed.


- Remove sprocket cover.
  - a. XL Models: See Figure 2-171. Remove screw (6), washer (5) and exhaust pipe clamp bracket (4). Remove two screws (2, 3). Remove sprocket cover
  - XR 1200X: See Figure 2-172. Remove screw and washer (2) and screws (3, 4). Remove sprocket cover
- Loosen rear axle and remove rear drive belt. See 5.6 DRIVE BELT.
- 6. XL Models with Passenger Footrests: Remove left passenger footrest assembly. See 2.43 PASSENGER FOOTRESTS.
- 7. XR 1200X: Remove left and right rider controls and brackets. See 2.42 RIDER FOOT CONTROLS: XR 1200X.
- 8. Unbolt rear brake master cylinder remote reservoir. Do not disconnect hose from reservoir. Secure reservoir to vehicle in an upright position, out of the way. See 2.13 REAR BRAKE MASTER CYLINDER RESERVOIR.
- 9. Support rear fork assembly using vehicle tiedown straps.
- 10. See Figure 2-173. Remove rear fork pivot bolts (1).
- 11. Pull rear fork back far enough to clear rear engine mounts and isolators.
- 12. Motorcycles Equipped with EVAP: Remove EVAP canister and mounting bracket. See 4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister.
- 13. See Figure 2-169. Remove screws (3, 4) securing rear stabilizer link (1). Remove stabilizer link, ground strap (2), and spacer (5).
- 14. See Figure 2-167. Remove screw (4) securing upper front stabilizer link (2) to stabilizer link bracket (3).
- 15. See Figure 2-168. Remove screw (3) securing lower front stabilizer link (1) to stabilizer link bracket (2).

- 16. Support rear of engine with lifting device and suitable blocks.
- 17. See Figure 2-173. Remove two screws (7) securing rear isolator mount (2) to left side of frame. Remove isolator mount and left isolator (3).
- 18. Remove three screws (6) securing rear pivot lockplate (5) to rear of engine case. Remove lockplate and rear fork pivot shaft (4).

#### NOTE

Engine may need to be jacked up or down slightly to aid in removing pivot shaft.

19. Carefully pry rear end of engine to the left approximately 1.0 in (25.4 mm). Remove right rear isolator (3) from frame.

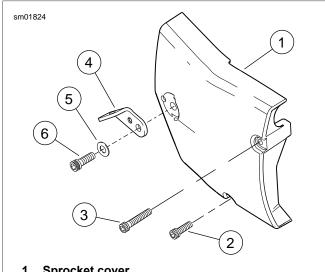

- 1. Sprocket cover
- 2. Screw
- 3. Screw
- 4. Exhaust pipe clamp bracket
- 5. Washer
- Screw

Figure 2-171. Sprocket Cover: XL Models

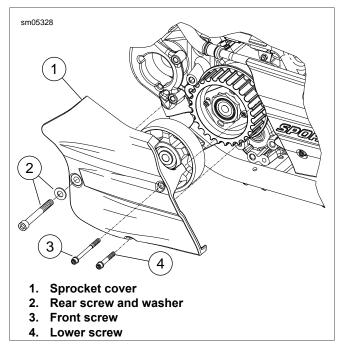


Figure 2-172. Sprocket Cover: XR 1200X

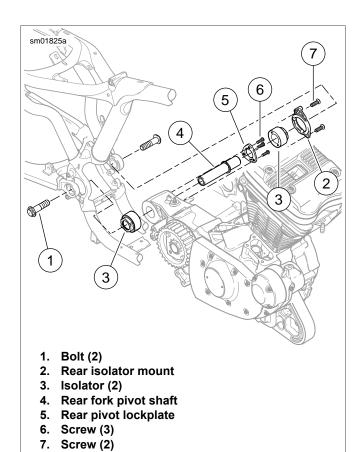


Figure 2-173. Rear Engine Mount/Isolator: Typical (XL Models)

#### INSTALLATION

PART NUMBER	TOOL NAME
HD-45968	FAT JACK

FASTENER	TORQUE VALUE	
Sprocket cover, forward and lower screw	80-120 <b>in-lbs</b>	9.0-13.6 Nm
Isolator, front, mounting bracket screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm
Fork, lower front, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm
Exhaust pipe clamp bracket screw	30-33 ft-lbs	40.7-44.7 Nm
Sprocket cover, forward and lower screws	80-120 in-lbs	9.0-13.6 Nm
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.7 Nm
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm

- See <u>Figure 2-173</u>. Install **new** right rear isolator (3) into frame, lining up tabs on isolator with slots in frame. Slide rear end of engine to the right until engine mounting boss on rear of crankcase contacts right isolator.
- Slide rear fork pivot shaft (4) through engine mounting boss

#### NOTE

Engine may need to be moved slightly in one direction or another to align pivot shaft with isolator.

- Install rear pivot lockplate (5) over pivot shaft with ridges on lockplate engaging flats on pivot shaft flange. Secure to crankcase with three screws (6). Tighten to 80-120 in-lbs (9.0-13.6 Nm).
- 4. Install **new** left rear isolator (3) on rear fork pivot shaft.
- 5. Place rear isolator mount (2) over left rear isolator, lining up tabs on isolator with slots in isolator mount. Install screws (7). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- 6. Remove FAT JACK (Part No. HD-45968) and blocks.
- See <u>Figure 2-167</u>. Attach upper front stabilizer link (2) to bracket (3) with screw (4). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- See <u>Figure 2-168</u>. Attach lower front stabilizer link (1) to bracket (2) with screw (3). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- See Figure 2-169. Install ground strap (2) and rear stabilizer link (1) to right side frame using short screw (3). Install free end of ground strap, stabilizer link and spacer (5) into engine case using long screw (4). Tighten screws to 25-35 ft-lbs (33.9-47.5 Nm).

#### NOTE

**XR 1200X:** Check that the ground strap does not contact the rear stop switch harness before tightening stabilizer link screws.

- 10. **Motorcycles Equipped with EVAP:** Install EVAP canister and mounting bracket. See <u>4.20 EVAPORATIVE EMISSIONS CONTROL</u>, Charcoal Canister.
- See <u>Figure 2-173</u>. Slide rear fork forward into position. Install rear fork pivot/engine mount bolts (1). Tighten to 60-70 ft-lbs (81.4-95.0 Nm). Remove vehicle tiedown straps supporting rear fork.
- Install rear brake master cylinder remote reservoir. See
   2.13 REAR BRAKE MASTER CYLINDER RESERVOIR.
- 13. **XL Models equipped with Passenger Footrests:** Install left passenger footrest assembly. See <u>2.43 PASSENGER FOOTRESTS</u>.
- 14. **XR 1200X:** Install left and right rider foot controls and brackets. See <u>2.42 RIDER FOOT CONTROLS: XR 1200X</u>.
- Install and adjust rear drive belt and tighten rear axle. See <u>5.6 DRIVE BELT</u>.

- 16. XL Models: Install sprocket cover.
  - a. See <u>Figure 2-171</u>. Install sprocket cover (1). Secure with two screws (2, 3). Note that long screw goes in top hole, short screw in bottom hole. Do not tighten screws at this time.
  - b. Install exhaust pipe clamp bracket (4), washer (5) and screw (6). Tighten to 30-33 ft-lbs (40.7-44.7 Nm). Now tighten screws (2, 3) to 80-120 **in-lbs** (9.0-13.6 Nm).
- 17. XR 1200X: Install sprocket cover.
  - a. See <u>Figure 2-172</u>. Tighten screw (2) to 30-33 ft-lbs (40.7-44.7 Nm).
  - b. Tighten screws (3, 4) to 80-120 **in-lbs** (9.0-13.6 Nm).
- Install exhaust system. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u> or <u>4.14 EXHAUST SYSTEM: XR 1200X.</u>
- XR 1200X: Install the air box assembly. See <u>4.3 AIR CLEANER ASSEMBLY, XR 1200X.</u>

## THROTTLE CABLES: ALL MODELS

#### REMOVAL AND DISASSEMBLY

#### **AWARNING**

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.


## **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove seat.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X.</u>

#### 5. XL Models:


- a. See <u>Figure 2-174</u>. Remove screw (3) securing left wire harness caddy (2) to right wire harness caddy (1). See <u>6.28 ELECTRICAL CADDIES</u>. Separate left wire harness caddy from right wire harness caddy.
- Cut cable straps (5) securing throttle cables (4) to right wire harness caddy. Remove and discard cable straps.
- Disengage ignition coil bracket (6) uprights from frame bosses and remove throttle cables from recess in right wire harness caddy.
- See <u>Figure 2-175</u>. Slide rubber boot off each cable adjuster (4).
- 7. See <u>Figure 2-176</u>. Loosen jamnut (5) on each adjuster (6). Turn adjusters in direction which will shorten cable housings to minimum length.
- 8. See <u>Figure 2-175</u>. Remove two screws (7) and separate upper housing (9) from lower housing (11).
- 9. Unhook ferrules (1) and cables (2, 3) from throttle control grip (12) and lower housing (11).
- 10. **XR 1200X:** See <u>Figure 2-178</u>. Disengage cables from retainer (2) on lower fork bracket. Disengage cables from loop retainer (3) located under fuel tank.
- Remove air cleaner assembly. See <u>4.3 AIR CLEANER ASSEMBLY</u>, XL Models except XL 1200V, <u>4.3 AIR CLEANER ASSEMBLY</u>, XL 1200V or <u>4.3 AIR CLEANER ASSEMBLY</u>, XR 1200X.
- 12. Disconnect cables from induction module.
- 13. See Figure 2-175. Remove friction spring (8), throttle friction screw (13) and spring (5) from lower housing.

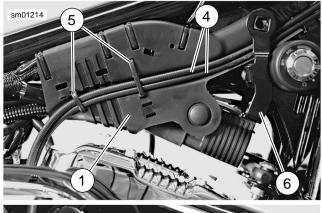




- 1. Right wire harness caddy
- 2. Left wire harness caddy
- 3. Screw
- 4. Throttle cables
- 5. Cable straps
- 6. Ignition coil bracket

Figure 2-174. Wire Harness Caddy Assembly: XL Models

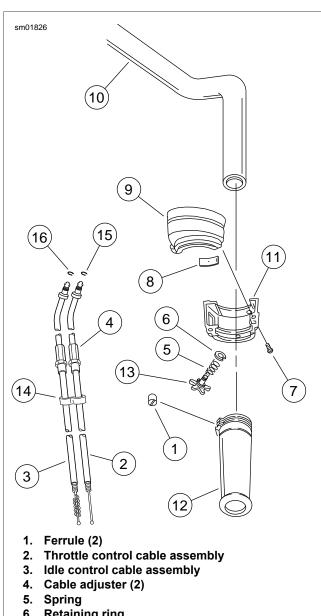

- 6. Retaining ring
- 7. Screw (2)
- 8. Friction spring
- 9. Upper housing
- 10. Handlebar
- 11. Lower housing
- 12. Throttle control grip
- 13. Throttle friction screw
- 14. Throttle cable clip
- 15. Throttle retaining ring
- 16. Idle retaining ring

Figure 2-175. Throttle Control, Right Handlebar

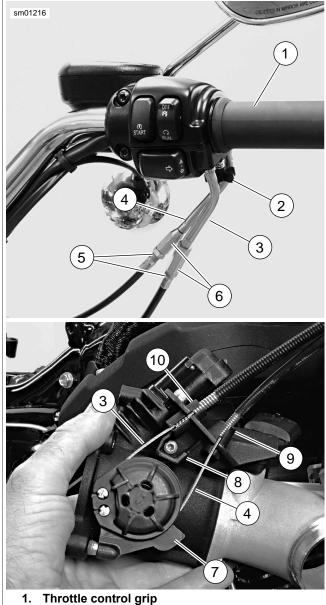

- Throttle friction screw
- Idle control (pull-close) cable
- Throttle control (pull-open) cable
- Jamnut (2)
- Cable adjuster (2)
- Throttle cam 7.
- Cam stop 8.
- 9. Idle control cable guide (on throttle body)
- 10. Throttle control cable guide (on throttle body)

Figure 2-176. Throttle/Idle Control Cable (typical)

#### **CLEANING AND INSPECTION**

#### **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Clean all parts in a non-flammable cleaning solvent. Blow dry with low pressure compressed air. Replace cables if necessary.

#### **ASSEMBLY AND INSTALLATION**

FASTENER	TORQUE	VALUE
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

- 1. See <u>Figure 2-175</u>. Apply a light coating of graphite to the handlebar (10) and the inside surface of the upper and lower housings (9, 11).
- 2. Install spring (5), throttle friction screw (13) and friction spring (8) in lower housing (11).
- Attach cable assemblies (2, 3) to lower housing. See Figure 2-176. Throttle control cable (4) has a 5/16 in (7.9 mm) fitting end and is positioned to front of lower housing. Idle control cable (3) has a 1/4 in (6.3 mm) fitting end and is positioned to rear of lower housing.
- 4. See Figure 2-175. Connect cables:
  - a. Install throttle control grip (12) over end of right handlebar (10).
  - b. Position lower housing (11) onto right handlebar, engaging lower housing with throttle control grip.
  - c. Position ferrules (1) over cable ball ends.
  - Seat ferrules (with cables attached) in their respective notches of the throttle control grip.
- Install upper housing (9) over handlebar. Install the lower housing using screws (7). Tighten to 35-45 in-lbs (4.0-5.1 Nm).
- 6. **XL Models:** See <u>Figure 2-177</u>. Route the cables:
  - a. Point the cables forward from the throttle control grip and the front fork upper bracket.
  - b. Turn the cables downward between right slider tube and headlamp.
  - Route the cables rearward along right side of frame steering head and frame backbone.
  - d. Turn the cables over the ignition switch housing.
  - e. Pass the cables between the coil bracket and frame.
  - f. Route the cables downward to the induction module.
- 7. XR 1200X: See Figure 2-178. Route the cables:
  - a. Route the cables forward between right fork and brake hose (1).
  - Turn the cables back between the forks above the lower fork bracket.
  - Pass the cables through the wire retainer (2) on the lower fork.
  - d. Route the cables above the front cylinder toward the induction module.
- See <u>Figure 2-176</u>. Install idle control cable (3) housing into inboard (idle) cable guide (9) on induction module.
- Install throttle control cable (4) housing and spring into outboard cable guide (10) on induction module.

#### NOTE

The forward cable strap secures the instrument connector [20]. The rear cable strap secures wiring harnesses on other side of caddy wall.

XL Models: See <u>Figure 2-174</u>. Place throttle cables (4) into channel in right wire harness caddy (1). Secure with two cable straps (5).

#### **A**WARNING

Be sure that steering is smooth and free without interference. Interference with steering could result in loss of vehicle control and death or serious injury. (00371a)

- 11. **XL Models:** See <u>Figure 2-174</u>. Mount left wire harness caddy (2) to right wire harness caddy (1). Secure with screw (3) and tighten.
  - Do not pinch the cables between the frame and/or forks
  - Verify that the cables do not pull tight when the handlebar is turned full lock left and right.
- Adjust control cables. See <u>1.13 THROTTLE CONTROL</u>, <u>Cable Adjustment</u>.
- 13. Install air cleaner assembly.
- 14. Install fuel tank and connect fuel hose. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- XR 1200X: See <u>Figure 2-178</u>. Secure cables in loop retainer (3). Attach retainer to the bottom of the fuel tank.

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 16. Install seat.
- 17. Install main fuse.



Figure 2-177. Throttle Control Cable Routing: XL Models

#### **HOME**

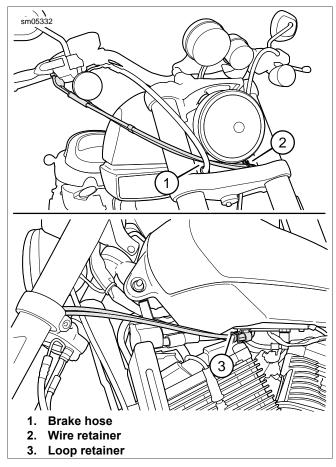


Figure 2-178. Throttle Control Cable Routing: XR 1200X

## **CLUTCH CONTROL**

#### REMOVAL AND DISASSEMBLY

Clutch Cable: Lower

#### **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- Mid-mount Controls: Remove left side rider footrest and mounting bracket assembly. See <u>2.40 RIDER FOOT</u> <u>CONTROLS: XL MID-MOUNT CONTROLS</u> or <u>2.42 RIDER</u> <u>FOOT CONTROLS: XR 1200X</u>.
- See <u>Figure 2-179</u>. Slide rubber boot (1) on clutch cable adjuster (2) upward to expose adjuster mechanism. Loosen jamnut (3) from adjuster. Turn adjuster to shorten cable housing until there is a large amount of free play at clutch hand lever. See <u>1.11 CLUTCH</u>.
- See <u>Figure 2-180</u>. Remove six screws (1) and clutch inspection cover (2). Exercise caution to avoid damaging or dislodging quad ring (7) from groove in primary cover (9).
- 5. Slide hex lockplate with attached spring (3) from flats of adjusting screw assembly (8).
- 6. Turn adjusting screw assembly clockwise to release ramp assembly (5) and coupling (6). As the adjusting screw is

- turned, ramp assembly moves forward. Remove nut (4) from end of adjusting screw.
- Remove hook of ramp from cable coupling. Remove clutch cable end (11) from slot in coupling. Remove coupling and ramp assembly.
- 8. Remove cable end fitting (12) and clutch cable (13) lower section from primary cover. Remove O-ring (10) from cable end fitting. Discard O-ring.
- Clean all metal parts in a non-volatile cleaning solution or solvent.

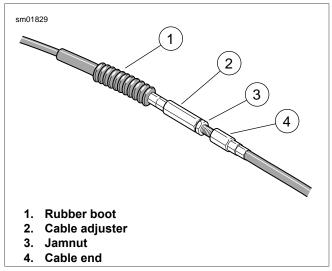


Figure 2-179. Clutch Cable Adjuster Mechanism

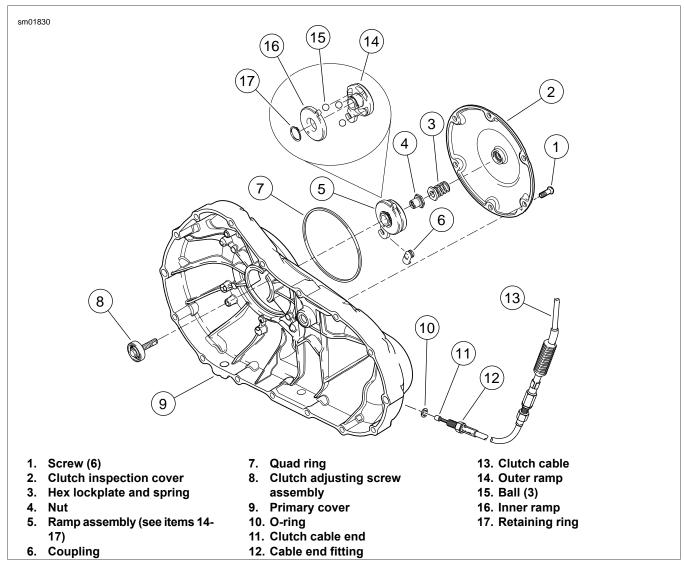


Figure 2-180. Clutch Release Mechanism

#### **Clutch Lever and Cable: Upper**

- 1. See <u>Figure 2-181</u>. Remove retaining ring (8) and pivot pin (7). Discard retaining ring.
- 2. Remove clutch lever (2) from clutch lever bracket.
- 3. Remove clutch cable pin (5). Disconnect clutch cable (6) upper section from lever.

#### NOTE

Remove the bushing from the top of the lever.

- 4. Remove bushing (1) from clutch lever.
- 5. Remove screw (4) and anti-rattle spring (3).

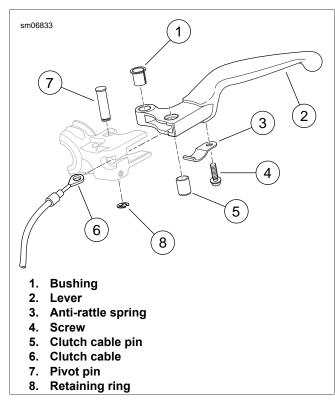


Figure 2-181. Clutch Lever and Cable

#### **Clutch Hand Control**

#### NOTE


XL 1200X: Leave the turn signals and brackets installed.

- All Models except XL 1200X: Loosen the set screw. Remove the turn signal assembly from the clutch lever bracket. See 6.18 FRONT TURN SIGNALS, All Except XL 1200X.
- 2. See <u>Figure 2-182</u>. Loosen and remove the locknut (1), lockwasher (2) and mirror (3).

#### NOTE

Loosen the two screws of the left handlebar switch housing to remove clutch control clamp and clutch lever bracket.

- See Figure 2-182. Loosen the two screws (4) and washers (5) with nylon retainers (6) to remove the clutch control clamp (7).
- 4. Remove the clutch lever bracket (8).

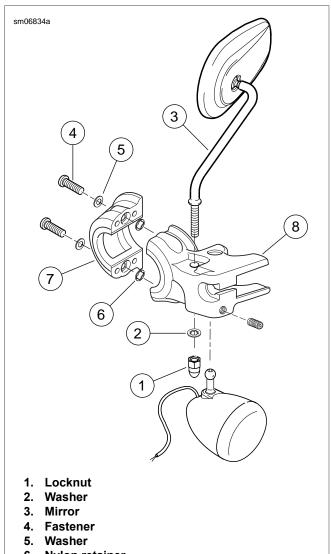

- 6. Nylon retainer
- 7. Clamp
- 3. Bracket

Figure 2-182. Clutch Hand Control Clamp and Bracket (typical)

#### **ASSEMBLY AND INSTALLATION**

FASTENER	TORQUE VALUE	
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm
Mirror stem locknut	96-144 in-lbs	10.9-16.3 Nm
Turn signal clamp, front, screw	96-120 in-lbs	10.9-13.6 Nm
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm
Clutch lever anti-rattle spring screw	8-13 <b>in-lbs</b>	0.9-1.5 Nm
Clutch cable fitting	36-108 in-lbs	4.1-12.2 Nm
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.2-13.6 Nm
Footrest mount fastener	45-50 ft-lbs	61-68 Nm

#### **Clutch Hand Control**

- Position clutch control clamp and clutch lever bracket onto left handlebar. Hold clamp and bracket assembly firmly against left handlebar switch housing.
- Secure components to left handlebar using two screws and washers and retainers. Tighten to 108-132 in-lbs (12.2-14.9 Nm).

#### **NOTES**

- Adjust the mirrors for rider vision.
- Adjust the mirrors to not strike the fuel tank on lock to lock handlebar turns.

#### XL 1200X: See Figure 2-183.

- 3. Install mirror with locknut and lockwasher. Tighten locknut to 96-144 **in-lbs** (10.9-16.3 Nm).
- All Models except XL 1200X: Install turn signal and secure with set screw. See 6.18 FRONT TURN SIGNALS, All Except XL 1200X.
- Position so turn signal lens faces directly forward. Verify turn signal does not strike fuel tank when the handlebar is turned full left. Tighten set screw to 96-120 in-lbs (10.9-13.6 Nm).

#### NOTE

If two screws of left handlebar switch housing were loosened during clutch hand control removal, tighten to 35-45 **in-lbs** (4.0-5.1 Nm).

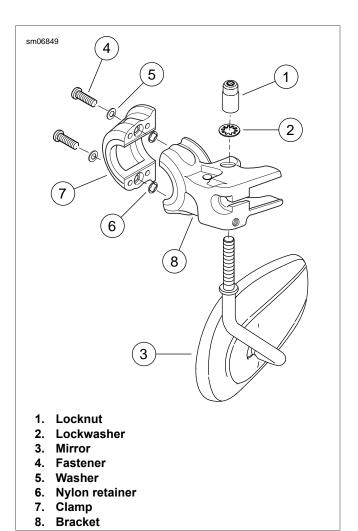


Figure 2-183. Clutch Hand Control Bracket: XL 1200X

## **Clutch Lever and Clutch Cable: Upper**

- 1. Install anti-rattle spring and screw onto clutch lever. Tighten screw to 8-13 **in-lbs** (0.9-1.5 Nm).
- 2. Install bushing in clutch lever. Bushing has a collar on one end and must be installed from top of lever.
- 3. Connect end of clutch cable upper section to clutch lever using clutch cable pin.
- 4. Position lever within clutch lever bracket, install pivot pin and secure with **new** retaining ring.

#### Clutch Cable: Lower

- 1. **XL Models:** See <u>Figure 2-184</u>. Route the clutch cable (3):
  - a. Forward from clutch lever (1).
  - b. Downward to left front fork slider tube. Refer to Table 2-26.
  - c. Through two clips (6) on left front frame downtube.
  - d. Rearward to the primary cover (4).

- 2. **XR 1200X:** See <u>Figure 2-185</u>. Route the clutch cable:
  - Down between the fork tubes and clamps.
  - Downward to inboard side of the left front fork slider tube.
  - Through the two clips in the oil cooler mounting bracket.

#### NOTE


Check that cable is not pinched between the lower steering head bracket and frame and the left and right fork stops.

Table 2-26. Clutch Cable Lower Routing Around Left Fork Slider

MODEL	ROUTE	NOTES
XL 883L	Outboard	-
XL 883N	Outboard	-
XL 883R	Outboard	-
XL 1200C/C ANV XL 1200CP/CA/CB	Inboard	Through the clutch cable guide
XL 1200X	Inboard	-
XL 1200V	Inboard	-

- See <u>Figure 2-180</u>. Install **new** O-ring (10) over cable end fitting (12) of clutch cable (13) lower section. Screw fitting into primary cover (9). Tighten to 36-108 **in-lbs** (4.1-12.2 Nm).
- 4. Install coupling (6) over cable end (11) with the rounded side inboard and the ramp connector button outboard. With retaining ring side of ramp assembly (5) facing inward, place hook of ramp around coupling button. Rotate assembly counterclockwise until tang on inner ramp (16) fits in slot of primary cover.
- Thread nut (4) on adjusting screw assembly (8) until slot of screw is accessible with a screwdriver. Fit nut hex into recess of outer ramp (14). Turn adjusting screw counterclockwise until resistance is felt. Then back off adjusting screw 1/4 turn.
- Install hex lockplate with spring (3) onto flats of adjusting screw assembly (8). If necessary, turn adjusting screw clockwise slightly so that lockplate slides onto flats while also fitting within recess of outer ramp.
- Verify that quad ring (7) is fully seated in groove of primary cover (9). Install clutch inspection cover (2) and secure with six screws (1). Tighten screws in a cross pattern to 90-120 in-lbs (10.2-13.6 Nm).
- Models with Mid-mount Controls: Install left side rider footrest and mounting bracket assembly. Tighten footrest bracket mounting screws to 45-50 ft-lbs (61-68 Nm). See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CON-TROLS or 2.42 RIDER FOOT CONTROLS: XR 1200X.

9. Install main fuse.

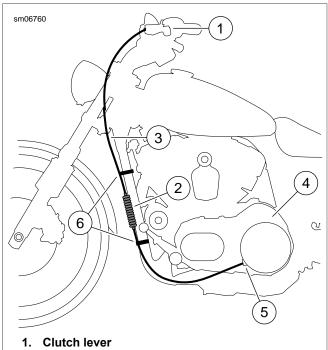

- 2. Cable adjuster boot
- 3. Clutch cable
- 4. Primary cover
- 5. Cable end fitting
- 6. Clip (2)

Figure 2-184. Clutch Cable Routing: XL Models

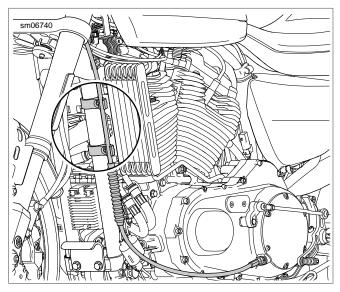


Figure 2-185. Clutch Cable Clips: XR 1200X

**HANDLEBAR** 2.30

#### REMOVAL

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

#### All Models

- Remove main fuse.
- Remove two screws securing clutch control assembly to left side of handlebar. See 2.29 CLUTCH CONTROL.
- Remove two screws securing left handlebar switch assembly to handlebar. See 6.35 LEFT HANDLEBAR SWITCHES. Let wires carefully support the switch assembly.
- Remove left handlebar grip. See 2.30 HANDLEBAR, Left Hand Grip.
- Remove front brake master cylinder assembly from right handlebar. See 2.8 FRONT BRAKE MASTER CYLINDER.


#### **XL 1200C/C ANV**

- See Figure 2-186. Cut and remove four wiring harness retainers (1). Discard retainers.
- 2. Loosen, but do not remove, two control housings screws.
- 3. Remove two screws (2) and riser cover (3).
- Remove four screws (6) and upper handlebar clamp/speedometer housing (7). Detach handlebar from riser.
- Slide right hand control and throttle assembly off the detached handlebar.
- If removing riser (8), remove bolts (4), washers (5) and riser from upper fork bracket.

#### XL 1200CP/CA/CB

Pull Back: See Figure 2-186. See Removal, XL 1200C/C ANV.

Drag Bar: See Figure 2-187. See Removal, XL 1200C/C ANV. Mini-Ape: See Figure 2-187. See Removal, All XL Models except XL 1200C/C ANV.

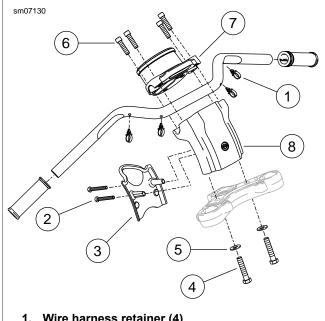

- 1. Wire harness retainer (4)
- 2. Screw (2)
- 3. Riser cover
- 4. Bolt (2)
- Washer (2)
- Screw (4)
- 7. Upper handlebar clamp/speedometer housing
- Handlebar riser

Figure 2-186. Handlebar: XL 1200C/C ANV/CP Pull Back


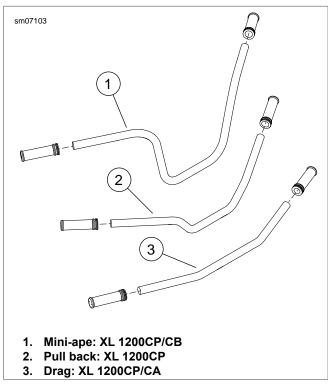


Figure 2-187. Handlebars: XL 1200CP/CA/CB

#### All XL Models except XL 1200C/C ANV

- See Figure 2-188. Cut and remove four wiring harness retainers (1). Be careful not to cut into wiring harnesses. Discard retainers.
- Loosen two control housing screws. Do not remove.
- 3. If removing lower handlebar clamps, loosen, but do not remove, two bolts (2) securing lower handlebar clamps (6) to upper fork bracket.
- 4. Remove screws (4) and the instrument bracket (5).
- Detach handlebar from lower handlebar clamps.
- Slide right hand control housing and throttle assembly off detached handlebar.
- If removing lower handlebar clamps, remove two bolts, washers (3) and lower handlebar clamps from upper fork bracket.

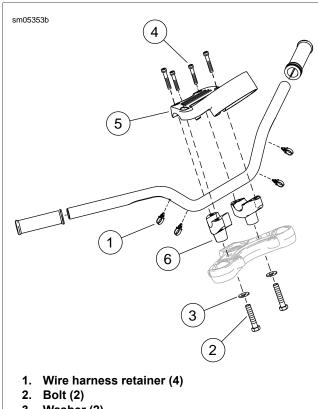


- 3. Washer (2)
- 4. Screw (4)
- 5. Bolt-on instrument bracket/clamp
- 6. Lower handlebar clamp

Figure 2-188. Handlebar: XL 883L/N/R

#### **XR 1200X**

- See Figure 2-189. Cut and remove four wiring harness retainers (1). Be careful not to cut into wiring harnesses. Discard retainers.
- 2. Loosen, but do not remove, two right hand control housing screws.
- Remove two front screws (2) and washers (3). Remove instrument bracket (4).

- Remove two rear screws (2) and upper clamp (5).
- Detach handlebar from upper fork bracket.
- Slide right hand control housing and throttle assembly off detached handlebar.

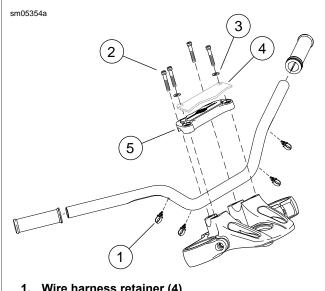

- 1. Wire harness retainer (4)
- 2. Screw (4)
- Washer (2)
- Instrument bracket
- Upper handlebar clamp

Figure 2-189. Handlebar: XR 1200X

#### **INSTALLATION**

FASTENER	TORQUI	E VALUE
Handlebar riser bolt, lower	30-40 ft-lbs	40.7-54.3 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar riser cover screw	8-12 <b>in-lbs</b>	0.9-1.4 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar riser bolt, lower	30-40 ft-lbs	40.7-54.3 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm


#### XL 1200C/C ANV/CP with One-Piece Riser

- If the riser was removed, secure the riser to the upper fork bracket with two bolts and washers. Route the handlebar wiring inside the riser. Tighten to 30-40 ft-lbs (40.7-54.3
- Side the right side handlebar control housing and throttle assembly onto the right end of the handlebar.

- 3. See Figure 2-190. Install the handlebar:
  - a. Position handlebar on the lower handlebar camp.
  - Adjust handlebar to the desired position.
  - c. Place the upper handlebar clamp/speedometer housing in position and thread four screws in place.
  - Tighten the front screws first to 12-18 ft-lbs (16.3-24.4 Nm).
  - e. Tighten the rear screws to 12-18 ft-lbs (16.3-24.4 Nm).

#### NOTES

- Route the handlebar wiring harnesses.
- Do not pinch the wiring harnesses.
- Install the riser cover and screws. Tighten to 8-12 in-lbs (0.9-1.4 Nm).

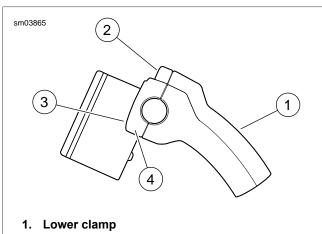

- 2. Front screw (2) (tighten first)
- 3. Rear screw (2)
- 4. Upper clamp

Figure 2-190. Handlebar Riser: XL 1200C/C ANV

#### **XL 1200CP**

Pull Back: See <u>Figure 2-187</u>. See Installation, XL 1200C/C ANV.

Drag Bar: See <u>Figure 2-188</u>. See Installation, XL 1200C/C ANV.

Mini-Ape: See Figure 2-188. See Installation, All Models except XL 1200C/C ANV.

#### NOTE

See <u>Figure 2-191</u>. Rotate mini-ape handlebar 11 degrees (2) rearward of the fork angle. Measure from a straight edge placed on the fork bracket 2.96 in (75 mm) to the end of the straight (1) (beginning of the last bend). This angle positions the handgrips 15 in (381 mm) above seat height.

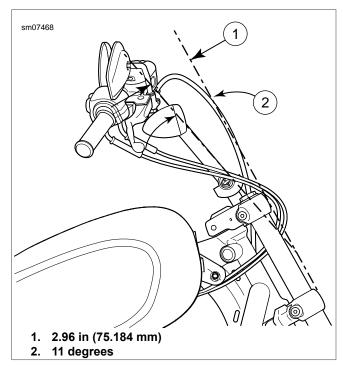


Figure 2-191. XL 1200CP/CB Mini-Ape Handlebar Angle

#### **XL 1200V**

#### NOTE

See <u>Figure 2-192</u>. Rotate mini-ape handlebar 17 degrees (2) rearward of the fork angle. Measure from a straight edge placed on the fork bracket 3.72 in (94 mm) to the end of the straight (1) (beginning of the last bend). This angle positions the center of the handgrips 15 in (381 mm) above seat height.


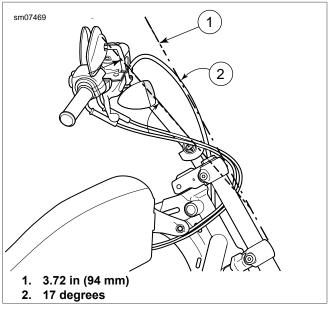


Figure 2-192. XL 1200V Handlebar Angle Domestic, California and Canada Markets Only

#### All XL Models except XL 1200C/C ANV

1. If lower handlebar clamps were removed, secure clamps to upper fork bracket with bolts and washers. Finger tighten

- bolts only at this time. Route the wiring harnesses between the lower handlebar clamps.
- 2. Slide right side handlebar control housing and throttle assembly onto right end of handlebar. Position handlebar on lower handlebar clamps.
- 3. Place upper handlebar clamp/instrument bracket in position. Install four screws.
- See <u>Figure 2-193</u>. Adjust handlebar to desired position. Tighten rear screws first, to 12-18 ft-lbs (16.3-24.4 Nm). Then tighten front screws to 12-18 ft-lbs (16.3-24.4 Nm).
- 5. Tighten lower handlebar riser bolts to 30-40 ft-lbs (40.7-54.3 Nm).

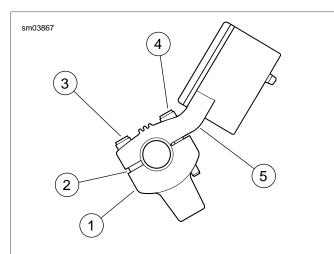

- 1. Lower clamp (2)
- 2. Cast-in spacer (2)
- 3. Rear screw (2) (tighten first)
- 4. Front screw (2)
- 5. Upper clamp

Figure 2-193. Handlebar Riser: XL Models except XL 1200C/C ANV

#### **XR 1200X**

- Slide right side handlebar control housing and throttle assembly onto right end of handlebar. Position handlebar on upper fork bracket.
- Place upper handlebar clamp in position. Install the rear screws.
- Place instrument bracket in position. Install front screws and washers.
- Adjust handlebar to desired position. Tighten rear screws first, to 12-18 ft-lbs (16.3-24.4 Nm). Then tighten front screws to 12-18 ft-lbs (16.3-24.4 Nm).

#### All Models

 Install front brake master cylinder assembly. See 2.8 FRONT BRAKE MASTER CYLINDER.

- Install a new left hand grip. See <u>2.30 HANDLEBAR</u>, <u>Left Hand Grip</u>.
- Position left hand control and loosely install hand control clamp screws. See <u>6.35 LEFT HANDLEBAR SWITCHES</u>.
- 4. Attach clutch control assembly to left side of handlebar.
- 5. Tighten:
  - a. Clutch lever handlebar clamp screw to 108-132 **in-lbs** (12.2-14.9 Nm). See 2.29 CLUTCH CONTROL.
  - b. Left hand control clamp screws to 35-45 in-lbs (4.0-5.1 Nm).
  - c. Right hand control clamp screws to 35-45 in-lbs (4.0-5.1 Nm).
- 6. Install four **new** wiring harness retainers around handlebar wiring harnesses. Push retainers into holes in handlebar.
- 7. Install main fuse.

## **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

- 8. Verify the following:
  - a. Clutch cable adjustment/operation.
  - b. Proper throttle cable operation.
  - c. All electrical switch functions.
  - d. Proper brake operation and stop lamp function.

#### **LEFT HAND GRIP**

#### Removal

Slice the hand grip open with a sharp knife. Peel the hand grip open to remove.

#### Installation

- 1. Rough the left grip end of the handlebar with emery cloth.
- 2. Clean the grip end with acetone.
- 3. Apply LOCTITE 770 PRISM PRIMER to the inside of a **new** hand grip. Remove any excess primer with a clean cloth. Wait two minutes for the primer to set.
- Apply LOCTITE 411 PRISM INSTANT ADHESIVE to the inside of the new hand grip.

#### NOTE

LOCTITE 411 PRISM INSTANT ADHESIVE will set in four minutes and cure in 24 hours.

5. Install the **new** hand grip with a twisting motion.

## **FRONT FENDER**

## **ALL MODELS**

FASTENER	TORQUE VALUE	
Fender to forks, front: XL except XL 1200X	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Fender to fork brace, front: XL 1200X	30-42 in-lbs	3.4-4.7 Nm
Fork brace to forks: XL 1200X	18-22 ft-lbs	25-30 Nm
Fender to bracket, front: XR 1200X	30-60 <b>in-lbs</b>	4.1-6.8 Nm
Fender bracket to forks, front: XR 1200X	15-19 ft-lbs	21-25 Nm

See <u>Figure 2-194</u>. Install and tighten in a cross pattern to specification. Refer to <u>Table 2-27</u>.

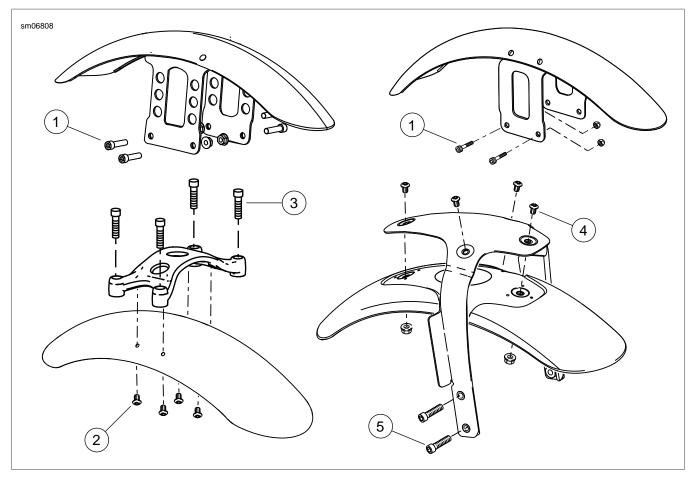


Figure 2-194. Front Fenders

Table 2-27. Front Fender Fastener Torque Values

MODEL	CALLOUT	FASTENER	TORQUE
XL models (except XL 1200X)	1	Fender to forks, front: XL except XL 1200X (fasteners with locknuts)	96-156 <b>in-lbs</b> (10.9-17.6 Nm)
XL 1200X	2	Fender to fork brace, front: XL 1200X (tighten in cross pattern)	30-42 <b>in-lbs</b> (3.4-4.7 Nm)
	3	Fork brace to forks, front: XL 1200X	18-22 ft-lbs (25-30 Nm)
XR 1200X	4	Fender to bracket, front: XR 1200X (fasteners with locknuts)	30-60 <b>in-lbs</b> (4.1-6.8 Nm)
	5	Front fender bracket to forks: XR 1200X	15-19 ft-lbs (21-25 Nm)

2013 Sportster Service: Chassis 2-139

## FRONT LICENSE PLATE: INDIA MODELS

# FRONT LICENSE PLATE: XL MODELS (INDIA)

FASTENER	TORQUE VALUE	
License plate fasteners, front: XL 883L/N/R (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm
License plate fasteners, front: XL 1200X/C/C ANV (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm

#### XL 883L/N/R

- 1. See Figure 2-195. Install P-clamps (6) on fork tubes.
- 2. Install license plate to P-clamps and secure fasteners (4), washers (3) and nuts (5).
  - a. XL 883N/R (1)
  - b. XL 883L, (2)
- 3. Tighten to 10-15 in-lbs (1.1-1.7 Nm).

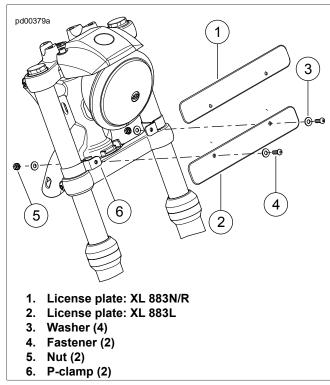


Figure 2-195. License Plate Mount: XL 883L/N/R (India)

#### **XL 1200X/C/C ANV**

- See <u>Figure 2-196</u>. Install license plate (1) to license plate bracket and secure with fasteners (3), washers (2) and nuts (4).
- 2. Tighten to 10-15 in-lbs (1.1-1.7 Nm).

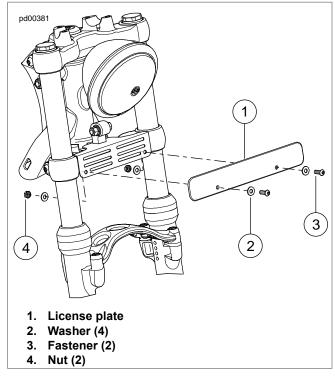


Figure 2-196. License Plate Mount: XL 1200X/C/C ANV (India)

# REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V

2.33

#### XL 883R/L

FASTENER	TORQUE VALUE	
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Turn signal stalk locknut	132-216 <b>in-lbs</b>	14.9-24.4 Nm
Fender, rear, mounting fastener	132-216 <b>in-lbs</b>	14.9-24.4 Nm

#### Removal

1. Remove seat.

#### **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. See <u>Figure 2-197</u>. Disconnect the rear lighting connector [7] (2) housings.
- 4. Access fender hardware.
  - a. Remove lower shock bolts.
  - b. Raise motorcycle to lower rear wheel.
- 5. Remove the tail lamp assembly.
  - Remove the tail lamp lens and bulb. See 6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X.
  - b. See <u>Figure 2-198</u>. Unplug left [19] (1) and right [18] (2) turn signal connectors from rear lighting circuit board.
  - Pull turn signal wiring harnesses thru holes in tail lamp base and rear fender.
  - Disengage turn signal wiring harnesses from wire retention brackets.
- 6. See <u>Figure 2-199</u>. Remove rear turn signal stalk locknuts (1) from inside rear fender on both sides.
  - See Figure 2-200. Support fender and remove front strut cover fastener (4) with washer (3) and locknut (1), and rear strut cover fastener (4) with washer (3) and clip nut (5) on both sides.
  - b. Remove rear fender strut covers with attached turn signal assemblies.
  - c. Remove bolt (11), seat post (7) and washer (8) to detach top of fender from frame cross member tab.
  - d. Carefully remove rear fender with attached license plate bracket, tail lamp base and wire harness.



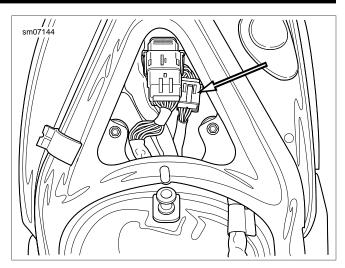


Figure 2-197. Rear Lighting Connector [7]

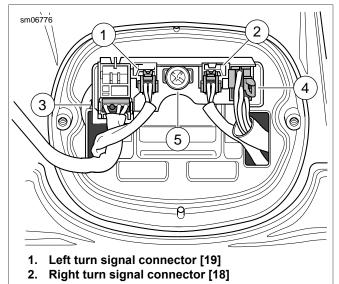

- 3. Rear lighting power connector [94]
- 4. Tail lamp connector [93]
- 5. Screw with washer

Figure 2-198. Tail Lamp Housing

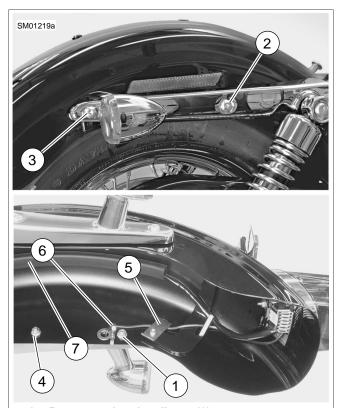

- 1. Rear turn signal stalk nut (2)
- 2. Forward fender support screw with washer (2)
- 3. Aft fender support screw with washer (2)
- 4. Forward fender support nut (2)
- 5. Aft fender support nut plate (2)
- 6. Wire retention bracket
- 7. Rear lighting wiring harness and conduit

Figure 2-199. Rear Fender, Strut Cover and Turn Signal Lamp Assembly

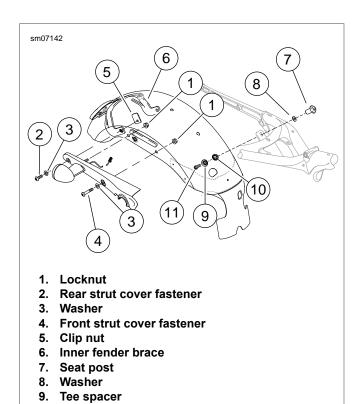


Figure 2-200. Rear Fender Assembly: XL 883R/L

#### Installation

11. Bolt

10. Grommet

- 1. Carefully install rear fender onto motorcycle.
- See <u>Figure 2-200</u>. Align holes in fender with those in struts. Support fender and install fasteners (4, 2) through fender struts and fender to hold fender in place.
- 3. Route rear lighting harness connector [7B] between frame cross member and top of oil tank.
- 4. Connect housings [7].
- 5. Secure front of fender with bolt (11), washer (8) and seat post (7). Finger-tighten.
- H-DSSS equipped models: Make sure antenna harness is not pinched between fender and frame crossmember.
- 7. Remove fasteners (4, 2) and install fender strut cover with attached turn signal assembly to fender strut. Push turn signal wiring harness through openings in strut and fender.
- 8. Install locknut (1) onto turn signal stalk from inside fender. Finger-tighten.
- 9. Secure fender to strut with fasteners (4), washer (3) and locknut (1) in forward mounting hole. Install fastener (2), washer (3) and clip nut (5) in aft mounting hole. Fingertighten.

- 10. In sequence, tighten all fender mounting hardware:
  - Tighten bolt and seat post to 96-156 in-lbs (10.9-17.6 Nm).
  - Tighten turn signal stalk locknuts to 132-216 in-lbs (14.9-24.4 Nm).
  - c. Tighten fender mounting fasteners to 132-216 in-lbs (14.9-24.4 Nm).
- 11. Install the tail lamp assembly.
  - a. Route turn signal wiring harnesses through the wire retention brackets.
  - Pull turn signal wiring harnesses through holes in rear fender and tail lamp base.
  - See Figure 2-198. Connect tail lamp connector [94] (3) and left [19] (1) and right [18] (2) turn signal connectors.
  - Install the tail lamp lens and bulb. See 6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X.
- 12. Install main fuse.

#### WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 13. Install seat.
- 14. Verify license plate lamp, tail lamp, stop lamp and turn signals.

## XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE VALUE	
Seat post bolt	96-156 in-lbs	10.9-17.6 Nm
Turn signal stalk locknut	96-156 in-lbs	10.9-17.6 Nm
Fender, rear, mounting fastener	96-156 in-lbs	10.9-17.6 Nm

#### Removal


Remove seat.

#### WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

2. Remove main fuse.

- 3. See Figure 2-201. Disconnect the right [18] (3) and left [19] (4) turn signal connectors and the tail lamp connector [40] (2).
- 4. Remove the lower shock bolts and lower the rear wheel to access the fender hardware.
- See Figure 2-202. Route the turn signal wire harness through the openings (4) in the fender and from the retention bracket (3).
- 6. See Figure 2-203. Remove rear turn signal stalk nuts (1) from inside rear fender on both sides.
- 7. Support the fender and remove the front (4) and rear (2) fender fasteners with washers (3) and strut covers with attached turn signal assemblies from rear fender struts.
- 8. Remove bolt (11), seat post (7) and flat washer (8) to detach top of rear fender from frame cross member tab.
- Carefully remove rear fender from motorcycle.

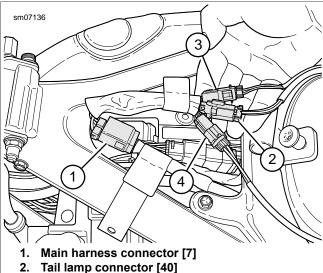

- Tail lamp connector [40]
- RH turn signal connector [18]
- LH turn signal connector [19]

Figure 2-201. Turn Signal Wire Harness: XL 1200C/C ANV/CP/CA/CB


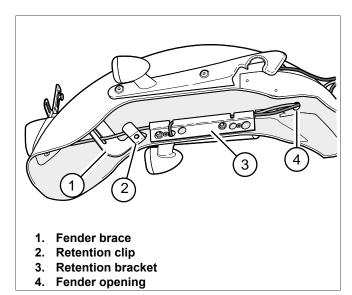


Figure 2-202. Inner Rear Fender: XL 1200C/C ANV/CP

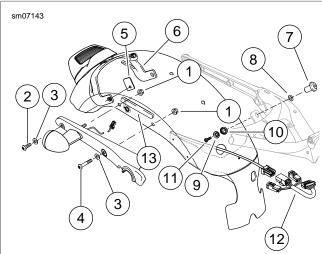

- 1. Locknut
- 2. Rear strut cover fastener
- 3. Washer
- 4. Front strut cover fastener
- 5. Clip nut
- 6. Inner fender brace
- 7. Seat post
- 8. Washer
- 9. Tee spacer
- 10. Grommet
- 11. Bolt
- 12. Subharness
- 13. Wire retention bracket (2)

Figure 2-203. Rear Fender Assembly: XL 1200C/C ANV/CP

#### Installation

- Install rear fender onto motorcycle. Align holes in fender with those in struts. Temporarily install screws to hold fender in place.
- Route tail lamp harness connector between frame cross member and top of oil tank. Connect tail lamp housings [40].

- 3. See <u>Figure 2-203</u>. Secure front of fender with bolt (11), washer (8) and seat post (7). Finger-tighten.
- H-DSSS equipped models: Make sure antenna harness is not pinched between fender and frame crossmember.
- 5. Remove bolts from right side of fender. Install fender strut cover with attached turn signal assembly to fender strut with the locknut (1).
- 6. Secure fender to strut with fasteners (4), washer (3) and locknut (1) in forward mounting hole. Install fastener (2), washer (3) and clip nut (5) in aft mounting hole. Fingertighten screws only at this time.
- 7. Push turn signal wiring harness through openings in strut and fender. Install nut onto turn signal stalk from inside fender. Finger-tighten.
- 8. Now tighten all fender mounting hardware in the following sequence:
  - Tighten bolt (11) and seat post (7) to 96-156 in-lbs (10.9-17.6 Nm).
  - Tighten turn signal stalk nuts (1) to 96-156 in-lbs (10.9-17.6 Nm).
  - Tighten fasteners (2, 4) to 96-156 in-lbs (10.9-17.6 Nm)
- Install the lower lower shock bolts and lower the rear wheel.
- See Figure 2-201. Connect the right [18] (3) and left [19]
   (4) turn signal connectors and the tail lamp connector [40]
   (2).
- 11. Install main fuse.

#### **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

12. Install seat.

#### **AWARNING**

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

13. Verify turn signals, tail lamp, and stop lamp.

## FENDER PREPARATION

#### Tail Lamp Assembly

XL 883R/L: Replace the tail lamp. See <u>6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X.</u>

XL 883N and XL 1200X/V: The tail lamps are the rear turn signals.

XL 1200C/C ANV/CP/CA/CB: Replace LED tail lamp assembly. See 6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB.

## License Plate Lamp Module: XL 883N and XL 1200X/V

Replace the license plate lamp module. See <u>6.17 LICENSE</u> PLATE LAMP MODULE: XL 883N, XL 1200X/V.

#### **Seat Nut**

Remove the C-clip and the seat nut. Replace with a new seat nut kit.

#### Fender Extension


- 1. See Figure 2-204. Drill out rivets (1) securing rear fender extension (2) to fender with a 1/4 drill bit.
- 2. Rivet fender extension to fender backed by a washer (3).

#### **Wire Harness with Conduit**

- 1. Protect fender. Clean inside of fender with a mixture of alcohol and water. Allow to air-dry.
- 2. Position **new** wire harness and conduit inside fender in same location. Insert end of wiring harness with D plug through D hole in front of fender. Insert plug.
- Slide conduit toward D plug as far as it will go. Insert other end of wiring harness through housing hole in rear of fender.
- Remove adhesive tape backing from conduit and press conduit in place along right side curve of fender.

#### Wire Retention Bracket

- 1. See Figure 2-204. Drill out rivets (4) securing wire retention brackets (5) with a 1/4 in drill.
- Rivet wire retention brackets to fender.

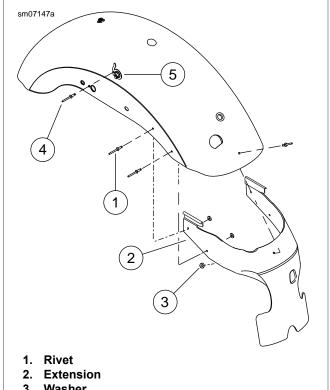

- 3. Washer
- 4. Rivet
- Wire retention bracket

Figure 2-204. Fender Extension

#### LICENSE PLATE BRACKET: XL 883R/L

FASTENER	TORQUE VALUE	
License plate support bracket screws	20-25 <b>in-lbs</b>	2.3-2.8 Nm
License plate bolt	20-25 <b>in-lbs</b>	2.3-2.8 Nm

#### Removal

- See Figure 2-205. Loosen the keps nut and remove the license plate.
- 2. Remove the keps nut, washer and bolt to remove the clamp and the bracket.
- 3. Remove the three screws to remove the support bracket from the fender.

#### Installation

- 1. Mount the support bracket on the fender with the screws.
- 2. Fit the fender brace to the middle screw.
- 3. Secure with washers and nuts. Tighten the screws to 20-25 in-lbs (2.3-2.8 Nm).
- 4. Assemble the bracket and the clamp to the support bracket with the bolt, washer and keps nut.
- 5. Install the license plate. Tighten the keps nut to 20-25 in-lbs (2.3-2.8 Nm).

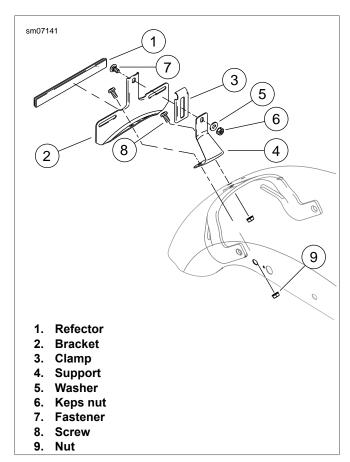


Figure 2-205. License Plate Bracket: XL Models except XL 883N, XL 1200X/C/CP

## LICENSE PLATE BRACKET: XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE VALUE	
License plate bracket, rear, fasteners: XL 1200C/C ANV/CP/CA/CB	20-25 <b>in-lbs</b>	2.3-2.8 Nm
License plate, rear, keps nut, XL 1200C/C ANV/CP/CA/CB	20-25 <b>in-lbs</b>	2.3-2.8 Nm

1. See <u>Figure 2-206</u>. Disassemble the upper license plate bracket bolt (4), washer (5) and keps nut (6).

- 2. Remove the two fasteners (2) from the tail lamp base to remove the lower license plate bracket (1).
- 3. Install the lower bracket and fasteners. Tighten to 20-25 **in-lbs** (2.3-2.8 Nm).
- 4. Install the tail lamp. See <u>6.16 TAIL LAMP: ALL MODELS</u> EXCEPT XL 883N/XL 1200X/V, LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB.
- 5. Assemble the upper bracket (3) with bolt (4), washer (5) and keps nut (6).
- 6. Install the license plate and tighten the keps nut to 20-25 in-lbs (2.3-2.8 Nm).

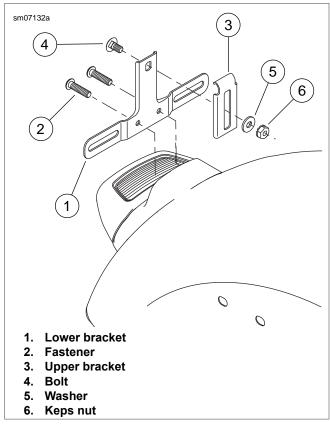


Figure 2-206. License Plate Bracket

# REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V

2.34

### **GENERAL**

Certain XL 883N and XL 1200X/V models have a side-mount license plate bracket. This bracket includes a license plate lamp module.

#### NOTE

Due to local regulations, this side mount license plate bracket may not be offered in all markets.

Certain models do not have a rear fender-mounted tail lamp and stop lamp. Instead, the rear turn signals also function as tail lamps and stop lamps and are controlled by a rear lighting converter module located under the seat.

For instructions on replacing the rear lighting converter module, see <u>6.20 REAR LIGHTING CONVERTER MODULE: XL 883N</u>, XL 1200X/V (DOM).

#### **NOTES**

- XL 883N/XL 1200X models sold in the international market are equipped with a center mounted license plate bracket that has a license plate lamp assembly.
- XL 883N/XL 1200X models sold in the international market are not equipped with a rear lighting converter module. LED assemblies in the rear turn signal housings serve as the stop lamp, tail lamp and turn signals.

#### REMOVAL AND DISASSEMBLY

### WARNING


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Position motorcycle upright on lift.
- 3. Remove seat.

#### NOTE

For this procedure it will not be necessary to remove the rear wheel.


- 4. Raise motorcycle to remove pressure on the shock bolts.
- Remove lower shock bolts. See <u>2.24 SHOCK</u> <u>ABSORBERS, Removal</u>.
- 6. Using jack, raise motorcycle in order to gain clearance between rear wheel and fender.
- 7. See Figure 2-207. Unplug license plate lamp connector (4) [40]. Unplug right rear lighting harness connector (2) [18]. This connector is identified by a brown band on the harness near the connector. Unplug left rear harness connector (3) [19].

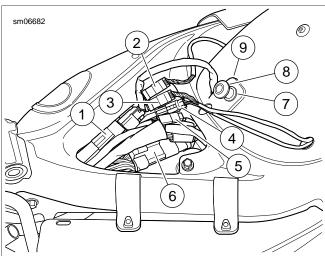

- 1. Antenna [209] (H-DSSS equipped vehicles only)
- 2. Right rear lighting harness connector [18]
- 8. Left rear lighting harness connector [19]
- 4. License plate lamp harness [40]
- 5. Main wiring harness connector [7]
- 6. Engine harness connector [145]
- 7. Flat washer
- 8. Seat post
- 9. Frame crossmember tab


Figure 2-207. Rear Lighting Harness Connectors: XL 883N, XL 1200X/V

- 8. See <u>Figure 2-208</u>. Carefully pull both rear lighting harnesses (2, 3) and license plate lamp harness (6) through feed-through holes (4, 5) in rear fender.
- 9. Remove both rear lighting harnesses and license plate lamp harness from fender harness clips (1).
- See <u>Figure 2-209</u>. Remove left rear lighting harness (5) from harness clips (2) on lower side of bracket on left side of fender. Repeat this step for right side of fender.
- 11. See Figure 2-210. Remove rear turn signal stalk nuts (6) from inside rear fender on both sides.
- 12. Remove forward fender support screw with washer (2) and nut (4), and aft fender support screw with washer (3) and nut plate (5) (domestic only) on both sides.
- 13. Remove screw with washer (9) and rear fender brace (7).
- 14. HDI Models: Remove license plate lamp module harness from upper harness clips on bracket inside fender (left side). Separate license plate bracket from rear fender brace.
- 15. Remove rear fender strut covers (1) with attached turn signal assemblies from rear fender struts. Carefully pull turn signal wiring harnesses through holes in rear fender and strut as each strut cover is removed.

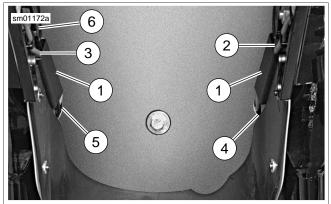


- 1. Harness bracket (2)
- 2. Right rear lighting harness
- 3. Left rear lighting harness
- 4. Right feed-through hole
- 5. Left feed-through hole
- 6. License plate lamp harness

Figure 2-208. Lighting Harnesses and Harness Brackets: XL 883N, XL 1200X/V

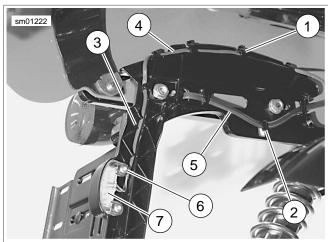

- 1. Upper license plate bracket harness clip (5)
- 2. Lower license plate bracket harness clip (3)
- 3. Harness channel
- 4. License plate lamp harness
- 5. Left rear lighting harness
- 6. Screw (2)
- 7. License plate lamp module

Figure 2-209. Removing/Installing License Plate Lamp Module (domestic only)

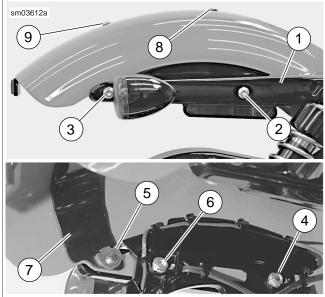

- 1. Rear fender strut cover
- 2. Forward fender support screw with washer (2)
- 3. Aft fender support screw with washer (2)
- 4. Forward fender support nut (2)
- 5. Aft fender support nut plate (2)
- 6. Rear turn signal stalk nut (2)
- 7. Rear fender brace
- 8. Fender seat nut kit (2)
- 9. Screw with washer

Figure 2-210. Rear Fender, Strut Cover and Turn Signal Lamp Assembly (domestic shown)

- 16. Place a clean shop towel between each fender strut and fender to protect paint.
- Have an assistant hold rear fender in place. See Figure 2-211. Remove seat post (1), washer (2) and screw (5). Remove rear fender from vehicle, being careful not to damage paint. Lay rear fender on a soft, clean surface.
- 18. **Domestic Models:** Remove convertible side mount license plate bracket from rear fender.
  - See <u>Figure 2-209</u>. Remove license plate lamp module harness from upper harness clips (1) and harness channel (3) in license plate bracket. Remove two screws (6) and license plate lamp module (7).
  - See <u>Figure 2-212</u>. Carefully drill out two pop rivets

     (3) securing license plate bracket assembly (2) to left side of fender.
- 19. See Figure 2-210. If rear fender is being replaced, do the following:
  - a. Remove fender seat nut kit (8).
  - Carefully drill out pop rivets securing rear fender extension to old fender with a 1/4-in (6.35 mm) diameter drill bit.
  - c. Set nut kit and fender extension aside for now.

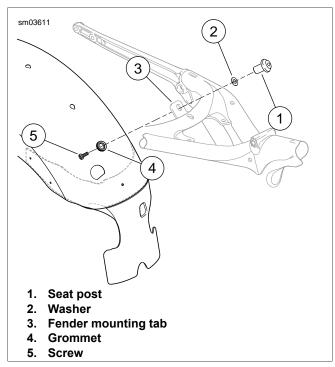


Figure 2-211. Seat Post/Rear Fender Mount Hardware

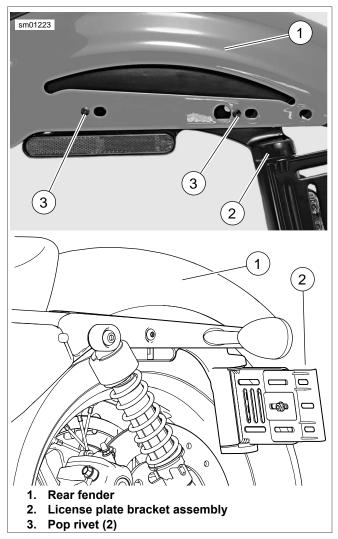


Figure 2-212. Removing/Installing License Plate Bracket Assembly (domestic)

## **ASSEMBLY AND INSTALLATION**

FASTENER	TORQUE VALUE	
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Turn signal stalk locknut	132-216 <b>in-lbs</b>	14.9-24.4 Nm
Fender brace, rear, screw	20-25 in-lbs	2.3-2.8 Nm
Fender support, rear, screw	132-216 <b>in-lbs</b>	14.9-24.4 Nm

- 1. See Figure 2-210. If **new** rear fender is being installed, do the following:
  - a. Install fender seat nut kit (8).
  - b. Rivet rear fender extension to fender.

- 2. **DOM Models:** Install convertible side mount license plate bracket on fender.
  - a. See <u>Figure 2-212</u>. Position license plate bracket assembly (2) against inside of rear fender (1) on left side. Line up holes in bracket with holes in fender and secure bracket to fender with two **new** pop rivets (3).
  - b. See Figure 2-209. Install license plate lamp module (7) on to license plate bracket. Secure with two screws (6). Feed license plate lamp harness (4) up through harness channel (3). Insert harness into upper license plate bracket harness clips (1).
- Place clean shop towels over fender struts. With the aid of an assistant, carefully install rear fender onto vehicle.
- 4. See Figure 2-211. With assistant holding rear fender in place, install screw (5) through fender and frame tab. Install washer (2) on screw. Thread seat post (1) onto screw. Finger-tighten seat post.
- H-DSSS: Make sure antenna harness feeds up between oil tank and fender on right side of vehicle and is not pinched between fender and frame crossmember.
- 6. Remove shop towels from fender struts.
- 7. See Figure 2-210. Install fender strut covers (1) with attached turn signal lamp assemblies. Carefully feed each turn signal harness through appropriate hole in fender strut and fender as you install each strut cover.
- Thread nut (6) onto each rear turn signal stalk finger-tight.
   Install two forward fender support screws with washers
   (2). Thread nut (4) onto each screw finger-tight.
- HDI Models: Hook tab of license plate bracket into slot in rear fender brace.
- 10. Place rear fender brace (7) in position under fender and secure with screw and washer (9) finger-tight. Install two aft fender support screws with washers (3).
  - a. HDI Models: Thread each mounting screw through rear fender brace, into threaded inserts in license plate bracket. Install finger-tight. Make sure threaded inserts in license plate bracket fit into holes in rear fender brace.
  - b. **DOM Models:** See <u>Figure 2-213</u>. Install nut plate (2) on each mounting screw (5) finger-tight.

#### NOTE

**DOM Models:** see <u>Figure 2-213</u>. Make certain that tab (3) on each nut plate (2) fits into slot (4) in fender brace (1) when securing nut plate with rearmost fender mounting screw (5).

- 11. Now tighten all fender mounting hardware in the following sequence:
  - a. See <u>Figure 2-211</u>. Tighten screw (5) and seat post (1) to 96-156 **in-lbs** (10.9-17.6 Nm).
  - b. See Figure 2-210. Tighten left and right turn signal stalk nuts (6) to 132-216 in-lbs (14.9-24.4 Nm).
  - Tighten rear fender brace screw (9) to 20-25 in-lbs (2.3-2.8 Nm).
  - Tighten forward and aft fender support screws (2, 3) on both sides of fender to 132-216 in-lbs (14.9-24.4 Nm).
- 12. See Figure 2-208. Install left rear lighting harness (3) and license plate lamp harness (6) into fender harness clip (1) on left side of fender. Install right rear lighting harness (2) into fender harness clip on right side of fender.
- Carefully feed both rear lighting harnesses and license plate lamp harness through feed-through holes (4, 5) in rear fender.
- 14. Plug in license plate lamp connector [40]. Plug in left rear lighting harness connector [18].
- Plug in right rear lighting harness connector [19]. This
  connector is identified by a brown band on the harness
  near the connector.

## **A**WARNING


After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 16. Install seat.
- 17. Lower motorcycle and install lower shock bolts. See 2.24 SHOCK ABSORBERS, Installation.
- 18. Install main fuse.

## **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

19. Turn ignition switch ON. Verify all rear lighting is operating properly: license plate lamp, tail lamps, stop lamps and turn signals.

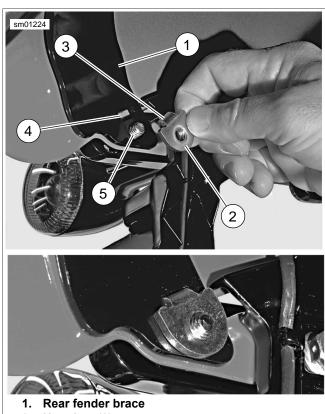

- 2. Nut plate (2)
- 3. Tab
- 4. Slot
- 5. Mounting screw (2)

Figure 2-213. Rear Fender Nut Plate (Domestic Only)

## **REAR FENDER: XR 1200X**

## REMOVAL

1. Remove rider's seat and passenger pillion.

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- Remove main fuse. 2.
- See Figure 2-214. Remove three bolts and washers (1). Remove two bolts (2) and retainers (3). Lift tail section (4) off from motorcycle.
- Remove screw (5). Rotate inner fender (6) down and release tabs (7) from notches in frame.
- Disconnect ECM connector and remove inner fender and ECM as an assembly. Remove ECM from inner fender if necessary.

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Passenger pillion retainer post screw: XR 1200X	36-60 in-lbs	4.1-6.8 Nm
Fender, inner screw: XR 1200X	72-120 in-lbs	8.1-13.6 Nm
Tailsection bolts: XR 1200X	72-120 <b>in-lbs</b>	8.1-13.6 Nm

- See Figure 2-214. If removed, install passenger pillion retainer post (9). Tighten screw (8) to 36-60 in-lbs (4.1-6.8 Nm).
- If removed, install ECM on inner fender. 2.
- While holding inner fender/ECM assembly in place, connect ECM connector.
- Verify that the tabs (7) are located in notches in frame and secure inner fender with screw (5). Tighten to 72-120 in-lbs (8.1-13.6 Nm).

#### NOTE


Washers and retainers (3) are installed with shoulder down.

Install tailsection (4) and secure with bolts, washers, and seat retainers. Tighten bolts to 72-120 in-lbs (8.1-13.6 Nm).

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 6. Install passenger pillion and rider's seat.
- 7. Install main fuse.

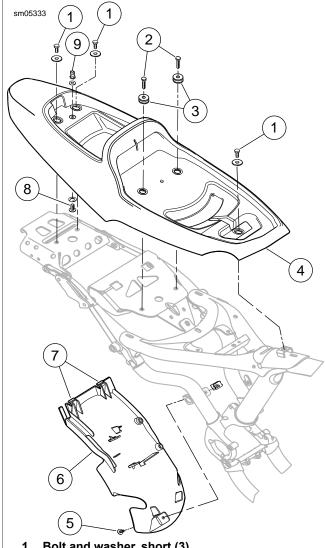

- 1. Bolt and washer, short (3)
- 2. Bolt, long (2)
- 3. Seat retainer (2)
- Tail section
- 5. Screw. inner fender
- 6. Inner fender
- Tabs 7.
- 8. Pillion retainer post screw
- 9. Passenger pillion retainer post

Figure 2-214. Rear Fender: XR 1200X


## SAREE GUARD: INDIA MODELS

# SAREE GUARD: XL 883R, XL 1200C/C ANV (INDIA)

FASTENER	TORQUE VALUE	
Strut cover fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Turn signal stalk locknut	96-156 in-lbs	10.9-17.6 Nm
Strut cover fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Saree guard, left-front, pas- senger footrest support bracket fastener	16-20 ft-lbs	21.7-27.1 Nm
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm

## Right, Left-Rear

- Remove the rear strut cover. See <u>2.33 REAR FENDER</u>: <u>ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L</u>.
- 2. See Figure 2-215. Remove the saree guard (1).
- 3. Install the saree guard.
  - a. Fit the saree guard to the fender strut.
  - b. Thread the turn signal connector and wire harness through the notch in the saree guard and the hole in the fender.
  - c. Install the strut cover.
  - d. Verify the installation of the rear fastener clip nut (6).
  - e. Install the front and rear strut cover fasteners (2) and washers (3).
  - f. Install the front fastener locknut (4) and the turn signal stalk locknut (5).
- 4. Tighten the fasteners:
  - a. Front strut cover fastener to 96-156 in-lbs (10.9-17.6 Nm).
  - Turn signal stalk locknut to 96-156 in-lbs (10.9-17.6 Nm).
  - c. Rear strut cover fastener to 96-156 **in-lbs** (10.9-17.6 Nm).
- Complete the strut cover installation. See <u>2.33 REAR FENDER</u>: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L.

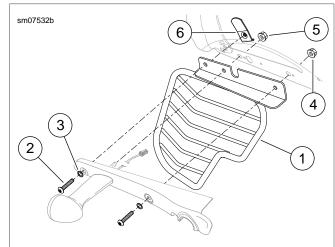

- 1. Right saree guard
- 2. Strut cover fastener (2)
- 3. Washer (2)
- 4. Strut cover fastener locknut (2)
- 5. Turn signal stalk locknut (2)
- 6. Clip nut (2)

Figure 2-215. Right, Left-Rear Saree Guard

#### Left-Front

- Remove the left passenger footrest. See <u>2.43 PAS-SENGER FOOTRESTS</u>, XL Models.
- Remove the left upper rear shock absorber fastener and washer. See <u>2.24 SHOCK ABSORBERS</u>, <u>Removal</u>.
- 3. See Figure 2-216. Remove the saree guard (1).
  - Remove the stud cover (2).
  - Remove the screw (3), the two washers (4) and the flange nut (5).

#### NOTE

Apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads of the shock absorber fastener.

- 4. Install the saree guard.
  - Fit the saree guard to the footrest bracket and the shock mount.
  - b. Install the screw, washers and the flange nut.
  - c. Install the shock stud cover.
  - d. Install the shock absorber fastener and washer.
- Tighten the passenger footrest support bracket fastener to 16-20 ft-lbs (21.7-27.1 Nm).
- 6. Tighten the shock absorber mounting bolt to 45-50 ft-lbs (61-68 Nm).
- Install the passenger footrest. See <u>2.43 PASSENGER</u> <u>FOOTRESTS</u>, XL <u>Models</u>.

## **HOME**

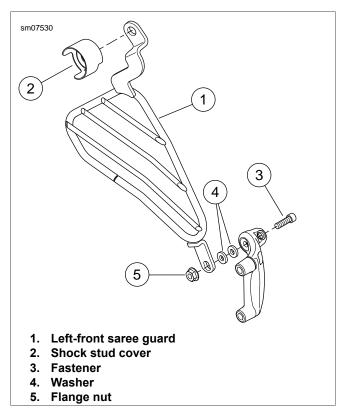


Figure 2-216. Left-Front Saree Guard

## **REAR LICENSE PLATE: INDIA MODELS**

## REAR LICENSE PLATE: XL MODELS (INDIA)

FASTENER	TORQUE VALUE	
License plate screw: XL 883L/R (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm
License plate screw: XL 883N, XL 1200X (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm

## XL 883L/R, XL 1200C/C ANV

- See <u>Figure 2-217</u>. Assemble the screws (1), washers (2) the license plate and the nuts (3) to the license plate bracket.
- 2. Tighten to 10-15 in-lbs (1.1-1.7 Nm).

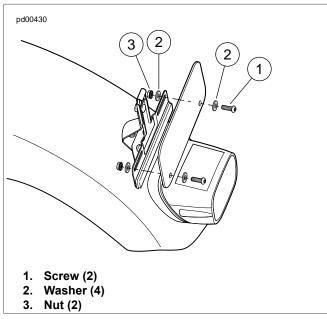


Figure 2-217. License Plate Bracket: XL 883L/R (India) (shown)

## XL 883N, XL 1200X

- See <u>Figure 2-218</u>. Move the reflector bracket (1) to the lowest mounting holes.
- 2. Assemble the screws (2), washers (3), license plate and nuts (4) to the license plate bracket.
- 3. Tighten to 10-15 in-lbs (1.1-1.7 Nm).

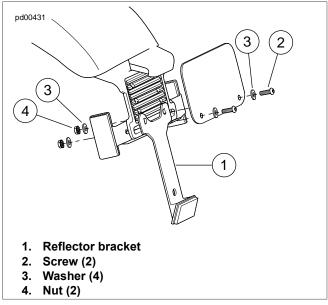


Figure 2-218. License Plate Bracket: XL 883N (India) (shown)

JIFFY STAND 2.38

#### REMOVAL

### WARNING

The jiffy stand locks when placed in the full forward (down) position with vehicle weight on it. If the jiffy stand is not in the full forward (down) position with vehicle weight on it, the vehicle can fall over which could result in death or serious injury. (00006a)

1. Position motorcycle upright on a suitable lift.

#### NOTE

Remove stop to release spring tension.

- 2. See Figure 2-219. Remove stop (1).
- 3. Retract leg (2).
- 4. Remove pretzel clip (3). Discard pretzel clip.

## WARNING

Wear safety glasses or goggles when removing or installing spring. Spring tension can cause spring, attached components and/or hand tools to fly out which could result in death or serious injury. (00477c)

- 5. Hold leg in retracted position. Withdraw clevis pin (4) until it disengages from upper pivot hole of yoke.
- 6. Use pliers to detach spring (5) from the frame mounted anchor pin. Unhook end of spring from leg.
- 7. Remove clevis pin from lower pivot hole of yoke.
- 8. Remove upper and lower bushings (6).
- 9. Remove bumper (7) if required.
- 10. Remove JSS if equipped. See <u>6.29 JIFFY STAND</u> SENSOR (JSS): INTERNATIONAL MODELS.

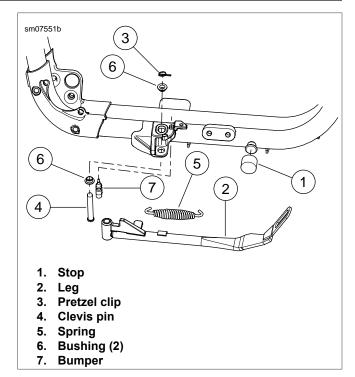


Figure 2-219. Jiffy Stand

#### **CLEANING AND LUBRICATION**

- Clean the jiffy stand components, the frame-mounted yoke and the anchor pin.
- 2. See Figure 2-220. Apply ANTI-SEIZE LUBRICANT to the leg pivot holes in the yoke (1), the groove of the anchor pin (2) and the OD of the clevis pin.
- Coat the ramp (3) of the yoke with ANTI-SEIZE LUB-RICANT.

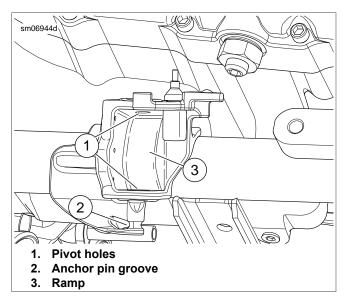


Figure 2-220. Lubrication Points

### **INSTALLATION**

## **AWARNING**

Wear safety glasses or goggles when removing or installing spring. Spring tension can cause spring, attached components and/or hand tools to fly out which could result in death or serious injury. (00477c)

- 1. If required, install the JSS. See <u>6.29 JIFFY STAND SENSOR (JSS): INTERNATIONAL MODELS.</u>
- 2. Press in a new rubber bumper.

#### NOTE

Face open ends of spring hooks toward centerline of vehicle.

- See <u>Figure 2-221</u>. Install spring.
  - a. Hook spring into spring mounting hole (2) on leg.
  - b. Hook spring over frame mounted anchor pin (1).
- 4. Install bushing onto clevis pin with shoulder of bushing facing head of clevis pin.
- 5. Hold leg in its retracted position. Insert clevis pin halfway up through yoke and pivot hole of leg.

#### NOTE

Make certain that shank of lower bushing fits inside lower pivot hole in yoke.

- 6. Push clevis pin through slotted upper hole in yoke.
- 7. Install upper bushing with shoulder facing up against upper surface of yoke.
- 8. Insert **new** pretzel clip through hole in end of clevis pin.

#### NOTE

See <u>Figure 2-222</u>. Snap the loop of the pretzel clip over the end of the clevis pin.

9. Press the stop onto the motorcycle frame.

#### NOTE

When retracted, the leg should be seated against the stop.

 Extend and retract jiffy stand leg several times to check operation.

## **A**WARNING

Always park motorcycle on a level, firm surface. An unbalanced motorcycle can fall over, which could result in death or serious injury. (00039a)

#### **A**WARNING

Be sure jiffy stand is fully retracted before riding. If jiffy stand is not fully retracted, it can contact the road surface causing a loss of vehicle control, which could result in death or serious injury. (00007a)

11. Rest motorcycle on jiffy stand.

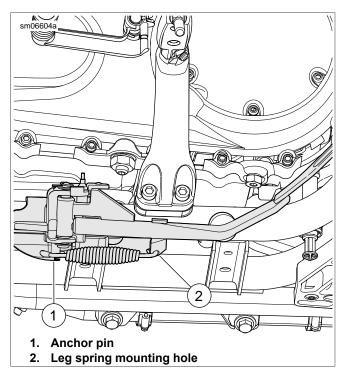


Figure 2-221. Jiffy Stand (typical)

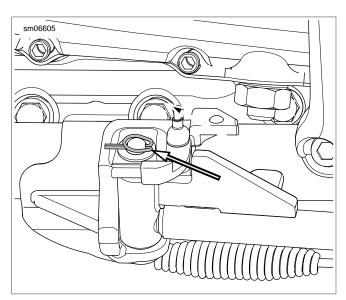


Figure 2-222. Pretzel Clip

**SEAT** 2.39

### **SEAT: XL MODELS**

FASTENER	TORQUE VALUE	
Seat mounting screw: XL Models	20-40 in-lbs	2.3-4.5 Nm

#### Removal

- 1. Remove screw to detach seat from rear fender.
- 2. Slide seat forward.
- See <u>Figure 2-223</u>. Lift up slightly to detach keyhole bracket from seat post.

NOTES

- Solo Seat: See Figure 2-224.
- Two-Up Seat: See Figure 2-225.
- Slide seat rearward to detach seat tongue (1) from rear fuel tank bracket.
- 5. Verify that tongue and mounting bracket (3) are tightly secured to the seat bottom.

#### NOTE

The passenger strap is not sold separately. Replace entire seat if the strap is damaged.

If two-up seat, inspect passenger strap (4) for damage or excessive wear.

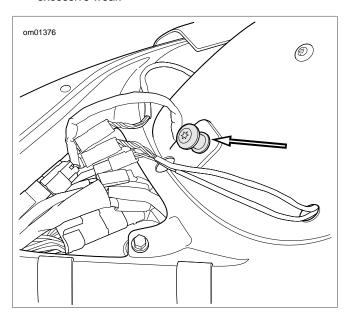


Figure 2-223. Seat Post: XL Models

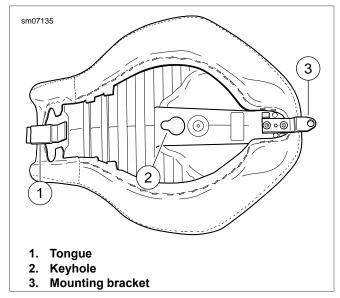


Figure 2-224. Seat: XL Solo

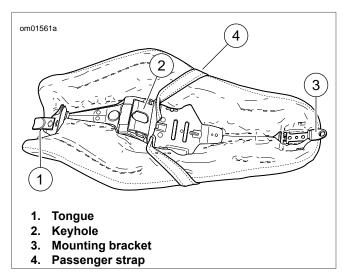


Figure 2-225. Seat: XL Two-Up

## Installation

- Position seat on frame with mounting bracket at rear.
- Slide seat forward until the tongue fits snugly under rear fuel tank bracket.
- 3. Push seat forward to engage keyhole onto seat post. Pull seat back slightly.

#### NOTE

Mounting bracket of solo seat uses forward hole in rear fender. Dual seat bracket uses rearward hole.


- See <u>Figure 2-226</u>. Install seat mounting screw with captive washer to fasten seat mounting bracket to top of rear fender.
- 5. Pull up on seat to verify that it is locked in place.

6. Tighten seat mounting screw to 20-40 in-lbs (2.3-4.5 Nm).

## **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

7. Pull up on seat again to verify that it is secured at all three points.

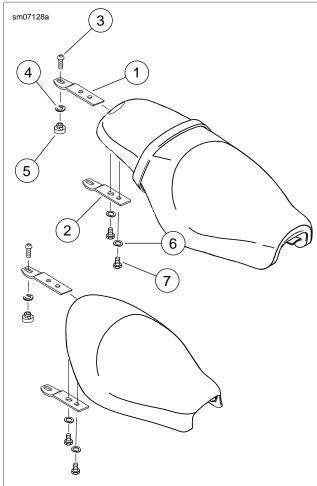

- 1. Mounting bracket, snap-in
- 2. Mounting bracket, bolt-on
- 3. Seat mounting screw w/captive washer
- 4. Seat nut
- 5. Screw
- 6. Lockwasher

Figure 2-226. Seat Assembly: XL Models

## **SEAT: XR 1200X**

#### Removal

- 1. See <u>Figure 2-227</u>. Reach under front end of tailsection. Press the two seat tabs inward.
- 2. Pull front of seat upward to disengage seat from the front end of the tailsection.
- 3. Pull seat forward over fuel tank.

#### **NOTES**

- When removing the seat, verify that the mounting bracket under the seat is tightly secured to the seat bottom.
- · Check for loose or missing rivets.
- Inspect passenger strap for damage or excessive wear.
   The passenger strap is not sold separately. Replace entire seat if the strap is damaged.

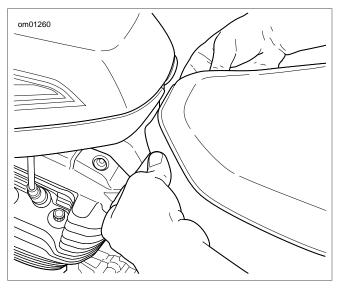


Figure 2-227. Front Seat Tabs (under tailsection): XR 1200X

#### Installation

- 1. See <u>Figure 2-228</u>. Align the guides in the seat bracket with the seat posts. Place rear of seat into tailsection.
- Push down on front of seat until the two tabs engage the front end of tailsection.

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

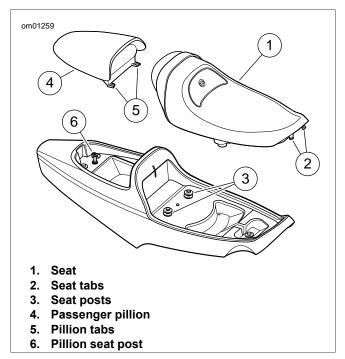


Figure 2-228. Seat and Pillion: XR 1200X

## **PASSENGER PILLION: XR 1200X**

### Removal

- See <u>Figure 2-229</u>. Lift the rear of pillion to disengage grommet from the seat post.
- 2. Pull pillion out from tailsection.

## Installation

1. See <u>Figure 2-229</u>. Insert pillion into trunk, aligning tabs on pillion with the slots in the trunk.

2. Push down firmly on rear of pillion until grommet fully engages the seat post.

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

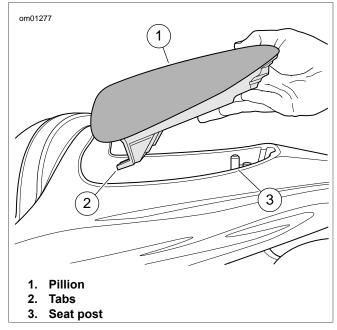


Figure 2-229. Passenger Pillion: XR 1200X

# RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS

2.40

## RIGHT FOOTREST AND REAR BRAKE PEDAL ASSEMBLY

FASTENER	TORQUE VALUE	
Footrest mount fastener	45-50 ft-lbs	61-68 Nm
Brake pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm
Footrest wear peg	72-108 in-lbs	8.1- 12.2 Nm
Brake rod to bell crank screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm
Brake rod to brake pedal screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm

#### Removal

- Remove front muffler. See <u>4.13 EXHAUST SYSTEM: XL MODELS.</u>
- See <u>Figure 2-230</u>. Remove retaining ring (1), clevis pin (2), footrest (3) and spring washer (4). Discard retaining ring.
- Remove brake rod (5) from brake pedal (6) and master cylinder bell crank.
- 4. Remove retaining ring (7), screw (8) and clevis (9). Discard retaining ring.
- 5. Remove two fasteners (10) and right rider footrest/brake pedal support bracket (11) from frame.

#### Installation


- Mount support bracket with two fasteners. Tighten to 45-50 ft-lbs (61-68 Nm).
- 2. Install brake pedal.
  - a. Slide brake pedal onto clevis.
  - b. Fit clevis to the support bracket.
  - Line up hole in clevis with hole in support bracket.
     Secure with screw.
  - d. Tighten to 13-17 ft-lbs (17.6-23.0 Nm).
  - e. Install new retaining ring.

#### NOTE

Position spring washer inside clevis with the square edge toward the inside.

- Install footrest.
  - a. Install footrest and spring washer on clevis.
  - Align holes and push clevis pin from top down through hole in clevis.
  - c. Install new retaining ring.
- 4. If removed, install wear peg. Tighten to 72-108 **in-lbs** (8.1-12.2 Nm).

- Install the brake rod.
  - Apply two drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to threads of both brake rod ball stud screws.
  - Thread one end of brake rod into master cylinder bell crank. Tighten to 120-180 in-lbs (13.6-20.4 Nm).
  - Thread other end of brake rod into brake pedal.
     Tighten to 120-180 in-lbs (13.6-20.4 Nm).
- Install front muffler. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u>.

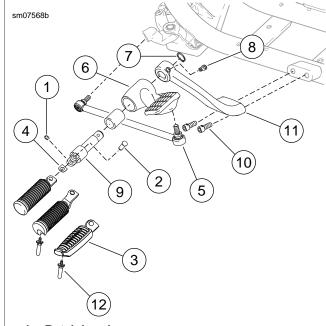

- 1. Retaining ring
- 2. Clevis pin
- 3. Footrest
- 4. Spring washer
- 5. Brake rod
- 6. Brake pedal
- 7. Retaining ring
- 8. Screw
- 9. Clevis
- 10. Screw (2)
- 11. Bracket
- 12. Wear peg

Figure 2-230. Right Footrest and Rear Brake Pedal

## LEFT FOOTREST AND SHIFT LEVER ASSEMBLY

FASTENER	TORQUE VALUE	
Gear shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm
Rider footrest support bracket mounting screw	45-50 ft-lbs	61-68 Nm
Footrest wear peg	72-108 <b>in-lbs</b>	8.1- 12.2 Nm

#### Removal

- See <u>Figure 2-231</u>. Remove retaining ring (1), clevis pin (2), footrest (3) and spring washer (4). Discard retaining ring.
- Remove two screws (5) and left rider footrest support bracket (6) from frame.
- 3. Remove screw (7) and shifter peg (8).
- 4. Remove pinch screw (9) and washer (10). Remove shift lever (12) and rubber washer (11).

#### Installation

 Install rubber washer and shift lever on transmission shift lever shaft. Secure with washer and pinch screw. Tighten to 16-20 ft-lbs (21.7-27.1 Nm).

#### NOTE


A new shifter peg screw comes with a lock patch.

- 2. Install the shifter peg.
  - Clean screw threads of the shifter peg screw and apply one or two drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to threads.
  - b. Install shifter peg and screw.
  - c. Tighten screw to 96-144 in-lbs (10.9-16.3 Nm).
- 3. Attach rider footrest support bracket to frame with two screws. Tighten to 45-50 ft-lbs (61-68 Nm).

#### NOTE

Position spring washer inside support bracket mounting boss with the square edge toward the inside.

- 4. Install footrest.
  - Install footrest with spring washer on footrest support bracket.
  - b. Align holes and push clevis pin from top down through hole in support bracket.
  - c. Install new retaining ring.
- 5. If removed, install wear peg. Tighten to 72-108 **in-lbs** (8.1-12.2 Nm).

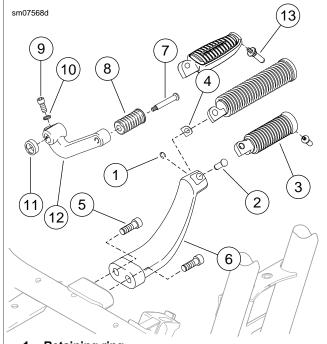

- 1. Retaining ring
- 2. Clevis pin
- 3. Footrest
- 4. Spring washer
- 5. Fastener
- 6. Support bracket
- 7. Screw
- 8. Shifter peg
- 9. Pinch screw
- 10. Washer
- 11. Rubber washer
- 12. Shift lever
- 13. Wear peg

Figure 2-231. Left Footrest and Shift Lever

## RIDER FOOT CONTROLS: XL FORWARD **CONTROLS**

2.41

## RIGHT FOOTREST AND REAR BRAKE PEDAL ASSEMBLY


FASTENER	TORQUE VALUE	
Footrest mount fastener	45-50 ft-lbs	61-68 Nm
Brake pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm
Brake rod to bell crank screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm
Brake rod to brake pedal screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm

#### Removal

- See Figure 2-232. Remove retaining ring (1), clevis pin (2), footrest (3) and spring washer (4). Discard retaining
- Remove brake rod (5) from brake pedal (6) and master cylinder bell crank (7).
- Remove retaining ring (8), screw (9) and clevis (10). Slide brake pedal off clevis. Discard retaining ring.
- 4. Remove two screws (11), footrest/brake pedal support bracket (12) and J-clip (13) from frame.

#### Installation

- 1. See Figure 2-232. Position J-clip (13) against frame as shown. Mount footrest/brake pedal support bracket (12) and J-clip to frame with screws (11). Tighten to 45-50 ftlbs (61-68 Nm).
- Slide brake pedal (6) onto clevis (10). Mount clevis on footrest/brake pedal support bracket. Line up hole in clevis with hole in support bracket. Secure with screw (9). Tighten to 13-17 ft-lbs (17.6-23.0 Nm). Install new retaining ring (8) on end of clevis.
- 3. Install footrest (3) on clevis with spring washer (4). Make sure spring washer is positioned inside clevis with the square edge toward the inside. Align holes and push clevis pin (2) from top down through hole in clevis. Secure with new retaining ring (1).
- If removed, install wear peg. Tighten to 72-108 in-lbs (8.1-12.2 Nm).
- Apply two drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to threads of both brake rod ball stud screws.
- Thread one end of brake rod (5) into master cylinder bell crank (7). Tighten to 120-180 in-lbs (13.6-20.4 Nm).
- 7. Thread other end of brake rod into brake pedal. Tighten to 120-180 in-lbs (13.6-20.4 Nm).

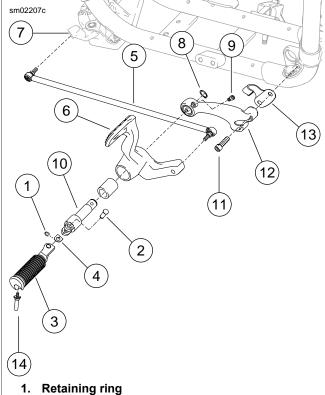

- 2. Clevis pin
- Footrest
- 4. Spring washer
- Brake rod
- 6. Brake pedal
- 7. Bell crank
- 8. Retaining ring
- 9. Screw
- 10. Clevis
- 11. Screw (2)
- 12. Footrest/brake pedal support bracket
- 13. J-clip
- 14. Wear peg

Figure 2-232. Brake Side Forward Controls

## LEFT FOOTREST AND SHIFT LEVER ASSEMBLY

FASTENER	TORQUE VALUE	
Shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm
Footrest mount fastener	45-50 ft-lbs	61-68 Nm
Shift pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm
Shifter rod to shift lever screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm
Shifter rod to shift lever screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm

#### Removal

- See <u>Figure 2-233</u>. Remove retaining ring (1), clevis pin (2), footrest (3) and spring washer (4). Discard retaining ring.
- 2. Remove screw (5) and shifter peg (6).
- 3. Remove the shifter rod screws (7) and the shifter rod (8) from shifter lever assembly (9) and shift lever (10).
- Remove retaining ring (11), screw (12) and clevis (13).
   Slide shifter lever assembly off clevis. Discard retaining ring.
- 5. Remove two screws (14), footrest/shifter lever support bracket (15) and j-clip (16) from frame.
- 6. Remove pinch screw (17), washer (18), shift lever (10) and rubber washer (19) from transmission shift shaft.

#### Installation


- See <u>Figure 2-233</u>. Install rubber washer (19) and shift lever (10) onto transmission shifter shaft, with shift lever arm pointing straight down. Secure with pinch screw (17) and washer (18). Tighten pinch screw to 16-20 ft-lbs (21.7-27.1 Nm).
- Mount j-clip (16) and footrest/shift lever support bracket (15) to frame with two screws (14). Tighten to 45-50 ft-lbs (61-68 Nm).
- 3. Install shift lever clevis:
  - Slide shifter lever assembly (9) onto clevis (13).
  - b. Mount clevis on footrest/shifter lever support bracket.
  - c. Line up hole in clevis with hole in support bracket.
  - d. Secure with screw (12). Tighten to 13-17 ft-lbs (17.6-23.0 Nm).
  - e. Install retaining ring (11) on end of clevis.

- 4. Mount footrest (3) on clevis with spring washer (4):
  - a. Position the spring washer inside clevis with the square edge toward the inside.
  - b. Align holes.
  - Push clevis pin (2) from top down through hole in clevis.
  - Secure with new retaining ring (1).
- 5. If removed, install wear peg. Tighten to 72-108 **in-lbs** (8.1-12.2 Nm).
- Thread screw (7) in one end of shifter rod (8) into shift lever (10). Tighten to 120-180 in-lbs (13.6-20.4 Nm).
- 7. Thread screw (7) in other end of shifter rod into shift lever assembly (9). Tighten to 120-180 **in-lbs** (13.6-20.4 Nm).

#### NOTE

A **new** shifter peg screw has lock patch.

- If re-using shifter peg screw, clean screw threads and apply one or two drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to threads.
- 9. Install shifter peg (6). Secure with screw (5). Tighten to 96-144 **in-lbs** (10.9-16.3 Nm).

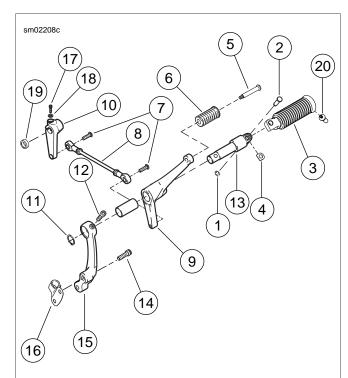

- 1. Retaining ring
- 2. Clevis pin
- 3. Footrest
- 4. Spring washer
- 5. Screw
- 6. Shifter peg
- 7. Screw (2)
- 8. Shifter rod assembly
- 9. Shifter lever assembly
- 10. Shift lever
- 11. Retaining ring
- 12. Screw
- 13. Clevis
- 14. Screw (2)
- 15. Footrest/shifter lever support bracket
- 16. J-clip
- 17. Pinch screw
- 18. Washer
- 19. Rubber washer
- 20. Wear peg

Figure 2-233. Shifter Side Forward Controls

## ADJUSTING SHIFT PEDAL: FORWARD CONTROLS MODELS

FASTENER	TORQUE VALUE	
Shift rod screw	120-180 in-lbs	13.6-20.4 Nm
Shift rod jamnuts	84-132 <b>in-lbs</b>	9.5-14.9 Nm

- 1. See Figure 2-234. Loosen locknuts (1) on shift rod (2).
- 2. Remove ball joint screw (3).

#### NOTE

Adjust so that an equal number of threads (4) are visible on both ends of the shift rod.

- 3. Turn ball joint or shift rod to adjust rod length.
- 4. Temporarily attach ball joint to shift lever.
- 5. Measure the shift lever angle (5). Remove and adjust as necessary until the angle is 45 degrees.
- 6. Tighten to 120-180 in-lbs (13.6-20.4 Nm).
- Hold shifter rod. Tighten locknuts to 84-132 in-lbs (9.5-14.9 Nm).

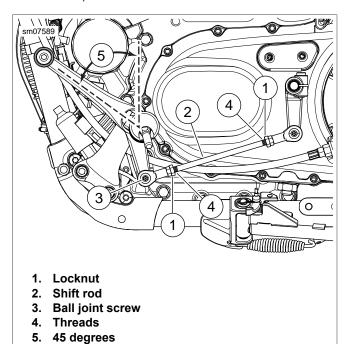


Figure 2-234. Shifter Linkage: Models with Forward Controls

## RIGHT FOOTREST AND REAR BRAKE PEDAL ASSEMBLY

FASTENER	TORQUE VALUE	
Footrest clevis fastener: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm


#### Removal

- Remove clevis pin connecting master cylinder to brake pedal. See <u>2.12 REAR BRAKE MASTER CYLINDER: XR</u> <u>1200X</u>.
- 2. If necessary, remove wear peg (11).
- 3. See Figure 2-235. Remove retaining ring (10) and washer (9). Discard retaining ring.
- 4. Remove clevis pin (5), spring (7), and footrest (8).
- 5. Remove bolt (3), footrest clevis (6), and brake pedal (4).
- If necessary, remove bracket (1). The master cylinder must be disconnected from the bracket or brake line disconnected prior to removing the two fasteners (2). See 2.12 REAR BRAKE MASTER CYLINDER: XR 1200X.

#### Installation

- If removed, install master cylinder/footrest bracket. See 2.12 REAR BRAKE MASTER CYLINDER: XR 1200X.
- 2. See Figure 2-235. Install brake pedal on footrest clevis and install footrest clevis. Tighten bolt (3) to 13-17 ft-lbs (17.6-23.0 Nm).
- 3. Install footrest (8) and spring (7) on clevis and secure with clevis pin (5). Install washer (9) and **new** retaining ring (10).
- 4. If removed, install wear peg and tighten to 72-108 **in-lbs** (8.1-12.2 Nm).

 Connect brake pedal to master cylinder. See <u>2.12 REAR</u> <u>BRAKE MASTER CYLINDER: XR 1200X</u>.

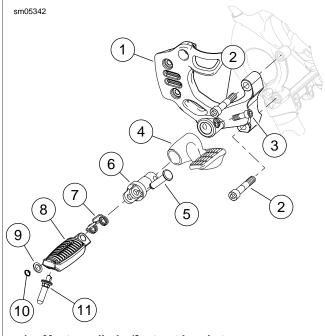

- 1. Master cylinder/footrest bracket
- 2. Fastener
- 3. Footrest clevis bolt
- 4. Brake pedal
- 5. Clevis pin
- 6. Footrest clevis
- 7. Spring
- 8. Footrest
- 9. Washer
- 10. Retaining ring
- 11. Wear peg

Figure 2-235. Rider Foot Control, Right Side: XR 1200X

## LEFT FOOTREST AND SHIFT LEVER ASSEMBLY

FASTENER	TORQUE VALUE	
Footrest bracket fastener: XR 1200X	45-50 ft-lbs	61-68 Nm
Footrest clevis fastener: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm
Shifter peg screw	96-144 in-lbs	10.9-16.3 Nm
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm
Shift linkage fastener	120-180 in-lbs	13.6-20.3 Nm


#### Removal

- 1. See <u>Figure 2-236</u>. Remove fasteners (11) and remove linkage (12).
- 2. If necessary, remove wear peg (9).
- 3. Remove retaining ring (4) and washer (5). Discard retaining ring.
- 4. Remove clevis pin (10), spring (7), and footrest (8).
- 5. Remove bolt (3), footrest clevis (6), and foot shift lever (15).
- Remove shifter peg (13).
- 7. If necessary, remove fasteners (2) and bracket (1).

#### Installation

- 1. See <u>Figure 2-236</u>. If removed, install bracket (1). Tighten fasteners (2) to 45-50 ft-lbs (61-68 Nm).
- 2. Install foot shift lever on footrest clevis. Install footrest clevis and bolt (3). Tighten to 13-17 ft-lbs (17.6-23.0 Nm).
- Install footrest (8) and spring (7) on clevis. Secure with clevis pin (10). Install washer (5) and **new** retaining ring (4).
- 4. Install shifter peg (13). Tighten to 96-144 **in-lbs** (10.9-16.3 Nm).

- If removed, install wear peg. Tighten to 72-108 in-lbs (8.1-12.2 Nm).
- 6. Connect linkage (12) between foot shift lever (15) and transmission shift lever (14) using fasteners (11). Tighten to 120-180 **in-lbs** (13.6-20.3 Nm).
- 7. Check shift linkage adjustment. Adjust as necessary.

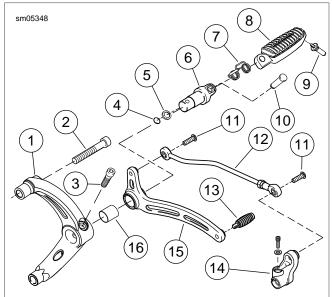

- 1. Bracket
- 2. Fastener (2)
- 3. Footrest clevis bolt
- 4. Retaining ring
- 5. Washer
- 6. Footrest clevis
- 7. Spring
- 8. Footrest
- 9. Wear peg
- 10. Clevis pin
- 11. Fastener (2) 12. Shift linkage
- 12. Shift mikay
- 13. Shifter peg
- 14. Transmission shift lever
- 15. Foot shift lever
- 16. Bushing

Figure 2-236. Rider Foot Control, Left Side: XR 1200X

## **ADJUSTING SHIFT LEVER**

FASTENER	TORQUE VALUE			
Shift rod screw	120-180 13.6-20.4 N in-lbs			
Shift rod jamnuts	84-132 <b>in-lbs</b>	9.5-14.9 Nm		

The foot shift linkage is set at the factory and normally should need no adjustment. However, the shift linkage can be adjusted for rider preference.

See <u>Figure 2-237</u>. Adjust shifter rod assembly (4) length until shifter lever (5) is at approximately 20 degrees from horizontal as shown in the figure.

- 1. Loosen jamnut (3) on front end of shifter rod.
- 2. Remove screw (1) securing ball joint (2) to shifter arm (6).
- Turn ball joint in one direction or the other to adjust rod length as necessary. Temporarily attach ball joint to shifter arm and check angle.
- 4. When angle of shift lever assembly is at 20 degrees, install screw (1). Tighten to 120-180 **in-lbs** (13.6-20.4 Nm).
- 5. Holding ball joint with a wrench on the flats, tighten the jamnuts to 84-132 **in-lbs** (9.5-14.9 Nm).

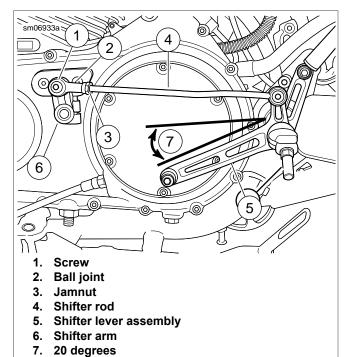


Figure 2-237. Adjusting Shift Pedal: XR 1200X

## PASSENGER FOOTRESTS

## **XL MODELS**

FASTENER	TORQUE VALUE	
Passenger footrest support bracket fastener: XL Models	45-50 ft-lbs	61-68 Nm

#### Removal


- See <u>Figure 2-238</u>. Remove retaining ring (1), clevis pin (2), footrest (3) and spring washer (4). Discard retaining ring.
- 2. Remove two screws (5) and footrest support bracket (6) from frame (7).

#### Installation

#### NOTE

See <u>Figure 2-238</u>. Position clamp (8) between the left footrest support bracket (6) and the lower support bracket hole in the frame.

- 1. See <u>Figure 2-238</u>. Attach footrest support bracket (6) to frame (7) with two fasteners (5). Tighten to 45-50 ft-lbs (61-68 Nm).
- 2. Install footrest (3) on footrest support bracket with spring washer (4). Make sure spring washer is positioned inside support bracket mounting boss with the square edge toward the inside.
- Align holes and push clevis pin (2) from top down through hole in support bracket. Secure with **new** retaining ring (1).

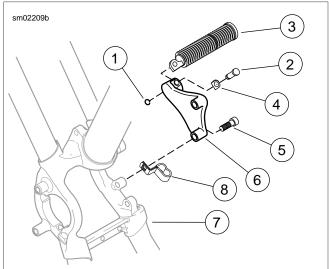

- 1. Retaining ring
- 2. Clevis pin
- 3. Footrest
- 4. Spring washer
- 5. Fastener (2)
- 6. Footrest support bracket
- 7. Frame
- 8. Clamp (left side only)

Figure 2-238. Passenger Footrest Assembly (optional on some models)

## **XR 1200X**


FASTENER	TORQUE VALUE		
Passenger footrest support bracket fastener: XR 1200X	45-50 ft-lbs	61-68 Nm	
Muffler bracket to footrest bracket screw: XR 1200X	15-19 ft-lbs	20.4-25.8 Nm	

### Removal

- See <u>Figure 2-239</u>. Remove retaining ring (4), clevis pin (2), footrest and spring washer (3). Discard retaining ring.
- On right side of vehicle, remove screw securing muffler bracket to footrest support bracket.
- 3. Remove two fasteners (6), washers (5) and footrest support (7, 8) from frame.

## Installation

- See <u>Figure 2-239</u>. Attach left and right footrest support (7, 8) to frame with two fasteners (6) and washers (5). Tighten to 45-50 ft-lbs (61-68 Nm).
- 2. Attach muffler bracket to footrest support bracket with screw. Tighten to 15-19 ft-lbs (20.4-25.8 Nm).
- Install footrests on footrest support with spring washer (3).
   Make sure spring washer is positioned inside support bracket mounting boss with the square edge toward the inside.
- 4. Align holes in footrest and support bracket and push clevis pin (2) from top down through hole in support bracket. Secure with **new** retaining ring (4).

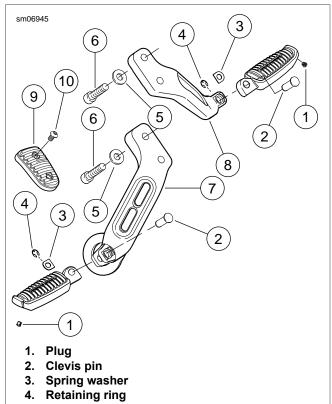

- 5. Washer
- 6. Fastener
- 7. RH support
- 8. LH support
- 9. Heel rest
- 10. Fastener

Figure 2-239. Left and Right Passenger Footrests

FORK LOCK 2.44

#### **REMOVAL**

## **AWARNING**

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

## **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- Remove fuel tank. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.
- Turn front forks full left lock.
- 5. See <u>Figure 2-240</u>. See <u>Figure 2-241</u>. Using a 5/64 drill bit, carefully drill a hole in the center of the lock pin.

#### NOTE

Take time to carefully orient drill bit to center of lock pin. If drill bit slides off-center, removal of lock pin will be difficult.

- See <u>Figure 2-242</u>. To remove lock pin, insert a screw extractor into the drilled hole. Hold body of screw extractor with a pliers or tap handle and using a small hammer gently "tap" on the pliers or tap handle to remove lock pin.
- Remove lock assembly.



Figure 2-240. Fork Lock Pin



Figure 2-241. Drilling Lock Pin

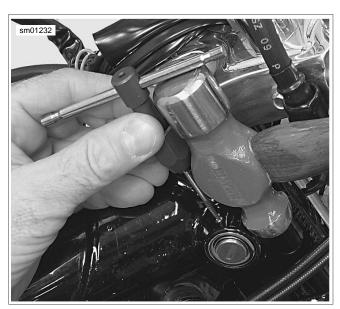


Figure 2-242. Removing Lock Pin

## **INSTALLATION**

- 1. Insert new lock assembly in frame lock housing.
- 2. Align lock pin hole in **new** lock assembly with hole in the frame lock housing.
- 3. Drive **new** lock pin in position (flush with frame lock housing).
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.

- 5. Verify proper operation of fork lock.
  - a. Turn front forks fully to the left.
  - Insert key into fork lock. Turn key 90 degrees clockwise
  - c. Verify that front forks are locked and cannot be turned.
  - Turn key 90 degrees counterclockwise and remove from fork lock.
  - e. Verify that front forks are now free to fully turn right and left.
- 6. Install main fuse.

2-172 2013 Sportster Service: Chassis

# MEDALLIONS, SERIALIZED BADGES AND TANK EMBLEMS

2.45

#### **REMOVAL**

1. Mark location of emblem with masking tape.

#### NOTE

Wear protective gloves.

- Saw behind emblem with mono-filament fishing line or waxed dental floss to remove emblem.
- Use 3M GENERAL PURPOSE ADHESIVE REMOVER to remove remaining foam backing tape and adhesive from mounting surface.

#### NOTE

For maximum bond, the surface must be clean and dry.

4. Clean with a mixture of 50 percent isopropyl alcohol and 50 percent distilled water.

#### NOTE

Apply medallion within minutes of cleaning.

5. Allow surface to dry.

## **INSTALLATION**

#### **NOTES**

- Apply in ambient temperatures between 70-100 °F (21-38 °C).
- Do not remove protective film from adhesive until ready to apply.
- Do not bend emblem to fit contour of mounting surface.
- 1. Test fit medallion in intended location
  - a. Check medallion against curve of mounting surface.
  - b. Match left and right sides of fuel tank.

#### **NOTES**

- Protect adhesive from grease, oil, dust, dirt and finger prints.
- Once applied, do not shift the medallion.
- The adhesive bonds in 72 hours at room temperature.
- 2. Remove protective film from back of medallion.
- Apply even pressure across the entire surface with palms and fingers of both hands. Hold in place for 15 seconds.
- 4. Wait 20 minutes before touching medallion.
- Wait 24 hours before washing.

2013 Sportster Service: Chassis 2-173

## **NOTES**

## TABLE OF CONTENTS

SUBJECT	PAGE NO.
3.1 FASTENER TORQUE VALUES	3-1
3.2 SPECIFICATIONS	3-5
3.3 OIL PRESSURE	
3.4 CRANKCASE BREATHING SYSTEM	3-13
3.5 TROUBLESHOOTING	3-14
3.6 ENGINE LUBRICATION SYSTEM	3-16
3.7 HOW TO USE THIS SECTION	
3.8 TOP END SERVICE	
3.9 BOTTOM END SERVICE	
3.10 REMOVING ENGINE FROM CHASSIS	
3.11 INSTALLING ENGINE IN CHASSIS	
3.12 PRECISION COOLING SYSTEM: XR 1200X	
3.13 TOP END OVERHAUL: DISASSEMBLY	3-50
3.14 CYLINDER HEAD	
3.15 CYLINDER AND PISTON	
3.16 TOP END OVERHAUL: ASSEMBLY	
3.17 BOTTOM END OVERHAUL: DISASSEMBLY	3-84
3.18 GEARCASE: XL MODELS	3-89
3.19 CRANKCASE	
3.20 OIL PUMP: XL MODELS	
3.21 OIL PUMP: XR 1200X	
3.22 BOTTOM END OVERHAUL: ASSEMBLY	
3.23 OIL FILTER MOUNT	3-120
3.24 OIL TANK	3-121

## **FASTENER TORQUE VALUES**

# FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE	VALUE	NOTES	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Brake hose clamp to frame, rear, screw	30-40 <b>in-lbs</b>	3.4-4.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Breather screw: XL Models	35-55 <b>in-lbs</b>	4.0-6.2 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers	
Check valve housing fastener: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly	
Check valve housing fastener: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X	
Check valve plug fitting: XR 1200X	15-21 ft-lbs	20.3-28.5 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly	
Crankcase fastener	15-19 ft-lbs	20.3-25.8 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
Cylinder headbolts, 1st torque	96-120 <b>in-lbs</b>	11-14 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/See procedure	
Cylinder headbolts, 1st torque	96-120 <b>in-lbs</b>	11-14 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/See procedure	
Cylinder headbolts, final torque	13-15 ft-lbs	18-20 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/Plus 90 degrees. See procedure	
Cylinder headbolts, final torque	13-15 ft-lbs	18-20 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/Plus 90 degrees. See procedure	
Cylinder head oil feed flare fitting: XR 1200X	22-26 ft-lbs	29.8-35.3 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly/Apply LOCTITE 243 MEDIUM STRENGTH THREAD- LOCKER AND SEALANT (blue)	
Cylinder head oil feed line flare nut: XR 1200X	13-17 ft-lbs	18-23 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly	
Cylinder stud	120-240 <b>in-lbs</b>	13.6-27.1 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
Engine mount, front, bolt	95-105 ft-lbs	129-142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Engine mount, front, bolt	95-105 ft-lbs	129 -142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Exhaust pipe clamp bracket screw	30-33 ft-lbs	40.7-44.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	

2013 Sportster Service: Engine 3-1

FASTENER	TORQUE	VALUE	NOTES
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.21 OIL PUMP: XR 1200X, Assembly
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XL Models
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X
Gearcase housing plug	108-156 in-lbs	12.2-17.6 Nm	3.21 OIL PUMP: XR 1200X, Assembly
Ignition switch mounting screw	34-45 <b>in-lbs</b>	4.0-5.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Ignition switch mounting screw	34-45 <b>in-lbs</b>	4.0-5.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Induction module cover to cylinder head fastener: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Induction module cover to induction module fastener: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Induction module cover to wire form fastener: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Isolator mount, front, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Isolator mount, front, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Isolator mount, rear, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Isolator mount, rear, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Oil cooler fastener: XR 1200X	36-60 in-lbs	4.1-6.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X/Apply LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue)
Oil cooler fastener: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Cooler/Apply LOCTITE 243 MEDIUM STRENGHT THREADLOCKER AND SEALANT (blue)
Oil deflector plate screw: XR 1200X	38-48 in-lbs	4.3-5.4 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
Oil filter adapter	18-22 ft-lbs	24.4-29.8 Nm	3.23 OIL FILTER MOUNT, Assembly

FASTENER	TORQUE VALUE		NOTES	
Oil line quick connect fitting, cylinder head return: XR 1200X	108-156 <b>in-lbs</b>	12.2-17.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines	
Oil line retainer, front, nut: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines	
Oil pump cover screws	70-80 <b>in-lbs</b>	7.9-9.0 Nm	3.20 OIL PUMP: XL MODELS, Assembly	
Oil pump feed fitting	100-120 in-lbs	11.3-13.6 Nm	3.20 OIL PUMP: XL MODELS, Installation	
Oil pump high pressure feed hose fitting nut	85-105 <b>in-lbs</b>	9.6-11.8 Nm	3.20 OIL PUMP: XL MODELS, Installation	
Oil pump high pressure feed hose to crankcase fitting	60-90 <b>in-lbs</b>	6.8-10.2 Nm	3.20 OIL PUMP: XL MODELS, Installation	
Oil pump quick connect fitting: XR 1200X	108-156 <b>in-lbs</b>	12.2-17.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines	
Oil pump rotor cover screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.21 OIL PUMP: XR 1200X, Assembly	
Oil pump rotor cover screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X	
Oil pump to crankcase screw	125-150 <b>in-lbs</b>	14.1-16.9 Nm	3.20 OIL PUMP: XL MODELS, Installation	
Oil rigid line retainer, rear, screw: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines	
Oil rigid line retainer, rear, screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines	
Oil tank mounting screw	36-60 in-lbs	4.1-6.8 Nm	3.24 OIL TANK, Installation	
Pinion shaft locking nut: XR 1200X	19-21 ft-lbs	26-29 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XL Models/ plus an additional 15-19 degrees of rota- tion	
Pinion shaft locking nut: XR 1200X	19-21 ft-lbs	26-29 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X/ plus 15-19 degrees of rotation	
Piston oil jet screw	38-48 in-lbs	4.3-5.4 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
Retainer plate, lower front, fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Return oil manifold screw: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Return Oil Manifold	
Rocker cover, inner, large bolt	18-22 ft-lbs	24.4-29.8 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers	
Rocker cover, inner, screw	135-155 <b>in-lbs</b>	15.3-17.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers	
Rocker cover, inner, small bolt	135-155 <b>in-lbs</b>	15.3-17.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers	
Rocker cover, outer, screw	120-168 <b>in-lbs</b>	13.5-19.0 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers	
Shift linkage pivot bolt	120-180 <b>in-lbs</b>	13.6-20.3 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Shock absorber mounting bolt	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Siren/canister bracket rear brake line fastener	17-22 ft-lbs	23.0-29.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	

2013 Sportster Service: Engine 3-3

FASTENER	TORQUI	E VALUE	NOTES
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link, lower, frame bracket, front, mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link, lower, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair
Stabilizer link cylinder head bracket	55-65 ft-lbs	74.6-88.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link cylinder head bracket	55-65 ft-lbs	74.6-88.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stop lamp switch bracket screw	72-120 <b>in-lbs</b>	8.1-13.6 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Tappet cover, anti-rotation mounting screw	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets
Tappet cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Tappet Covers, Pushrod Covers and Pushrods

## **SPECIFICATIONS**

## **SPECIFICATIONS: SPORTSTER MODELS**

Table 3-1. Engine

ITEM	XL 883 MODELS		XL 1200	XL 1200 MODELS		XR 1200X	
Number of cylinders		2					
Туре		4-cycle, 45 degree, V-twin, air cooled					
Compression ratio	8.8	8.9-1 9.7-1		10.0-1			
Bore	3.000 in	76.20 mm	3.500 in	88.90 mm	3.500 in	88.90 mm	
Stroke	3.812 in	96.82 mm	3.812 in	96.82 mm	3.812 in	96.82 mm	
Displacement	53.9 in <sup>3</sup>	883 cm <sup>3</sup>	73.4 in <sup>3</sup>	1202 cm <sup>3</sup>	73.4 in <sup>3</sup>	1202 cm <sup>3</sup>	

Table 3-2. Cylinder Heads: All Models

ITEM	NEW COM	PONENTS	SERVICE WEAR LIMITS		
	in	in mm		mm	
Valve guide in head (tight)	0.0033-0.0020	0.084-0.051	-	-	
Valve seat in head	0.0035-0.0010	0.089-0.025	-	-	
Head gasket surface (flatness)	0.006	0.152	Replace if more than 0.006	Replace if more than 0.152	

Table 3-3. Rocker Arms and Shafts: All Models

ITEM	NEW COM	PONENTS	SERVICE WEAR LIMITS		
	in mm		in	mm	
Shaft in bushing (loose)	0.0005-0.0020	0.013-0.051	0.0035	0.0889	
End clearance	0.003-0.013	0.08-0.33	0.025	0.635	
Bushing fit in rocker arm	0.004-0.002	0.10-0.05	-	-	
Shaft fit in rocker cover	0.0007-0.0022	0.018-0.056	0.0035	0.0889	

Table 3-4. Valves-883 cc/1200 cc

ITEM	NEW COM	PONENTS	SERVICE WEAR LIMITS		
	in mm		in	mm	
Fit in guide (intake/exhaust)	0.001-0.003	0.0254-0.0762	0.0038	0.0965	
Seat width	0.040-0.062	1.02-1.57	0.090	2.286	
Stem protrusion from cylinder valve pocket	2.028-2.064	51.511-52.426	2.082	52.883	

Table 3-5. Valve Springs (Intake/Exhaust): All Models

ITEM	NEW COMPONENTS		SERVICE WEAR LIMITS	
Closed	135 lbs @ 1.850 in	61.2 kg @ 47.0 mm	-	-
Open	312 lbs @ 1.300 in	141.5 kg @ 33.0 mm	-	-
Free length	2.325 in	59.1 mm	2.325 in (min)	59.1 mm (min)

2013 Sportster Service: Engine 3-5

Table 3-6. Tappets: All Models

ITEM	NEW COMPONENTS		SERVICE WEAR LIMITS	
	in	mm	in	mm
Fit in guide	0.0008-0.0023	0.020-0.058	0.003	0.0762
Roller fit	0.0006-0.0013	0.015-0.033	-	-
Roller end clearance	0.008-0.022	0.203-0.559	0.026	0.660

Table 3-7. Cylinder Bore: XL 883 Models

BORE DIAMETER	NEW COMPONENTS		SERVICE WEAR LIMITS	
	in	mm	in	mm
Standard +/-0.0002 in (0.0051 mm)	3.0005	76.213	3.0035	76.289
0.005 in OS +/-0.0002 in (0.0051 mm)	3.0048	76.323	3.0078	76.389
0.010 in OS +/-0.0002 in (0.0051 mm)	3.0098	76.449	3.0128	76.525
Taper	-	-	0.002	0.0508
Out of round	-	-	0.003	0.0762
Top gasket surface warpage	-	-	0.006	0.152
Base gasket surface warpage	-	-	0.008	0.203

Table 3-8. Cylinder Bore: All 1200 Models\*

BORE DIAMETER	NEW COMPONENTS		SERVICE WEAR LIMITS	
	in	mm	in	mm
Standard +/-0.0002 in (0.0051 mm)	3.4978	88.844	3.5008	88.920
0.005 in OS +/-0.0002 in (0.0051 mm)	3.502	88.95	3.505	89.027
0.010 in OS +/-0.0002 in (0.0051 mm)	3.507	89.08	3.510	89.154
Taper	-	-	0.002	0.0508
Out of round	-	-	0.003	0.0762
Top gasket surface warpage	-	-	0.006	0.152
Base gasket surface warpage	-	-	0.008	0.203
*XR 1200X: Oversized pistons are not available. Replace piston and/or cylinder as needed.				

Table 3-9. Pistons: XL 883 Models

ITEM	NEW COMPONENTS		SERVICE W	EAR LIMITS
	in	mm	in	mm
Compression ring gap (top and 2nd)	0.010-0.023	0.25-0.58	0.032	0.813
Oil control ring rail gap	0.010-0.053	0.25-1.35	0.065	1.651
Top compression ring side clearance	0.0020-0.0045	0.051-0.114	0.0065	0.165
2nd compression ring side clearance	0.0020-0.0045	0.051-0.114	0.0065	0.165
Oil control ring side clearance	0.0014-0.0074	0.036-0.188	0.0094	0.239
Piston pin fit (loose, room temperature)	0.00005-0.00045	0.0013-0.0114	-	-
Piston fit in cylinder (loose, room temperature)	0.0015-0.0026	0.038-0.066	0.0030	0.076

Table 3-10. Pistons: All 1200 Models

ITEM	NEW COMPONENTS		SERVICE W	EAR LIMITS
	in	mm	in	mm
Compression ring gap (top and 2nd)	0.007-0.020	0.18-0.51	0.032	0.813
Oil control ring rail gap	0.009-0.052	0.23-1.32	0.065	1.651
Top compression ring side clearance	0.0020-0.0045	0.051-0.114	0.0065	0.165
2nd compression ring side clearance	0.0016-0.0041	0.041-0.104	0.0065	0.165
Oil control ring side clearance	0.0016-0.0076	0.041-0.193	0.0094	0.239
Piston pin fit (loose at room temperature)	0.00005-0.00045	0.0013-0.0114	-	-
Piston fit in cylinder (loose at room temperature)	0.0015-0.0026	0.038-0.066	0.0030	0.076

Table 3-11. Connecting Rods: All Models

ITEM	NEW COMPONENTS		SERVICE WEAR LIMITS	
	in	mm	in	mm
Piston pin fit (loose)	0.00125-0.00175	0.0318-0.0445	0.00200	0.0508
Side play between fly- wheels	0.005-0.025	0.013-0.64	0.030	0.762
Fit on crankpin	0.0004-0.0017	0.010-0.043	0.0027	0.0686

2013 Sportster Service: Engine 3-7

Table 3-12. Flywheels: All Models

ITEM	NEW COMPONENTS		SERVICE W	EAR LIMITS
	in	mm	in	mm
Runout (flywheels at rim)	0.000-0.010	0.00-0.254	0.010	0.254
Runout (shaft at flywheel end)	0.000-0.002	0.00-0.0508	0.002	0.0508
End play	0.003-0.013	0.076-0.330	0.013	0.330

Table 3-13. Pinion Shaft Bearing: All Models

ITEM	NEW COMPONENTS		SERVICE WEAR LIMITS	
	in	mm	in	mm
Pinion shaft journal dia- meter	1.2500-1.2496	31.750-31.740	1.2494	31.735
Outer race diameter in right crankcase	1.5646-1.5652	39.741-39.756	1.5656	39.776
Bearing running clear- ance	0.00012-0.00088	0.0030-0.0224	-	-
Fit in cover bushing (loose)	0.0023-0.0043	0.058-0.109	0.0050	0.127

Table 3-14. Gearcase: All Models

ITEM	NEW COMPONENTS		SERVICE WEAR LIMIT	
	in	mm	in	mm
Cam gear shaft in bushing (loose)	0.0007-0.0022	0.018-0.056	0.003	0.0762
Cam gear shaft endplay (except rear intake)	0.005-0.024	0.13-0.61	0.025	0.635
Rear intake cam gear shaft end play	0.006-0.024	0.15-0.61	0.040	1.016

Table 3-15. Sprocket Shaft Bearing: All Models

ITEM	SPECIFI (INTERFER	_
	in	mm
Outer race fit in crankcase (tight)	0.006	0.152
Inner race fit on shaft (tight)	0.006	0.152

3-8 2013 Sportster Service: Engine

Table 3-16. Oil Pressure: At OperatingTemperature

rpm	XL MODELS*		XR 1200X**	
	psi	kPa	psi	kPa
1000	7-12	43.3-82.7	16-20	110.3-137.9
2500	10-17	68.9-117	40-44	275.8-303.4
* Pressure reading taken at oil pressure switch fitting.  ** Pressure reading taken at oil cooler inlet.				

Table 3-17. Electrical: XL Models

COMPONENT	SPECIFICATION			
Ignition timing	Not adj	ustable		
Battery	12 V, 225 CCA, 12 Ah, sealed and maintenance free			
Charging system	Single-phase, 30 A system (357 W @ 13.5 V, 2000 rpm, 405 W max power @ 13.5 V)			
Spark plug type	6R12			
Spark plug size	12 mm			
Spark plug gap	0.038-0.043 in	0.97-1.09 mm		
Spark plug torque	12-18 ft-lbs	16.3-24.4 Nm		

Table 3-18. Electrical: XR 1200X

COMPONENT	SPECIFICATION			
Ignition timing	Not adj	ustable		
Battery	12 V, 225 CCA, 12 Ah, sealed and maintenance free			
Charging system	Single-phase, 30 A system (357 W @ 13.5 V, 2000 rpm, 405 W max power @ 13.5 V)			
Spark plug type	10R12X			
Spark plug size	12 mm			
Spark plug gap	0.032-0.038 in	0.81-0.97 mm		
Spark plug torque	12-18 ft-lbs	16.3-24.4 Nm		

Table 3-19. Oil Pump: All Models

ITEM	NEW COMPONENTS				SER' WEAR	
	in	mm	in	mm		
Feed/scavenger inner/outer gerotor clearance	0.003	0.08	0.004	0.102		
Shaft to pump clearance	0.0025	0.064	-	-		

### **OPERATION**

### **All Models**

When an engine is cold, the engine oil is more viscous (thicker). During start-up, oil pressure will be higher than normal and oil circulation will be somewhat restricted. As the engine warms to normal operating temperature, the engine oil warms up and becomes less viscous. The oil pressure decreases.

- Increased engine speed results in higher oil pressure. The faster the oil pump rotors spin, the greater the volume of circulated oil.
- Decreased engine speed lowers the volume of oil pumped and the measured oil pressure.

### XL Models

The oil pump is non regulatory and delivers its entire volume of oil under pressure to the oil filter mount.

### XR 1200X

The feed oil pump incorporates a bypass valve that will open at approximately 50 psi (345 kPa), preventing overpressure in the oil cooler and related components. The XR 1200X incorporates a thermostat in the oil cooler return path.

## Oil Pressure Indicator Lamp

See <u>Figure 3-1</u>. The oil pressure indicator lamp turns on to indicate improper circulation of the engine oil.

Refer to <u>Table 3-20</u>. The oil pressure indicator lamp turns on when:

- Ignition switch is turned on prior to starting engine.
- · Oil is not circulating through the running engine.
- Oil pressure is abnormally low on the running engine.
- Engine is idling far below 1000 rpm.

The oil pressure indicator lamp turns off when oil is circulating with adequate pressure through the engine running at 1000 rpm or greater.

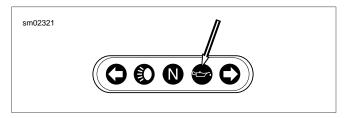


Figure 3-1. Oil Pressure Indicator Lamp

### **NOTICE**

If the oil pressure indicator lamp remains lit, always check the oil supply first. If the oil supply is normal and the lamp is still lit, stop the engine at once and do not ride further until the trouble is located and the necessary repairs are made. Failure to do so may result in engine damage. (00157a)

### NOTE

Residual oil pressure in the filter housing will sometimes prevent the lamp from turning on. This may occur when cycling the ignition key to on after stopping the engine.

Table 3-20. Oil Lamp Troubleshooting

OIL PRESSURE INDICATOR LAMP	PROBABLE CAUSES
Stays on at speeds above idle.	Empty oil tank.
	Clogged feed line (ice and sludge, freezing temperatures).
	Air-bound oil line.
	Grounded oil pressure switch wire.
	Malfunctioning oil pressure switch.
	Diluted oil.
	Malfunctioning check valve. See <u>3.23 OIL FILTER MOUNT</u> and <u>3.12 PRECISION</u> COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly
	Malfunctioning or improperly installed pressure relief valve.
Flickers at idle.	Incorrect idle speed. Malfunctioning or improperly installed check valve. See <u>3.23 OIL FILTER MOUNT</u> and <u>3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly</u>
	Malfunctioning or improperly installed pressure relief valve.

3-10 2013 Sportster Service: Engine

Table 3-20. Oil Lamp Troubleshooting

OIL PRESSURE INDICATOR LAMP	PROBABLE CAUSES
Does not glow when ignition is turned on	Malfunctioning signal switch.
(prior to operating engine).	Malfunction in wiring.
	Burned-out signal bulb.
	Dead battery.
	See NOTE before this table.

### **CHECKING OIL PRESSURE**

PART NUMBER	TOOL NAME
HD-41675	OIL PRESSURE SENDING UNIT WRENCH
HD-96921-125	OIL PRESSURE GAUGE ADAPTER
HD-96921-52D	OIL PRESSURE TEST GAUGE KIT
HD-96925-58	OIL PRESSURE GAUGE ADAPTER

- Fill oil tank to proper level. See <u>1.6 ENGINE OIL AND FILTER</u>.
- 2. Slide a catch pan under the motorcycle.
- Obtain OIL PRESSURE TEST GAUGE KIT (Part No. HD-96921-52D).

# **Connecting Gauge: XL Models**

- See <u>Figure 3-2</u>. Detach wiring from oil pressure indicator lamp switch (2).
- Using OIL PRESSURE SENDING UNIT WRENCH (Part No. HD-41675), remove oil pressure switch.
- See <u>Figure 3-3</u>. Install OIL PRESSURE GAUGE ADAPTER (Part No. HD-96925-58) (2) in oil pressure indicator lamp switch mounting hole. Tighten adapter snugly. DO NOT OVER-TIGHTEN.

### Connecting Gauge: XR 1200X

- See <u>Figure 3-5</u>. Disconnect the quick connect fitting from the inlet side of the oil cooler (4). See <u>3.12 PRECISION</u> <u>COOLING SYSTEM: XR 1200X, General</u>.
- 2. Connect OIL PRESSURE GAUGE ADAPTER (Part No. HD-96921-125) (5) to the oil hose (6).
- 3. Connect the other end of the adapter to the oil cooler fitting (4).

## **Testing Pressure**

 See <u>Figure 3-4</u> or <u>Figure 3-5</u>. Assemble banjo bolt (2), washer (3), OIL PRESSURE GAUGE banjo fitting (1) and second washer onto adapter and tighten snugly.

#### NOTE

For an accurate reading, engine oil should be at normal operating temperature: 230 °F (110 °C).

Temporarily secure oil pressure gauge and hose to motorcycle frame with cable straps. Verify gauge and hose assembly do not interfere with normal operation. Ride motorcycle until engine reaches normal operating temperature.

 Check and record the pressure readings at normal idle (approximately 1000 rpm) and again at 2500 rpm. Refer to <u>Table 3-21</u>.

Table 3-21. Oil Pressure: At OperatingTemperature

rpm	XL MODELS*		XR 1	200X**
	psi	kPa	psi	kPa
1000	7-12	43.3-82.7	16-20	110.3-137.9
2500	10-17	68.9-117	40-44	275.8-303.4

<sup>\*</sup> Pressure reading taken at oil pressure switch fitting.

# **Removing Gauge: XL Models**

- Stop engine. Remove OIL PRESSURE GAUGE assembly from oil pressure indicator lamp switch mounting hole in crankcase. Cut cable straps securing gauge and hose. Remove banjo bolt, gauge assembly, washers and adapter from vehicle.
- See Figure 3-2. Coat threads of oil pressure switch (2) with LOCTITE 565 PIPE SEALANT with TEFLON. Replace the oil pressure switch. Using OIL PRESSURE SENDING UNIT WRENCH, tighten switch snugly. DO NOT OVERTIGHTEN.
- 3. Plug in connector [120] (3) by pushing elbow connector straight up onto stud on oil pressure switch.

### Removing Gauge: XR 1200X

- Stop engine. Cut cable straps securing gauge and hose. Remove banjo bolt, gauge assembly, washers and adapter from vehicle.
- 2. Connect oil hose to oil cooler fitting, making sure it is securely latched.

### **Finalize Test**

### NOTE

If an appreciable amount of oil leaked out when oil pressure switch was removed, replace with fresh oil.

- Check oil level in oil tank. See <u>1.6 ENGINE OIL AND FILTER</u>. Top off oil level if necessary.
- Start engine. Test oil pressure switch for proper operation. Check for oil leaks.

<sup>\*\*</sup> Pressure reading taken at oil cooler inlet.

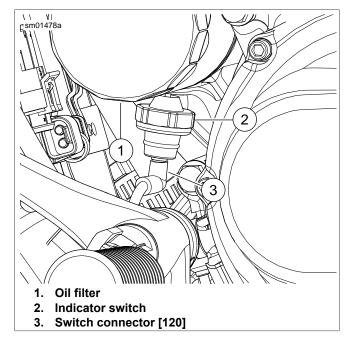


Figure 3-2. Oil Pressure Indicator Switch

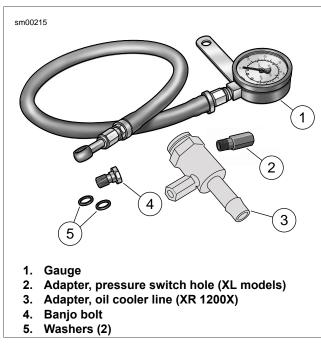


Figure 3-3. Oil Pressure Test Gauge Set

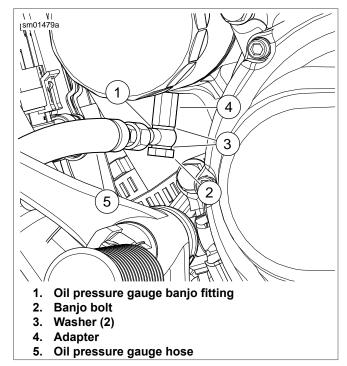


Figure 3-4. Oil Pressure Test Connections

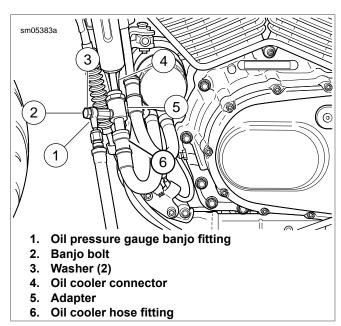


Figure 3-5. Oil Pressure Test Connections: XR 1200X

# CRANKCASE BREATHING SYSTEM

# **XL MODELS**

See <u>Figure 3-6</u>. On the piston downstroke, a mixture of crank-case air and oil mist is vented up the pushrod covers (1) through a breather valve (2) in each inner rocker box section.

The oil mist separates from the crankcase air, collects and passes through a small drain hole adjacent to the exhaust valve in the head where it eventually returns to the crankcase.

The crankcase air is routed through a passage in each cylinder head. The crankcase air then travels through each air cleaner backing plate mounting bolt (3) into the filtered side of the air cleaner.

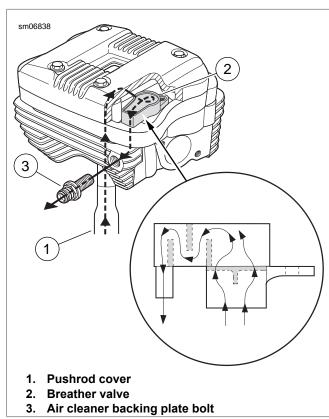


Figure 3-6. Crankcase Breathing System: XL Models


### **XR 1200X**

See Figure 3-7. During the piston downstroke, internal crank-case pressure increases. Crankcase air/oil mist (9) is forced into the area around the rocker arms and valve springs. The vapor travels through two passages (6) in the inner rocker cover. Then into a cavity (7) between the cylinder head and inner rocker cover. The vapor then moves into the filter media (8) of the breather valve (3).

The oil-laden vapor passes through the filter media (8) of the breather valve assembly. The oil separates from the crankcase air and drains back into cavity (7). There it flows toward the

exhaust valve. The oil then passes through a small drain hole adjacent to the exhaust valve and returns to the crankcase.

Air pressure forces the breather umbrella valve (5) to open. Air flows through a fitting (4) in the outer rocker cover. The umbrella valve prevents the air from moving back into the crankcase during piston upstroke. Air travels through a vapor hose (2) connected to a hose and tee assembly (10) in the air box. The air eventually exits into the intake air stream above the induction module. The air is consumed by the engine.

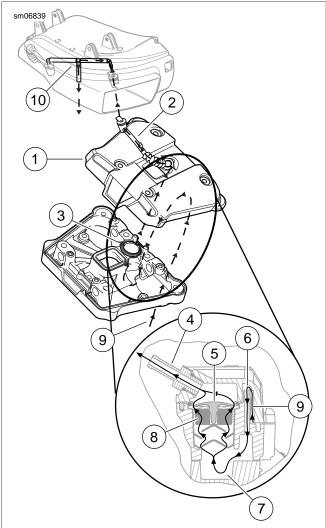

- 1. Rocker cover
- 2. Vapor hose
- 3. Breather valve assembly
- 4. Vapor hose fitting
- 5. Umbrella valve
- 6. Passage
- 7. Cavity
- 8. Filter media
- 9. Vapor from crankcase
- 10. Hose and tee

Figure 3-7. Crankcase Breathing System: XR 1200X

# **TROUBLESHOOTING**

### **DIAGNOSING VALVE TRAIN NOISE**

To diagnose and correct noisy hydraulic lifters and valve train components, use the following procedures:

- With engine and oil at normal operating temperature, check oil pressure at 2000 rpm. If oil pressure is above 50 psi (345 kPa) or below 5 psi (34 kPa), inspect oil pump, crankcase passages and oil hoses. Repair or replace parts as necessary.
- If oil is reaching the hydraulic lifters, remove and inspect.
   Clean lifter bore of all foreign material. Replace parts as necessary. See <u>3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets.</u>
- Examine pushrod, lifter and lifter bore for proper fit and any signs of unusual wear. Replace parts as necessary.
- 4. Visually inspect camshaft lobes for abnormal wear.
- Remove camshafts and pinion gear, clean and inspect for wear and fit. Replace parts as necessary.
- Remove cylinder head and rocker box assemblies. Check rocker arm end play and check for binding. Inspect valve stems for scuffing and check stem to guide clearance. Check valve seats for signs of looseness or shifting.
- 7. Face valves and valve seats.

# **COMPRESSION TEST**

PART NUMBER	TOOL NAME
HD-33223-1	CYLINDER COMPRESSION GAUGE

Combustion chamber leakage may cause performance issues. A compression test can help determine the source of cylinder leakage.

Test engine at normal operating temperature

- 1. Disconnect spark plug wires.
- 2. Clean around spark plug base. Remove spark plugs.
- 3. Connect CYLINDER COMPRESSION GAUGE (Part No. HD-33223-1) to front cylinder.
- Make sure transmission is in neutral. With throttle plate in wide open position, crank engine continuously through 5-7 full compression strokes.
- Note gauge readings at the end of the first and last compression strokes. Record test results.
- 6. Connect the gauge to the rear cylinder and repeat test.
  - a. Compression is normal if final readings are within specification and do not indicate more than a 10 psi (0.689 bar) variance between cylinders. Refer to <u>Table 3-22</u>.
  - Compression is below specification if the readings are 100 psi (6.89 bar) for 883 cc engines or 150 psi (10.3 bar) for 1200 cc engines. Refer to <u>Table 3-23</u>.

7. Inject approximately 1/2 oz (15 mL) SAE 30 engine oil into each cylinder and repeat the compression tests on both cylinders. Readings that are considerably higher during the second test indicate worn piston rings.

#### NOTE

Verify throttle plate is in the closed position after testing.

**Table 3-22. Normal Compression Ranges** 

ENGINE	COMPRESSION		
	psi	bar	
XL 883	165-180	11.4-12.4	
XL 1200	200-225	13.8-15.5	
XR 1200X	170-185	11.7-12.8	

**Table 3-23. Compression Test Results** 

TEST RESULTS	CAUSE
Compression low on first stroke, builds up on the following strokes, but does not reach normal. Improves when oil is added to cylinder.	Ring trouble
Compression low on first stroke, does	Valve trouble
not build up on following strokes. Does not improve with the addition of oil.	Head gasket leak
not improve with the addition of oil.	Incorrect pushrod length

# CYLINDER LEAKAGE TEST

PART NUMBER	TOOL NAME
HD-35667-A	CYLINDER LEAKDOWN TESTER

The cylinder leakage test pinpoints engine problems including leaking valves, worn, damaged or stuck piston rings and blown head gaskets.

Use CYLINDER LEAKDOWN TESTER (Part No. HD-35667-A). Follow the specific instructions supplied with the tester.

- 1. Run engine until it reaches normal operating temperature.
- 2. Clean around spark plug base. Remove spark plugs.
- Remove the air cleaner and set the throttle in the wide open position.
- 4. Rotate the piston to TDC of the compression stroke (both valves closed).
- To keep the crankshaft from turning when air pressure is applied to the cylinder, engage transmission in fifth gear and lock the rear brake.

### NOTE

Before performing the cylinder leakage test, verify that the tester itself is free from leakage. Apply a soap solution around the tester fittings. Connect the cylinder leakdown tester to the compressed air source. Look for any bubbles that would indicate leakage from the tester.

- Following the manufacturer's instructions, perform a cylinder leakage test. Make a note of the percent of leakage. Leakage greater than 12 percent indicates internal engine problems.
- 7. Listen for air leaks at induction module intake, exhaust pipe and head gasket.
  - a. Air escaping through the induction module indicates a leaking intake valve.
  - Air escaping through the exhaust pipe indicates a leaking exhaust valve.

### **NOTES**

- If air is escaping through valves, check pushrod length.
- Complete the cylinder leakage test(s). Install the spark plugs. Verify that the throttle plate is in the closed position before starting the engine.

# DIAGNOSING SMOKING ENGINE OR HIGH OIL CONSUMPTION

Before removing the cylinder heads, check for compression and cylinder leakage. See <u>3.5 TROUBLESHOOTING</u>, Compression Test or <u>3.5 TROUBLESHOOTING</u>, Cylinder Leakage Test.

# **Check Prior to Cylinder Head Removal**

- 1. Oil tank overfilled.
- 2. Oil carryover.
- 3. Breather hose restricted.
- 4. Restricted oil filter.

# **Check After Cylinder Head Removal**

- 1. Oil return passages for clogging.
- Valve guide seals.
- 3. Valve guide to valve stem clearance.
- 4. Gasket surface of both head and cylinder.

- Cylinder head casting's porosity allowing oil to drain into combustion chamber.
- O-ring damaged or missing from oil pump/crankcase junction.

## ADJUSTMENT AND TESTING

### General

Often only cylinder head and cylinder repair is needed (valves, rings, piston, etc.). Service these components with the engine in the frame. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY</u>, Stripping Motorcycle for Top End Repair.

After disassembling the top end only, it may be found that crankcase repair is necessary. Crankcase repair requires removal of engine crankcase from chassis. See 3.10 REMOVING ENGINE FROM CHASSIS.

#### NOTE

Do not lay engine on primary side. Laying engine on primary side will damage the clutch cable end fitting. If fitting is damaged, replace the clutch cable.

Symptoms indicating a need for engine repair are often misleading. If more than one symptom is present, possible causes can be narrowed down to make a partial diagnosis. An abovenormal consumption of oil, for example, could be caused by several mechanical faults. However, when accompanied by blue-gray exhaust smoke and low engine compression, it indicates worn piston rings. Low compression by itself however, may indicate leaking valves, in addition to worn piston rings. See 1.28 TROUBLESHOOTING.

Piston slap is a condition where piston and/or cylinder are worn out-of-round and are loose fitting, allowing the piston to slap from front to rear of the cylinder as it moves up and down.

Frequently, valves, rings, pins, bushings and bearings need attention at the same time. If any one of the above components is worn, inspect all of these components. Repair or replace as necessary.

# **ENGINE LUBRICATION SYSTEM**

# **OIL PUMP OPERATION**

The oil pump consists of two gerotor gear sets housed in one pump body. One is feed and the other scavenge (return). Each gerotor gear set has an inner and an outer gerotor. The inner gerotor has one less lobe than the outer gerotor. Both gerotors have fixed centers which are offset to each other. The inlet and outlet sides of the pump are sealed by the tips and lobes of the gerotor set. This prevents oil on the outlet side (high pressure) from being transferred to the inlet side.

The feed pump distributes oil to the engine and has fewer lobes than the scavenge pump, allowing for greater pressure development. The scavenge pump returns oil to the tank and has more lobes than the feed pump allowing for greater oil flow.

**XL Models:** See <u>Figure 3-8</u>. Both rotor sets (3, 4) are driven off a common shaft (2) that is coupled by gears to the crankshaft.

**XR 1200X:** See <u>Figure 3-9</u>. The feed rotor set (4) is driven by flats on the front intake camshaft (3). The scavenge rotor set (5) is driven by flats on the rear exhaust camshaft (2).


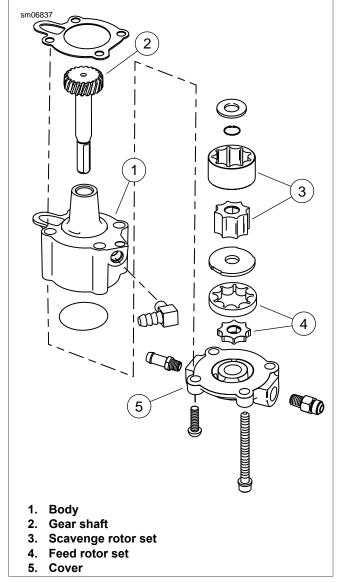


Figure 3-8. Oil Pump: XL Models

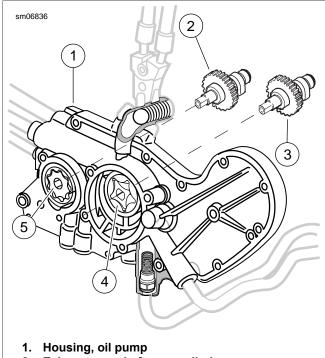

- 2. Exhaust camshaft, rear cylinder
- 3. Intake camshaft, front cylinder
- 4. Feed rotor set
- 5. Scavenge rotor set

Figure 3-9. Oil Pump: XR 1200X

See Figure 3-10. As the crankshaft rotates, the cavity volume increases between the gerotors on the inlet side of the pump. This creates a vacuum causing oil to be drawn in. The volume continues to increase until it is equivalent to that of the missing lobe on the inner gerotor.

See Figure 3-11. Continuous rotation moves the pocket of oil to the outlet side of the pump. As the oil moves to the outlet side of the pump, the cavity decreases in volume. This forces pressurized oil out the discharge port. In operation, the gerotors provide a continuous flow of oil.

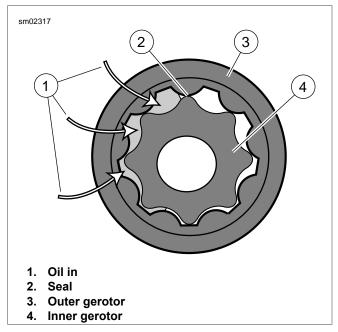


Figure 3-10. Inlet Side Oil Flow

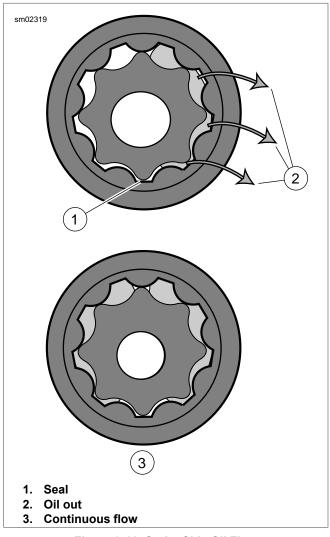


Figure 3-11. Outlet Side Oil Flow

# **OIL FLOW: XL MODELS**

#### NOTE

See <u>Figure 3-12</u>. The paragraph numbers correspond with the callouts.

- Oil is gravity-fed from the oil tank to the gerotor-style oil pump through a **feed hose**. Oil enters the **feed section** and fills a cavity located under the feed pump. See 3.20 OIL PUMP: XL MODELS.
- The feed pump transfers oil from the inlet cavity through the feed hose to the oil filter mount.
- 3. Oil flows through the filter mount cavity to the oil filter.
- 4. Oil enters the peripheral cavity of the **oil filter**, passes through the filtering medium into the central cavity of the oil filter, and flows into the filter adapter (fitting which connects filter to filter mount).
- Adequate oil pressure in the filter mount cavity activates the oil pressure indicator lamp switch and shuts off the oil pressure indicator lamp.
- Oil flowing from the filter adapter opens the check ball.
   The check ball opens at 10-13 psi (69-90 kPa) oil pressure.
- With the check ball open, oil flows into the crankcase feed galley.
- Oil flows through the feed galley in the crankcase to the tappet blocks and hydraulic lifters. Cross-drilled passages intersect the main feed galley and carry oil to each hydraulic lifter. From this cavity, oil is also fed to the piston jets.
- 9. Oil also enters an **intersecting passage** in the gearcase cover. Oil flow is then routed to the crankshaft area.
- 10. Oil enters a hole in the end of the pinion gear shaft and travels to the right flywheel where it is routed through the flywheel to the crank pin. Oil is forced through the crank pin to properly lubricate the rod bearing assembly.
- 11. Oil flows up passages in the **pushrods** to the rocker arm shafts and bushings.
- 12. The valve stems are lubricated by oil supplied through drilled oil holes in the **rocker arms**.
- 13. Collected in the cylinder heads, oil flows down the pushrod covers and into the tappet blocks. From the tappet block drain holes, oil flows into the gearcase. After lubricating the gearcase the oil flows to the return side of the oil pump.
- 14. Feed oil to the rocker area is returned to the gearcase through a **passage** in the head, cylinder, and crankcase.
- Oil collected in the sump is splash-fed to the pistons, cylinder walls and flywheel components.
- 16. Oil in the sump returns to the scavenge pump through an internal passage located in the rear of the sump housing. The downward stroke of the pistons and the scavenge pump feed oil to the oil pump.
- 17. Return oil fills a **cavity** above the pump's return gears. The return gears pump oil back to the oil tank.

18. A small amount of oil flows from the feed galley in the right crankcase through a **restricted orifice**. This sprays the oil onto the rear intake cam gear in the gearcase. Oil is transferred to the teeth of all the cam gears through the gear meshing action.

# **OIL FLOW: XR 1200X**

#### NOTE

See <u>Figure 3-13</u>. The paragraph numbers correspond with the callouts.

- Oil is gravity-fed from the oil tank to the gerotor-style oil pump through a feed hose and internal passages. Oil enters the inlet cavity of the feed pump. See <u>3.21 OIL</u> <u>PUMP: XR 1200X</u>.
- The feed pump transfers oil through a passage in the pump housing to a point where it splits direction. The pump is capable of delivering more oil than can flow through the engine. When oil pressure exceeds 50 psi (345 kPa), the bypass valve opens. Oil circulates into the inlet side of the feed pump.
- 3. Part of the oil passes through an **internal passage** toward the oil filter and part heads toward the oil cooler line.
- 4. Oil exits the oil pump housing through a line connected with quick connect fittings and enters the lower end of the oil cooler. Oil flows up through the oil cooler and exits the upper end where it flows back to the oil pump housing.
- 5. A thermostat is located where the oil cooler return line connects to the oil pump housing. The thermostat begins to open when the oil reaches 190 °F (88 °C). As it opens, oil from the cooler flows past while oil flow from the feed pump is restricted. This provides cooled oil for engine lubrication. When the thermostat is full open, oil flow is sealed off from the pump. All oil then passes through the oil cooler, past the thermostat, and towards the oil filter.
- Oil flowing to the filter passes through an internal passage to the oil filter mount.
- 7. Oil flows through the **filter mount cavity** to the oil filter.
- 8. Oil enters the peripheral cavity of the **oil filter**, passes through the filtering medium into the central cavity of the oil filter, and flows into the filter adapter (fitting which attaches the filter to filter mount).
- Adequate oil pressure in the filter supply passage activates the oil pressure indicator lamp switch and shuts off the oil pressure indicator lamp.
- Oil flowing from the filter adapter opens the check ball.
   The check ball opens at 5-7 psi (34-48 kPa) oil pressure.
- With the check ball open, oil flows into the crankcase feed galley.
- 12. Oil flows through the feed galley in the crankcase to the tappet blocks and hydraulic lifters. Cross-drilled passages intersect the main feed galley and carry oil to each hydraulic lifter. From this cavity, oil is also fed to the piston jets.
- 13. Also from the feed galley in the crankcase, oil flows through a cross drilled passage to the check valve assembly. Then to the cylinder heads through flexible

3-18 2013 Sportster Service: Engine

- **lines**. Oil flows across the cylinder heads and through passages that surround the exhaust ports. Oil exits each cylinder head near the exhaust port.
- 14. **Oil exiting** the heads flows to the **return oil manifold** where it is mixed with the scavenge oil from the scavenge pump and is pushed back to the tank.
- 15. Oil flows from the feed galley through an intersecting passage in the oil pump body and cam support. Oil flow is then routed to the outer bearing of the rear intake camshaft. A cast-in passage allows oil into a cavity that surrounds the end of the pinion gear shaft.
- 16. From the cavity at the pinion shaft end, oil enters the center hole in the oil pump rotor cover. The center hole intersects a passage that carries oil to the outer bearings of the front intake camshaft and rear exhaust camshaft.
- The outer bearing of the front exhaust camshaft is lubricated through a drilled passage that intersects with the feed galley.
- 18. Crankcase end of bearings of the cams are fed through holes in the camshaft.
- 19. A small amount of oil flows from the feed galley in the right crankcase through a **restricted orifice**. This sprays the oil onto the rear intake cam gear in the gearcase. Oil is transferred to the teeth of all the cam gears through the gear meshing action.
- 20. Oil enters a hole in the end of the pinion gear shaft and travels to the right flywheel where it is routed through the flywheel to the crank pin. Oil is forced through the crank pin to properly lubricate the rod bearing assembly.
- 21. Oil flows up passages in the **pushrods** to the rocker arm shafts and bushings.
- 22. The valve stems are lubricated by oil supplied through drilled oil holes in the **rocker arms**.
- 23. Oil collected in the pushrod areas of the cylinder heads flows down the **pushrod covers** to the **tappet blocks**. It drains through holes in the tappet blocks and provides lubrication to the gearcase components. Oil then settles to the bottom of the gearcase and is collected by the scavenge pump.
- 24. Feed oil to the rocker area is returned to the gearcase through a passage in the cylinder head, cylinder, and crankcase.
- 25. Oil collected in the **sump** is splash-fed to the pistons, cylinder walls and flywheel components.
- 26. Oil in the sump returns to the scavenge pump through an internal passage located in the rear of the sump housing. The downward stroke of the pistons and the scavenge pump feed oil to the oil pump.
- 27. Oil collected in the gearcase passes through a **passage** in the oil pump body and cam support and is also collected by the scavenge pump.
- 28. The **scavenge pump** pushes the collected oil back to the oil tank.
- 29. Crankcase vents to oil tank.

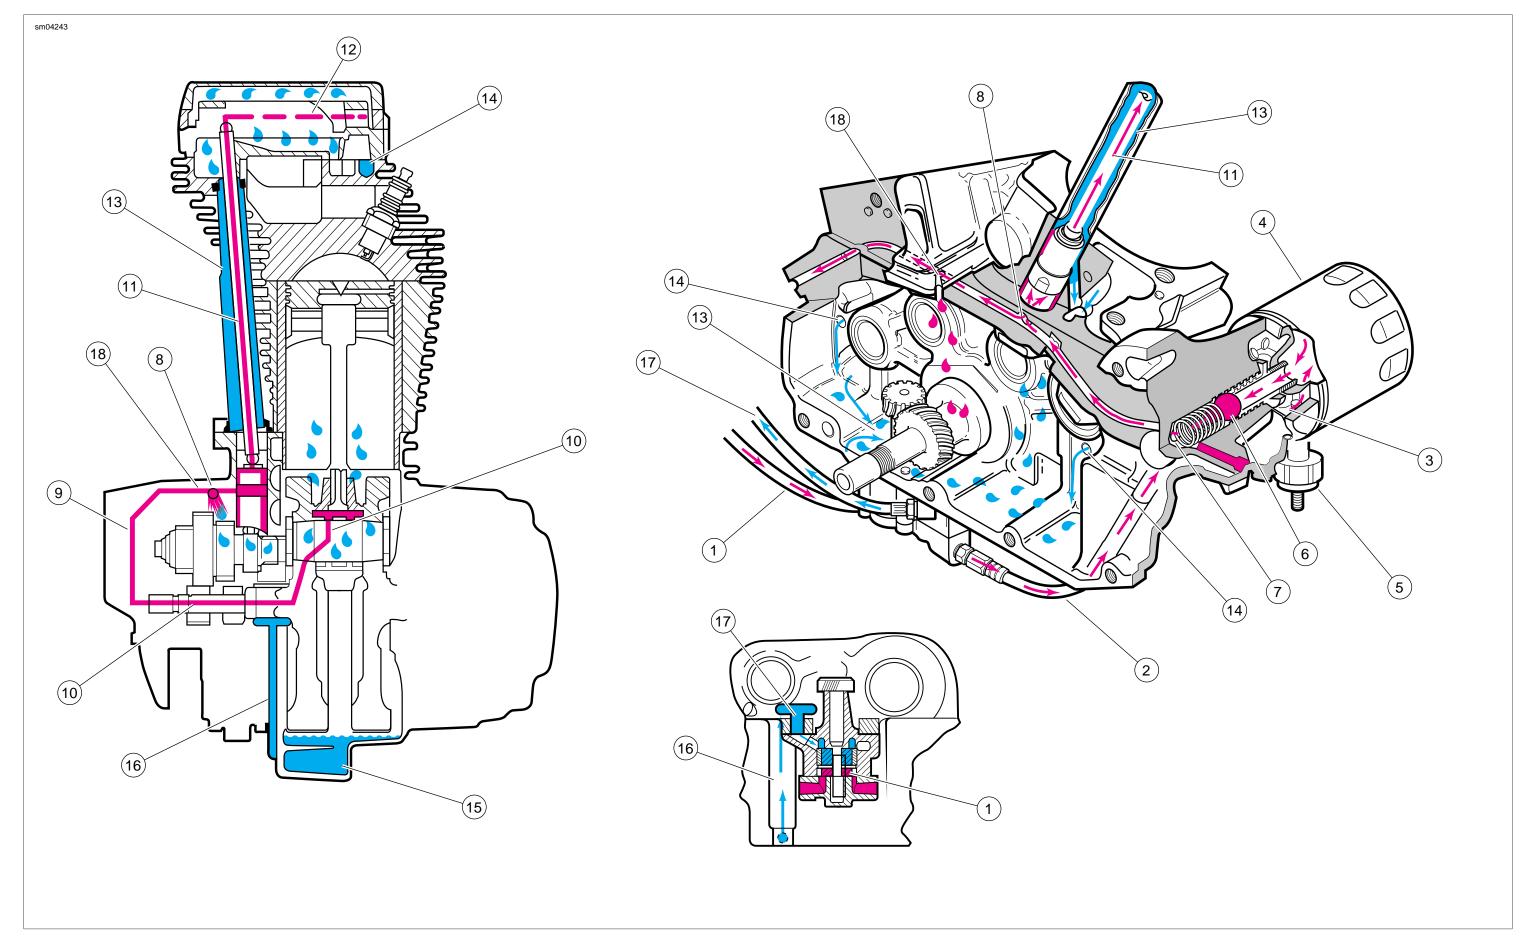


Figure 3-12. Lubrication Diagram: XL Models (Red=Feed Oil, Blue=Return Oil)

Figure 3-12.
Lubrication Diagram: XL Models (Red=Feed Oil, Blue=Return Oil)

Figure 3-12.
Lubrication Diagram: XL Models (Red=Feed Oil, Blue=Return Oil)

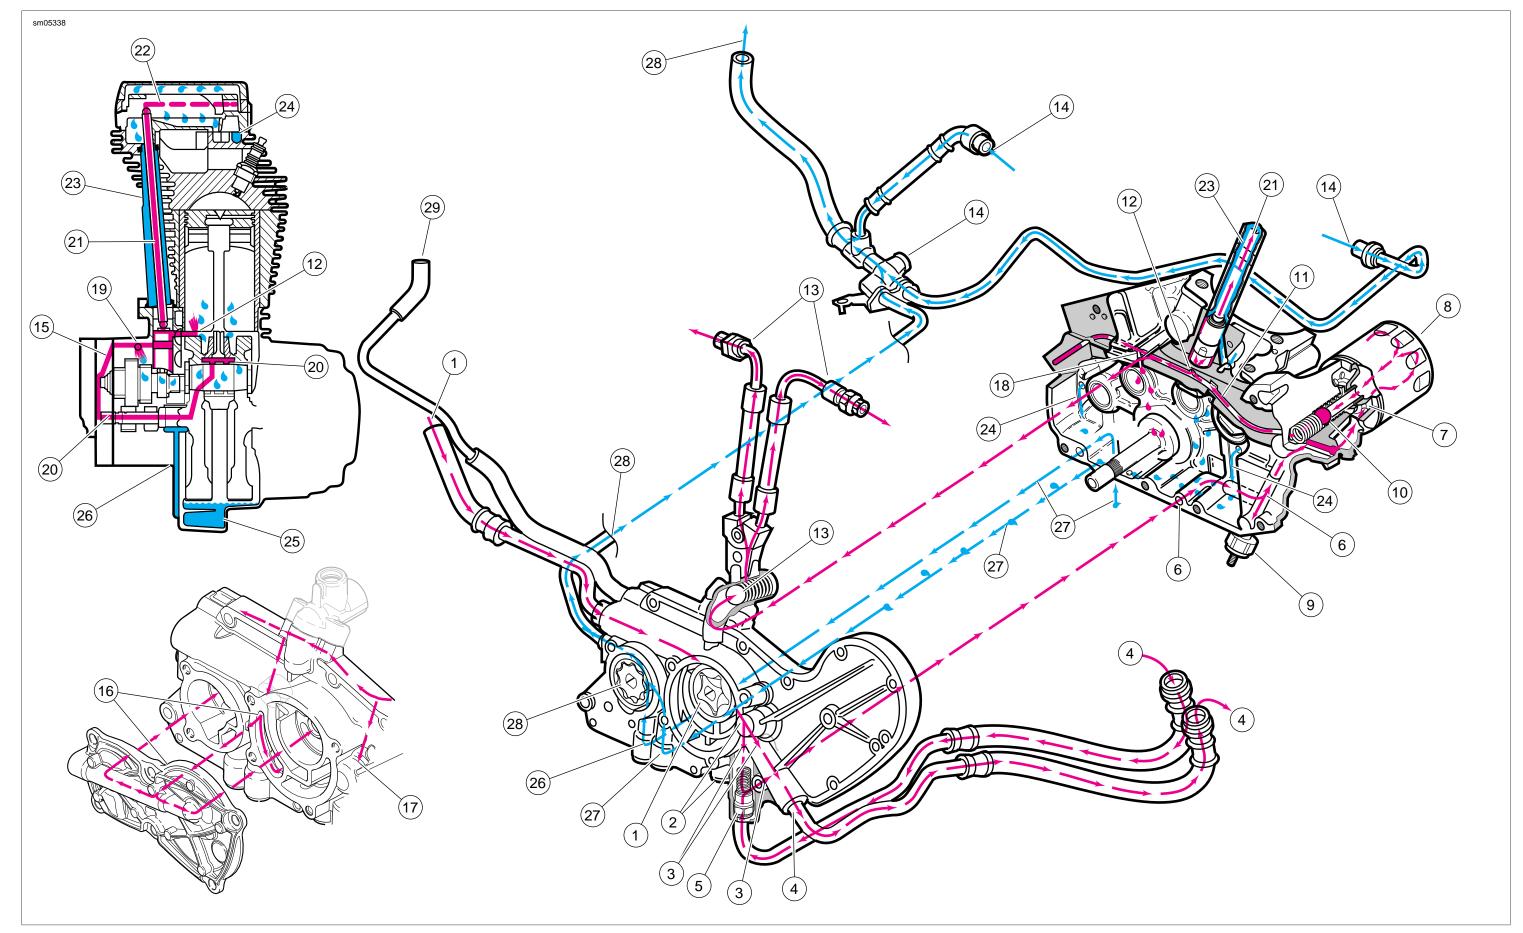


Figure 3-13. Lubrication Diagram: XR 1200X (Red=Feed Oil, Blue=Return Oil)

Figure 3-13.
Lubrication Diagram: XR 1200X (Red=Feed Oil, Blue=Return Oil)

Figure 3-13.
Lubrication Diagram: XR 1200X (Red=Feed Oil, Blue=Return Oil)

# **HOW TO USE THIS SECTION**

# **TYPICAL SYMPTOMS**

Always use all available symptoms to begin a diagnosis. Symptoms indicating a need for engine repair are often misleading. If more than one symptom is present, possible causes can be narrowed down to make a partial diagnosis. An above normal consumption of oil, for example, could be caused by several mechanical faults. However, when accompanied by blue-gray exhaust smoke and low engine compression, it indicates worn piston rings. Low compression by itself however, may indicate leaking valves, in addition to worn piston rings. See 1.28 TROUBLESHOOTING.

Certain knocking noises may be caused by loose bearings, others by piston slap, a condition where piston or cylinder or both out of tolerance, allowing the piston to slap from front to rear of the cylinder as it moves up and down.

Frequently, valves, rings, pins, bushings and bearings need attention at the same time. If any one of the above components is worn, inspect all of these components. Repair or replace as necessary.

# **TOP END REPAIR**

### NOTE

During top end disassembly, the engine may be left in the chassis for service.

Two options are available depending upon engine status.

- 3.8 TOP END SERVICE, Engine in Chassis.
- 3.8 TOP END SERVICE, Engine Removed from Chassis.

### **BOTTOM END REPAIR**

### NOTE

Servicing components in the cam compartment requires only partial disassembly. This can be done with the engine left in the chassis.

After disassembling as far as the cylinder heads you may find that bottom end repair is necessary. Bottom end service may require either partial or complete disassembly of the engine.

- The cam compartment can be serviced with the engine in the chassis. See <u>3.9 BOTTOM END SERVICE</u>, Engine in Chassis.
- To service components in the flywheel compartment, the engine must be removed and the crankcase halves split.
   See <u>3.9 BOTTOM END SERVICE</u>, Engine Removed From Chassis.

2013 Sportster Service: Engine 3-25

to be done.

# **TOP END SERVICE**

# **ENGINE IN CHASSIS**

# Table 3-24. Engine in Chassis

SERVICE PROCEDURE	COMPONENT REPAIR PROCEDURES
Remove parts necessary to gain access to all components above cylinder deck. See 3.13 TOP END OVERHAUL: DISASSEMBLY, Stripping Motorcycle for Top End Repair.	
Continue with <u>3.13 TOP END OVERHAUL: DISASSEMBLY</u> . Remove/repair subassembly components only if necessary.	
Remove rocker arm outer covers. Remove crankcase breathers. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	*Inspect and repair as necessary. See 3.4 CRANKCASE BREATHING SYSTEM, XL Models or 3.4 CRANKCASE BREATHING SYSTEM, XR 1200X.
Remove cylinder heads. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	*Inspect and repair as necessary. See 3.14 CYLINDER HEAD.
Remove pushrods, pushrod covers and tappet covers. See <u>3.13 TOP END OVER-HAUL: DISASSEMBLY, Cylinder Heads</u> . Remove tappets. See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Tappets</u> .	*Inspect and repair as necessary. See 3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets.
Remove cylinders and pistons. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder and Piston</u> .	*Inspect and repair as necessary. See 3.15 CYLINDER AND PISTON. Inspect upper connecting rod and repair as necessary. See 3.15 CYLINDER AND PISTON, Connecting Rod Bushings.
Complete all appropriate steps under <u>3.16 TOP END OVERHAUL: ASSEMBLY</u> .	
Complete motorcycle assembly. See <u>3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair.</u>	
* When this step is completed during top end service, advance to 3.16 TOP END O	/ERHAUL: ASSEMBLY if no other work is

3-26 2013 Sportster Service: Engine

# **ENGINE REMOVED FROM CHASSIS**

# Table 3-25. Engine Removed from Chassis

SERVICE PROCEDURE	COMPONENT REPAIR PROCEDURES
Remove engine from chassis. See <u>3.10 REMOVING ENGINE FROM CHASSIS</u> .	
Start <u>3.13 TOP END OVERHAUL: DISASSEMBLY</u> . Remove and repair subassembly components as necessary.	
Remove rocker arm outer covers. Remove crankcase breathers. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	*Inspect and repair as necessary. See 3.4 CRANKCASE BREATHING SYSTEM, XL Models or 3.4 CRANKCASE BREATHING SYSTEM, XR 1200X.
Remove cylinder heads. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	*Inspect and repair as necessary. See 3.14 CYLINDER HEAD.
Remove pushrods, pushrod covers and tappet covers. See <u>3.13 TOP END OVER-HAUL: DISASSEMBLY, Cylinder Heads</u> . Remove tappets. See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Tappets</u> .	*Inspect and repair as necessary. See 3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets.
Remove cylinders and pistons. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder and Piston</u> .	*Inspect and repair as necessary. See 3.15 CYLINDER AND PISTON. Inspect upper connecting rod and repair as necessary. See 3.15 CYLINDER AND PISTON, Connecting Rod Bushings.
Complete all appropriate steps under 3.16 TOP END OVERHAUL: ASSEMBLY.	
Install engine in motorcycle. Complete all appropriate steps under <u>3.11 INSTALLING</u> <u>ENGINE IN CHASSIS</u> .	
Complete motorcycle assembly. See <u>3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair.</u>	
* When this step is completed during top end service, advance to 3.16 TOP END OV to be done.	/ERHAUL: ASSEMBLY if no other work is

# **BOTTOM END SERVICE**

# **ENGINE IN CHASSIS**

Table 3-26. Engine in Chassis: Cam Compartment Service

SERVICE PROCEDURE	COMPONENT REPAIR PROCEDURES
Remove parts necessary to gain access to all components above cylinder deck. See 3.13 TOP END OVERHAUL: DISASSEMBLY, Stripping Motorcycle for Top End Repair.	
Continue with <u>3.13 TOP END OVERHAUL: DISASSEMBLY</u> . Remove/repair subassembly components only if necessary.	
Remove rocker arm outer covers. Remove crankcase breathers. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	Inspect and repair as necessary. See 3.4 CRANKCASE BREATHING SYSTEM, XL Models or 3.4 CRANKCASE BREATHING SYSTEM, XR 1200X.
Remove pushrods, pushrod covers and tappet covers. See <u>3.13 TOP END OVER-HAUL: DISASSEMBLY, Cylinder Heads</u> . Remove tappets. See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Tappets</u> .	Inspect and repair as necessary. See 3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets.
Continue with 3.17 BOTTOM END OVERHAUL: DISASSEMBLY.	
Remove gear case cover and cam gears. See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Gearcase Cover and Cam Gears: XL Models or 3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Oil Pump Housing/Gearcase Cover and Cam Gears: XR 1200X.</u>	*Inspect and repair as necessary. See 3.17 BOTTOM END OVERHAUL: DISAS-SEMBLY, Gearcase Cover and Cam Gears: XL Models or 3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Oil Pump Housing/Gearcase Cover and Cam Gears: XR 1200X.
Remove oil pump components. See <u>3.20 OIL PUMP: XL MODELS</u> or <u>3.21 OIL PUMP: XR 1200X</u> .	Inspect and repair as necessary. See 3.20 OIL PUMP: XL MODELS or 3.21 OIL PUMP: XR 1200X.
Complete all appropriate steps under 3.22 BOTTOM END OVERHAUL: ASSEMBLY.	
Complete motorcycle assembly. See <u>3.16 TOP END OVERHAUL: ASSEMBLY</u> , <u>Assembling Motorcycle After Top End Repair</u> .	
* When this step is completed during bottom end service, advance to 3.22 BOTTOM work is to be done.	END OVERHAUL: ASSEMBLY if no other

3-28 2013 Sportster Service: Engine

# **ENGINE REMOVED FROM CHASSIS**

Table 3-27. Engine Removed from Chassis: Flywheel Compartment Service or Complete Engine Overhaul

SERVICE PROCEDURE	COMPONENT REPAIR PROCEDURES
Remove engine from chassis. See <u>3.10 REMOVING ENGINE FROM CHASSIS</u> .	
Start <u>3.13 TOP END OVERHAUL: DISASSEMBLY</u> . Remove and repair subassembly components as necessary.	
Remove rocker arm outer covers. Remove crankcase breathers. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	Inspect and repair as necessary. See 3.4 CRANKCASE BREATHING SYSTEM, XL Models or 3.4 CRANKCASE BREATHING SYSTEM, XR 1200X.
Remove cylinder heads. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> .	Inspect and repair as necessary. See 3.14 CYLINDER HEAD.
Remove pushrods and pushrod covers. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> . Remove tappet covers and tappets. See <u>3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets</u> .	Inspect and repair as necessary. See 3.16 TOP END OVERHAUL: ASSEMBLY, Tappet Covers, Pushrod Covers and Pushrods.
Remove cylinders and pistons. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY.</u> Cylinder and Piston.	Inspect and repair as necessary. See 3.15 CYLINDER AND PISTON. Inspect upper connecting rod and repair as necessary. See 3.15 CYLINDER AND PISTON, Connecting Rod Bushings.
Continue with <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY</u> . Remove and repair subassembly components as necessary.	
Remove gearcase cover and cam gears. See 3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Gearcase Cover and Cam Gears: XL Models or 3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Oil Pump Housing/Gearcase Cover and Cam Gears: XR 1200X.	Inspect and repair as necessary. See 3.17 BOTTOM END OVERHAUL: DISAS-SEMBLY, Gearcase Cover and Cam Gears: XL Models or 3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Oil Pump Housing/Gearcase Cover and Cam Gears: XR 1200X.
Remove oil pump. See <u>3.20 OIL PUMP: XL MODELS</u> or <u>3.21 OIL PUMP: XR 1200X</u> .	Inspect and repair as necessary. See 3.20 OIL PUMP: XL MODELS or 3.21 OIL PUMP: XR 1200X.
Complete all appropriate steps under <u>3.17 BOTTOM END OVERHAUL: DISAS-SEMBLY, Crankcase</u> to split crankcases and remove flywheel assembly, piston jets, etc.	Inspect and repair as necessary. See 3.19 CRANKCASE. Inspect and repair transmission assembly as necessary. See 5.9 TRANSMISSION REMOVAL AND DISASSEMBLY, 5.10 TRANSMISSION ASSEMBLY, 5.14 TRANSMISSION INSTALLATION and related subjects.
Complete all appropriate steps under 3.22 BOTTOM END OVERHAUL: ASSEMBLY.	
Complete all appropriate steps under <u>3.16 TOP END OVERHAUL: ASSEMBLY</u> .	
Install engine in motorcycle. Complete all appropriate steps under <u>3.11 INSTALLING</u> ENGINE IN CHASSIS.	
Complete motorcycle assembly. See <u>3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair.</u>	

# **REMOVING ENGINE FROM CHASSIS**

### PROCEDURE: XL MODELS

PART NUMBER	TOOL NAME
HD-45967	SHOP DOLLY
HD-45968	FAT JACK
HD-46284	ENGINE HOOK

# WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

- Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS.
- 2. Remove seat.
- 3. Remove left side cover. See 2.18 LEFT SIDE COVER.

# **A**WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- 4. Disconnect battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- Drain primary chaincase/transmission fluid. See 1.10 TRANSMISSION LUBRICANT.
- Drain oil tank. See <u>1.6 ENGINE OIL AND FILTER</u>. Do not install drain plug back in end of drain hose at this time.
- 7. Remove O2 sensor connectors [137], [138].
- 8. Remove exhaust pipes and mufflers. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u>.
- Remove right front footrest assembly and rear brake linkage.
  - a. **Models with Mid-mount Controls:** See <u>2.40 RIDER</u> FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - b. **Models with Forward Controls:** See <u>2.41 RIDER</u> <u>FOOT CONTROLS:</u> XL FORWARD CONTROLS.
- Remove screw, washer and exhaust pipe clamp bracket from sprocket cover. Remove two screws securing sprocket cover to engine case. Remove sprocket cover.
- Loosen rear axle nut and move rear axle all the way forward. Tighten axle nut enough to hold the axle and wheel
  in position in the rear fork. Remove rear drive belt from
  transmission sprocket. See <u>5.6 DRIVE BELT</u>.
- Remove transmission sprocket. See <u>5.15 TRANSMISSION</u> SPROCKET.
- Remove exhaust system interconnect. See <u>4.13 EXHAUST SYSTEM</u>: XL MODELS.

- Disconnect oil tank feed, drain and return hoses from oil tank. Pull drain hose up through drain hose sleeve in rear of engine crankcase. Remove hose. See <u>3.24 OIL TANK</u>.
- Drain fuel tank. Remove fuel tank. See <u>4.4 FUEL TANK:</u> XL MODELS.
- 16. Remove air cleaner assembly.
  - XL Models except XL 1200V: See 4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V.
  - XL 1200V: See 4.3 AIR CLEANER ASSEMBLY, XL 1200V.
  - XL 1200X: See 4.3 AIR CLEANER ASSEMBLY, XR 1200X.
  - d. EVAP Controlled Models: Remove EVAP purge hose from induction module. See <u>4.20 EVAPORATIVE</u> EMISSIONS CONTROL.
- 17. Remove the horn.
  - Front Mount: See <u>6.32 HORN, Replacement: Front</u> Mount.
  - b. **Side Mount:** See <u>6.32 HORN, Replacement: Side</u> Mount.
- 18. Unplug the following connectors from the induction module:
  - a. Fuel injector connectors [84], [85].
  - b. TMAP sensor [80].
  - c. IAC [87].
  - d. TPS [88].
- 19. Unplug the following electrical connectors from the engine:
  - a. Ground wire at powertrain ground stud on crankcase.
  - b. Spark plug wires.
  - c. Oil pressure switch [120]. See <u>6.31 OIL PRESSURE SWITCH</u>.
  - d. CKP sensor [79]. See <u>6.22 CRANK POSITION SENSOR (CKP)</u>.
  - e. Alternator AC connector [46]. See <u>6.23 VOLTAGE</u> REGULATOR.
  - Neutral indicator switch connector [136]. See 6.26 NEUTRAL INDICATOR SWITCH.
  - g. VSS [65]. See 6.25 VEHICLE SPEED SENSOR (VSS).
  - h. Starter relay wire (GN) at starter motor. See <u>6.10 STARTER</u>.
  - ET sensor [90]. Cut the barbed cable strap securing sensor harness to ECM caddy. Remove the cable strap. See <u>4.7 ENGINE TEMPERATURE (ET)</u> <u>SENSOR</u>.
- Disconnect clutch cable. Remove from clutch lever on left handlebar. Remove cable clips securing clutch cable to frame left front downtube. See <u>2.29 CLUTCH CONTROL</u>.

- 21. Remove push-in fastener securing right wire harness caddy to coil bracket. Discard push-in fastener. Remove screw securing ignition switch to coil bracket. Unplug spark plug wires from coil. Unplug ignition coil harness connector [83] from coil. Remove coil and bracket from frame. See 6.13 IGNITION COIL.
- Remove screw securing left wire harness caddy to right wire harness caddy. Separate caddies. See 6.28 ELEC-TRICAL CADDIES, Wire Harness Caddy: XL Models.
- 23. Unplug the following harness connectors located in the wire harness caddies:
  - a. Instruments connector [20].
  - b. Headlamp connector [38].
  - c. Right hand control connector (black) [22].
  - d. Left hand control connector (gray) [24].
  - e. Front turn signal connector [31].
- 24. Slide left wire harness caddy between frame and engine, toward right side of vehicle. Move wire harness caddies and wiring harnesses out of the way.
- Remove induction module and intake manifold as a unit.
   Secure induction module/intake manifold assembly and throttle cables out of the way. See <u>4.8 INDUCTION MODULE: XL MODELS.</u>
- EVAP Controlled Models: Remove EVAP canister and disconnect hoses. See <u>4.20 EVAPORATIVE EMISSIONS</u> CONTROL.
- 27. See <u>Figure 3-14</u>. Remove screws (3, 4), grounding strap (2), stabilizer link (1) and spacer (5).
- 28. See <u>Figure 3-15</u>. Remove upper stabilizer link (2) and brackets (3, 1):
  - a. Remove screw (4) securing stabilizer link to engine bracket (1).
  - b. Remove screws (5) and washers (8). Remove horn bracket (9) (models with front mounted horn) and upper stabilizer link bracket with stabilizer link.
  - Remove fasteners (6) and washers (7) and cylinder head bracket (1).
- 29. See Figure 3-16. Remove lower stabilizer link (1) and lower frame bracket (2):
  - a. Remove screw (3) securing stabilizer link to engine crankcase boss.
  - b. Remove screws (4), washers (5) and lower frame bracket with stabilizer link.
- Remove rider left footrest and mounting bracket assembly and shift lever.
  - a. **Models with Mid-mount Controls:** See <u>2.40 RIDER</u> <u>FOOT CONTROLS:</u> XL MID-MOUNT CONTROLS.
  - b. **Models with Forward Controls:** See <u>2.41 RIDER FOOT CONTROLS:</u> XL FORWARD CONTROLS.


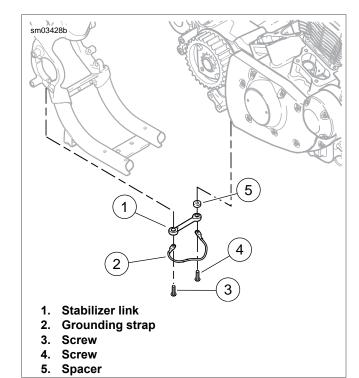


Figure 3-14. Rear Stabilizer Link Assembly (typical)

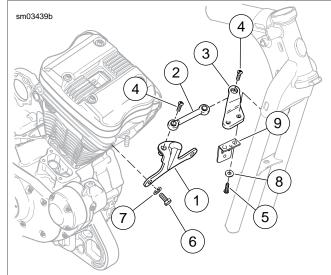

- 1. Engine bracket
- 2. Upper stabilizer link
- 3. Upper frame bracket
- 4. Screw
- 5. Screw (2)
- 6. Screw (2)
- 7. Lockwasher (2)
- 8. Washer (2)
- 9. Horn bracket (front mount models)

Figure 3-15. Upper Front Stabilizer Link Assembly

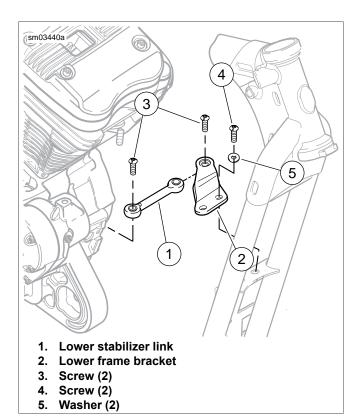


Figure 3-16. Lower Front Stabilizer Link Assembly (typical)

31. Models with Passenger Footrests: Remove left passenger footrest and mounting bracket assembly. See 2.43 PASSENGER FOOTRESTS.

### NOTE

Keep reservoir upright. If the reservoir is inverted, bleed the rear brake. See 2.17 BLEEDING BRAKES.

32. Remove rear brake master cylinder remote reservoir. Do not disconnect hose from reservoir. Secure reservoir

- upright, out of the way. See 2.13 REAR BRAKE MASTER CYLINDER RESERVOIR.
- 33. Remove rear stop lamp switch from battery tray. Unplug rear stop lamp switch connectors [121].
- 34. Remove screw and P-clamp securing rear brake hose to battery tray.
- 35. Pull rear stop lamp switch and brake lines out of the way. Be careful not to bend or kink metal brake lines. See 6.21 REAR STOP LAMP SWITCH.
- 36. With the aid of a FAT JACK (Part No. HD-45968), support motorcycle on SHOP DOLLY (Part No. HD-45967).
- 37. See Figure 3-17. Remove fasteners (13) and J-clip (14) from each side of frame.
- 38. Loosen, but do not remove, two front isolator mounting bracket screws (11) on left side of engine.
- 39. Loosen, but do not remove, two rear isolator mounting bracket screws (3) on left side of engine.
- 40. Attach ENGINE HOOK (Part No. HD-46284) and engine hoist. Carefully raise engine enough to relieve pressure from mounting bolts.
- 41. Remove front engine mount bolt (10) and nut (12).
- 42. Remove two screws (11) and front isolator mount (9).
- 43. Remove two rear engine mount/rear fork pivot bolts (1). Pull rear fork back until fork pivot bosses clear the frame.
- 44. Remove oil tank vent hose from oil tank. See 3.24 OIL TANK.
- 45. Remove two screws (3) and rear isolator mounting bracket (2) from frame.
- 46. Lift engine as necessary and swing assembly out from chassis toward the left side. Swing rear of engine out first. Then remove engine from chassis.

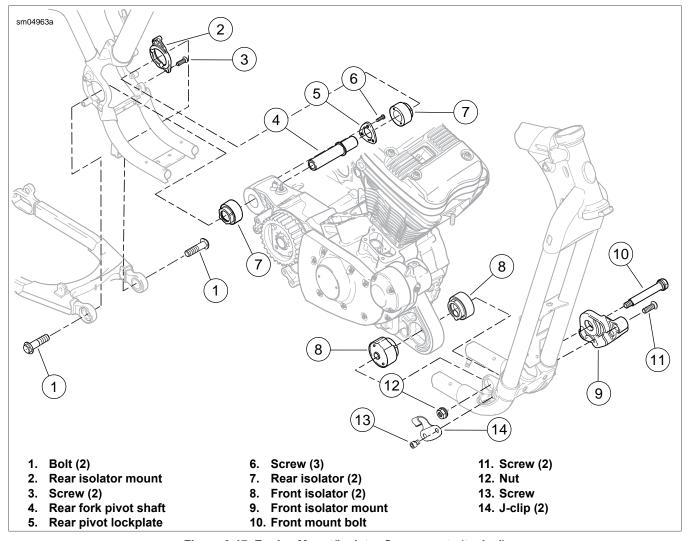


Figure 3-17. Engine Mount/Isolator Components (typical)

### **PROCEDURE: XR 1200X**

PART NUMBER	TOOL NAME
HD-45967	SHOP DOLLY
HD-45968	FAT JACK
HD-46284	ENGINE HOOK

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

- Position vehicle upright. Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See <u>4.5 FUEL TANK: XR 1200X</u>.
- 2. Remove seat.
- Remove left side cover. See <u>2.18 LEFT SIDE COVER</u>.

# WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- Disconnect negative (-) battery cable from ground stud on crankcase. Disconnect positive (+) battery cables at battery. Remove battery. See <u>1.22 BATTERY MAINTEN-</u> ANCE.
- Drain primary chaincase/transmission fluid. See 1.10 TRANSMISSION LUBRICANT.
- 6. Drain oil tank. Do not install drain plug back in end of drain hose at this time. See <u>1.6 ENGINE OIL AND FILTER</u>.
- See <u>Figure 3-18</u>. Remove fasteners (1, 2, 3) and remove induction module cover. Cut cable strap securing TPS harness to side plate.

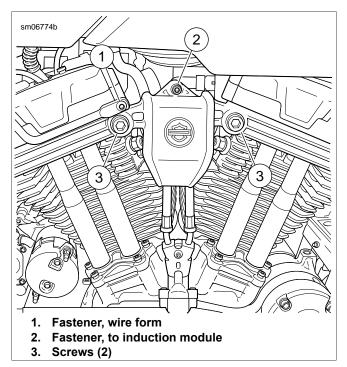


Figure 3-18. Induction Module Cover: XR 1200X

- Disconnect O2 sensor connectors [137], [138] and remove exhaust pipes and mufflers as an assembly. See 4.14 EXHAUST SYSTEM: XR 1200X.
- 9. Remove these parts if present:

**EVAP Controlled Models:** Remove EVAP canister and disconnect hoses. See <u>4.20 EVAPORATIVE EMISSIONS</u> CONTROL.

**All other Models:** Remove siren if equipped. See 6.30 SECURITY SYSTEM/OPTIONAL SIREN.

- 10. See <u>Figure 3-19</u>. Remove two fasteners (1) retaining siren/canister mount plate and brake line (2) retainer.
- 11. Remove three screws securing sprocket cover to engine case. Remove sprocket cover.
- 12. Remove belt guard and debris deflector from rear fork.
- Remove fastener securing right shock absorber to the rear fork.
- 14. Loosen rear axle nut and move rear axle all the way forward. Tighten axle nut enough to hold the axle and wheel in position in the rear fork. Remove rear drive belt. See <u>5.6 DRIVE BELT</u>.
- Remove transmission sprocket only if transmission or engine are to be disassembled. See <u>5.15 TRANSMISSION</u> <u>SPROCKET</u>.
- 16. Disconnect rear stop lamp switch connectors [121].
- Remove rear brake line from clamps at the bottom of left rear fork.

### NOTE

When securing rear master cylinder out of the way in the next step, make sure to keep the reservoir upright. If the reservoir is allowed to hang upside down, air bubbles could be introduced into the rear master cylinder. If this happens, the rear brake must be bled to remove all air from the hydraulic brake system.

- 18. See <u>Figure 3-20</u>. Remove fasteners (1) and remove rider's right footrest including master cylinder assembly and rear brake linkage. Be careful not to bend or kink metal brake line and remove assembly out left side of motorcycle. Tie assembly, with master cylinder upright, out of the way.
- Disconnect oil tank feed, drain and return hoses from oil tank. Pull drain hose up through drain hose sleeve in rear of engine crankcase and remove hose from vehicle. See 3.24 OIL TANK.
- 20. Unplug horn connectors and remove horn from horn bracket. See 6.32 HORN.
- 21. Remove fasteners securing air cleaner to fuel tank. Drain and remove fuel tank. See 4.5 FUEL TANK: XR 1200X.
- 22. Remove air cleaner from induction module as an assembly. See <u>4.3 AIR CLEANER ASSEMBLY, XR 1200X</u>.
- EVAP Controlled Models: Remove EVAP purge hose from induction module. See <u>4.20 EVAPORATIVE EMIS-SIONS CONTROL</u>.
- 24. Unplug the following connectors from the induction module:
  - a. Fuel injector connectors [84], [85].
  - b. Temperature/Manifold absolute pressure (TMAP) sensor connector [80].
  - c. Idle Air Control (IAC) connector [87].
  - d. Throttle Position (TPS) connector [88].
- 25. Unplug the following electrical connectors from the engine:
  - a. Ground wire at powertrain ground stud on crankcase.
  - b. Spark plug wires.
  - c. Oil pressure switch connector [120]. See <u>6.31 OIL</u> PRESSURE SWITCH.
  - d. Crank position (CKP) sensor connector [79]. See
     6.22 CRANK POSITION SENSOR (CKP).
  - e. Alternator AC connector [46] and DC connector [77].
     See <u>6.23 VOLTAGE REGULATOR</u>.
  - f. Neutral indicator switch connector [136]. See
     6.26 NEUTRAL INDICATOR SWITCH.
  - g. Vehicle speed sensor (VSS) connector [65]. See 6.25 VEHICLE SPEED SENSOR (VSS).
  - h. Starter relay wire (GN) at starter motor. See <u>6.10 STARTER</u>.
  - Engine Temperature (ET) sensor connector [90]. Cut and remove barbed cable strap securing sensor harness to H-bracket. See <u>4.7 ENGINE TEMPERATURE</u> (ET) SENSOR.
- If equipped, disconnect jiffy stand sensor connector [133] and remove sensor. See <u>6.29 JIFFY STAND SENSOR</u> (JSS): INTERNATIONAL MODELS.
- Disconnect clutch cable and remove from clutch lever on left handlebar. Remove cable from oil cooler mount and

- clips securing clutch cable to left front downtube. See 2.29 CLUTCH CONTROL.
- 28. See Figure 3-21. Remove oil cooler fasteners (1) from frame mounts (2) and remove oil cooler. It is not necessary to disconnect the oil hoses attached to the oil cooler. Tie oil cooler to engine.
- 29. Remove ignition coil. See <u>6.13 IGNITION COIL</u>.
- 30. Position ignition switch out of the way.
- 31. Remove induction module, leaving cables attached. Secure induction module assembly and throttle cables out of the way. See 4.9 INDUCTION MODULE: XR 1200X.
- 32. See <u>Figure 3-22</u>. Remove screws (3, 4), grounding strap (2), stabilizer link (1) and spacer (5).

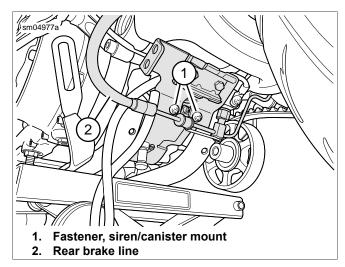


Figure 3-19. Siren/Canister Mount Plate and Brake Line

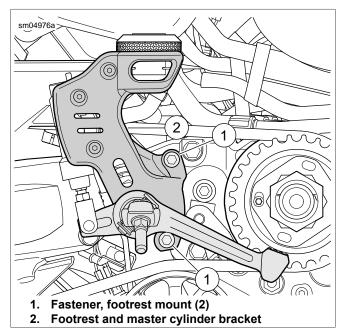


Figure 3-20. Right Footrest and Rear Master Cylinder

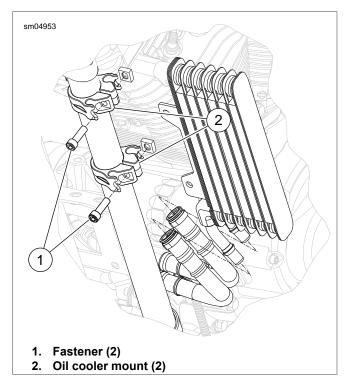


Figure 3-21. Oil Cooler Mounts


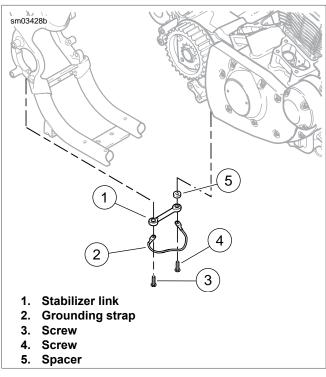


Figure 3-22. Rear Stabilizer Link Assembly (typical)

- 33. See <u>Figure 3-23</u>. Remove upper stabilizer link (2), cylinder head stabilizer bracket (1) and the upper frame bracket (3):
  - Remove screw (4) securing stabilizer link to cylinder head bracket (1).
  - Remove screws (5) and washers (8). Remove horn bracket (9) and upper stabilizer link bracket (3) with stabilizer link.
  - Remove screws (6) and lock washers (7) and the cylinder head bracket (1).
- 34. See <u>Figure 3-24</u>. Remove lower stabilizer link (1) and lower frame bracket (2) as an assembly:
  - Remove screw (3) securing stabilizer link to engine crankcase boss.
  - b. Remove screws (4), washers (5) and lower frame bracket with stabilizer link.
- 35. See <u>Figure 3-25</u>. Remove fastener (1) and disconnect shift linkage from transmission shift lever.
- 36. Remove fasteners (2) and remove rider left footrest and mounting bracket assembly along with foot shift lever and linkage.

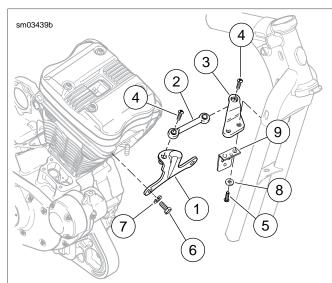

- 1. Engine bracket
- 2. Upper stabilizer link
- 3. Upper frame bracket
- 4. Screw
- 5. Screw (2)
- 6. Screw (2)
- 7. Lockwasher (2)
- 8. Washer (2)
- 9. Horn bracket (front mount models)

Figure 3-23. Upper Front Stabilizer Link Assembly

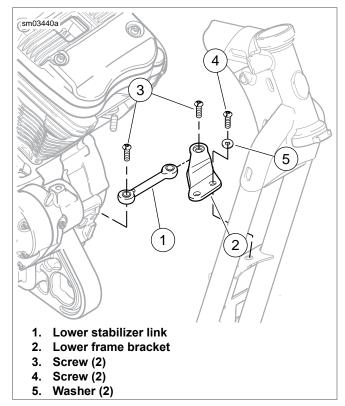


Figure 3-24. Lower Front Stabilizer Link Assembly (typical)

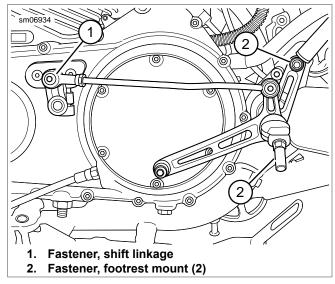


Figure 3-25. Left Footrest and Shift Linkage

- 37. With the aid of a FAT JACK (Part No. HD-45968), support motorcycle on SHOP DOLLY (Part No. HD-45967).
- 38. See Figure 3-26. Remove fasteners (13) and j-clip (14) from each side of frame.
- 39. Loosen, but do not remove, two front isolator mounting bracket screws (11) on left side of engine.
- 40. Loosen, but do not remove, two rear isolator mounting bracket screws (3) on left side of engine.

- 41. Attach ENGINE HOOK (Part No. HD-46284) and engine hoist. Carefully raise engine enough to relieve pressure from mounting bolts.
- 42. Remove front engine mount bolt (10) and nut (12).
- 43. Remove two screws (11) and front isolator mount (9).
- 44. Remove two rear engine mount/rear fork pivot bolts (1). Pull rear fork back until fork pivot bosses clear the frame.
- 45. Remove oil tank vent hose from oil tank. See <u>3.24 OIL TANK</u>.
- 46. Remove two screws (3) and rear isolator mounting bracket (2) from frame.
- 47. Rotate backbone electrical caddy to the left to allow room to lift the engine.
- 48. Lift engine as necessary and swing assembly out from left side of chassis, rear of engine first. Remove engine from chassis.

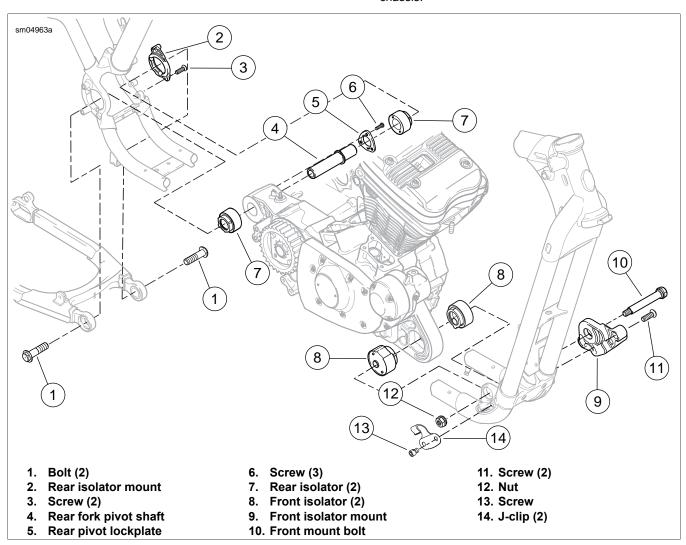


Figure 3-26. Engine Mount/Isolator Components (typical)

# INSTALLING ENGINE IN CHASSIS

# PROCEDURE: XL MODELS

PART NUMBER	TOOL NAME
HD-45967	SHOP DOLLY
HD-45968	FAT JACK
HD-46284	ENGINE HOOK

FASTENER	TORQUE VALUE		
Isolator mount, front, screw	25-35 ft-lbs	33.9-47.5 Nm	
Isolator mount, rear, screw	25-35 ft-lbs	33.9-47.5 Nm	
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	
Engine mount, front, bolt	95-105 ft-lbs	129-142 Nm	
Stop lamp switch bracket screw	72-120 <b>in-lbs</b>	8.1-13.6 Nm	
Brake hose clamp to frame, rear, screw	30-40 in-lbs	3.4-4.5 Nm	
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	
Stabilizer link, lower, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link cylinder head bracket	55-65 ft-lbs	74.6-88.2 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Ignition switch mounting screw	34-45 <b>in-lbs</b>	4.0-5.1 Nm	
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	
Exhaust pipe clamp bracket screw	30-33 ft-lbs	40.7-44.8 Nm	
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	

- See <u>Figure 3-17</u>. Make sure pivot shaft (4) and rear pivot lockplate (5) are mounted on engine mounting boss at rear of engine. Position right rear isolator (7) on pivot shaft on rear of engine. Do not Install left rear isolator at this time.
- 2. Position right front isolator (8) on front of engine. Do not Install left front isolator at this time.
- 3. Attach ENGINE HOOK (Part No. HD-46284) and engine hoist to engine.
- Lift engine and swing assembly into chassis from left side.
   Swing front of engine in first.

- Install left rear isolator (7) over pivot shaft (4). Install rear isolator mount (2) over left rear isolator and attach to frame with two screws (3). Do not tighten screws at this time.
- 6. Raise or lower engine until right front isolator lines up with mounting hole in frame.
- Install left front isolator (8) and front isolator mount (9) to left side of frame with two screws (11). Do not tighten screws at this time.
- Insert front engine mount bolt (10) from left side, through isolators and crankcase boss. Place nut (12) on bolt but do not tighten at this time.
- 9. Tighten two screws (11) securing front isolator mount (9) to 25-35 ft-lbs (33.9-47.5 Nm).
- 10. Tighten two screws (3) securing rear isolator mount (2) to 25-35 ft-lbs (33.9-47.5 Nm).
- 11. Using **new** hose clamp, install oil tank vent hose at oil tank. See <u>3.24 OIL TANK</u>.
- 12. Install rear fork with pivot/engine mount bolts (1). Tighten to 60-70 ft-lbs (81.4-95.0 Nm).
- 13. Tighten front engine mount bolt (10) and nut (12) to 95-105 ft-lbs (129-142 Nm).
- 14. Remove ENGINE HOOK (Part No. HD-46284).
- 15. With the aid of a FAT JACK (Part No. HD-45968), remove motorcycle from SHOP DOLLY (Part No. HD-45967).
- 16. Install stop lamp switch and brake lines.
  - Carefully move the stop lamp switch and brake lines into place.
  - Secure switch assembly to battery tray with bolt.
     Tighten to 72-120 in-lbs (8.1-13.6 Nm).
  - c. Secure flexible brake hose to battery tray with p-clamp and screw. Tighten to 30-40 **in-lbs** (3.4-4.5 Nm).
  - d. Plug rear stop lamp switch connectors [121] into rear stop lamp switch. See <u>6.21 REAR STOP LAMP SWITCH</u>.
- Install rear brake master cylinder remote reservoir. Secure with screw with captive washer. Tighten to 20-25 in-lbs (2.3-2.8 Nm). Install reservoir cover. See 2.13 REAR BRAKE MASTER CYLINDER RESERVOIR.
- Models with Passenger Footrests: Install left passenger footrest assembly. Tighten mounting screws to 45-50 ftlbs (61.0-67.8 Nm). See <u>2.43 PASSENGER FOOTRESTS</u>.
- Install shift lever and rider left footrest and mounting bracket assembly:
  - a. **Models with Mid-mount Controls:** See <u>2.40 RIDER</u> FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - b. **Models with Forward Controls:** See <u>2.41 RIDER</u> FOOT CONTROLS: XL FORWARD CONTROLS.

#### NOTE

Check each end of the stabilizer links for excessive wear prior to installation. The spherical ball end may rotate loosely, but should not have any lateral movement. Replace the link if lateral movement exists.

- See <u>Figure 3-16</u>. Install lower front stabilizer link and frame bracket:
  - a. Install lower frame bracket (2) with stabilizer link (1). Secure with screws (4) and washers (5). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
  - Install screw (3) securing stabilizer link to engine crankcase boss. Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- 21. See Figure 3-15. Install upper stabilizer link (2), upper frame bracket (3) and cylinder head bracket (1):
  - Install stabilizer link bracket to front head with two screws and lockwashers. Tighten to 55-65 ft-lbs (74.6-88.2 Nm).
  - Install upper frame bracket with stabilizer link, horn bracket (9) (models with front mounted horn), screws (5) and washers (8). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
  - Install screw (4) securing stabilizer link to engine bracket (1). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- 22. See Figure 3-14. Install spacer (5), rear stabilizer link (1), grounding strap (2) and screws (3, 4). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).

#### NOTE

**XL Models:** Verify that the EVAP canister mounting hardware does not contact the rear stabilizer ground strap.

- EVAP Controlled Models: Install EVAP canister and hoses. See 4.20 EVAPORATIVE EMISSIONS CONTROL.
- 24. Install induction module and intake manifold. See 4.8 INDUCTION MODULE: XL MODELS.
- 25. Position left and right wire harness caddies on either side of frame backbone. Plug in the following connectors, located in the caddies:
  - a. Instruments connector [20].
  - b. Headlamp connector [38].
  - c. Right hand control connector (black) [22].
  - d. Left hand control connector (gray) [24].
  - e. Front turn signal connector [31].
- 26. Mount caddies together. Verify tabs on caddies engage each other and frame backbone bracket. Secure with screw. See <u>6.27 MAIN WIRING HARNESS</u>.
- 27. Position ignition coil and bracket on frame behind steering head. Position the wiring harnesses, the right wire harness caddy and the throttle cables between the coil bracket uprights.
- 28. Plug ignition coil harness connector [83] into coil. See 6.13 IGNITION COIL. Mount ignition switch to coil bracket with screw. Tighten screw to 34-45 in-lbs (4.0-5.1 Nm).

- Secure right wire harness caddy to coil bracket with new push-in fastener.
- Connect clutch cable to clutch lever on handlebar. Attach clutch cable (along with wiring harness and front O2 sensor harness) to frame front left downtube with cable clips. Adjust clutch. See <u>2.29 CLUTCH CONTROL</u>.
- 30. Plug the following electrical connectors into the engine:
  - a. Engine Temperature (ET) sensor connector [90]. Secure sensor harness to ECM caddy with barbed cable strap. To avoid damage to sensor during vehicle operation, secure harness with a loop between sensor and ECM caddy. Press barbed prong of cable strap into hole in boss in ECM caddy. See <u>4.7 ENGINE</u> TEMPERATURE (ET) SENSOR.
  - Starter relay wire (GN) at starter motor. See 6.10 STARTER.
  - vehicle speed sensor (VSS) connector [65]. See
     6.25 VEHICLE SPEED SENSOR (VSS).
  - d. Neutral indicator switch connector [136]. See 6.26 NEUTRAL INDICATOR SWITCH.
  - e. Alternator AC connector [46]. See <u>6.23 VOLTAGE</u> REGULATOR.
  - f. Crank position (CKP) sensor connector [79]. See 6.22 CRANK POSITION SENSOR (CKP).
  - g. Oil pressure switch connector [120]. See <u>6.31 OIL PRESSURE SWITCH</u>.
  - h. Spark plug wires.
  - i. Ground wire at powertrain ground stud on crankcase.
- 31. Connect the following connectors to the induction module. See 4.8 INDUCTION MODULE: XL MODELS.
  - a. Throttle position sensor (TPS) connector [88].
  - b. Idle air control (IAC) connector [87].
  - c. Temperature/manifold absolute pressure (TMAP) sensor connector [80].
  - d. Fuel injector connectors [84], [85].
- 32. Install horn. See 6.32 HORN.
- 33. Install air cleaner assembly.
  - XL Models except XL 1200V: See 4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V.
  - b. **XL 1200V:** See <u>4.3 AIR CLEANER ASSEMBLY, XL 1200V.</u>
  - EVAP Controlled Models: Install EVAP purge hose on induction module. See <u>4.20 EVAPORATIVE</u> <u>EMISSIONS CONTROL</u>.

# **A**WARNING

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- 34. Install fuel tank and screw. Tighten to 15-20 ft-lbs (20.4-27.1 Nm). Attach quick-connect fitting on fuel line to fuel tank fitting. Gently tug on quick-connect fitting to make sure it is securely locked in place. See <u>4.4 FUEL TANK: XL MODELS</u>.
- 35. Route oil drain hose down through drain hose sleeve in rear of engine crankcase. Using new hose clamps, install oil tank feed, drain and return hoses onto oil tank. Install drain plug in end of drain hose. Secure with worm drive clamp. Tighten clamp securely. See 3.24 OIL TANK.
- Install exhaust system interconnect. See <u>4.13 EXHAUST SYSTEM</u>: XL MODELS.
- Install transmission sprocket. See <u>5.15 TRANSMISSION</u> SPROCKET.
- Install rear drive belt and hand-tighten rear axle. Final belt adjustment will be performed later. See <u>5.6 DRIVE BELT</u>.
- 39. Install sprocket cover. Secure with two screws. Note that long screw goes in top hole, short screw in bottom hole. Do not tighten screws at this time.
- Install exhaust pipe clamp bracket, washer and screw to sprocket cover. Tighten to 30-33 ft-lbs (40.7-44.8 Nm). Now tighten other two sprocket cover screws to 80-120 in-lbs (9.0-13.6 Nm).
- 41. Install right front footrest assembly and rear brake linkage.
  - a. **Models with Mid-mount Controls:** See <u>2.40 RIDER</u> FOOT CONTROLS: XL MID-MOUNT CONTROLS.
  - b. **Models with Forward Controls:** See <u>2.41 RIDER FOOT CONTROLS:</u> XL FORWARD CONTROLS.
- 42. Install exhaust pipes and mufflers. Plug in O2 sensor connectors [137], [138]. Route the rear O2 sensor harness toward left side of motorcycle. Loop the harness back to the harness connector. The harness cannot contact the exhaust pipe or port. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u>.
- Fill oil tank. See <u>1.6 ENGINE OIL AND FILTER, Changing Oil and Filter</u>.
- 44. Fill primary chaincase/transmission with FORMULA+ TRANSMISSION AND PRIMARY CHAINCASE LUBRICANT. See 1.10 TRANSMISSION LUBRICANT.
- Adjust belt tension and rear wheel alignment. Tighten rear axle nut to 95-105 ft-lbs (129-142 Nm). Install new E-clip. See <u>1.24 WHEEL ALIGNMENT</u>.

# **AWARNING**

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

- 46. Connect battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- 47. Install left side cover. See 2.18 LEFT SIDE COVER.

# **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

48. Install seat.

3-40 2013 Sportster Service: Engine

### PROCEDURE: XR 1200X

PART NUMBER	TOOL NAME
HD-45967	SHOP DOLLY
HD-45968	FAT JACK
HD-46284	ENGINE HOOK

FASTENER	TORQUE VALUE		
Isolator mount, front, screw	25-35 ft-lbs	33.9-47.5 Nm	
Isolator mount, rear, screw	25-35 ft-lbs	33.9-47.5 Nm	
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	
Engine mount, front, bolt	95-105 ft-lbs	129 -142 Nm	
Retainer plate, lower front, fastener	45-50 ft-lbs	61.0-67.8 Nm	
Stabilizer link, lower, frame bracket, front, mounting screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link cylinder head bracket	55-65 ft-lbs	74.6-88.2 Nm	
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	
Shift linkage pivot bolt	120-180 in-lbs	13.6-20.3 Nm	
Ignition switch mounting screw	34-45 in-lbs	4.0-5.1 Nm	
Oil cooler fastener: XR 1200X	36-60 in-lbs	4.1-6.8 Nm	
Induction module cover to cylinder head fastener: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	
Induction module cover to induction module fastener: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	
Induction module cover to wire form fastener: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	
Siren/canister bracket rear brake line fastener	17-22 ft-lbs	23.0-29.8 Nm	
Shock absorber mounting bolt	45-50 ft-lbs	61.0-67.8 Nm	
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	
Sprocket cover, forward and lower screws	80-120 in-lbs	9.0-13.6 Nm	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	

 See <u>Figure 3-26</u>. Verify pivot shaft (4) and rear pivot lockplate (5) are mounted on engine mounting boss at rear of engine. Position right rear isolator (7) on pivot shaft on rear of engine. Do not install left rear isolator at this time.

- 2. Position right front isolator (8) on front of engine. Do not install left front isolator at this time.
- Attach ENGINE HOOK (Part No. HD-46284) and engine hoist to engine.
- 4. Lift engine and swing assembly into chassis from left side. Swing front of engine in first.
- Install left rear isolator (7) over pivot shaft (4). Install rear isolator mount (2) over left rear isolator and attach to frame with two screws (3). Do not tighten screws at this time.
- 6. Raise or lower engine until right front isolator lines up with mounting hole in frame.
- Install left front isolator (8) and front isolator mount (9) to left side of frame with two screws (11). Do not tighten screws at this time.
- 8. Insert front engine mount bolt (10) from left side, through isolators and crankcase boss. Place nut (12) on bolt but do not tighten at this time.
- 9. Tighten two screws (11) securing front isolator mount (9) to 25-35 ft-lbs (33.9-47.5 Nm).
- 10. Tighten two screws (3) securing rear isolator mount (2) to 25-35 ft-lbs (33.9-47.5 Nm).
- 11. Using **new** hose clamp, install oil tank vent hose at oil tank. See <u>3.24 OIL TANK</u>.
- 12. Install rear fork with pivot/engine mount bolts (1). Tighten to 60-70 ft-lbs (81.4-95.0 Nm).
- 13. Tighten front engine mount bolt (10) and nut (12) to 95-105 ft-lbs (129 -142 Nm).
- 14. Install J-clip (14) to each side of frame. Tighten fasteners (13) to 45-50 ft-lbs (61.0-67.8 Nm).
- 15. Remove ENGINE HOOK (Part No. HD-46284).
- 16. With the aid of a FAT JACK (Part No. HD-45968), remove motorcycle from SHOP DOLLY (Part No. HD-45967).
- See <u>Figure 3-24</u>. Install lower front stabilizer link and frame bracket:
  - a. Install lower frame bracket (2) with stabilizer link (1). Secure with screws (4) and washers (5). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
  - Install screw (3) securing stabilizer link to engine crankcase boss. Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- 18. See <u>Figure 3-23</u>. Install cylinder head stabilizer link bracket (1), upper stabilizer link (2) and upper frame bracket (3):
  - a. Install the fasteners (6), lockwashers (7) and the stabilizer cylinder head bracket (1). Tighten to 55-65 ftlbs (74.6-88.2 Nm).
  - b. Install upper frame bracket with stabilizer link, horn bracket (9) (models with front mounted horn), screws (5) and washers (8). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
  - Install screw (4) securing stabilizer link to cylinder head bracket (1). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).

- See <u>Figure 3-22</u>. Install spacer (5), rear stabilizer link (1), grounding strap (2) and screws (3, 4). Tighten to 25-35 ftlbs (33.9-47.5 Nm).
- 20. See <u>Figure 3-25</u>. Install shift lever and rider left footrest and mounting bracket assembly. Tighten fasteners (2) to 45-50 ft-lbs (61.0-67.8 Nm).
- 21. Connect shift linkage to transmission shift lever. Tighten fastener (1) to 120-180 **in-lbs** (13.6-20.3 Nm).
- Install induction module and intake manifold. See
   INDUCTION MODULE: XR 1200X.
- 23. Rotate backbone wire harness caddy down into place.
- 24. See <u>6.13 IGNITION COIL</u>. Position ignition coil and bracket on backbone caddy behind steering head. Place front wire harnesses, mounting boss from right wire harness caddy and throttle cables between coil bracket uprights.
- 25. Plug ignition coil harness connector [83] into coil. Mount ignition switch to coil bracket with screw. Tighten to 34-45 in-lbs (4.0-5.1 Nm). Secure right wire harness caddy to coil bracket with new push-in fastener.
- 26. Connect clutch cable to clutch lever on handlebar. Secure cable to lower oil cooler mount. Attach clutch cable (along with wiring harness and front O2 sensor harness) to frame front left downtube with cable clips. Adjust clutch. See 2.29 CLUTCH CONTROL.
- 27. See <u>Figure 3-21</u>. Install the oil cooler to the frame mounts. Tighten fasteners (1) to 36-60 **in-lbs** (4.1-6.8 Nm).
- 28. Plug the following electrical connectors into the engine:
  - a. Engine Temperature (ET) sensor connector [90]. Secure sensor harness to H-bracket with barbed cable strap. To avoid damage to sensor during vehicle operation, secure harness with a loop between sensor and H-bracket. Press barbed prong of cable strap into hole in boss in H-bracket. See <u>4.7 ENGINE TEMPER-ATURE (ET) SENSOR</u>.
  - b. Starter relay wire (GN) at starter motor. See 6.10 STARTER.
  - vehicle speed sensor (VSS) connector [65]. See
     6.25 VEHICLE SPEED SENSOR (VSS).
  - d. Neutral indicator switch connector [136]. See 6.26 NEUTRAL INDICATOR SWITCH.
  - e. Alternator AC connector [46]. Secure to right downtube with a cable strap. See <u>6.23 VOLTAGE REGULATOR</u>.
  - f. Connect voltage regulator DC connector [77] and secure to frame cross member with cable strap. See 6.23 VOLTAGE REGULATOR.
  - g. Crank position (CKP) sensor connector [79]. See 6.22 CRANK POSITION SENSOR (CKP).
  - Oil pressure switch connector [120]. See <u>6.31 OIL</u> <u>PRESSURE SWITCH</u>.
  - i. Spark plug wires.
  - j. Ground wire at powertrain ground stud on crankcase.

- 29. See <u>4.9 INDUCTION MODULE: XR 1200X</u> and plug the following into the induction module:
  - a. TPS [88].
  - b. IAC [87].
  - c. TMAP [80].
  - d. Fuel injector connectors [84], [85].
- Install and connect jiffy stand sensor. See <u>6.29 JIFFY STAND SENSOR (JSS): INTERNATIONAL MODELS.</u>
- 31. Install and connect horn. See 6.32 HORN.
- 32. See Figure 3-18. Install induction module cover. Secure TPS harness to cover during installation.
  - a. Tighten fasteners (2) to 20-24 ft-lbs (27.1-32.5 Nm).
  - b. Tighten fastener (1) to 84-108 in-lbs (9.5-12.2 Nm).
  - c. Tighten fastener (3) to 84-108 **in-lbs** (9.5-12.2 Nm).
- Install air cleaner assembly on induction module. Connect breather hoses to rocker box fittings. See <u>4.3 AIR</u> <u>CLEANER ASSEMBLY, XR 1200X.</u>
- 34. EVAP Controlled Models: Install EVAP purge hose on induction module. See <u>4.20 EVAPORATIVE EMISSIONS CONTROL</u>.

# **A**WARNING

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- 35. Install fuel tank. Tighten screws to 15-20 ft-lbs (20.4-27.1 Nm). Attach quick-connect fitting on fuel line to fuel tank fitting. Gently tug on quick-connect fitting to make sure it is securely locked in place. See 4.5 FUEL TANK: XR 1200X.
- 36. Secure air filter assembly to fuel tank with two screws.
- 37. Install oil hoses.
  - Feed oil drain hose down through drain hose sleeve in rear of engine crankcase.
  - b. Using **new** hose clamps, install oil tank feed, drain and return hoses onto oil tank.
  - c. Install drain plug in end of drain hose.
  - d. Secure with worm drive clamp. Tighten clamp securely. See <u>3.24 OIL TANK</u>.
- 38. See Figure 3-20. Install right rider footrest assembly and rear master cylinder assembly. Tighten fasteners (1) to 45-50 ft-lbs (61.0-67.8 Nm).
- 39. See <u>Figure 3-19</u>. Secure brake line and siren/canister mount plate to frame and rear fork. Tighten fasteners (1) to 17-22 ft-lbs (23.0-29.8 Nm). Connect rear stop lamp switch connectors.

### NOTE

Verify that the EVAP canister mounting hardware does not contact the rear stabilizer ground strap.

- 40. Install these parts if present:
  - a. EVAP Controlled Models: Install EVAP canister and hoses. See 4.20 EVAPORATIVE EMISSIONS CON-TROL.
  - b. **All other Models:** Install siren if equipped. See 6.30 SECURITY SYSTEM/OPTIONAL SIREN.
- 41. If removed, install transmission sprocket. See <u>5.15 TRANSMISSION SPROCKET</u>.
- Install rear drive belt and hand-tighten rear axle. Final belt adjustment will be performed later. See <u>5.6 DRIVE BELT</u>.
- 43. Secure right shock absorber to rear fork. Tighten to 45-50 ft-lbs (61.0-67.8 Nm).
- 44. Install belt guard and debris deflector.
- 45. Install sprocket cover. Tighten sprocket cover screws.
  - Tighten rear (larger) screw to 30-33 ft-lbs (40.7-44.8 Nm).
  - b. Tighten forward and lower (smaller) screws to 80-120 in-lbs (9.0-13.6 Nm).
- Install exhaust pipes and mufflers. See <u>4.14 EXHAUST SYSTEM</u>: XR 1200X.

It is important to route and secure the front O2 sensor harness correctly to prevent premature harness failure. See 4.12 OXYGEN (O2) SENSOR, Installation.

- Plug in O2 sensor connectors [137], [138]. Make sure each O2 sensor harness is routed and secured correctly. See 4.12 OXYGEN (O2) SENSOR, Installation.
- Fill oil tank. See <u>1.6 ENGINE OIL AND FILTER, Changing Oil and Filter.</u>
- 49. Fill primary chaincase/transmission with FORMULA+ TRANSMISSION AND PRIMARY CHAINCASE LUBRICANT. See 1.10 TRANSMISSION LUBRICANT.
- 50. Adjust belt tension and rear wheel alignment. Tighten rear axle nut to 95-105 ft-lbs (129-142 Nm). Install **new** E-clip. See <u>1.24 WHEEL ALIGNMENT</u>.
- 51. Connect battery. See 1.22 BATTERY MAINTENANCE.
- 52. Install left side cover. See 2.18 LEFT SIDE COVER.

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

53. Install seat.

## PRECISION COOLING SYSTEM: XR 1200X

#### **GENERAL**

PART NUMBER	TOOL NAME
HD-46503	OIL LINE REMOVER, 1/2 INCH
HD-49096	OIL LINE REMOVER, 3/8 INCH

See Figure 3-27. The oil lines used in the Precision Cooling System incorporate flanged oil lines and quick connect fittings. Quick connect fittings can be separated using either the OIL LINE REMOVER, 1/2 INCH (Part No. HD-46503) or OIL LINE REMOVER, 3/8 INCH (Part No. HD-49096).

- Close the OIL LINE REMOVER over the oil line. Match the notches in the tool flange to the U-bends in the retainer clip.
- 2. Rotate the tool to expand the spring clip.
- Use finger and thumb to hold the OIL LINE REMOVER squarely against the fitting to keep the spring clip expanded. Use only enough pressure to hold the tool square. Excess pressure will prevent simultaneously pulling the line and tool from the fitting.
- 4. Pull the oil line and the tool from the fitting.
- Apply a light film of clean engine oil to the oil line. This
  eases assembly and prevents damage to the connector
  O-ring.
- 6. To assemble, push the oil line squarely into quick connect fitting to connect.

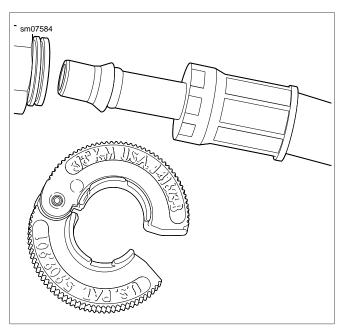


Figure 3-27. Flanged Oil Line and Remover

## **RETURN OIL MANIFOLD**

PART NUMBER	TOOL NAME
HD-49096	OIL LINE REMOVER, 3/8 INCH

FASTENER	TORQUE VALUE	
Return oil manifold screw: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm

#### Removal

- Disconnect and remove battery. See <u>1.22 BATTERY</u> MAINTENANCE.
- Remove exhaust system. See <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.
- 3. Drain oil tank. See 1.6 ENGINE OIL AND FILTER.
- Remove oil drain hose from sleeve in rear engine crankcase.
- Remove battery positive (+) cable from starter motor. See 6.10 STARTER.
- 6. See Figure 3-29. From right side of motorcycle, remove fastener (1) securing oil manifold.
- See <u>Figure 3-28</u>. Disconnect oil return hose (2) from oil tank.
- 8. Remove rear cylinder head oil line (1) from quick connect fitting using OIL LINE REMOVER, 3/8 INCH (Part No. HD-49096) while sliding return oil manifold back off from rigid oil lines and remove assembly from engine.

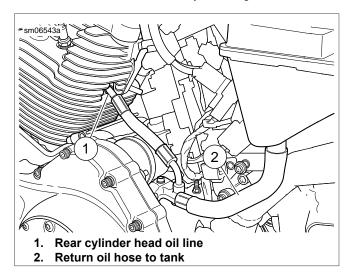


Figure 3-28. Rear Cylinder Oil Line

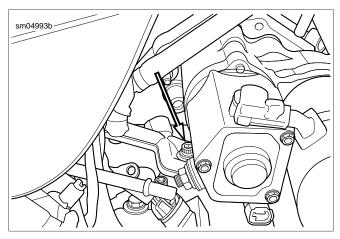


Figure 3-29. Return Oil Manifold Fastener

## Installation

- 1. Install **new** O-rings in manifold assembly and apply a light film of oil to them.
- Start return oil manifold on rigid lines and install rear cylinder head oil line in quick connect fitting. Verify that it is securely held by the retainer clip.
- See <u>Figure 3-29</u>. Slide oil manifold onto rigid lines and secure with screw (1). Tighten to 84-108 in-lbs (9.5-12.2 Nm).
- 4. Connect oil return hose to oil tank. Secure with clamp.
- Install and connect oil tank drain hose. Install and secure plug in drain hose.
- Connect battery positive (+) cable to starter. See 6.10 STARTER.
- 7. Install battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- 8. Fill the oil tank. See 1.6 ENGINE OIL AND FILTER.

#### CYLINDER HEAD OIL RETURN LINES

PART NUMBER	TOOL NAME
HD-49096	OIL LINE REMOVER, 3/8 INCH

FASTENER	TORQUE	VALUE
Oil line quick connect fitting, cylinder head return: XR 1200X	108-156 in-lbs	12.2-17.6 Nm
Oil line retainer, front, nut: XR 1200X	84-108 in-lbs	9.5-12.2 Nm
Oil rigid line retainer, rear, screw: XR 1200X	84-108 in-lbs	9.5-12.2 Nm

#### Removal

- Remove return oil manifold. See <u>3.12 PRECISION</u> <u>COOLING SYSTEM: XR 1200X, Return Oil Manifold.</u>
- See <u>Figure 3-30</u>. Remove fastener (1) and raise retainer until alignment pin (2) is clear of bore in crankcase. Roll retainer out from beneath rigid oil lines to remove.
- 3. See Figure 3-31. Remove nut (1) and washer.

- Separate front oil line (2) from cylinder head using OIL LINE REMOVER, 3/8 INCH (Part No. HD-49096).
- Separate rear oil line (3) from cylinder head using OIL LINE REMOVER, 3/8 INC (Part No. HD-49096).
- If front oil line needs to be completely removed, remove starter. See 6.10 STARTER.
- If necessary, remove quick connect fitting from cylinder head

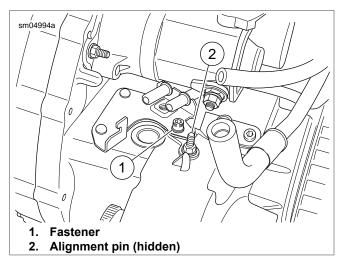


Figure 3-30. Rigid Oil Line Retainer

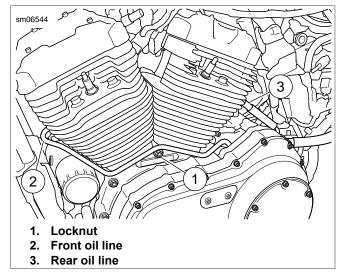


Figure 3-31. Cylinder Head Oil Lines

#### Installation

#### NOTE

Used O-rings can leak. Always install **new** O-rings when performing repairs.

- If removed from cylinder head, install quick connect fittings with **new** O-rings. Tighten to 108-156 **in-lbs** (12.2-17.6 Nm).
- 2. Install **new** internal O-rings in quick connect fittings.
- If removed, place front cylinder head oil line on engine and install electric starter. See 6.10 STARTER.

Apply a light film of oil to the end of the line before inserting it into the fitting.


- See Figure 3-31. Connect front oil line (2) to cylinder head. Verify that it is securely held by the retainer clip.
- Secure front line to crankcase with locknut (1) and washer. Tighten to 84-108 in-lbs (9.5-12.2 Nm).
- Install retainer. 6.
  - See Figure 3-30. Roll retainer under rigid lines at rear of crankcase.
  - Orient alignment pin to bore in case.
  - Verify that the flanges on lines are on the manifold side of the retainer.
  - Secure with fastener (1).
  - Tighten to 84-108 in-lbs (9.5-12.2 Nm).
- 7. Install return oil manifold. See 3.12 PRECISION COOLING SYSTEM: XR 1200X, Return Oil Manifold.
- See Figure 3-31. Connect rear oil line (3) to cylinder head. Verify that it is securely held by the retainer clip.

#### CYLINDER HEAD OIL FEED ASSEMBLY

FASTENER	TORQUE	VALUE
Check valve plug fitting: XR 1200X	15-21 ft-lbs	20.3-28.5 Nm
Check valve housing fastener: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm
Cylinder head oil feed flare fit- ting: XR 1200X	22-26 ft-lbs	29.8-35.3 Nm
Cylinder head oil feed line flare nut: XR 1200X	13-17 ft-lbs	18-23 Nm


## Removal

- 1. Disconnect the battery. See 1.22 BATTERY MAINTEN-ANCE.
- Drain oil tank. See 1.6 ENGINE OIL AND FILTER. 2.
- 3. See Figure 3-32. Disconnect flare nuts (1) from each cylinder head.
- Pull oil feed hose connector (2) straight up to remove feed hose assembly from check valve assembly (3).
- 5. Remove two fasteners (4) and check valve assembly (3).
- See Figure 3-33. Carefully clamp assembly in vise and remove plug fitting (7).
- 7. Remove spring (5) and ball (4).
- If necessary, remove flare fittings from cylinder heads. 8.
- Inspect components for wear or damage and replace as 9. necessary.

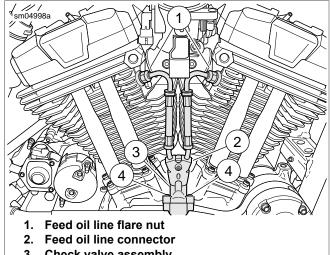

- Check valve assembly
- Fastener

Figure 3-32. Cylinder Head Oil Feed Assembly

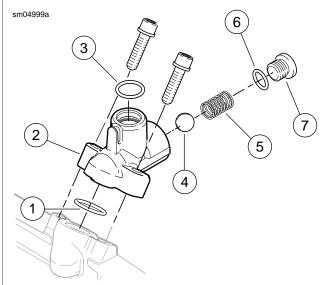

- 1. Base O-ring
- 2. Check valve housing
- 3. O-ring
- 4. Check ball
- 5. Spring cartridge assembly
- 6. O-ring
- 7. Plug fitting

Figure 3-33. Check Valve Components

## Installation

See Figure 3-33. Install ball (4) and spring (5) into housing (2).

#### NOTE

Used O-rings can leak. Always install new O-rings when performing repairs.

- Install new O-ring (6) on check valve plug fitting (7) and install fitting. Tighten to 15-21 ft-lbs (20.3-28.5 Nm).
- Install **new** O-ring (3) in bore of housing.

- 4. Install housing (2) with **new** base O-ring (1). Tighten fasteners to 90-120 **in-lbs** (10.3-13.6 Nm).
- If removed, apply LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the flare fittings. Install in cylinder heads with new O-rings. Tighten to 22-26 ft-lbs (29.8-35.3 Nm).

Apply a light film of oil to the end of the line before inserting it into the fitting.

- See <u>Figure 3-32</u>. Push oil feed hose assembly straight down to install. Connect oil line flare nuts (1) to cylinder head flare fittings. Hold lines to prevent rotation and tighten to 13-17 ft-lbs (18-23 Nm).
- 7. Install and connect battery. See <u>1.22 BATTERY MAINTEN-ANCE</u>.
- 8. Fill oil tank. See <u>1.6 ENGINE OIL AND FILTER</u>.

## **OIL PUMP LINES**

PART NUMBER	TOOL NAME
HD-46503	OIL LINE REMOVER, 1/2 INCH
HD-49096	OIL LINE REMOVER, 3/8 INCH

FASTENER	TORQUE	VALUE
Oil pump quick connect fitting: XR 1200X	108-156 <b>in-lbs</b>	12.2-17.6 Nm
Oil rigid line retainer, rear, screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm

#### Removal

- 1. Remove return oil manifold. See <u>3.12 PRECISION</u> COOLING SYSTEM: XR 1200X, Return Oil Manifold.
- 2. Remove retainer.
  - a. See <u>Figure 3-34</u>. Remove fastener (1).
  - Raise retainer until alignment pin (2) is clear of bore in crankcase.
  - c. Roll retainer out from beneath rigid oil lines.
- See <u>Figure 3-35</u>. Remove return oil line (1) from gearcase cover using OIL LINE REMOVER, 3/8 INCH (Part No. HD-49096).
- 4. If removing the return oil line, remove starter. See <u>6.10 STARTER</u>.
- Remove feed oil line (2) from gearcase cover using OIL LINE REMOVER, 1/2 INCH (Part No. HD-46503).
- 6. Disconnect vent hose (3) from fitting on oil pump.
- See <u>Figure 3-36</u>. Remove locknut (1) and washer. Remove oil cooler line retainer (2) from lines.
- See <u>Figure 3-35</u>. Release each oil cooler line (4, 5) from bottom of gearcase cover using OIL LINE REMOVER, 1/2 INCH (Part No. HD-46503).
- 9. If necessary, remove quick connect fittings.

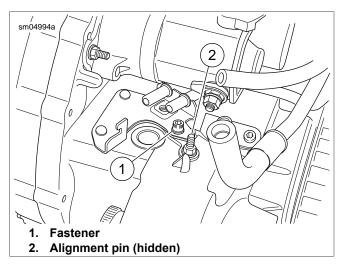


Figure 3-34. Rigid Oil Line Retainer

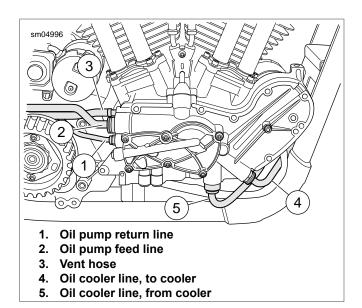


Figure 3-35. Oil Pump Lines

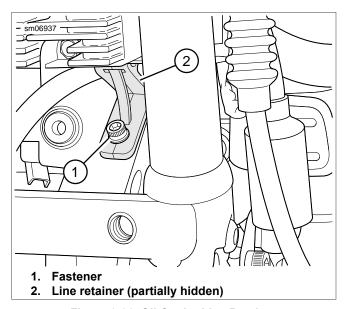


Figure 3-36. Oil Cooler Line Retainer

## Installation

#### NOTE

Used O-rings can leak. Always install **new** O-rings when performing repairs.

- If removed, install quick connect fittings with new O-rings. Tighten to 108-156 in-lbs (12.2-17.6 Nm).
- 2. Install new O-rings in quick connect fittings.

#### NOTE

Apply a light film of oil to the end of each line before inserting it into the fitting.

- See <u>Figure 3-35</u>. Connect oil cooler lines (4, 5) to lower gearcase cover. Verify each is securely held by the retainer clin.
- 4. See Figure 3-36. Install oil cooler line retainer (2) and tighten fastener (1) securely.
- 5. See <u>Figure 3-35</u>. If removed, place return line (1) on engine and install starter. See <u>6.10 STARTER</u>.
- Connect vent (3), feed oil (2) and return oil (1) lines to oil
  pump body and cam support. Verify each is securely held
  by the retainer clip.
- 7. Remove retainer.
  - See <u>Figure 3-34</u>. Roll retainer under rigid lines at rear of crankcase.
  - b. Orient alignment pin (2) to bore in case.
  - Verify flanges on lines are on the manifold side of the retainer.
  - Secure with screw (1).
  - e. Tighten to 90-120 in-lbs (10.2-13.6 Nm).
- Install return oil manifold. See <u>3.12 PRECISION COOLING</u> SYSTEM: XR 1200X, Return Oil Manifold.
- 9. Fill oil tank. See <u>1.6 ENGINE OIL AND FILTER</u>.

#### OIL COOLER

PART NUMBER	TOOL NAME
HD-46503	OIL LINE REMOVER, 1/2 INCH

FASTENER	TORQUE	VALUE
Oil cooler fastener: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm

## Removal

- Disconnect the battery. See <u>1.22 BATTERY MAINTEN-ANCE</u>.
- 2. Drain oil tank. See 1.6 ENGINE OIL AND FILTER.
- Using OIL LINE REMOVER, 1/2 INCH (Part No. HD-46503), separate oil cooler lines from oil cooler.
- See <u>Figure 3-37</u>. Remove fasteners (1) securing oil cooler to frame brackets.
- Remove oil cooler from motorcycle.

 If necessary, remove oil cooler rigid lines from gearcase cover. See <u>3.12 PRECISION COOLING SYSTEM: XR</u> 1200X, Oil Pump Lines.

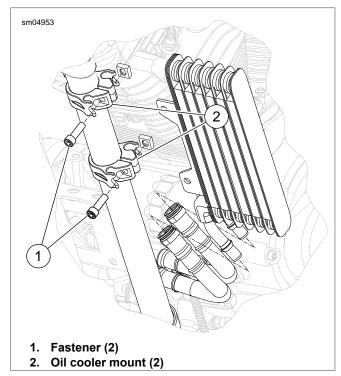


Figure 3-37. Oil Cooler Mounts

#### Installation

#### NOTE

Used O-rings can leak. Always install **new** O-rings when performing repairs.

- 1. Install new O-rings in quick connect fittings.
- If removed, install oil cooler rigid lines. See 3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines.

#### NOTE

See <u>Figure 3-38</u>. Position oil cooler parallel with down tubes as shown. Do not orient oil cooler forward of down tubes or clutch cable damage will result.

3. See <u>Figure 3-37</u>. Secure oil cooler to frame brackets. Tighten fasteners (1) to 36-60 **in-lbs** (4.1-6.8 Nm).

#### NOTE

Apply a light film of oil to the end of the line before inserting it into the fitting.

- 4. Connect oil lines to oil cooler fittings. Verify that each is securely held by the retainer clip.
- 5. Fill the oil tank. See 1.6 ENGINE OIL AND FILTER.
- 6. Connect the battery. See 1.22 BATTERY MAINTENANCE.

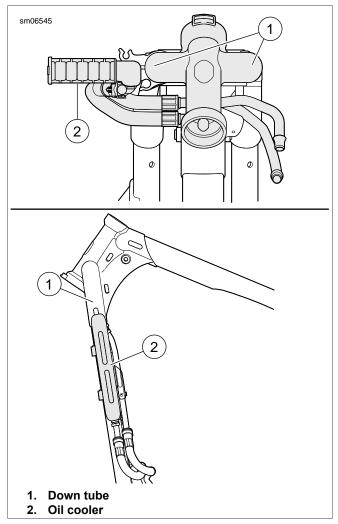


Figure 3-38. Oil Cooler Orientation

## TOP END OVERHAUL: DISASSEMBLY

## **GENERAL**

This section describes disassembling the top end of the engine, from the cylinder deck up. To perform a complete top end overhaul, follow all steps listed in this section.

Then follow all steps listed in the following sections, including inspection and repair procedures: See <u>3.14 CYLINDER HEAD</u> and <u>3.15 CYLINDER AND PISTON</u>.

#### NOTE

Clean engine before disassembly. Abrasive particles can damage machined surfaces or plug oil passageways. Remove all dirt and particles before disassembly to prevent component damage.

## STRIPPING MOTORCYCLE FOR TOP END REPAIR

## **AWARNING**

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)


- Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.
- Remove seat.

## **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 3. Remove main fuse.
- Unplug O2 sensor connectors [137], [138] and remove exhaust pipes and mufflers. See <u>4.13 EXHAUST SYSTEM:</u> XL MODELS or <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.
- Disconnect spark plug cables from spark plugs.
- Drain and remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- Remove horn.
  - a. Front Mount: See <u>6.32 HORN, Replacement: Front Mount.</u>
  - Side Mount: See <u>6.32 HORN, Replacement: Side Mount.</u>

- 8. Remove air cleaner assembly:
  - XL Models except XL 1200V: Remove cover, air filter and air cleaner backing plate. See <u>4.3 AIR</u> CLEANER ASSEMBLY, XL Models except XL 1200V.
  - XL 1200V: Remove cover, air filter and air cleaner backing plate. See <u>4.3 AIR CLEANER ASSEMBLY</u>, XL 1200V.
  - CA Models: Remove EVAP purge hose from induction module. See <u>4.20 EVAPORATIVE EMISSIONS</u> CONTROL.
- Remove induction module. See <u>4.8 INDUCTION MODULE</u>: <u>XL MODELS</u> or <u>4.9 INDUCTION MODULE</u>: XR 1200X.
- Secure induction module assembly and throttle cables out of the way.
- 11. See <u>Figure 3-39</u>. Remove upper front stabilizer link and frame bracket:
  - Remove screw (4) securing stabilizer link (2) to engine bracket (1).
  - b. Remove screws (5) and washers (8). Remove horn bracket (9) (models with front mounted horn) and frame bracket (3) with stabilizer link.

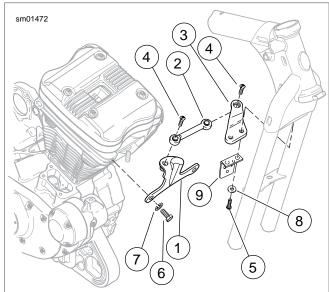

- 1. Engine bracket
- 2. Upper stabilizer link
- 3. Upper frame bracket
- 4. Screw
- 5. Screw (2)
- 6. Screw (2)
- 7. Lock washer (2)
- 8. Washer (2)
- 9. Horn bracket

Figure 3-39. Upper Front Stabilizer Link Assembly

## **CYLINDER HEADS**

## **Disassembling Rocker Covers**

#### **NOTICE**

Prevent engine damage. Washers and fasteners used in the engine are hardened parts. Do not use unhardened parts. (00544b)

- 1. Remove spark plugs.
- See <u>Figure 3-42</u>. Remove four screws with captive washers (1) and sealing washers (2). Discard sealing washers.
- 3. Remove outer rocker cover (3) or (20).
- 4. Remove and discard gaskets (4, 5).
- Rotate crankshaft until both valves are closed on head being removed.
- See <u>Figure 3-40</u>. Remove hardware securing inner rocker cover to cylinder head in the following order.
  - a. Remove two screws and washers (1).
  - b. Remove three bolts and washers (2).
  - c. Loosen four rocker arm bolts (3) in 1/4-1/2 turn increments using a cross pattern. This relieves valve spring pressure evenly on inner rocker cover.
- 7. See Figure 3-42. Remove inner rocker cover (8) or (24). Remove and discard gasket (16).
- 8. Remove breather assembly:
  - a. **XL Models:** Remove screw (6), breather assembly (7) and breather seal (17). Discard seal.
  - b. **XR 1200X:** Push breather assembly (23) and O-ring (22) out from the under side.

#### NOTE

Mark rocker arm shafts for reassembly in their original positions. Install valve train components in their original positions or increased engine wear may result.

9. See <u>Figure 3-41</u>. Remove rocker arm shafts by tapping them out using a hammer and a soft metal punch.

10. See <u>Figure 3-42</u>. Remove rocker arms (11, 12). Mark the rocker arms for reassembly in their original locations.

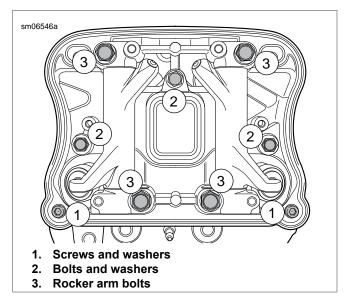


Figure 3-40. Inner Rocker Cover Fasteners (typical)

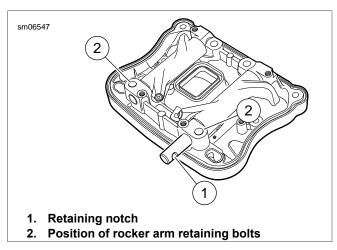


Figure 3-41. Removing Rocker Arm Shafts (typical)

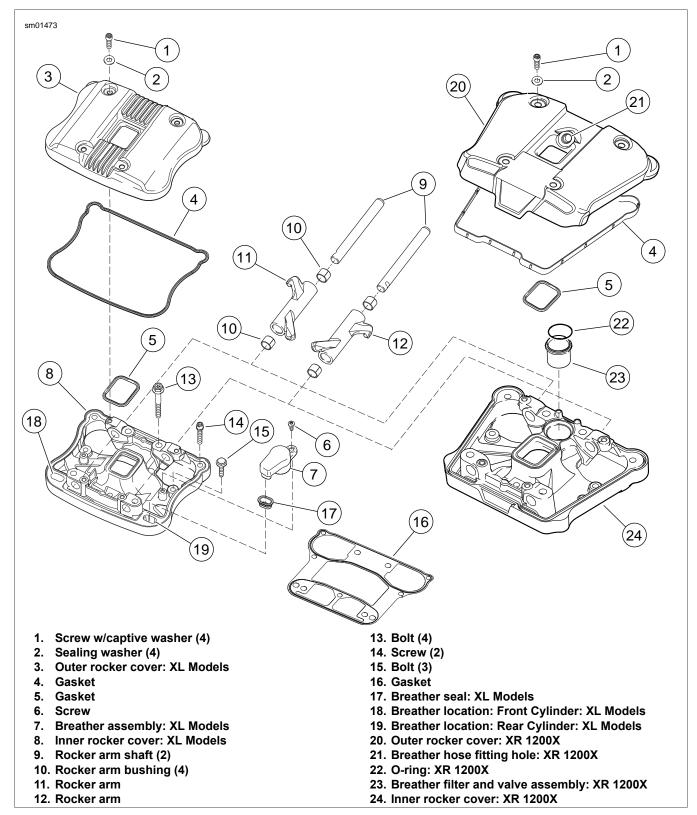


Figure 3-42. Rocker Cover Assembly

## **Removing Cylinder Head**

## NOTE

See <u>Figure 3-43</u> or <u>Figure 3-44</u>. Follow sequence of incremental removal as described below to prevent component damage.

- XR 1200X: Remove precision cooling lines. See 3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines.
- 2. See <u>Figure 3-43</u> and <u>Figure 3-44</u>. Loosen each head bolt 1/8-turn following the sequence shown.

- 3. Continue loosening in 1/8-turn increments until screws are loose. Remove head screws.
- 4. Remove cylinder head and head gasket. Discard head gasket.

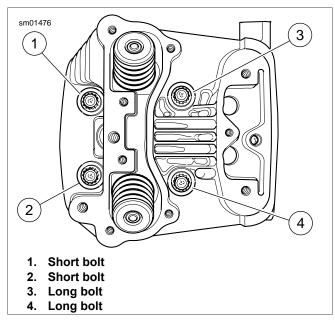


Figure 3-43. Front Cylinder Headbolt Torque Sequence

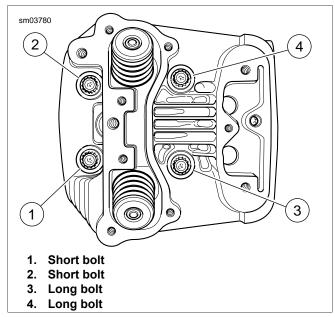


Figure 3-44. Rear Cylinder Headbolt Torque Sequence

## **Disassembling Pushrods and Covers**

- See <u>Figure 3-45</u>. Remove pushrod covers (2), O-rings (1, 3) and pushrods (4). Mark the location and orientation (top and bottom) of each pushrod. Discard O-rings.
- 2. Remove socket screws (5) and washers (6). Remove tappet cover (7) and gasket (8). Discard gasket.


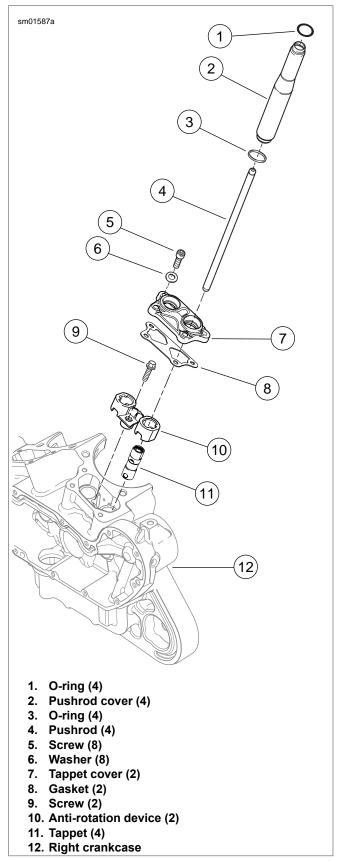


Figure 3-45. Middle Valve Train Components

#### CYLINDER AND PISTON

PART NUMBER	TOOL NAME
HD-34623-C	PISTON PIN LOCK RING REMOVER/INSTALLER
HD-42320-A	PISTON PIN REMOVER
HD-42322	PISTON SUPPORT PLATE

- 1. Clean engine before disassembly.
- See Figure 3-46. Rotate crankshaft until piston (6) of cylinder being removed is at bottom of its stroke.

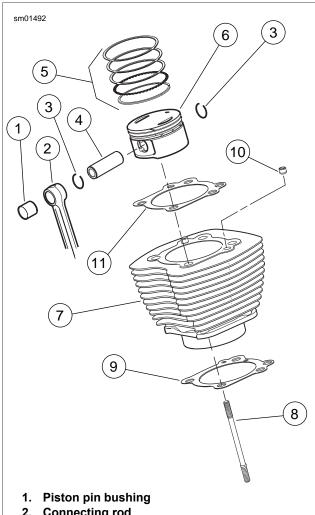

- 2. Connecting rod
- 3. Lock ring (2)
- 4. Piston pin
- 5. Piston ring set
- 6. Piston
- 7. Cylinder
- 8. Cylinder stud (4)
- 9. Cylinder base gasket
- 10. Dowel (2)
- 11. Head gasket

Figure 3-46. Cylinder and Piston

Carefully raise cylinder just enough to permit placing clean towel under piston to prevent any foreign matter from falling into crankcase.

#### NOTE

If cylinder does not come loose, tap lightly with rawhide or plastic hammer perpendicular to cylinder fins. Never try to pry cylinder up.

Carefully lift cylinder over piston and cylinder studs (8). Do not allow piston to fall against cylinder studs.

#### NOTE

To avoid damage to piston assembly and/or cylinder studs, do not allow piston to fall against studs.

5. Discard cylinder base gasket (9).

#### NOTE

With cylinder removed, be careful not to bend the cylinder studs. The slightest bend could cause a stress riser and could lead to stud failure.

Install a 6.0 in (150 mm) length of 1/2 in (12.7 mm) ID plastic or rubber hose over each cylinder stud. This will protect the studs and the pistons.

#### **NOTICE**

Handle piston with extreme care. The alloy used in these pistons is very hard. Any scratches, gouges or other marks in the pistons could score the cylinder during engine operation and cause engine damage. (00546b)

## **A**WARNING

Wear safety glasses or goggles when removing or installing piston pin retaining rings. Piston pin retaining rings are compressed in the ring groove and can fly out when removed from the groove, which could result in serious eye injury. (00293a)

- 7. See Figure 3-47. Remove piston pin lock ring as follows:
  - a. Insert **PISTON** PIN LOCK RING REMOVER/INSTALLER (Part No. HD-34623-C) into piston pin bore until claw on tool is positioned in slot of piston (directly under lock ring).
  - Squeeze handles of tool together and pull from bore. Hold a shop towel over bore during removal in the event that the lock ring should fly out. Remove lock ring from claw and discard.

#### **NOTES**

- It is not necessary to remove both piston pin lock rings during piston removal. Leave second lock ring in piston pin bore.
- Do not reuse piston pin lock rings. Removal may weaken lock rings and they may break or dislodge if reused, resulting in engine damage.

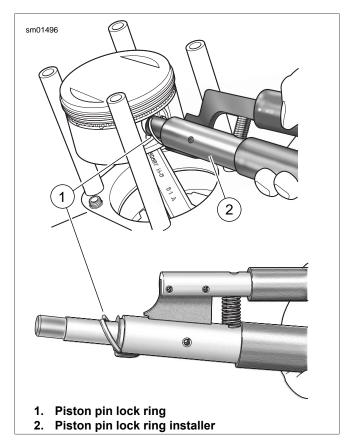


Figure 3-47. Removing Piston Pin Lock Ring

To avoid damage to piston or cylinder base studs, use PISTON SUPPORT PLATE (Part No. HD-42322) to secure piston in place while removing piston pin.

8. Remove piston pin. Since pin is a loose fit in piston, pin should easily slide out. If pin is difficult to remove, use

PISTON PIN REMOVER (Part No. HD-42320-A), as follows:

- See <u>Figure 3-48</u>. Remove acorn nut and spacer (1) from rod end of tool.
- b. Slide rod end through piston pin. Install spacer and acorn nut on end of rod.
- c. Position rubber coated tips (2) of tool on flat on each side of piston pin bore.
- Hold tool body (3) and turn handle (4) clockwise until piston pin is pulled free of bore.
- Remove piston from connecting rod. Be sure to hold connecting rod shank upright to prevent it from striking crankcase.
- Place a 3.0 in (76.2 mm) length of 1.0 in (25.4 mm) ID foam-type water pipe insulation around each connecting rod to prevent damage.
- 11. Mark each pin boss with either an "F" or an "R" to indicate front or rear cylinder, respectively.
- 12. Spread piston rings outward until they clear grooves in piston and lift off.

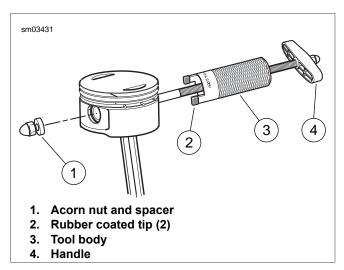


Figure 3-48. Removing Piston Pin with HD-42320-A Piston Pin Remover

## CYLINDER HEAD

## **DISASSEMBLY**

PART NUMBER	TOOL NAME
HD-34736-B	VALVE SPRING COMPRESSOR

- 1. See Figure 3-49. Clamp VALVE SPRING COMPRESSOR (Part No. HD-34736-B) in vise and compress valve spring.
- 2. See Figure 3-50. Remove valve collar retainers (7), upper valve spring collar (6) and valve spring (5). Mark valve collar retainers for reassembly in original positions.
- 3. Use a fine tooth file to remove any burrs on the valve stem at the retainer groove. Mark valve to match with cylinder head.
- Remove valve (1), and valve seal (2) and lower valve spring collar assembly (4) by hand. No special tools are required to remove valve seal and lower valve spring collar assembly.


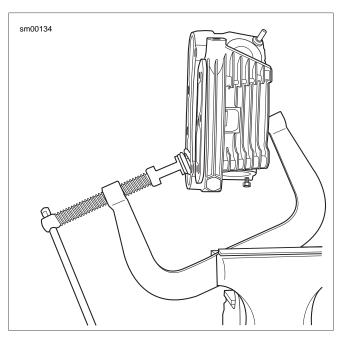


Figure 3-49. Valve Spring Compressor

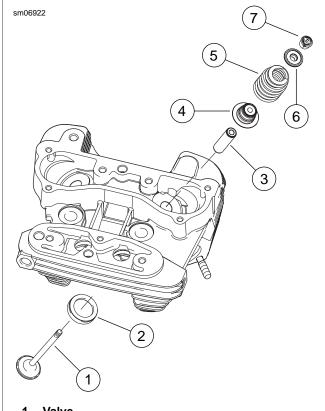

- Valve
- Valve seat
- Valve guide
- Valve seal and lower spring collar
- Spring
- 6. Upper valve spring collar
- 7. Collar retainer

Figure 3-50. Cylinder Head

## **CLEANING AND INSPECTION**

PART NUMBER	TOOL NAME
B-45525	VALVE GUIDE HONE
HD-34751	VALVE GUIDE CLEANING BRUSH
HD-96796-47	VALVE SPRING TESTER

## **Cylinder Heads**

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Bead blast or scrape carbon from head and valve ports. Be careful to avoid scratching or nicking cylinder head-tocylinder joint faces. Blow off loosened carbon or dirt with compressed air.

- 2. Soak cylinder head in an aluminum-compatible cleaner/solvent to loosen carbon deposits.
- Wash all parts in non-flammable solvent, followed by a thorough washing with hot, soapy water.

## **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Blow out oil passages in head. Be sure they are free of sludge and carbon particles.
- Remove loosened carbon from valve head and valve stem using a wire wheel. Never use a file or other hardened tool which could scratch or nick valve.
- 6. Polish valve stem with very fine emery cloth or steel wool.
- See <u>Figure 3-51</u>. Check head gasket surface on head for flatness. Machine or replace any head which exceeds SERVICE WEAR LIMIT of 0.006 in (0.152 mm).

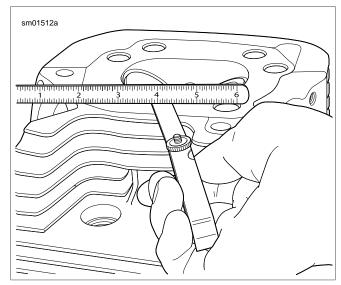


Figure 3-51. Gasket Surface: Flat Within 0.006 in (0.152 mm)

#### Rocker Arm Assemblies

 Check each rocker arm at pad end and pushrod end for uneven wear or pitting. Replace rocker arm if either condition exists.

## NOTE

Most of the wear in rocker arm shafts and bores results from the up and down movement of the pushrods and valves. Therefore, the following measurements should be taken topto-bottom on rocker arm shafts and bores.

See <u>Figure 3-52</u>. Measure and record rocker arm shaft diameter at the positions where rocker arm bushings ride and where shaft fits in inner rocker cover.

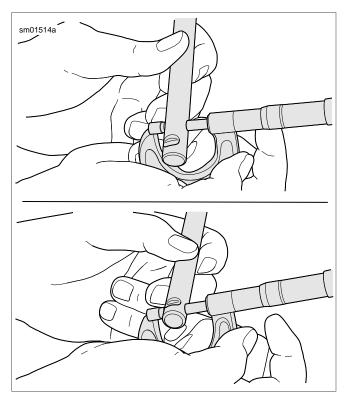


Figure 3-52. Measuring Rocker Arm Shaft Diameter at Bushing Position (top) and Cover Position (bottom)

- 3. Measure and record rocker arm shaft bore diameters.
  - See <u>Figure 3-53</u>. Measure rocker arm shaft bore in inner rocker cover.
  - See <u>Figure 3-54</u>. Measure rocker arm bushing inner diameter.
- Check clearances and measurements obtained in step 3
  against specifications in <u>3.2 SPECIFICATIONS</u>. Repair
  or replace parts exceeding Service Wear Limits. If rocker
  arm bushings require replacement, see <u>3.14 CYLINDER</u>
  HEAD, Replacing Rocker Arm Bushings.
- See <u>Figure 3-55</u>. Assemble rocker arms and rocker arm shafts into inner rocker cover.
- Check end play of rocker arm with feeler gauge. Replace rocker arm or inner rocker cover or both if end play exceeds 0.025 in (0.635 mm).

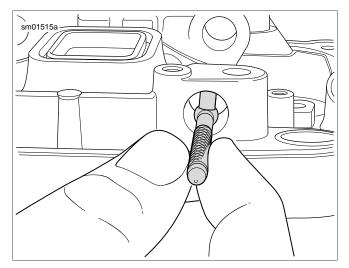


Figure 3-53. Measuring Rocker Arm Shaft Bore Diameter in Inner Rocker Cover

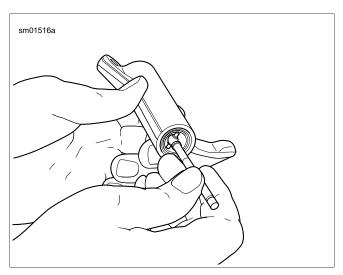


Figure 3-54. Measuring Rocker Arm Bushing Inner
Diameter

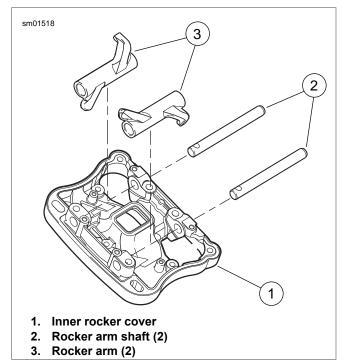


Figure 3-55. Assembling Inner Rocker Cover (typical)

#### **Valves**

- 1. Replace the valve if there is evidence of burning or cracking.
- 2. Inspect the end of the valve stem for pitting or uneven wear. Replace the valve if necessary.
- 3. Inspect for burrs around the valve stem retainer groove. Remove burrs with a fine tooth file if found.
- 4. Valve heads should have a seating surface width of 0.040-0.062 in (1.02-1.57 mm), and should be free of pit marks and burn spots. The color of carbon on exhaust valves should be black or dark brown. White or light buff carbon indicates excessive heat and burning.

## **Valve Seats**

#### NOTE

Valve seats are subject to wear, pitting, and burning. Resurface valve seats after finishing valves.

 Inspect valve seats for cracking, chipping or burning. Replace valve seats if necessary.

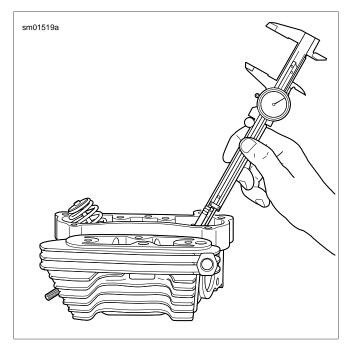


Figure 3-56. Measuring Valve Stem Protrusion

- 2. See <u>Figure 3-56</u>. Check valve seats for recession by measuring valve stem protrusion.
  - Wipe valve seats and valve faces clean. Insert valve into valve guide.
  - b. Measure valve stem protrusion from end of valve stem to machined surface of head upon which the lower valve collar sits, as shown. If valve stem protrudes more than 2.082 in (52.883 mm), replace valve seat or cylinder head.

If the valve seat is loose or is not fully seated in the head, seat movement will prevent the proper transfer of heat from the valve. The valve seat surface must be flush with (or below) the head surface. See <u>3.2 SPECIFICATIONS</u> for valve seat-to-cylinder head fit.

## **Valve Guides**

- Clean valve guides by lightly honing with VALVE GUIDE HONE (Part No. B-45525).
- 2. Scrub valve guides with VALVE GUIDE CLEANING BRUSH (Part No. HD-34751) and hot soapy water.
- 3. Measure valve stem outer diameter and valve guide inner diameter. Replace if the guides do not match specifications. See <u>3.2 SPECIFICATIONS</u>.

## Valve Springs

- 1. Inspect valve springs for damaged or discolored coils.
- See <u>Figure 3-57</u>. Measure free length of each spring. Refer to Table 3-28.
- Test compression force of spring using VALVE SPRING TESTER (Part No. HD-96796-47). Refer to <u>Table 3-28</u>.
- Replace as necessary.

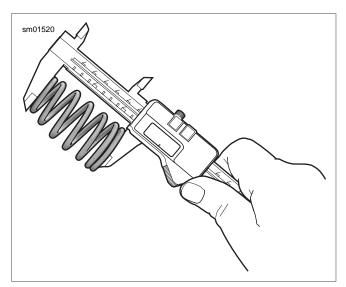


Figure 3-57. Checking Spring Free Length

**Table 3-28. Valve Spring Specifications** 

SPRING	U.S.	METRIC
Length (min)	2.325 in	59.1 mm
Compression (min)	297 lb @ 1.300 in	1321 N @ 33.02 mm
Compression (max)	327 lb @ 1.300 in	1455 N @ 33.02 mm

## Spark Plug Threads

Inspect spark plug threads for damage. If threads in cylinder head are damaged, a special plug type insert can be installed using a 12 mm spark plug repair kit.

#### **Pushrods**

Examine pushrods, particularly the ball ends. Replace any rods that are bent, worn, discolored or damaged.

## REPLACING ROCKER ARM BUSHINGS

PART NUMBER	TOOL NAME
HD-94804-57	ROCKER ARM BUSHING REAMER

- See <u>Figure 3-58</u>. To replace worn bushings, press or drive them from the rocker arm. If bushing is difficult to remove, turn a 9/16-18 tap into bushing. From opposite side of rocker arm, press out bushing and tap using a discarded rocker arm shaft.
- Press replacement bushing into rocker arm, flush with rocker arm end, and split portion of bushing towards top of rocker arm.
- Using remaining old bushing as a pilot, line ream new bushing with ROCKER ARM BUSHING REAMER (Part No. HD-94804-57).
- 4. Repeat for other end of rocker arm.

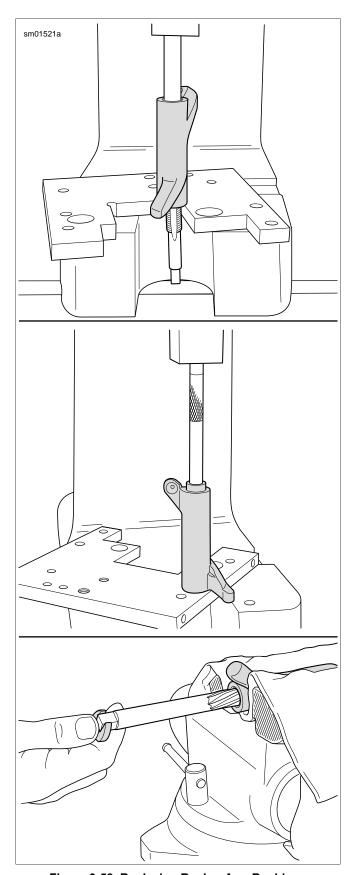


Figure 3-58. Replacing Rocker Arm Bushings

## **REPLACING VALVE GUIDES**

PART NUMBER	TOOL NAME
B-45523	VALVE GUIDE REAMER
B-45524	VALVE GUIDE REMOVER/INSTALLER
B-45525	VALVE GUIDE HONE
HD-34751	VALVE GUIDE CLEANING BRUSH
HD-39782-A	CYLINDER HEAD SUPPORT STAND
HD-39786	CYLINDER HEAD HOLDING FIXTURE
HD-39847	REAMER T-HANDLE
HD-39964	REAMER LUBRICANT

Replace valve guides before grinding valve seats. It is the valve stem bore in valve guide that determines valve seat grinding location. If valve stems and/or valve guides are worn beyond service wear limits, install new parts. Refer to <u>Table 3-29</u>.

#### Removal

#### **NOTES**

- Always use cylinder head support stand. Misalignment during valve guide replacement will cause damage to cylinder head valve guide bore.
- Lock ring is present on OEM intake and exhaust valve guides on XR 1200X only.
- See <u>Figure 3-59</u>. Prepare cylinder head for valve guide replacement.
  - a. XR 1200X: Remove and discard lock ring from valve quide groove.
  - Insert sleeve of intake (4 or 6) or exhaust (5 or 7) seat adapter into tube at top of CYLINDER HEAD SUP-PORT STAND (Part No. HD-39782-A) (3).
  - c. Position cylinder head so that valve seat is centered on seat adapter.

#### NOTE

Do not press out the valve guide from the bottom of the cylinder head. Excessive carbon buildup prevents a proper interference fit for valve guides.

 See Figure 3-60. At top of the cylinder head, insert VALVE GUIDE REMOVER/INSTALLER (Part No. B-45524) (1) into valve guide bore until tool shoulder contacts end of valve guide.

#### NOTE

See <u>Figure 3-59</u>. Installer sleeve (2) is not used for removal of valve guide.


Center VALVE GUIDE REMOVER/INSTALLER under ram
 (3) of press. Apply pressure until valve guide drops free of cylinder head. Discard valve guide.

Table 3-29. Valve Stem Clearance/Service Wear Limits

VALVE	CLEARANCE		SERVIC LIN	
	in	mm	in	mm
Intake	0.001-0.003	0.0254-0.0762	0.0035	0.0965
Exhaust	0.001-0.003	0.0254-0.0762	0.0035	0.0965

Table 3-30. Valve Guide Remover/Installer Components

PART NO	ITEM
B-45524	Valve guide remover/installer with installer sleeve
HD-39782-A	Cylinder head support stand
HD-39782-2	Intake seat adapter, 883
HD-39782-3	Exhaust seat adapter, 883
HD-39782-6	Intake seat adapter, 1200
HD-39782-7	Exhaust seat adapter, 1200

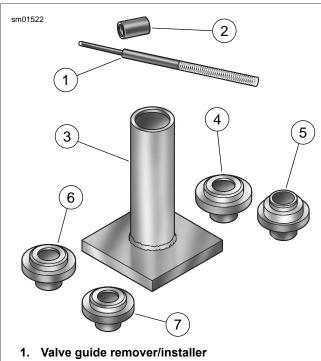

- 2. Installer sleeve
- 3. Cylinder head support stand
- 4. Intake seat adapter, 883
- 5. Exhaust seat adapter, 883
- 6. Intake seat adapter, 1200
- 7. Exhaust seat adapter, 1200

Figure 3-59. Valve Guide Replacement Tools

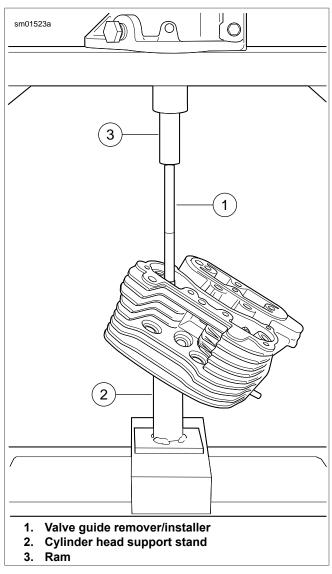


Figure 3-60. Removing Shoulderless Valve Guide

#### Installation

- 1. Check valve guide to valve guide bore clearance.
  - Measure outer diameter of a new standard valve guide.
  - b. Measure the cylinder head valve guide bore. The valve guide diameter should be 0.0020-0.0033 in (0.0508-0.0838 mm) larger than cylinder head valve guide bore.
  - If interference fit is within specification, a replacement valve guide will be used. If interference fit is not within specification, the cylinder head must be replaced.
- Measure cylinder head bore and outside diameter of replacement valve guide to verify correct interference fit.

#### NOTE

Always use cylinder head support stand. Misalignment during valve guide replacement will cause damage to cylinder head valve guide bore.

- 3. Prepare cylinder head for valve guide replacement.
  - a. See <u>Figure 3-59</u>. Insert sleeve of intake (4 or 6) or exhaust (5 or 7) seat adapter into tube at top of cylinder head support stand (3). Position cylinder head so that valve seat is centered on seat adapter.
  - Apply petroleum jelly to lightly lubricate external surfaces of valve guide. Spread lubricant so that thin film covers entire surface area.
  - c. At top of cylinder head, start valve guide into bore.
  - d. Place installer sleeve (2) over valve guide and then insert VALVE GUIDE REMOVER/INSTALLER (1) into installer sleeve.
  - e. See Figure 3-61. Center VALVE GUIDE REMOVER/INSTALLER (1) under ram of press and apply pressure only until valve guide is started in bore and then back off ram slightly to allow valve guide to center itself.

#### NOTE

Always back off ram to allow the valve guide to find center. Pressing valve guide into cylinder head in one stroke can bend remover/installer, break valve guide, distort cylinder head casting and/or damage cylinder head valve guide bore.

- f. Verify that cylinder head support stand (3) and VALVE GUIDE REMOVER/INSTALLER are square. Center VALVE GUIDE REMOVER/INSTALLER under ram and press valve guide further into bore, then back off ram again to allow valve guide to find center.
- g. Repeat previous step and then apply pressure to VALVE GUIDE REMOVER/INSTALLER until installer sleeve (2) contacts machined area of cylinder head surrounding valve guide.
- XR 1200X: Install new lock ring into valve guide groove. Make sure that lock ring is square and fully seated in the groove.

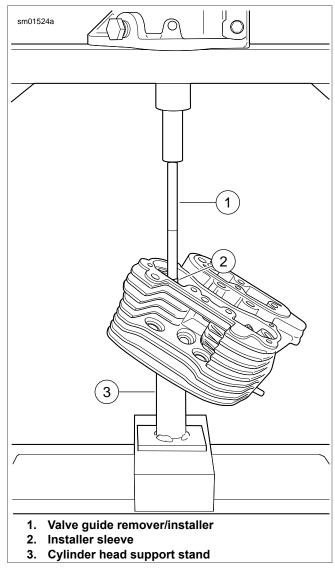


Figure 3-61. Installing Shoulderless Valve Guide

- 4. Secure cylinder head for service.
  - a. See <u>Figure 3-62</u>. Thread 12 mm end of CYLINDER HEAD HOLDING FIXTURE (Part No. HD-39786) into cylinder head spark plug hole.
  - b. Clamp tool in vise at a 45 degree angle or one that offers a comfortable working position.

#### NOTE

Valve guides must be reamed to within 0.0005-0.0001 in (0.013-0.0025 mm) of finished size.

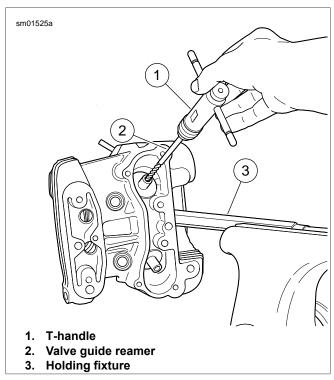


Figure 3-62. Reaming Valve Guide Bore

#### NOTES

- Avoid damage to valve guide bore. Never back reamer out of valve guide.
- For best results, do not push on reamer or apply pressure to the reamer handle. While excessive pressure results in a rough cut, bore will be tapered if pressure is not centrally applied.
- 5. Obtain the VALVE GUIDE REAMER (Part No. B-45523) (2) and REAMER T-HANDLE (Part No. HD-39847) (1).
  - a. Install T-handle on reamer.
  - b. Start bit of reamer into bore at top of cylinder head.
  - Placing thumb on drive socket of REAMER T-HANDLE, apply slight pressure rotating clockwise.
  - d. Continue rotating REAMER T-HANDLE until entire bit has passed through valve guide bore and shank of reamer rotates freely.
  - e. Remove T-handle from reamer. Carefully pulling on bit, draw shaft of reamer out combustion chamber side of valve guide.

#### NOTE

Abrasive particles can damage machined surfaces and plug oil passageways possibly resulting in engine failure.

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- 6. Direct compressed air into the valve guide bore to remove any metal shavings or debris.
- See <u>Figure 3-63</u>. Clean valve guide bore with the VALVE GUIDE CLEANING BRUSH (Part No. HD-34751) (1).
- See <u>Figure 3-64</u>. Obtain the VALVE GUIDE HONE (Part No. B-45525) and REAMER LUBRICANT (Part No. HD-39964).
  - a. Install hone in a high speed electric drill.
  - Apply REAMER LUBRICANT to finishing stones of hone and valve guide bore.
  - c. Start finishing stones of hone into bore.
  - d. Complete 10 to 12 complete strokes using entire length of finishing stone arrangement and drill. Work for a crosshatch pattern of approximately 60 degrees.

NOTE

The hone is not intended for the removal of material.

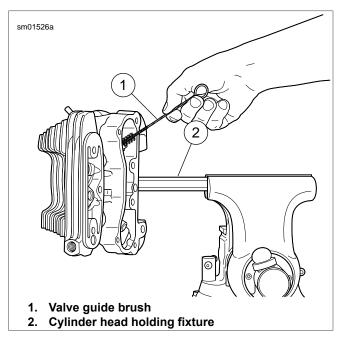


Figure 3-63. Scrubbing Valve Guide Bore

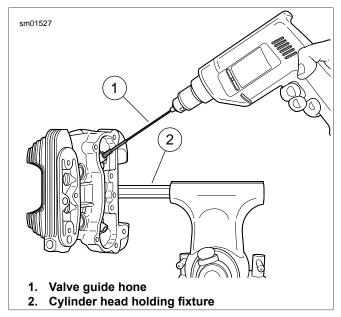


Figure 3-64. Honing Valve Guide Bore

Abrasive particles can damage machined surfaces and plug oil passageways possibly resulting in engine failure.

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Direct low pressure compressed air into the valve guide bore to remove any debris.
- See <u>Figure 3-63</u>. Clean bore with the VALVE GUIDE CLEANING BRUSH (1).

#### NOTE

Always verify valve stem to valve guide clearance after honing, since a worn reamer may cut the bore undersize.

- 11. Check valve stem to valve guide clearance.
  - Measure the inside diameter of the valve guide with an inside ball micrometer.
  - Measure the outside diameter of the valve stem with an outside micrometer.
  - c. If valve stem to valve guide clearance is not within specification, the valve stem may be excessively worn or the valve guide bore undercut. Refer to <u>Table 3-29</u>.

- 12. Clean cylinder head assembly again.
  - Using cleaning solvent, thoroughly clean cylinder head and valve guide bore.
  - b. Scrub valve guide bore with the VALVE GUIDE CLEANING BRUSH. For best results, use a thin engine oil and clean valve guide bore with the type of swabs or patches found in gun cleaning kits.
  - c. Continue to wipe bore until clean cloth shows no evidence of dirt or debris. Follow up with a thorough wash in hot soapy water.

## **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

13. Blow parts dry with low pressure compressed air.

## **REFACING VALVE SEATS**

PART NUMBER	TOOL NAME
B-35758-52A	CUTTER PILOT
HD-34751	VALVE GUIDE CLEANING BRUSH
HD-35758-C	NEWAY VALVE SEAT CUTTER SET
HD-39786	CYLINDER HEAD HOLDING FIXTURE

#### NOTES

- Check that valve stem to valve guide clearance is correct before refacing. Refer to <u>Table 3-29</u>. If new valve guides must be installed, see <u>3.14 CYLINDER HEAD, Replacing</u> <u>Valve Guides</u> and complete that task before refacing valve seats.
- This procedure is not based on the lapping of valves. The end result is an interference fit between the 45 degree valve face and the 46 degree valve seat.
- Obtain a new valve if grinding leaves the margin less than 0.0313 in (0.795 mm). A valve in this condition does not seat normally, burns easily and may crack or cause preignition.
- 1. Secure cylinder head for servicing.
  - a. Thread 12 mm end of CYLINDER HEAD HOLDING FIXTURE (Part No. HD-39786) into cylinder head spark plug hole.
  - b. Clamp fixture in vise. Tighten cylinder head onto the fixture to prevent any movement during operation.
  - c. Place cylinder head at a 45 degree angle or one that offers a comfortable working position.
- 2. To determine the correct location of the 46 degree valve seat in the head, measure the width of the valve. Subtract 0.080 in (2.032 mm) from that number.
- Set your dial caliper to the lesser measurement and lock it down for quick reference. This is the location of your valve seat.

 Use a permanent magic marker to highlight the valve seat area to be cut. Highlight all three angles. Allow marker to dry.

#### **NOTES**

- Clean the cutter blades and cutter pilot. The correct cleaning brush is supplied with the Neway tool set.
- Clean the inside of the valve guide with the VALVE GUIDE BRUSH.

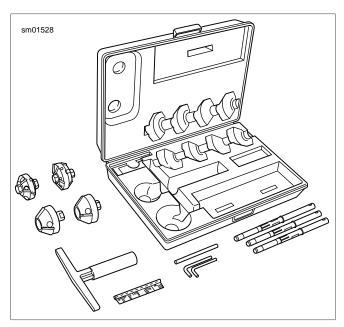


Figure 3-65. Neway Valve Seat Cutter Set (Part no. HD-35758-C)

- See <u>Figure 3-65</u>. Obtain the NEWAY VALVE SEAT CUTTER SET (Part No. HD-35758-C). Select the correct CUTTER PILOT (Part No. B-35758-52A). Securely seat the pilot by pushing down and turning using the installation tool supplied in the tool set.
- Choose the proper 46 degree cutter (intake or exhaust) and gently slide the cutter onto the pilot. Do not drop the cutter onto the valve seat.

#### NOTE

Do not remove any more metal than is necessary.

7. Apply constant pressure. Cut the seat to a uniform finish and to remove pitting.

#### **NOTES**

- If the width of the clean-up angle is greater on one side of the valve seat than the other, replace the valve guide.
- After making the 46 degree cut, a groove cut completely around the valve seat indicates worn cutter blades. This condition can be corrected by staggering the blades. Loosen all blades. Move each blade slightly in opposite directions on the cutter. The tool needed to loosen the blades is supplied in the tool set. A permanent magic marker mark every 90 degree will help in determining where new angles are.

- 8. Lock a dial caliper to the predetermined setting. Measure the 46 degree cut at the outermost edge at the widest point of the circle to determine the next cut.
  - a. If the 46 degree cut is too high (towards the combustion chamber), use the 31 degree cutter to lower the valve seat closer to the port.
  - b. If the 46 degree cut is too low, use the 60 degree cutter to raise the valve seat or move it away from the port.

#### **NOTES**

- Because you are using the top measurement of the valve seat as a reference point, it will usually be necessary to use the 31 degree cutter following the initial 46 degree cut
- Always highlight the valve seat with the permanent magic marker in order to verify the location of the 46 degree valve seat.
- If the location of the valve seat is not correct, repeat previous two steps.
- When you accomplish a complete clean-up of the 46 degree angle and the width is at least 0.062 in (1.575 mm), proceed to the next step.
- 11. Select the proper 60 degree cutter and gently slide the cutter down the cutter pilot to the valve seat.
- 12. Remove just enough material to provide an even valve seat width of 0.040-0.062 in (1.016-1.575 mm).
- 13. Remove cutter and cutter pilot.
- 14. Repeat the process on any valve seat that needs service.
- 15. Insert valve in the valve guide and bottom on the valve seat. Position the cylinder head port upwards with slight thumb pressure against the valve. Fill the port with solvent to seal the valve to the seat.

#### NOTE

Hold pressure against the valve for a minimum of 10 seconds. If any leakage occurs, examine the valve seat for irregularities or defects and if necessary repeat the above cutting process.

- 16. Clean valves, cylinder head and valve seats in solvent. Follow up with a thorough wash in hot soapy water.
- 17. Scrub valve guide bores with VALVE GUIDE CLEANING BRUSH (Part No. HD-34751) and hot, soapy water.

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

18. Blow parts dry with low pressure compressed air.

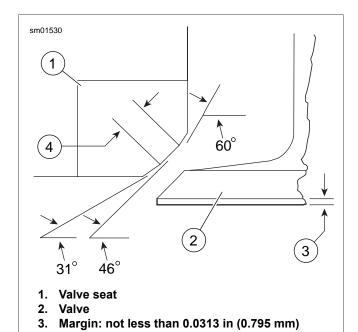


Figure 3-66. Intake and Exhaust Valve and Seat Dimensions

Valve seat width: 0.040-0.062 in (1.016-1.575 mm)

## **Replacing Valve Seats**

Replacing a valve seat is a complex operation requiring special equipment. If the valve seat is loose or not fully seated, transfer of heat from the valve will be impaired. The valve seat surface must be flush with or below the head surface. See <u>3.2 SPE-CIFICATIONS</u>.

#### **ASSEMBLY**

PART NUMBER	TOOL NAME
HD-34736-B	VALVE SPRING COMPRESSOR

- Apply a liberal amount of SCREAMIN' EAGLE ASSEMBLY LUBE to the valve stem.
- 2. See <u>Figure 3-71</u>. Insert valve (1) into valve guide (3) and bottom valve on valve seat (2).
- 3. See <u>Figure 3-67</u>. Place a protective sleeve over the valve stem keeper groove. Coat the protective sleeve with SCREAMIN' EAGLE ASSEMBLY LUBE.

#### **NOTES**

- Always use a protective sleeve on the valve stem keeper groove when installing valve stem seal. Installation without the protective sleeve will damage the seal. This will cause leaking around the valve stem, excessive oil consumption and valve sticking.
- See <u>Figure 3-68</u>. The valve seal is incorporated into the lower valve collar and is installed by hand. NO SPECIAL TOOLS ARE REQUIRED.
- The valve seal is completely installed when the lower valve collar contacts the machined surface of the head.
- See <u>Figure 3-69</u>. Place a **new** seal and lower valve collar assembly over valve stem and onto valve guide.

#### **NOTES**

- Do not remove valve after seal is installed. Otherwise, sharp edges on keeper groove will damage seal.
- A single valve spring is used for each valve.

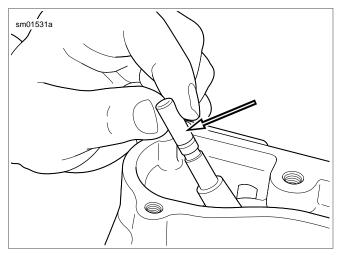


Figure 3-67. Valve Guide Seal Protector Sleeve

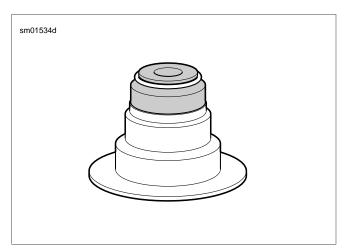


Figure 3-68. Valve Seal and Lower Valve Collar Assembly (seal and lower collar replaced as assembly only)

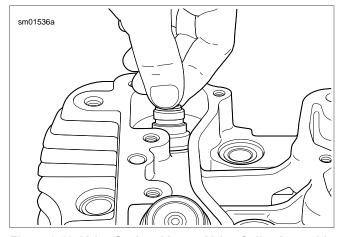


Figure 3-69. Valve Seal and Lower Valve Collar Assembly Installation

- 5. See <u>Figure 3-71</u>. Install valve spring (5) and upper collar (6).
- 6. See <u>Figure 3-70</u>. Compress valve spring with VALVE SPRING COMPRESSOR (Part No. HD-34736-B).
- 7. See <u>Figure 3-71</u>. Insert valve collar retainers (7) into upper collar, making sure they engage groove in valve stem. The retainer gaps should be equal.
- 8. Release and remove VALVE SPRING COMPRESSOR.
- 9. Repeat previous steps for remaining valve(s).

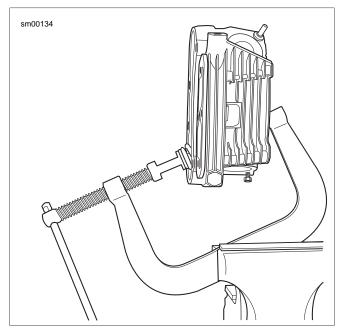


Figure 3-70. Valve Spring Compressor

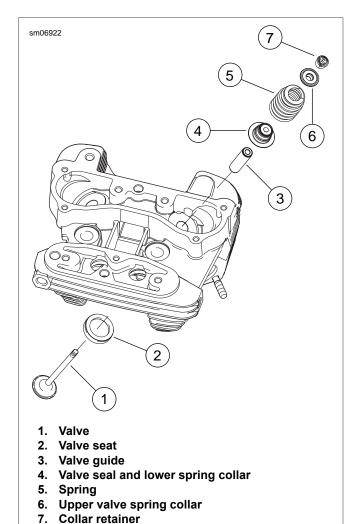


Figure 3-71. Cylinder Head

## CYLINDER AND PISTON

## **CLEANING, INSPECTION AND REPAIR**

PART NUMBER	TOOL NAME
HD-33446-86	TORQUE PLATE BOLTS
HD-33446-B	CYLINDER TORQUE PLATES

 Soak cylinder and piston in an aluminum-compatible cleaner/solvent until deposits are soft. Clean with a brush. Blow off loosened carbon and dirt particles. Wash in solvent.

## **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Clean oil passage in cylinder with low pressure compressed air.
- 3. Clean piston ring grooves with a piece of compression ring ground to a chisel shape.
- 4. Inspect piston pin to see that it is not pitted or scored.
- 5. Check piston pin bushing to see that it is not loose in connecting rod, grooved, pitted or scored.
  - A piston pin properly fitted to upper connecting rod bushing has a 0.00125-0.00175 in (0.0317-0.0444 mm) clearance in bushing.
  - b. If piston pin-to-bushing clearance exceeds 0.002 in (0.0508 mm), replace worn parts. See <u>3.15 CYL-INDER AND PISTON</u>, Connecting Rod Bushings.
- 6. Clean piston pin lock ring grooves.
- Inspect piston and cylinder for cracks, burnt spots, grooves and gouges.

#### NOTE

Check connecting rod for up and down play in lower bearings. When up and down play is detected, replace flywheel and connecting rod assembly.

## **Checking Gasket Surface**

#### NOTE

Replace the cylinder and piston if either cylinder gasket surface does not meet specification.

- See <u>Figure 3-72</u>. Check that cylinder top (head) gasket surface is flat within 0.006 in (0.15 mm).
  - a. Lay a straight edge across the surface.
  - Insert a feeler gauge between the straightedge and the gasket surface.
- 2. Check that the cylinder base gasket surface is flat within 0.008 in (0.20 mm).
  - a. Lay a straightedge across the surface.
  - b. Insert a feeler gauge between the straightedge and the gasket surface.

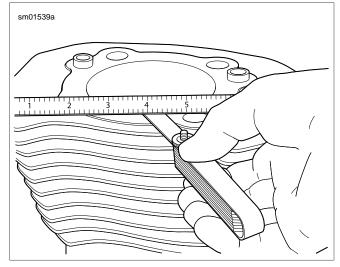


Figure 3-72. Checking Gasket Surfaces

## **Measuring Cylinder Bore**

- See <u>Figure 3-73</u>. Remove any burrs from the cylinder gasket surfaces.
- Install a head and base gasket and CYLINDER TORQUE PLATES (Part No. HD-33446-B) and TORQUE PLATE BOLTS (Part No. HD-33446-86). Tighten in the cylinder head torque sequence. See 3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head.

#### NOTE

Torque plates simulate operating conditions. Without torque plates, measurements vary as much as 0.001 in (0.025 mm).

- Take cylinder bore measurement in ring path, starting about 1/2 in (13 mm) from top of cylinder, measuring from front to rear, and then side to side. Record readings.
- Measure at top, center and bottom of the ring path. Record readings. Determine if the cylinder is out-of-round, tapered or bulged. Refer to <u>Table 3-31</u>.

3-68 2013 Sportster Service: Engine

Table 3-31. Cylinder Bore Service Wear Limits

BORE SIZE	XL 883		XL 1200*	
	in	mm	in	mm
Standard bore	3.0035	76.289	3.5008	88.920
0.005 in (0.13 mm) Oversize	3.0078	76.398	3.5050	89.027
0.010 in (0.25 mm) OS bore	3.0128	76.525	3.5100	89.154
*XR 1200X: Oversized pistons are not available. Replace piston and/or cylinder if exceeds wear limits.				

If piston clearance exceeds service limit, cylinders should be bored and honed to next standard oversize. Fit the cylinder with the oversized piston and rings. Do not fit piston tighter than 0.0007 in (0.018 mm). See 3.2 SPECIFICATIONS.

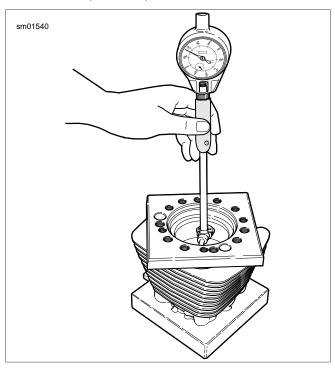


Figure 3-73. Measuring Cylinder Bore

## **Measuring Piston to Cylinder Fit**

#### **NOTES**

- This measurement is heat sensitive. Both piston and cylinder must be at room temperature. Holding the piston in your hand for too long can cause measurements to vary by as much as 0.002 in (0.051 mm).
- See <u>Figure 3-74</u>. The measurement is taken on bare aluminum to avoid measuring errors. An oval-shaped opening in the coating is present on each side of the piston for placement of the micrometer.
- See <u>Figure 3-75</u>. The oval openings are too small for a standard flat anvil micrometer. Use a 3-4 inch blade or ball anvil style micrometer, or a 4-5 inch micrometer with spherical ball anvil adapters.
- Measure the piston skirt at the oval openings. Transfer that measurement to a dial bore gauge.

#### NOTE

Install the torque plates on the cylinder.

- Mark the top, middle and bottom of the piston ring travel zone with a marker. Measure at markings in cylinder parallel and perpendicular to crankshaft.
- Replace piston and/or cylinder if running clearance exceeds 0.003 in (0.076 mm).

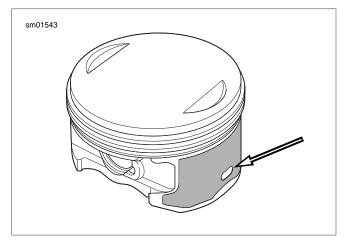


Figure 3-74. Measurement Area

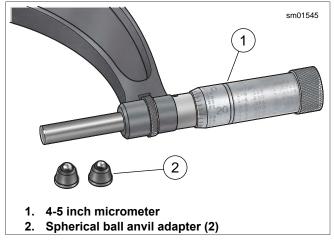


Figure 3-75. Micrometer with Anvil Adapters

## **Boring and Honing Cylinder**

 The cylinder must be bored with gaskets and torque plates attached. Bore the cylinder to 0.003 in (0.08 mm) under the desired finished size.

With the torque plates installed, hone the cylinder from the crankcase end of the cylinder.

2. Use a 280 grit rigid hone followed by a 240 grit flexible ball hone to hone the cylinder. Work for a 60 degree crosshatch pattern.

Final cylinder bore sizes are measured after honing. Refer to Table 3-32.

#### **NOTES**

- When cylinder requires boring over 0.010 in (0.25 mm), replace the cylinder.
- Replace the cylinder if it is scuffed or grooved.
- Use the original piston if cylinder bore was not changed, Replace the rings. Hone the cylinder walls with a No. 240 grit flexible ball hone.

#### **NOTICE**

Failure to remove all abrasive particles may result in premature cylinder, piston and ring wear and engine failure. (00537c)

3. Thoroughly wash the cylinder bore with liquid dishwashing soap and warm water to remove all abrasive particles and residual grit. Continue cleaning until a clean cloth shows no remaining dirt or debris.

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- 4. Hot rinse the cylinder. Dry with moisture free low pressure compressed air.
- 5. Immediately apply a thin film of clean engine oil to a clean white paper towel and thoroughly wipe the inside of the cylinder.

#### NOTE

After wiping the cylinder with a clean, oiled paper towel, the towel will be dark with contamination. Repeat this process using a **new** lightly oiled paper towel each time until the towel remains white. The cylinder is now clean.

With the cylinder at room temperature, check the piston clearance in the cylinder in which the piston will run.

Table 3-32. Cylinder Final Bore Sizes

BORE SIZE	XL 883		XL 1200**	
	in	mm	in	mm
Standard bore*	3.0005	76.213	3.4978	88.844
0.005 in (0.13 mm) OS bore	3.0048	76.323	3.502	88.95
0.010 in (0.25 mm) OS bore	3.0098	76.449	3.507	89.08

<sup>\*</sup>All bore sizes + 0.0002 in (0.00508 mm)

## **Fitting Piston Rings**

See <u>Figure 3-76</u>. Piston rings are of two types: compression and oil control. The two compression rings are positioned in the two upper piston ring grooves. The dot on the second compression ring must face upward. Ring sets are available to fit standard and oversize pistons.

Piston ring sets must be properly fitted to piston and cylinder:

See <u>Figure 3-77</u>. Place piston in cylinder about 1/2 in (13 mm) from top. Set ring to be checked inside cylinder, squarely against piston. Remove piston and check ring end gap with thickness gauge. See <u>3.2 SPECIFICATIONS</u>.

#### NOTES

- Always deglaze or hone the cylinder before installing new rings.
- Always use new piston rings. Piston rings take a set and must not be reused.
- Replace a ring if the end gap exceeds specification. See 3.2 SPECIFICATIONS.
- If end gap is under specification, file the ring gap. Insufficient ring gap can cause ring breakage, cylinder scuffing or piston seizure.
- Ring end gap specifications are applicable to rings for oversized pistons.

<sup>\*\*</sup>XR 1200X: Oversized pistons are not available. Replace piston and/or cylinder if exceeds wear limits.

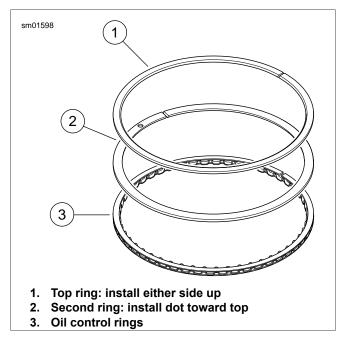


Figure 3-76. Piston Rings

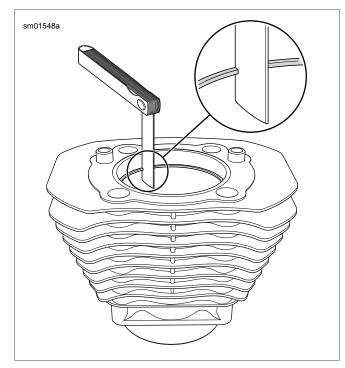


Figure 3-77. Measuring Ring End Gap

## WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

2. Blow debris from piston oil drain holes and ring grooves with low pressure compressed air. Apply clean engine oil to piston ring grooves.

3. See <u>Figure 3-78</u>. Install oil control ring expander spring. Make sure ends of spring point upward. Spiral bottom oil control ring into space in ring groove below expander spring. Position oil control ring gap 90 degrees from gap in expander spring. Spiral top oil control ring into space in ring groove above expander spring. Position oil control ring gap 180 degrees from gap in bottom oil control ring.

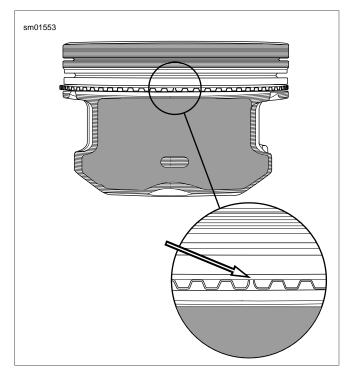


Figure 3-78. Installing Oil Control Ring Expander Spring (typical)

4. See <u>Figure 3-79</u>. Use a piston ring expander tool to slip compression rings over piston into their respective grooves. Install second compression ring first, then top compression ring. Be extremely careful not to over expand or twist rings, or damage piston surface when installing rings.

NOTE
Install second compression ring with dot towards top of piston.

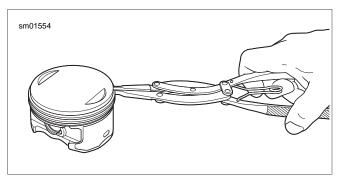


Figure 3-79. Installing Piston Rings

 See <u>Figure 3-80</u>. Position rings so end gaps of adjacent rings are a minimum of 90 degrees apart. Ring gaps are not to be within 10 degrees of the thrust face centerline. See <u>Figure 3-81</u>. Check for proper side clearance with thickness gauge, as shown. See <u>3.2 SPECIFICATIONS</u>.

#### NOTE

If the ring grooves are clean and the side play is still not correct, replace the rings, the piston or both.

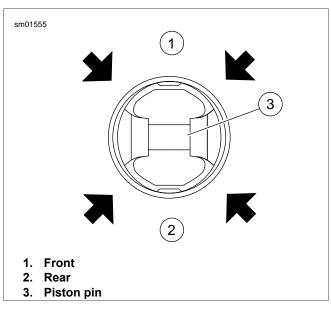


Figure 3-80. Position Ring End Gaps at Arrows

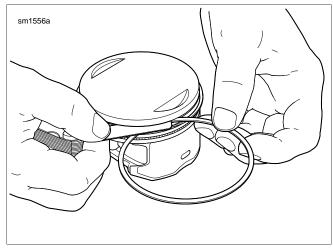


Figure 3-81. Measuring Ring Clearance in Groove

#### **CONNECTING ROD BUSHINGS**

PART NUMBER	TOOL NAME
HD-35102	WRIST PIN BUSHING HONE
HD-39964	REAMER LUBRICANT
HD-94800-26A	CONNECTING ROD BUSHING REAMER
HD-95952-33C	CONNECTING ROD CLAMPING TOOL
HD-95970-32D	CONNECTING ROD BUSHING REMOVER/INSTALLER

## Removing Upper Connecting Rod Bushings

#### **NOTES**

- Replace the upper connecting rod bushing if the piston pin to rod bushing clearance exceeds 0.002 in (0.051 mm).
- Place clean shop towels in and around the crankcase bore. This prevents prevents chips and shavings from falling into the crankcase.
- If CONNECTING ROD CLAMPING TOOL (Part No. HD-95952-33C) holes are too small, enlarge the holes in the tool
- See <u>Figure 3-82</u>. Obtain the CONNECTING ROD CLAMPING TOOL and install as follows:
  - a. Slide clamp (2) over connecting rod so that slots engage cylinder head studs. Exercise caution to avoid scratching or bending studs.
  - b. With the knurled side up, screw threaded cylinders (1) onto studs to secure position of clamp.
  - c. Alternately turn each clamp thumbscrew (3) a few turns to gradually fix position of connecting rod. Turning only one thumbscrew will move rod off-center, while tightening second thumbscrew can cause rod to flex or bend.
- 2. Install rubber hoses over remaining two cylinder studs.
- See <u>Figure 3-83</u>. Obtain the CONNECTING ROD BUSHING REMOVER/INSTALLER (Part No. HD-95970-32D).
  - a. Sparingly apply graphite lubricant to threads of bolt (6) to prolong service life and provide smooth operation.
  - Slide receiver cup (5) onto bolt with the closed side facing bolt head.
  - c. Insert bolt through upper connecting rod bushing.

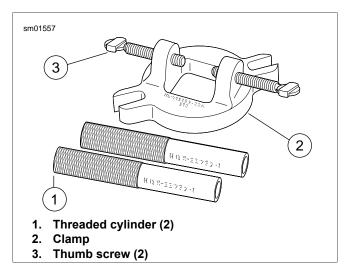


Figure 3-82. Connecting Rod Clamping Tool (Part No. HD-95952-33C)

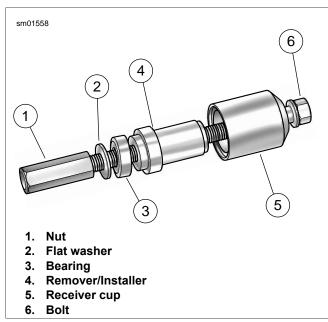


Figure 3-83. Connecting Rod Bushing Remover/Installer (Part No. HD-95970-32D)

- 4. Remove bushing as follows:
  - See <u>Figure 3-84</u>. Slide remover side of remover/installer onto bolt. The driver is stamped to verify proper orientation.
  - b. See Figure 3-83. Slide bearing (3) and flat washer (2) onto bolt (6) until they contact remover/installer (4).
  - c. Thread nut (1) onto bolt until assembly is snug.
  - d. Using two box end wrenches, tighten nut on bolt until bushing is free.
  - Remove nut from bolt. Remove flat washer, bearing and remover/installer. Remove bolt from bushing bore.
  - f. Remove bushing from receiver cup and discard.

# NOTE Leave CONNECTING ROD CLAMPING TOOL installed during bushing installation procedure which follows.

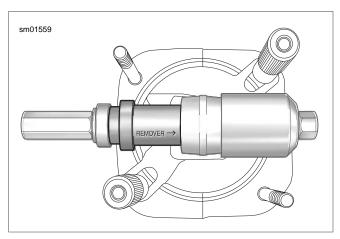


Figure 3-84. Remover Stackup. Use Remover Side Of Remover/Installer

## **Installing Upper Connecting Rod Bushings**

- See <u>Figure 3-83</u>. Obtain the CONNECTING ROD BUSHING REMOVER/INSTALLER (Part No. HD-95970-32D).
  - a. Sparingly apply graphite lubricant to threads of bolt
     (6) to prolong service life and provide smooth operation.
  - Slide receiver cup (5) onto bolt with the closed side facing bolt head.
  - c. Insert bolt through upper connecting rod bushing bore.
  - d. See <u>Figure 3-85</u>. Slide **new** bushing onto bolt. Start bushing into bore. Be sure that bushing is square in bore and not cocked.
  - Slide installer side of remover/installer onto bolt until shoulder contacts bushing. The remover/installer is stamped to verify proper orientation.
  - Slide bearing and flat washer onto bolt until they contact remover/installer.
  - g. Thread nut onto bolt until assembly is snug.
  - See <u>Figure 3-86</u>. Using two box end wrenches, tighten nut on bolt until collar on remover/installer bottoms against connecting rod.
- Remove nut from bolt and remove flat washer, bearing and remover/installer. Remove bolt from bushing bore, but exercise caution to avoid scratching or gouging bushing.

#### NOTE

Leave CONNECTING ROD CLAMPING TOOL installed during bushing reaming procedure which follows.

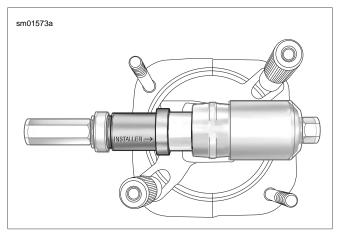


Figure 3-85. Installer Stackup

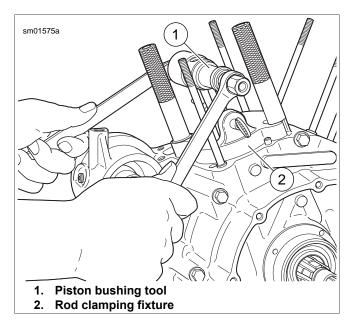


Figure 3-86. Installing New Piston Pin Bushing

## **Reaming Upper Connecting Rod Bushings**

#### NOTE

Sizing bushing with less than 0.00125 in (0.0317 mm) clearance can result in a bushing loosening and/or seized pin in rod.

- Clean up and size bushing to 0.0010-0.0005 in (0.025-0.013 mm) undersize using the CONNECTING ROD BUSHING REAMER (Part No. HD-94800-26A).
  - a. Carefully insert bit of reamer into upper connecting rod bushing. Do not apply lubricant to reamer or bushing. Ream the bushing dry or cut will not be accurate.
  - b. Install a 11/16 12-pt socket and T-handle on reamer lug.
  - Placing thumb on drive socket, apply slight pressure on reamer while rotating handle/drive socket clockwise.

#### NOTE

For best results, do not push on reamer or apply pressure to the reamer handle. While excessive pressure results in

a rough cut, bushing bore will be tapered if pressure is not centrally applied.

d. Continue rotating handle/drive socket until entire bit has passed through bushing and shank of reamer rotates freely in the bore.

#### NOTE

Never back reamer out of connecting rod or bushing will be damaged.

Remove T-handle and socket, and carefully pulling on bit, draw shaft of reamer out of connecting rod bushing.

#### NOTE

Abrasive particles can damage machined surfaces and plug oil passageways possibly resulting in engine failure.

 Using contact cleaner or cleaning solvent, thoroughly wipe upper connecting rod and bushing of any metal shavings or debris.

#### NOTE

Leave CONNECTING ROD CLAMPING TOOL installed during bushing honing procedure which follows.

## **Honing Upper Connecting Rod Bushings**

- Obtain the WRIST PIN BUSHING HONE (Part No. HD-35102) and REAMER LUBRICANT (Part No. HD-39964) to hone bushing to final size. Use a liberal amount of honing oil to prevent damage to hone or bushing. Use care to prevent foreign material from falling into the crankcase.
  - a. Install hone in a high speed electric drill.
  - b. Apply reamer lubricant to finishing stones of hone and inside of upper connecting rod bushing.
  - c. Start finishing stones of hone into bushing.
  - d. Activating the drill, move the entire length of the finishing stone arrangement forward and backward through the bushing bore for 10 to 12 complete strokes. Work for a crosshatch pattern of approximately 60 degrees.

#### NOTE

Abrasive particles can damage machined surfaces and plug oil passageways possibly resulting in engine failure.

- Using contact cleaner or cleaning solvent, thoroughly wipe upper connecting rod and bushing of any metal shavings or debris. Continue wiping until a clean cloth shows no evidence of dirt or debris.
- 3. Lightly oil a good piston pin and insert it into the upper connecting rod bushing bore to feel for the proper interference fit. The pin should slide in and out of the bushing without binding, but also without pivoting or rocking.
- 4. Remove the connecting rod clamping tool.
- Remove shop towels exercising caution that shavings, chips and other debris do not fall into crankcase.

## Repair

If connecting rod is bent, do not attempt to straighten. Flywheel and connecting rod assembly must be replaced. Straightening

## <u>HOME</u>

connecting rods by bending will damage the bearing on the

crank pin and the piston pin bushing.

2013 Sportster Service: Engine 3-75

#### **GENERAL**

This section describes assembling the top end of the engine, from the cylinder deck up. If the engine crankcase has been disassembled for repair, it must be assembled before assembling the top end of the engine. See <u>3.22 BOTTOM END OVERHAUL: ASSEMBLY</u>.

#### PISTON AND CYLINDER

PART NUMBER	TOOL NAME
HD-34623-C	PISTON PIN LOCK RING REMOVER/INSTALLER
HD-42322	PISTON SUPPORT PLATE
HD-96333-51E	PISTON RING COMPRESSOR

 Slide approximately 6.0 in (152 mm) of plastic tubing, rubber hose or conduit over each cylinder stud to protect cylinder studs and piston from damage.

#### NOTE

See <u>Figure 3-87</u>. Install XL pistons with the arrow on the top and the side of the piston point toward the front.

- 2. Install piston assembly over connecting rod.
- 3. Install piston pin.

#### NOTE

You may wish to place clean shop towels over cylinder and lifter bores prior to the next step, to prevent the piston pin lock ring from falling into the crankcase.

 See <u>Figure 3-88</u>. Install **new** piston pin lock rings with the PISTON PIN LOCK RING REMOVER/INSTALLER (Part No. HD-34623-C). Make sure the ring groove is clean and that the ring is fully seated in the groove with the gap away from the slot at the bottom.

#### NOTE

Avoid damage to cylinder and piston. Always use **new** lock ring. Clean lock ring groove and seat lock ring firmly in groove. If it does not, discard the lock ring. Do not install a used lock ring or a **new** one that has been installed and removed. A loosely installed ring will come out of the piston groove and damage cylinder and piston beyond repair.

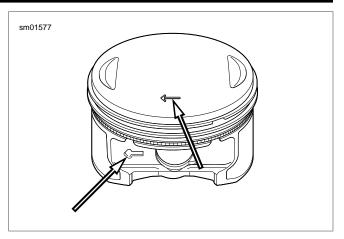


Figure 3-87. Arrows on Piston Must Point Toward Front of Engine

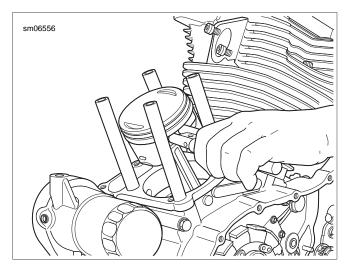


Figure 3-88. Installing Piston Lock Rings

- 5. See <u>Figure 3-89</u>. Make sure the piston ring end gaps are properly positioned as shown.
- 6. Lubricate cylinder wall, piston, pin and rod bushing with engine oil.
- Remove cylinder stud sleeves. Install a **new** cylinder base gasket. Make sure the piston does not bump the studs or crankcase.

3-76 2013 Sportster Service: Engine

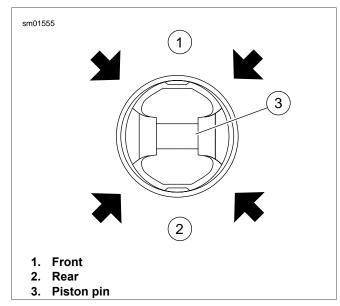


Figure 3-89. Position Ring End Gaps at Arrows

- 8. See <u>Figure 3-90</u>. Install PISTON SUPPORT PLATE (Part No. HD-42322) as shown. Rotate crankshaft to rest piston on support plate.
- 9. See Figure 3-91. Compress the piston rings using PISTON RING COMPRESSOR (Part No. HD-96333-51E).
- Gently slide cylinder over cylinder base studs and piston crown, resting it on the top of the ring compressor band as shown.
- Push the cylinder down with a firm, quick motion until the bottom of the cylinder bore slides below the piston ring area
- Remove the piston ring compressor and piston support plate, and push the cylinder all the way down onto the crankcase cylinder deck.
- 13. Repeat for other piston and cylinder.

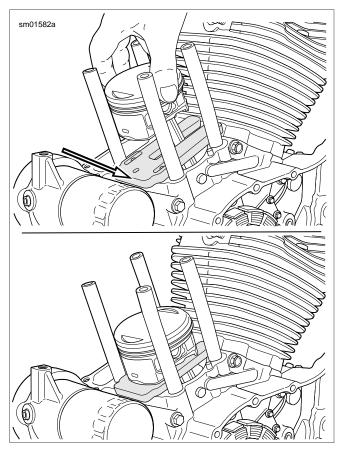


Figure 3-90. Piston Support Plate

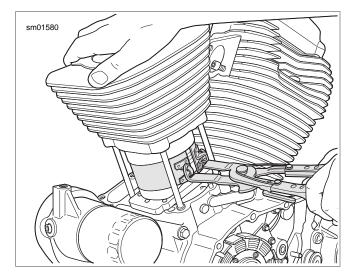


Figure 3-91. Installing Cylinder Over Piston

# TAPPET COVERS, PUSHROD COVERS AND PUSHRODS

FASTENER	TORQUE VALUE	
Tappet cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm

See <u>Figure 3-93</u>. If anti-rotation devices (10) and tappets (11) have been removed, install the tappets. See <u>3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets</u>.

- 2. See Figure 3-92. Orient tabs of the front (1) and rear (2) tappet covers to the front and rear cylinders.
- 3. See Figure 3-93. Install tappet covers (7) with **new** gaskets (8). Secure with screws (5) and washers (6). Tighten to 90-120 **in-lbs** (10.2-13.6 Nm).
- 4. Install **new** O-rings (3) in recesses in tappet covers. Press pushrod covers (2) into O-rings.
- Identify pushrod location by its color and length. Refer to <u>Table 3-33</u>.
- 6. Slide intake and exhaust pushrods (4) down inside pushrod covers until they rest on seat at top of tappet (11).

Table 3-33. Pushrod Specifications

POSITION	COLOR	LENGTH	
	BAND	in	cm
Intake	Orange	10.746	27.295
Exhaust	Purple	10.800	27.432

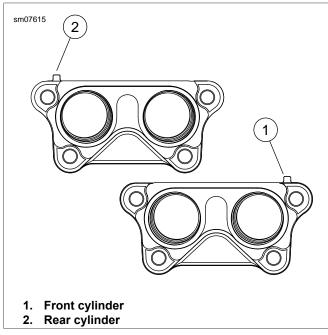


Figure 3-92. Tappet Cover Orientation

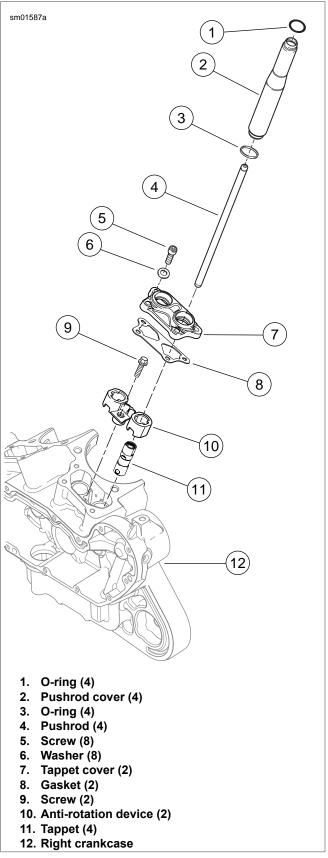


Figure 3-93. Middle Valve Train Components

## **CYLINDER HEAD**

FASTENER	TORQUE VALUE		
Cylinder headbolts, 1st torque	96-120 <b>in-lbs</b>	11-14 Nm	
Cylinder headbolts, final torque	13-15 ft-lbs	18-20 Nm	
Cylinder headbolts, 1st torque	96-120 <b>in-lbs</b>	11-14 Nm	
Cylinder headbolts, final torque	13-15 ft-lbs	18-20 Nm	

#### **NOTES**

- Install the pushrod covers and lower cover retainers before installing cylinder heads. See <u>3.16 TOP END OVERHAUL</u>: <u>ASSEMBLY, Tappet Covers, Pushrod Covers and Pushrods</u>.
- Thoroughly clean and lubricate threads of cylinder head screws before installation. Friction caused by dirt and grime will result in a false torque indication.
- Coat mating surfaces of cylinder base studs and headbolts with parts cleaning solution.
- Scrape old oil and any carbon deposits from threads by using a back-and-forth motion, threading each head screw onto its mating cylinder stud.
- 3. Remove headbolts from studs. Wipe or blow dry thread surfaces.
- Thoroughly clean and dry gasket surfaces of cylinder and cylinder head.

#### NOTE

XR 1200X: See <u>Figure 3-94</u>. The cylinder head gasket has metal patches (2) that must be installed against the cylinder head. When installing the gasket on the cylinder, be sure the words "THIS SIDE UP" (1) and the metal patches (2) are visible.

- 5. See Figure 3-95. Install a **new** head gasket to cylinder.
- Carefully lower cylinder head over studs and position on dowels. Use great care so as not to disturb head gasket.

#### NOTE

Only oil film must remain on the cylinder head screw surfaces. Too much oil will pool in the head screw sleeve preventing full thread engagement.

- Lightly coat threads, underside of flange and bottom face of cylinder headbolts in clean Harley-Davidson 20W50 engine oil. Wipe off excess oil.
- 8. Start cylinder headbolts onto cylinder studs, two short bolts on left side of engine, two long bolts on right. Tighten all bolts only finger-tight at this time.

#### NOTE

The procedure for tightening the head screws is critical to proper distribution of pressure over gasket area. It prevents gasket leaks, stud failure and head and cylinder distortion.

- 9. See <u>Figure 3-96</u> and <u>Figure 3-97</u>. In sequence, tighten headbolts in the following steps:
  - a. Tighten each bolt to 96-120 in-lbs (11-14 Nm).
  - o. Tighten each bolt to 13-15 ft-lbs (18-20 Nm).
  - c. Loosen all bolts.
- 10. After headbolts are loosened from initial torque, tighten bolts in three stages. Tighten in sequence:
  - a. Tighten each bolt to 96-120 in-lbs (11-14 Nm).
  - b. Tighten each bolt to 13-15 ft-lbs (18-20 Nm).
  - See <u>Figure 3-98</u>. Mark cylinder head and headbolt shoulder with a line (1).
  - d. Tighten each bolt an additional 85-95 degrees (2).
- XR 1200X: Install Precision Cooling oil lines. See 3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines.

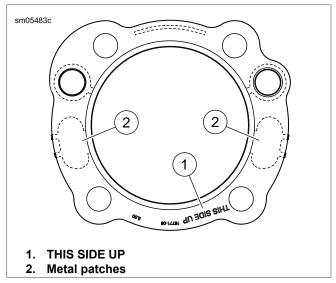


Figure 3-94. Cylinder Head Gasket: XR 1200X

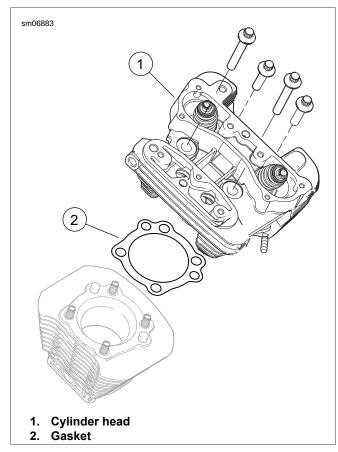


Figure 3-95. Cylinder Head Installation

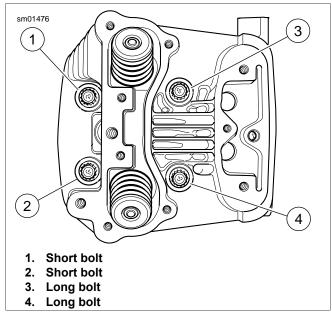


Figure 3-96. Front Cylinder Headbolt Torque Sequence

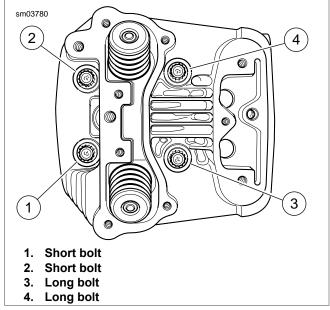


Figure 3-97. Rear Cylinder Headbolt Torque Sequence

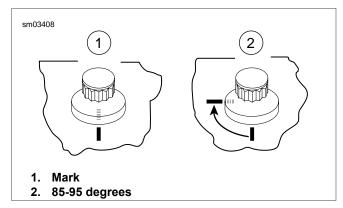


Figure 3-98. Tighten Headbolts

## **ROCKER COVERS**

FASTENER	TORQUE VALUE		
Rocker cover, inner, large bolt	18-22 ft-lbs	24.4-29.8 Nm	
Rocker cover, inner, small bolt	135-155 <b>in-lbs</b>	15.3-17.5 Nm	
Rocker cover, inner, screw	135-155 <b>in-lbs</b>	15.3-17.5 Nm	
Breather screw: XL Models	35-55 <b>in-lbs</b>	4.0-6.2 Nm	
Rocker cover, outer, screw	120-168 <b>in-lbs</b>	13.5-19.0 Nm	

## **Inner Cover**

- 1. For each cylinder, rotate crankshaft so that the lifters are on the base circle of the cams.
- Install new gasket (1) with FRONT HEAD facing up on the front head and REAR HEAD facing up on the rear head.
  - a. XL Models: See Figure 3-101.
  - b. XR 1200X: See Figure 3-102.
- Install the inner rocker cover assembly (2) (with rocker arms and shafts). Fit the ends of the pushrods in the rocker arm sockets.

#### NOTE

To avoid damage to pushrods or rocker arms, do not rotate crankshaft until both pushrods can be turned with fingers.

- 4. Install and finger tighten all fasteners (3, 5, 4) one turn at a time.
- 5. See <u>Figure 3-99</u>. Tighten the fasteners in sequence:
  - Tighten the four large bolts (1, 2, 3, 4) and then retighten the first fastener (5) to 18-22 ft-lbs (24.4-29.8 Nm).
  - b. Tighten the three small bolts (6, 7, 8) to 135-155 in-lbs (15.3-17.5 Nm).
  - Tighten the two screws (9, 10) to 135-155 in-lbs (15.3-17.5 Nm).

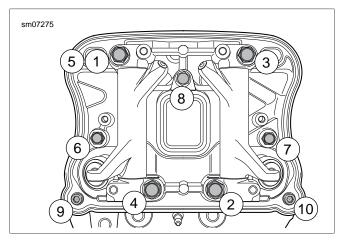


Figure 3-99. Inner Rocker Cover Torque Sequence

### **Breather: XL Models**

- 1. Identify breather location for front and rear cylinders.
- See <u>Figure 3-101</u>. Install breather (7) with **new** breather seal (6).
- 3. Install screw (8). Tighten to 35-55 in-lbs (4.0-6.2 Nm).

### **Breather: XR 1200X**

- 1. See <u>Figure 3-102</u>. Inspect and replace the umbrella check valve (8) if necessary.
- 2. Install a **new** O-ring (6) on the breather assembly (7).
- Install breather in cavity.

## **Outer Cover**

#### **NOTES**

- XL Models: See Figure 3-101.
- XR 1200X: See Figure 3-102.
- 1. Install **new** gaskets (9, 10) on the inner rocker cover.
- Install outer rocker cover (11) on inner rocker cover. Install fasteners (13) with captive washers and new sealing washers (12).
- 3. See <u>Figure 3-100</u>. Tighten fasteners (1, 2, 3, 4) in sequence and then re-tighten the first fastener (5) to 120-168 **in-lbs** (13.5-19.0 Nm).

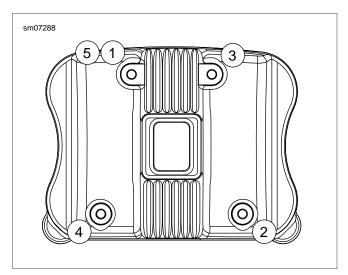


Figure 3-100. Outer Cover Torque Sequence

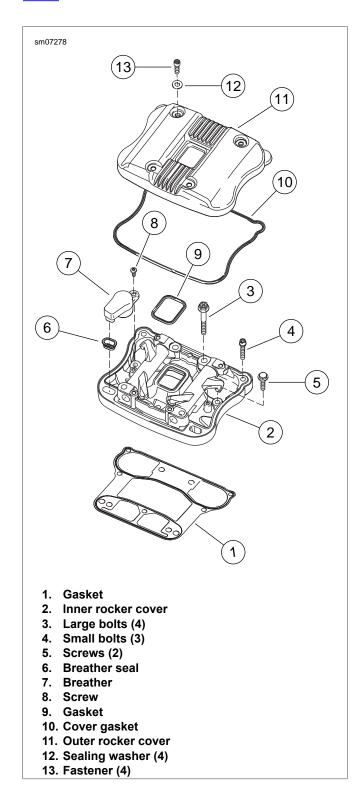


Figure 3-101. Rocker Cover: XL Models

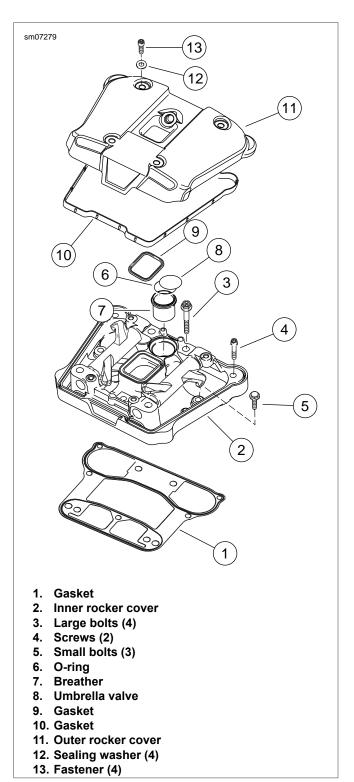


Figure 3-102. Rocker Cover: XR 1200X

# ASSEMBLING MOTORCYCLE AFTER TOP END REPAIR

FASTENER	TORQUE VALUE	
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm

- See <u>Figure 3-103</u>. Install upper front stabilizer link and frame bracket:
  - a. Install upper frame bracket (3) with upper stabilizer link (2), horn bracket (9) (models with front mounted horn), screws (5) and washers (8). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
  - b. Install screw (4) securing stabilizer link to engine bracket (1). Tighten to 25-35 ft-lbs (33.9-47.5 Nm).
- Install induction module assembly. See <u>4.8 INDUCTION MODULE: XL MODELS</u> or <u>4.9 INDUCTION MODULE: XR 1200X.</u>
- 3. Install the following connectors into the induction module:
  - a. TPS [88].
  - b. IAC [87].
  - c. TMAP sensor [80].
  - d. Fuel injector connectors [84], [85].
- 4. Install air cleaner assembly:
  - XL Models except XL 1200V: Install backplate, air filter and air cleaner cover. See 4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V.
  - XL 1200V: Install backplate, air filter and air cleaner cover. See <u>4.3 AIR CLEANER ASSEMBLY, XL</u> <u>1200V</u>.
  - c. XR 1200X: Install air box assembly and connect crankcase vent hoses. See <u>4.3 AIR CLEANER</u> <u>ASSEMBLY, XR 1200X</u>.
  - d. EVAP Controlled Models: Install EVAP purge hose on induction module. See <u>4.20 EVAPORATIVE</u> EMISSIONS CONTROL.
- 5. Install horn.
  - a. **Front Mount:** See <u>6.32 HORN, Replacement: Front Mount</u>.
  - b. **Side Mount:** See <u>6.32 HORN, Replacement: Side Mount</u>.

# **AWARNING**


When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- 6. Install fuel tank.
  - a. Tighten to 15-20 ft-lbs (20.4-27.1 Nm).
  - Attach quick-connect fitting on fuel line to fuel tank fitting.
  - Gently tug on quick-connect fitting to verify that it is securely locked in place. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.
- Install exhaust pipes and mufflers. Plug in O2 sensor connectors [137], [138]. See <u>4.13 EXHAUST SYSTEM:</u> XL MODELS or <u>4.14 EXHAUST SYSTEM: XR 1200X</u>.
- Connect spark plug cables to spark plugs.
- 9. Install main fuse.

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

10. Install seat.

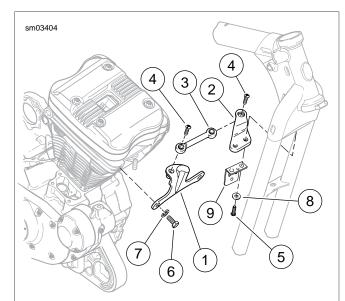

- 1. Engine bracket
- 2. Upper stabilizer link
- 3. Upper frame bracket
- 4. Screw
- 5. Screw (2)
- 6. Screw (2)
- 7. Lockwasher (2)
- 8. Washer (2)
- 9. Horn bracket (models with front mounted horn)

Figure 3-103. Upper Front Stabilizer Link Assembly (typical)

## **GENERAL**

This section describes disassembling the bottom end of the engine. If engine overhaul requires disassembly of crankcases, remove engine from vehicle. See <u>3.10 REMOVING ENGINE FROM CHASSIS</u>.

Then disassemble top end of engine. See <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder Heads</u> and <u>3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder and Piston.</u>

Thoroughly clean area around gearcase cover and tappets. Blow loose dirt from crankcase with low pressure compressed air

The oil pump design and function differs between XL models and the XR 1200X. See <u>3.6 ENGINE LUBRICATION SYSTEM</u>.

## **OIL PUMP: XL MODELS**

- Remove oil pump feed and return hoses. Mark hoses for later installation. Discard hose clamps.
- See <u>Figure 3-104</u>. Carefully remove two screws (2) that secure pump to crankcase. Pump will drop with screws removed. Discard mounting gasket.
- If oil pump requires repair, see <u>3.20 OIL PUMP: XL MODELS</u>.

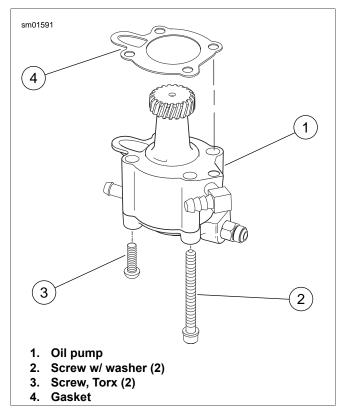


Figure 3-104. Oil Pump: XL Models

### **TAPPETS**

1. See Figure 3-105. Remove screw (1).

- 2. Remove anti-rotation device (2). Tag anti-rotation device for location (front/rear cylinder) as it is removed.
- Remove tappet (3). Tag tappet for location (front/rear cylinder) and function (intake/exhaust) as it is removed. This will simplify installation.
- 4. Repeat previous steps for other cylinder.
- Place tappets in clean plastic bags to keep out dust, dirt and debris.

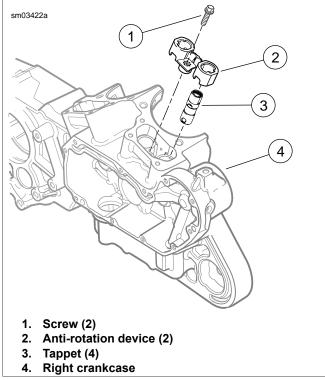


Figure 3-105. Tappet Components

# **CAM GEAR END PLAY**

#### NOTE

Gauge cam gear end play with the tappets removed.

- 1. Rotate the crankshaft until the lobe of the cam gear is pointing toward the tappet guide bore.
- 2. With a flat blade screwdriver, gently pry the cam gear toward the gearcase cover.
- 3. Gauge the gap between the case bushing and the cam gear shaft thrust face.
- Compare the gauge size to the cam gear end play specifications. Refer to Table 3-14.

# GEARCASE COVER AND CAM GEARS: XL MODELS

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Remove any parts that will interfere with gearcase disassembly.
- Remove inner rocker cover to remove valve spring pressure from the camshafts. See <u>3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XL Models.</u>
- Measure cam gear end play and record measurements.
   See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY.</u>
   Cam Gear End Play.
- 4. Place a pan under gearcase to collect oil.

#### NOTE


Never pry cover off. Tap lightly with a rawhide hammer.

- See <u>Figure 3-106</u>. Remove cover screws (1) and cover (2). Discard old gasket (3).
- Remove cam gears (4, 5, 6 and 7). Mark each component for installation.

#### NOTE

Nut is secured by LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) on the nut threads.

7. Remove nut (8). Slide pinion gear (9) and oil pump drive gear (10) off pinion shaft.

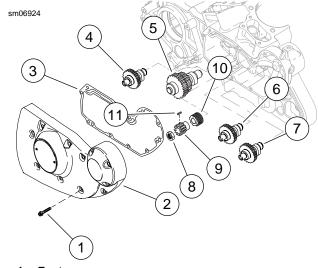

- 1. Fastener
- 2. Cover
- 3. Gasket
- 4. Rear exhaust cam
- 5. Rear intake cam
- 6. Front intake cam
- 7. Front exhaust cam
- 8. Nut
- 9. Pinion gear
- 10. Oil pump drive gear
- 11. Shaft key

Figure 3-106. Gearcase Cover and Cam Gears

# OIL PUMP HOUSING/GEARCASE COVER AND CAM GEARS: XR 1200X

The oil pump is integrated into the gearcase cover. Oil pump rotors can be removed with gearcase cover in place. It is not necessary to remove the oil pump rotors to remove the gearcase cover.

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Remove any parts that will interfere with gearcase disassembly.
- Remove inner rocker cover to remove valve spring pressure from the camshafts. See <u>3.13 TOP END OVERHAUL:</u> <u>DISASSEMBLY, General.</u>
- Measure cam gear end play and record measurements.
   See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Cam Gear End Play.</u>
- 4. Place a pan under gearcase to collect oil.

## NOTE

Never pry cover off. Tap lightly with a rawhide hammer.

See <u>Figure 3-107</u>. Remove cover screws (1) and remove cover (2). Discard old gasket.

- See <u>Figure 3-108</u>. Remove rigid lines (1) and vent hose
   from gearcase cover. Mark lines and hoses for later installation. Discard hose clamps. See <u>3.12 PRECISION</u> COOLING SYSTEM: XR 1200X, Oil Pump Lines.
- 7. Remove two check valve housing screws (3).
- Remove six screws (4) and remove oil pump cover (5). Discard O-rings.
- 9. Remove three fasteners (6). Loosely install oil pump cover to prevent the gerotors from falling out unexpectedly.

#### NOTE

Never pry gearcase cover off. Tap lightly with a rawhide hammer.

10. Carefully remove gearcase cover. Discard old gasket.

#### NOTE

Repair the oil pump if required. See <u>3.21 OIL PUMP: XR</u> 1200X.

11. See <u>Figure 3-109</u>. Remove cam gears (1, 2, 3, and 4). Carefully mark each component to verify correct installation.

#### NOTE

Nut (5) is secured by LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red).

- 12. Remove nut (5). Slide pinion gear (6) and spacer (7) off pinion shaft.
- Remove oil pump cover. Mark rotors with a permanent marker to identify outer surfaces. Remove rotors from housing.



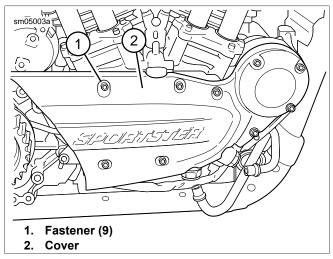


Figure 3-107. Oil Pump Cover: XR 1200X

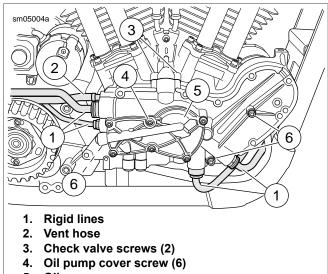

- 5. Oil pump cover
- 6. Gearcase cover fastener (3)

Figure 3-108. Gearcase Cover and Oil Pump: XR 1200X

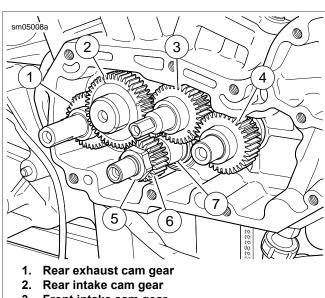

- 3. Front intake cam gear
- 4. Front exhaust cam gear
- 5. Nut
- 6. Pinion gear
- 7. Spacer

Figure 3-109. Cam Gears: XR 1200X

#### CRANKCASE

## Split Crankcase

- 1. Remove clutch and primary drive components. See 5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS.
- 2. Remove starter motor. See 6.10 STARTER.
- Mount crankcase assembly in engine stand. Position crankcase so that it is tilted at a 45 degree angle, right side down.

# **A**CAUTION

Do not rotate right crankcase half in engine stand such that flywheel sprocket shaft is facing down. The flywheel assembly can fall out, resulting in parts damage or moderate injury. (00553b)

#### NOTE

XR 1200X: See <u>Figure 3-110</u>. The fastener between the cylinders is a double headed bolt (2).

- 4. Remove 11 long fasteners (1, 2) and four short fasteners (3) from left side of crankcase assembly.
- Remove two fasteners (4) from right side of crankcase assembly.

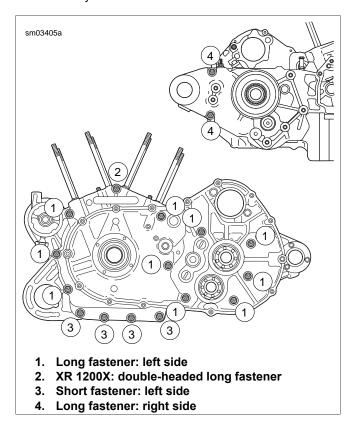


Figure 3-110. Crankcase Fasteners

 See <u>Figure 3-111</u>. Tap crankcase gently with rawhide mallet to loosen and separate the halves. Remove left crankcase assembly with transmission.

#### NOTE

Flywheel assembly slides off left main bearing by hand. No tools are required for this operation.

- See <u>Figure 3-112</u>. Remove the flywheel assembly from right crankcase.
- 8. Remove transmission assembly from left crankcase. See <u>5.9 TRANSMISSION REMOVAL AND DISASSEMBLY</u>.

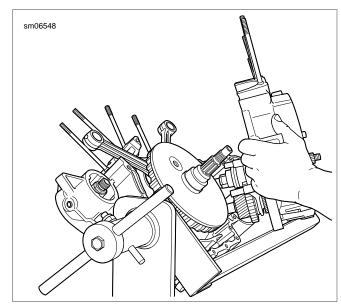


Figure 3-111. Separating Crankcase Halves

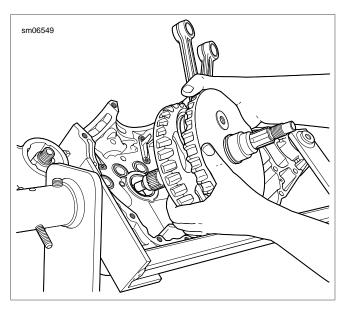


Figure 3-112. Removing Flywheels from Right Crankcase

## **Piston Oil Jets**

- See <u>Figure 3-113</u>. Remove two TORX screws (3) from each piston oil jet assembly (2) to free piston oil jets from right crankcase (1).
- 2. Remove piston oil jets and gaskets (4) from right crankcase. Discard gaskets.
- 3. **XR 1200X:** Remove three screws (6) and oil deflector plate (5).

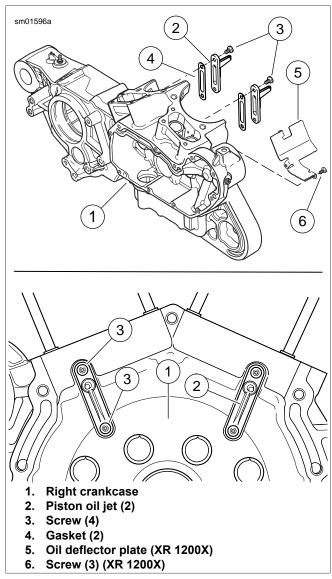


Figure 3-113. Piston Oil Jet Assemblies

# **Removing Cylinder Base Studs**

If cylinder base studs require replacement, proceed as follows.

- Thread a 3/8-16 nut onto cylinder base stud.
- Thread a second nut onto stud until it contacts the first
- Tighten nuts against each other.
- Placing wrench on first (lower) nut installed, remove stud from cylinder deck.
- Loosen nuts and remove from cylinder base stud.

# **GEARCASE: XL MODELS**

# BUSHING INSPECTION AND REMOVAL: XL ONLY

PART NUMBER	TOOL NAME
HD-95760-69A	BUSHING AND BEARING PULLER

#### NOTE

The camshaft and pinion gear shafts are supported by bushings in both the cover and the crankcase.

- See <u>Figure 3-114</u>. Measure each bushing and its corresponding cam gear shaft or pinion gear shaft. Replace bushings that exceed service wear limits. Refer to <u>Table 3-34</u>.
- See <u>Figure 3-115</u>. Use BUSHING AND BEARING PULLER (Part No. HD-95760-69A) to remove bushings from gearcase cover and crankcase.

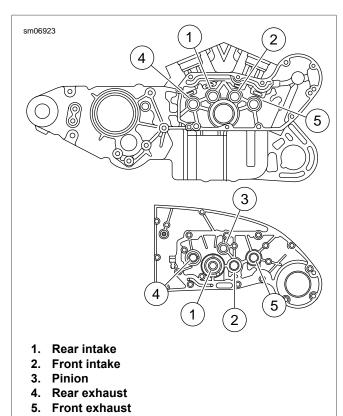


Figure 3-114. Cam and Pinion Bushings

Table 3-34. Cam and Pinion Shaft Specifications

SHAFT	in mm		SERVIC LIN	
			in	mm
Cam	0.0007-0.0022	0.018-0.056	0.003	0.08
Pinion	0.0023-0.0043	0.058-0.109	0.005	0.13



Figure 3-115. Removing Cam Bushing from Gearcase Cover

## **BUSHING INSTALLATION: XL ONLY**

#### NOTE

Installing and reaming crankcase and gearcase cover bushings can alter the center distances between mating gears. Incorrect spacing can damage gears and increase gear noise.

## **Cam Gear Bushings in Right Crankcase**

See <u>Figure 3-116</u>. Each cam gear bushing installed in right crankcase must be positioned with its oiling slot at exact top of bore (12 o'clock position).

- 1. Using an arbor press, install each bushing in crankcase bore until bushing shoulder contacts crankcase boss.
- Ream the **new** bushing to size after installation. See 3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only.

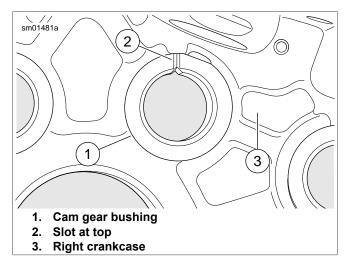


Figure 3-116. Cam Gear Bushing Installed in Crankcase

# Cam Gear Bushings (Except Rear Intake Bushing) in Gearcase Cover

- Using an arbor press, install each bushing in its gearcase cover bore so that bushing shoulder contacts cover boss.
   There is no need to orient these particular bushings in any specific position of rotation within gearcase cover bores.
- Line-ream the **new** bushing to correct size after installation.
   See <u>3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only.</u>

# Rear Intake Cam Gear Bushing in Gearcase Cover

Rear intake cam gear bushing must be installed in its gearcase cover bore using an arbor press. The bushing must be oriented in a specific position of rotation within the cover bore.

- See <u>Figure 3-117</u>. Position bushing (1) over bore of gearcase cover (2) with chamfered edge downward and slot upward. Align slot in bushing with slot in gearcase cover boss. Press bushing into cover bore until bushing is flush with cover boss.
- Line-ream the **new** bushing to correct size after installation.
   See <u>3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only.</u>

# **Pinion Shaft Bushing in Gearcase Cover**

- Using an arbor press, install pinion shaft bushing in gearcase cover flush with cover boss. This bushing requires no specific orientation.
- 2. See Figure 3-118. The replacement bushing must be secured from rotation by installation of a dowel pin. Drill a No. 31 hole, 0.281 in (7.14 mm) deep, at top side of boss (side toward top of gearcase cover). Center drill bit so hole is drilled half in bushing and half in cover.
- Drive a **new** dowel pin no more than 0.020 in (0.51 mm) below the bushing face. Carefully peen edges of hole to lock the pin in place.
- Line-ream the **new** bushing to correct size after installation. See <u>3.18 GEARCASE</u>: XL MODELS, Bushing Reaming: XL Only.

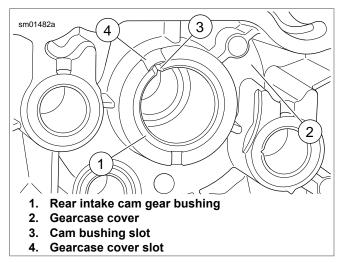


Figure 3-117. Rear Intake Cam Gear Bushing Installed in Gearcase Cover

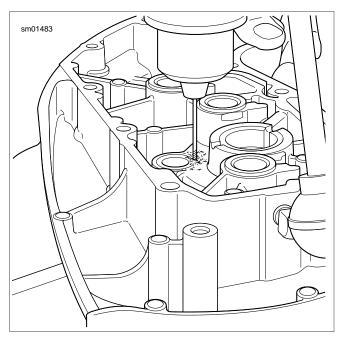


Figure 3-118. Drilling Pinion Bushing Dowel Pin Hole in Gearcase Cover

## **BUSHING REAMING: XL ONLY**

PART NUMBER	TOOL NAME
HD-38871	CRANKSHAFT BUSHING PLATE PILOT
HD-94803-67	REAR INTAKE CAM GEAR BUSHING REAMER
HD-94812-1	REAMER
HD-94812-87	PILOT

#### NOTES

 Installing and reaming crankcase and gearcase cover bushings can alter the center distances between mating

- gears. Incorrect spacing can damage gears and increase gear noise.
- Bushings in right crankcase serve as pilots for reaming gearcase cover bushings and must, therefore, be reamed to size first.
- After reaming any bushing, check shaft fit in the bushing. It may be necessary to make a second pass with reamer to attain proper fit.


## Cam Gear Bushings in Right Crankcase

- 1. Separate two halves of crankcase, if not already done. Place right crankcase on flat surface with gearcase side
- 2. See Figure 3-119. Position CRANKSHAFT BUSHING PLATE PILOT (Part No. HD-38871) onto gearcase side of crankcase. The upper right and lower left indexing holes in pilot must be placed over dowels in crankcase. Insert two bolts (supplied with pilot) through two remaining holes in pilot, and into threaded holes of crankcase. Tighten bolts securely.
- Insert a standard 11/16 reamer through pilot hole and into bushing while turning reamer clockwise. Continue turning reamer clockwise through bushing until smooth shank of reamer passes through hole in pilot.
- Detach reamer from handle. Pull reamer out opposite side of crankcase.

# WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Thoroughly clean right crankcase, removing all metal chips/shavings. Blow out all bushing bores and oil passages using low pressure compressed air.

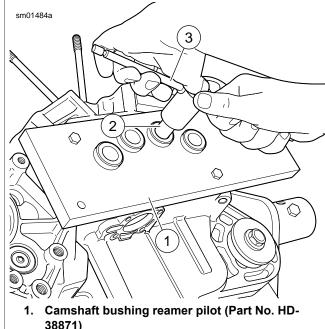

- 38871)
- 2. Standard 11/16 reamer
- Reamer handle

Figure 3-119. Reaming Cam Gear Bushing in Right Crankcase

# Cam Gear Bushings (Except Rear Intake **Bushing) in Gearcase Cover**

NOTE

Newly installed cam gear bushings must be line-reamed to establish correct clearance and to produce perfect alignment. Use the right crankcase as a pilot for the reamer. If crankcase halves are not separated, use a spare right crankcase to perform the following line-reaming procedures.

- Bushings to be reamed must be installed in gearcase cover as described in 3.18 GEARCASE: XL MODELS, Bushing Installation: XL Only. Attach gearcase cover to right crankcase, which has been disassembled from left crankcase, securing with a minimum of three mounting screws.
- 2. Insert a standard 11/16 reamer through the previously reamed cam gear bushing in right crankcase, which is in line with one of the bushings to be reamed in gearcase cover.
- 3. Turn reamer clockwise through bushing in cover until reamer bottoms. Then give reamer one complete clockwise turn to size the bushing. Continue turning reamer clockwise while extracting reamer from bushing.
- 4. Repeat two previous steps for remaining two cam gear bushings (except rear intake bushing) in gearcase cover, if required.
- Separate gearcase cover from right crankcase. Inspect bushings for proper cam gear shaft fit. Repeat line reaming operation if necessary.

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Thoroughly clean gearcase cover, removing all metal chips/shavings. Blow out all bushing bores and oil passages using low pressure compressed air.

# Rear Intake Cam Gear Bushing in Gearcase Cover

#### NOTE

Newly installed cam gear bushings must be line-reamed to establish correct clearance and to produce perfect alignment. Use the right crankcase as a pilot for the reamer. If crankcase halves are not separated, use a spare right crankcase to perform the following line reaming procedures.

- Rear intake cam gear bushing must be installed in gearcase cover as described in <u>3.18 GEARCASE</u>: XL MODELS, Bushing Installation: XL Only.
- Identify the previously reamed rear intake cam gear bushing in right crankcase, which has been disassembled from left crankcase. Insert the shank end of REAR INTAKE CAM GEAR BUSHING REAMER (Part No. HD-94803-67) through gearcase side of this bushing.
- With reamer inserted into bushing in right crankcase, attach gearcase cover to right crankcase, securing with a minimum of three mounting screws.
- 4. Turn reamer clockwise through bushing in gearcase cover until reamer bottoms. Then give reamer one complete clockwise turn to size the bushing. Continue turning reamer clockwise while extracting reamer from bushing.
- Separate gearcase cover from right crankcase. Inspect bushing for proper cam gear shaft fit. Repeat line reaming operation if necessary.

## WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Thoroughly clean gearcase cover, removing all metal chips/shavings. Blow out all bushing bores and oil passages using low pressure compressed air.

## **Pinion Shaft Bushing in Gearcase Cover**

## NOTE

Ream a **new** pinion shaft bushing in the gearcase cover with the right crankcase and the PILOT (Part No. HD-94812-87) as pilots for the reamer. If the crankcase halves are not separated, use a spare right crankcase to line ream the bushing.

- Pinion shaft bushing must be installed in gearcase cover as described in 3.18 GEARCASE: XL MODELS, Bushing Installation: XL Only. Attach gearcase cover to right crankcase, which has been disassembled from left crankcase, securing with a minimum of three mounting screws.
- See <u>Figure 3-120</u>. Install a PILOT (Part No. HD-94812-87) into right crankcase roller race. Insert REAMER (Part No. HD-94812-1) through the pilot.
- Turn reamer clockwise through bushing in gearcase cover until reamer bottoms. Then give reamer one complete clockwise turn to size the bushing. Continue turning reamer clockwise while extracting reamer from bushing.
- Separate gearcase cover from right crankcase. Inspect bushing for proper pinion shaft fit. Repeat line reaming operation if necessary.

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

 Remove pilot from right crankcase roller race. Thoroughly clean gearcase cover, removing all metal chips/shavings.
 Blow out all bushing bores and oil passages using low pressure compressed air.

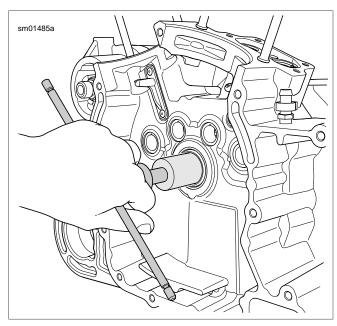


Figure 3-120. Line Reaming Pinion Shaft Bushing

CRANKCASE 3.19

## **GENERAL**

When replacing the connecting rod and flywheel assembly, the pinion shaft bearing, or the sprocket shaft bearing, inspect and make repairs to the cylinder heads, the cylinders, the gear case and the transmission. Perform a complete engine overhaul.

#### NOTE

When engine is removed from chassis, do not lay engine on primary side. Laying engine on primary side will damage the clutch cable end fitting. If fitting is damaged, clutch cable must be replaced.

# **DISASSEMBLY**

PART NUMBER	TOOL NAME
B-45655, HD-42720- 2, HD-46663	CRANKCASE BEARING REMOVER/INSTALLER WITH ADAPTER
CJ 114	SNAP-ON BODY DENT PULLER
J-5586-A	TRANSMISSION SHAFT RETAINING RING PLIERS

 Disassemble crankcase, see 3.17 BOTTOM END OVER-HAUL: DISASSEMBLY, Crankcase.

#### NOTE

Remove either the pinion shaft bearing or the left main bearing with this procedure.

2. See Figure 3-121. Pinion shaft bearing assembly (3) will remain on pinion shaft (2) when flywheel assembly (1) is removed from right crankcase. Using TRANSMISSION SHAFT RETAINING RING PLIERS (Part No. J-5586-A), remove retaining ring (4) and slip bearing off pinion shaft.

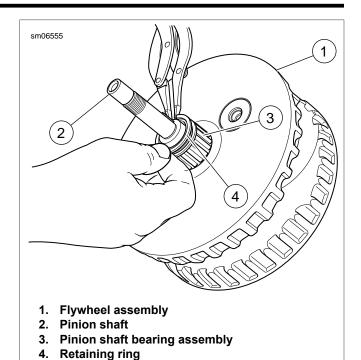


Figure 3-121. Removing Pinion Shaft Bearing Retaining Ring

### NOTE

The sprocket shaft inner race is not replaceable. Replace crankshaft if race is worn or damaged.

- See <u>Figure 3-122</u>. Remove outer left main bearing retaining ring.
- Remove left main oil seal from left crankcase using SNAP-ON BODY DENT PULLER (Part No. CJ 114).
- Remove thrust washer next to left main bearing.



Figure 3-122. Removing Left Main Oil Seal Retaining Ring

6. See <u>Figure 3-123</u>. Remove left main bearing retaining ring from the inside of the left crankcase.

#### NOTE

Press the left main bearing from the outside of the left crankcase toward the inside. A shoulder in the left crankcase prevents the bearing from being pressed towards the outside.

- See <u>Figure 3-124</u>. Using CRANKCASE BEARING REMOVER/INSTALLER WITH ADAPTER (Part No. B-45655, HD-42720-2, HD-46663), press left main bearing out of the left crankcase.
  - a. Place support tube (1) on press bed with recessed cup end facing up.
  - b. With the outboard side of the left crankcase (2) facing upward, position crankshaft bearing bore (3) over support tube.
  - c. Place adapter (4) over left main bearing. Insert pilot/driver (5) through adapter, through left main bearing and into support tube.
  - d. Carefully apply pressure with press ram (6) until left main bearing drops free.

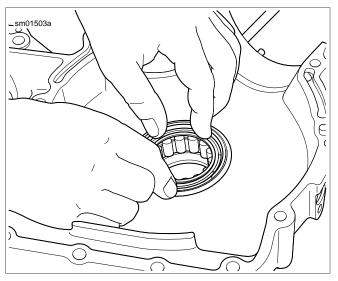


Figure 3-123. Removing Left Main Bearing Retaining Ring

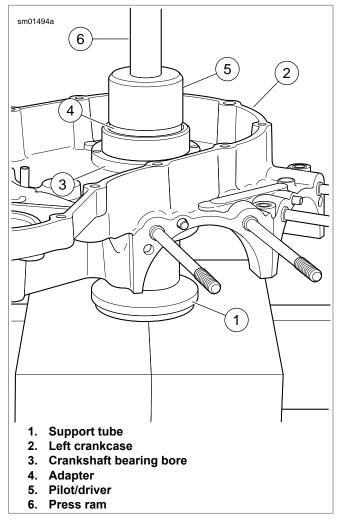


Figure 3-124. Removing Left Main Bearing from Crankcase

## FITTING PINION BEARINGS

PART NUMBER	TOOL NAME
HD-34902-7	END CAP
J-21686-12	FORCING SCREW
J-7830-5	BRIDGE
SNAP-ON TOOLS STOCK NO. CJ950	BEARING SEPARATOR

## **Outer and Inner Races**

The outer race is a pressed-in bushing in the right crankcase. The inner race is pressed on the pinion shaft.

See Figure 3-125. To remove pinion shaft inner race, use BEARING SEPARATOR (Part No. Snap-on Tools Stock No. CJ950), three items from END CAP (Part No. HD-34902-7), BRIDGE (Part No. J-7830-5) and FORCING SCREW (Part No. J-21686-12), and two bolts. Apply heat to race to aid removal.

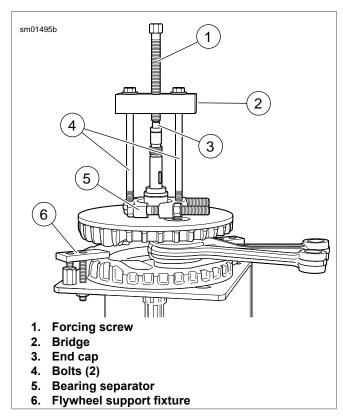


Figure 3-125. Pulling Pinion Shaft Inner Bearing

Pinion bearing selection is based on the largest measured outside diameter (OD) of the inner race and the smallest measured inside diameter (ID) of the outer race (crankcase bushing).

A running clearance of 0.0002-0.0008 in (0.005-0.020 mm) is established during crankcase set or flywheel assembly replacement and engine rebuild.

See Figure 3-126. Installed inner races are identified at the factory as shown.

See Figure 3-128. Outer races are identified at the factory as shown.

#### NOTE

The different sizes of crankcase sets and flywheel assemblies do not have separate part numbers. Replacement crankcase sets can have a class 1, 2 or 3 pinion outer race. Replacement flywheel assemblies can have either a class A or B inner race.

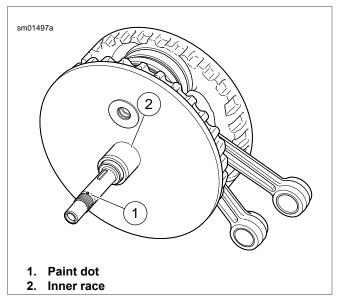


Figure 3-126. Factory Inner Race Sizes

**Table 3-35. Inner Race Specifications** 

RACE OD		CLASS	IDENTIFICATION*	
in	mm			
1.2498-1.2500	31.745-31.750	Α	White	
1.2496-1.2498	31.740-31.745	В	Green	
* Paint dot on end of spline.				

# **Bearing Selection**

See <u>Figure 3-127</u>. Pinion bearing roller OD cannot be measured to required accuracy with a micrometer. Select bearings using the identification information given for inner and outer races and bearings. Refer to <u>Table 3-38</u>.

#### NOTE

If either inner or outer race show wear, measure both races to confirm correct bearing fit of 0.0002-0.0008 in (0.005-0.020 mm). The service wear limit of the outer race ID is 1.5656 in (39.776 mm).

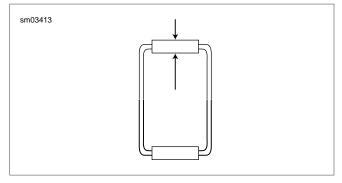


Figure 3-127. Bearing Roller OD (A)

Table 3-36. Roller Specifications

ROLLER OD (A)	IDENTIFICATION (PACKAGE COLOR)
Largest	Red
	Blue
	White (gray)
Smallest	Green

**Table 3-37. Outer Race Specifications** 

RACE ID		CLASS	STAMPED	
in	mm	NO.	IDENTIFICATION <sup>3</sup>	
1.5646-1.5648	39.741-39-746	1	1	
1.5648-1.5650	39.746-39.751	2	2	
1.5650-1.5652	39.751-39.756	3	3	
* Stamped number inside crankcase near race.				

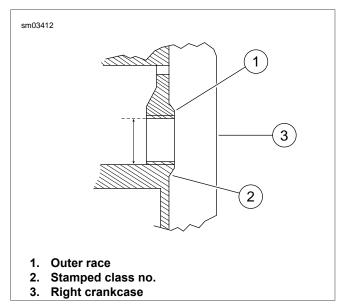


Figure 3-128. Factory Outer Race Sizes

Table 3-38. Pinion Shaft Bearing Selection

FACTORY	OUTER RACE ID		BEARING SIZE AS IDENTIFIED BY COLOR CODING		
STAMPED NUMBER	in	mm			
	1.5654-1.5656	39.761-39.766			Red
	1.5652-1.5654	39.756-39.761		Red	Blue
3	1.5650-1.5652	39.751-39.756	Red	Blue	White-gray
2	1.5648-1.5650	39.746-39.751	Blue	White-gray	Green
1	1.5646-1.5648	39.741-39.746	White-gray	Green	
Inner Race OD (in)		1.2496-1.2498	1.2498-1.2500	1.2500-1.2502	
Inner Race OD (mm)		31.740-31.745	31.745-31.750	31.750-31.755	
Factory Color Code		Green	White		

#### NOTE

Removal and installation of the inner and outer bearing races require the use of shop-made tools. See <u>Figure 3-130</u>, <u>Figure 3-131</u>, and <u>Figure 3-132</u>.

 Measure ID of outer race at four places with a dial bore gauge. Take measurement on ID where bearing rollers ride. Record the four measurements.

Table 3-39. Used Pinion Bearing Outer Race Specifications

ITEM	in	mm
Largest ID allowed	1.5656	39.776
Roundness of ID (within)	0.0002	0.005
Taper (within )	0.0002	0.005

If the largest measurement is larger than 1.5656 in (39.776 mm) or the required lapping to remove wear marks would enlarge bore beyond 1.5656 in (39.776 mm), continue at Step 8. Refer to <u>Table 3-39</u>.

 If the largest measurement is 1.5656 in (39.776 mm) or less, cover the cam bearings with masking tape to prevent debris from entering bearings. Assemble crankcase halves.

## NOTE

The next step requires lapping the outer race. To keep sprocket shaft and pinion shaft bearings aligned, support the lap by an adaptor or pilot in the left crankcase.

- Lap the outer race. The race must be lapped until all wear marks are removed. See <u>3.19 CRANKCASE</u>, <u>Lapping</u> <u>Engine Main Bearing Races</u>.
- 5. After lapping race, again measure ID of race at four places and record the measurements.
- Check measurements against the specifications listed in Table 3-39.
- If lapping increased bore ID to larger than 1.5656 in (39.776 mm), go to next step. If roundness or taper do not meet specifications, continue lapping until specifications are met. If all specifications are met, continue at Step 10 to remove and size inner race.

#### NOTE

Always use the smallest outer race ID measurement and the largest OD inner race measurement when selecting bearings.

- Press the outer race from the right crankcase. Press new outer race into crankcase flush with inside edge of cast-in insert.
- The **new** outer race must be lapped slightly to true and align with left case bearing to specifications. Refer to <u>Table 3-40</u>. See <u>3.19 CRANKCASE</u>, <u>Lapping Engine Main</u> <u>Bearing Races</u>.


Table 3-40. New Pinion Bearing Outer Race Fit and Finish

ITEM	SPECIFICATION	
	in	mm
ID	1.5646-1.5652	39.741-39.756
Roundness within:	0.0002	0.005
Taper within:	0.0002 0.005	
Surface finish	16 RMS	

- See <u>Figure 3-125</u>. Pull inner race from pinion shaft using BEARING SEPARATOR (Part No. Snap-on Tools Stock No. CJ950), three items from END CAP (Part No. HD-34902-7), BRIDGE (Part No. J-7830-5) and FORCING SCREW (Part No. J-21686-12), and two bolts. Apply heat to race to aid removal.
- 11. See <u>Figure 3-129</u>. Press **new** inner race on pinion shaft using shop-made tool. When the tool bottoms against the flywheel, the correct inner race location is automatically established. The **new** inner race must be machined to dimension based on the finished lapped ID of the outer race. Refer to <u>Table 3-38</u>.

Table 3-41. Inner Race Fit and Finish

ITEM	SPECIFICATION		
	in	mm	
Roundness within:	0.0002	0.005	
Taper within:	0.0002	0.005	
Surface finish	16 RMS		

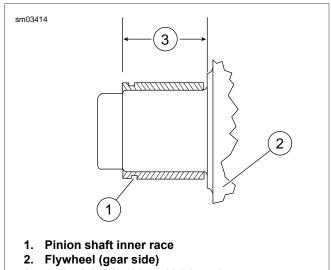

3. 1.135-1.145 in (28.83-29.08 mm)

Figure 3-129. Inner Race Location

## Inner Bearing Finish Example

The following example illustrates how to determine the required inner race OD:

If smallest measured ID of outer race is 1.5651 in (39.754 mm), an inner race OD range of 1.2496-1.2504 in (31.740-31.760 mm) is required. Refer to <u>Table 3-38</u>.

#### NOTE

Have machinist precision grind outer race to center or middle of required OD range. This will prevent grinding outer race undersize and gives a more easily achieved tolerance range.

- Precision grind inner race OD to the middle of the desired range. Refer to <u>Table 3-38</u>.
- 3. Measure OD at four places. Verify that OD is to specification. Refer to Table 3-41.
- 4. For example purposes:
  - a. The largest measured OD of inner race after grinding is 1.2499 in (31.747 mm) OD.
  - b. With a 1.5651 in (39.754 mm) ID outer race and a 1.2499 in (31.747 mm) OD inner race, a blue bearing is required. Refer to <u>Table 3-38</u>.

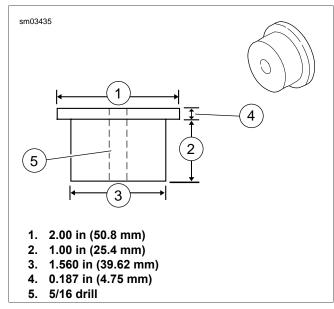


Figure 3-130. Pinion Shaft Outer Race Installation Tool


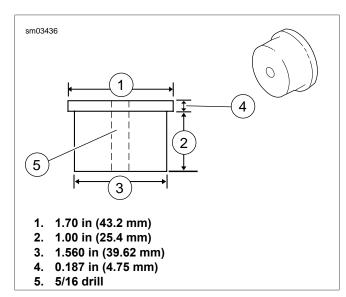


Figure 3-131. Pinion Shaft Outer Race Removal Tool

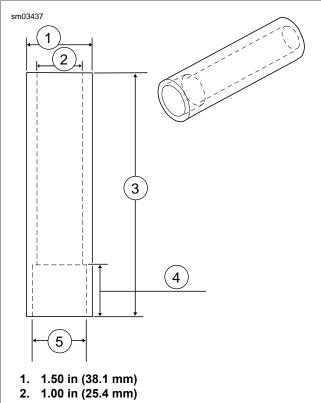

- 3. 5.50 in (139.7 mm)
- 4. 1.135-1.145 in (28.83-29.08 mm)
- 5. 1.262-1.272 in (32.05-32.31 mm)

Figure 3-132. Pinion Shaft Inner Race Installation Tool

## LAPPING ENGINE MAIN BEARING RACES

PART NUMBER	TOOL NAME
HD-46287	LAPPING TOOL ADAPTER
HD-96710-40C	CRANKCASE MAIN BEARING LAP- PING TOOL
HD-96718-87	CRANKCASE MAIN BEARING LAP

 See Figure 3-133. Obtain CRANKCASE MAIN BEARING LAPPING TOOL (Part No. HD-96710-40C). Assemble CRANKCASE MAIN BEARING LAP (Part No. HD-96718-87) to lapping handle.

#### NOTE

Left main bearing must be installed in left crankcase to use LAPPING TOOL ADAPTER (Part No. HD-46287) in the next step. See <u>3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase</u>.

- 2. Assemble LAPPING TOOL ADAPTER (Part No. HD-46287) to left main bearing.
- Secure right and left crankcase halves with three crankcase stud bolts (top center and bottom left and right).
- 4. Insert lap shaft with arbor assembled through pinion bearing bushing and into lapping tool adapter. Tighten arbor expansion collars using a length of 0.156 in (3.96 mm) rod as spanner until arbor begins to drag. Do not adjust arbor snug in bushing or bushing will bell. Belling

is a condition where hole is larger at ends than it is in the center.

- 5. Withdraw arbor far enough to coat lightly with 220 grit lapping compound. Do not apply a heavy coat. Reposition lap in bushing and turn handle at moderate hand speed. Work lap back and forth in bushing, as it is revolved, to avoid grooving and tapering.
- 6. At frequent intervals, remove lap from crankcase, wash and inspect bushing. Lapping is completed when entire bushing surface has a dull, satin finish rather than a glossy, smooth appearance.

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

7. When finished, flush off lap tool using cleaning solvent and dry using compressed air. Apply fresh, light coat of fine lapping compound.

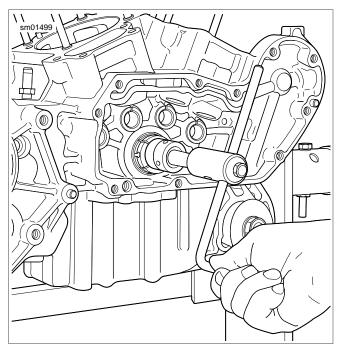


Figure 3-133. Lapping Pinion Shaft Main Bearing

# **OIL PUMP: XL MODELS**

# **GENERAL**

The oil pump seldom needs servicing. Check for all possible malfunctions related to oil pressure before disassembling oil pump.

- 1. Make sure all oil line connections are tight. Verify that lines are not pinched or damaged.
- Check level and condition of oil in tank. Pressure will be affected if oil is diluted. In freezing weather, proper circu-
- lation of oil can be affected if the oil feed line becomes clogged with ice or sludge.
- Check for a grounded oil pressure switch wire [120] or faulty switch if oil pressure indicator light fails to go out with engine running.

See <u>3.6 ENGINE LUBRICATION SYSTEM</u>, <u>3.24 OIL TANK</u> and <u>6.31 OIL PRESSURE SWITCH</u>.

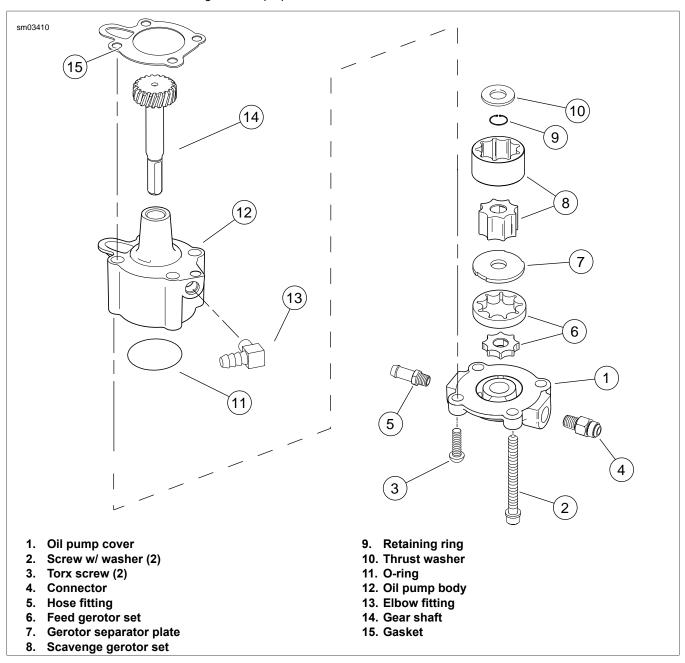


Figure 3-134. Oil Pump: XL Models

### **REMOVAL**

#### NOTE

The oil pump can be removed with engine in frame and without removing gearcase cover.

1. Drain oil from oil tank.

#### NOTE

See <u>Figure 3-135</u>. Do not remove oil pump feed fitting (2) from the pump (1). Hold oil pump feed fitting and loosen large high pressure hose fitting nut (3). Then remove high pressure hose (4) from oil pump feed fitting.

See <u>Figure 3-135</u>. Remove high pressure feed hose (4) from oil pump (1).

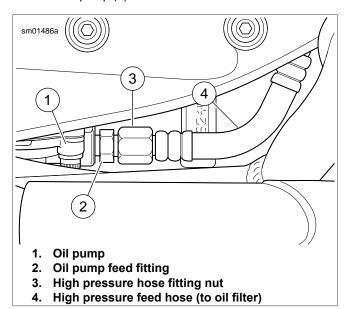


Figure 3-135. Oil Pump Feed Hose

#### NOTE

See <u>Figure 3-134</u>. The oil pump is designed to be removed as a complete assembly by removing the two long screws (2) at opposite corners of the pump. The other two screws (3) hold the pump together so that it may be removed and installed as a unit.

- 3. See Figure 3-134. Carefully remove two screws (2) that secure oil pump to crankcase. Pump will drop with screws removed. Discard mounting gasket (15).
- 4. Disconnect and tag the two remaining oil hoses from the pump.

## **DISASSEMBLY**

- See <u>Figure 3-134</u>. Remove two Torx screws (3). Lift cover (1) off body (12). Remove and discard O-ring (11).
- Slide both pieces of feed gerotor set (6), separator plate (7) and both pieces of scavenge gerotor set (8) off gear shaft (14).
- 3. Remove and discard retaining ring (9). Remove thrust washer (10) and gear shaft.

## CLEANING AND INSPECTION

# **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Clean all parts in cleaning solvent. Blow out holes and oil passages with compressed air.
- 2. See Figure 3-136. Inspect both gerotor sets for wear.
  - a. Mesh pieces of each set together as shown.
  - b. Use a feeler gauge to determine clearance.
  - c. The SERVICE WEAR LIMIT between gerotors is 0.004 in (0.102 mm). Replace gerotors as a set if clearance exceeds this dimension.
  - Measure thickness of feed gerotors with a micrometer.
     Replace gerotors as a set if they are not the same thickness.

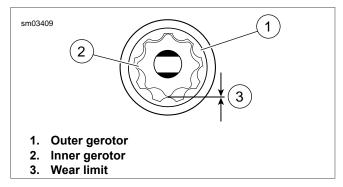


Figure 3-136. Gerotor Wear Limits

## **ASSEMBLY**

FASTENER	TORQUE VALUE	
Oil pump cover screws	70-80 <b>in-lbs</b>	7.9-9.0 Nm

#### NOTE

Liberally coat all moving parts with clean engine oil to lubricate at start-up.

- See <u>Figure 3-134</u>. Install gear shaft (14) through oil pump body (12). Position thrust washer (10) over end of shaft. Install **new** retaining ring (9) into groove in shaft.
- Insert inner gerotor of the scavenge gerotor set (8) over gear shaft.
- 3. Place outer gerotor over inner to complete scavenge set.
- 4. Position separator plate (7) into case and line up slots on perimeter with tabs inside oil pump body.
- 5. Place feed gerotor set (6) over gear shaft.
- 6. Install a **new** O-ring (11) into groove in oil pump cover (1). Place cover onto pump body. Install two Torx cover screws (3). Tighten to 70-80 **in-lbs** (7.9-9.0 Nm).

## **INSTALLATION**

FASTENER	TORQUE VALUE	
Oil pump to crankcase screw	125-150 <b>in-lbs</b>	14.1-16.9 Nm
Oil pump feed fitting	100-120 in-lbs	11.3-13.6 Nm
Oil pump high pressure feed hose to crankcase fitting	60-90 <b>in-lbs</b>	6.8-10.2 Nm
Oil pump high pressure feed hose fitting nut	85-105 <b>in-lbs</b>	9.6-11.8 Nm

- 1. See <u>Figure 3-134</u>. Place **new** mounting gasket (15) in position.
- 2. Secure pump to crankcase with two screws (2). Tighten to 125-150 **in-lbs** (14.1-16.9 Nm).

#### NOTE

Use **new** hose clamps to secure oil tank feed hose and vent hose to oil pump fittings. If fittings were removed, use TEFLON PIPE SEALANT or HYLOMAR on fitting threads.

- Install hoses on oil pump. Attach oil tank feed hose to hose fitting (5) with new clamp. Attach oil tank vent hose to elbow fitting (13) with new clamp.
- 4. See <u>Figure 3-135</u>. If oil pump feed fitting (2) was removed for any reason, install fitting in oil pump (1) cover. Tighten to 100-120 **in-lbs** (11.3-13.6 Nm).
- 5. If high pressure feed hose (4), was removed completely, install end opposite high pressure fitting nut (3) in crankcase. Tighten to 60-90 **in-lbs** (6.8-10.2 Nm).
- Install high pressure feed hose fitting nut (3) onto feed fitting on front of oil pump. Hold oil pump feed fitting with a wrench and tighten high pressure hose fitting nut to 85-105 in-lbs (9.6-11.8 Nm).
- 7. Fill oil tank with proper oil. See <u>1.6 ENGINE OIL AND FILTER</u>.

# **GENERAL**

The oil pump seldom needs servicing. Check for all possible malfunctions related to oil pressure before disassembling oil pump.

- 1. Make sure all oil line connections are tight. Verify that lines are not pinched or damaged.
- 2. Check level and condition of oil in tank. Pressure will be affected if oil is diluted. In freezing weather, proper circu-
- lation of oil can be affected if the oil feed line becomes clogged with ice or sludge.
- 3. Check for a grounded oil pressure switch wire [120] or faulty switch if oil pressure indicator light fails to go out with engine running.

See <u>3.6 ENGINE LUBRICATION SYSTEM</u>, <u>3.24 OIL TANK</u> and <u>6.31 OIL PRESSURE SWITCH</u>.

2013 Sportster Service: Engine 3-103

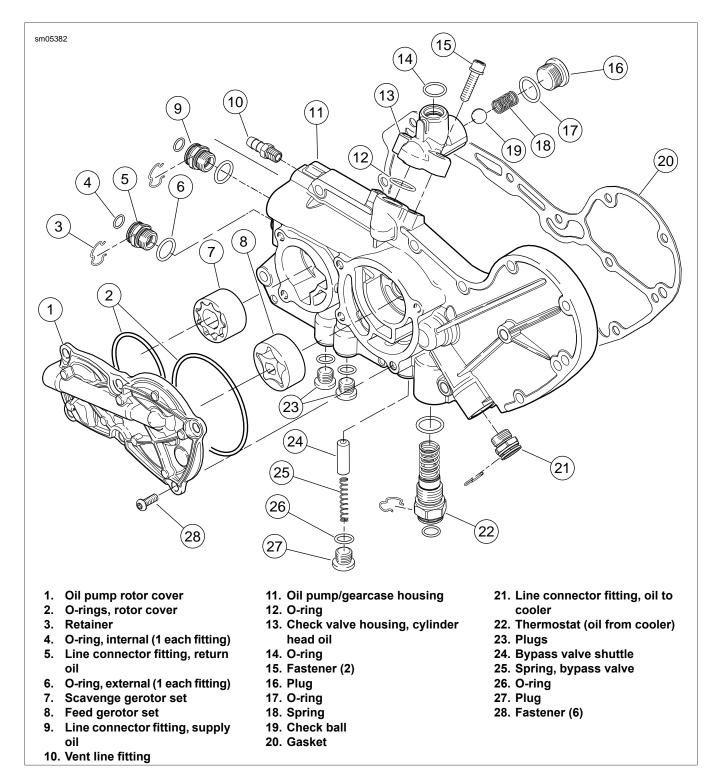


Figure 3-137. Oil Pump: XR 1200X

## **DISASSEMBLY**

#### NOTE

The oil pump can be removed with engine in frame and without removing gearcase cover.

- 1. Remove the exhaust system. See <u>4.14 EXHAUST SYSTEM: XR 1200X.</u>
- 2. Drain oil from oil tank.
- 3. Place pan under oil pump to collect oil.

- 4. See <u>Figure 3-138</u>. Remove nine fasteners (1) and remove gearcase and oil pump cover (2).
- See <u>Figure 3-139</u>. Remove oil cooler rigid lines (3) from gearcase cover. See <u>3.12 PRECISION COOLING</u> <u>SYSTEM: XR 1200X, Oil Pump Lines</u>.
- 6. Remove six screws (1) and remove oil pump cover (2). Discard cover O-rings.

#### NOTE

If oil pump rotors are to be re-used, they must be installed in the original location and orientation as when they are removed. Failure to do so can result in accelerated wear and possible engine failure.

7. See <u>Figure 3-140</u>. Wipe the oil film from the exposed surfaces of the rotors (1, 2) and mark each rotor using a permanent marker to aid in reassembly.

#### NOTE

The surface tension of the remaining oil film will make the rotors "stick" against the bottom of the bore. Never use a metallic tool to remove oil pump rotors. This could result in damage requiring rotor or gearcase cover replacement.

- 8. Grasp the outer rotor (1) of each stage and pull from housing bore.
- 9. Remove each inner rotor (2).
- 10. Remove the thermostat fitting (3) and spring.
- 11. Remove the plug and bypass valve components (4).
- 12. If necessary, remove remaining line connector fittings from gearcase cover.
- 13. Remove and discard all used O-rings.

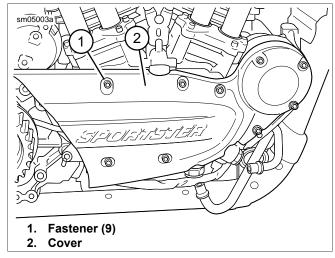


Figure 3-138. Oil Pump Cover: XR 1200X

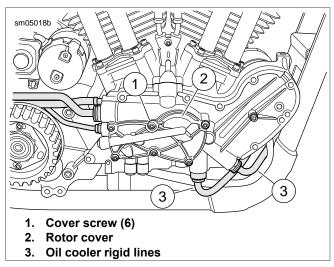


Figure 3-139. Oil Pump Rotor Cover: XR 1200X

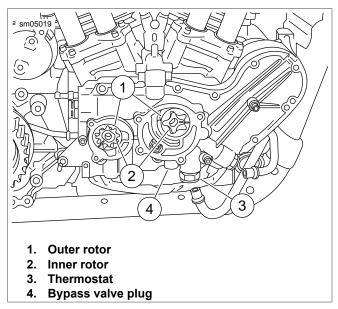


Figure 3-140. Oil Pump: XR 1200X

## **CLEANING AND INSPECTION**

## **A**WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

 Clean all parts in cleaning solvent. Blow out holes and oil passages with compressed air.

- 2. See Figure 3-141. Inspect both gerotor sets for wear.
  - a. Mesh pieces of each set together as shown.
  - b. Use a feeler gauge to determine clearance.
  - c. The SERVICE WEAR LIMIT between gerotors is 0.004 in (0.102 mm). Replace gerotors as a set if clearance exceeds this dimension.
  - Measure thickness of feed gerotors with a micrometer. Replace gerotors as a set if they are not the same thickness.
- 3. See <u>Figure 3-142</u>. Inspect thermostat spring for distortion or cracks. Inspect rubber seal for damage. Replace thermostat assembly as necessary.

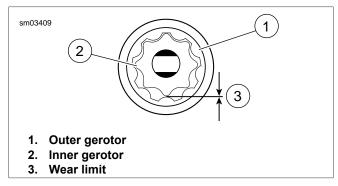


Figure 3-141. Gerotor Wear Limits

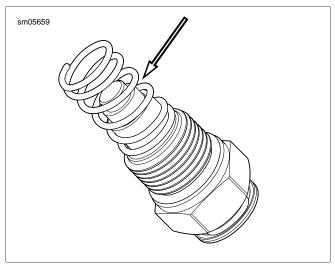


Figure 3-142. Thermostat: XR 1200X

## **ASSEMBLY**

FASTENER	TORQUE VALUE	
Gearcase housing plug	108-156 <b>in-lbs</b>	12.2-17.6 Nm
Oil pump rotor cover screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm

#### NOTE

Used O-rings can leak. Always install **new** O-rings when performing repairs.

- 1. Install **new** internal O-rings in each line connector fitting.
- Install new external O-rings on all connector fittings that have been removed.

#### NOTE

Apply a light coat of new engine oil to the shuttle valve components and oil pump rotors during assembly.

- 3. See <u>Figure 3-140</u>. Install bypass valve components (4). Tighten plug to 108-156 **in-lbs** (12.2-17.6 Nm).
- 4. Install thermostat and oil cooler line fitting (3).

#### NOTE

If oil pump rotors are to be re-used, they must be installed in the original location and orientation. Make sure the mark made during disassembly is visible when installing the rotors. Failure to do so can result in accelerated wear and possible engine failure.

- 5. Install each outer rotor (1) in its original location.
- 6. Install each inner rotor (2) in its original location.
- 7. See Figure 3-139. Install **new** O-rings in oil pump rotor cover and install cover using six fasteners (1). Tighten fasteners to 90-120 **in-lbs** (10.2-13.6 Nm).
- 8. Install oil cooler rigid lines (3) to quick connect fittings. See 3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines.
- See <u>Figure 3-143</u>. Install oil pump/cam support housing cover. Secure with 9 socket fasteners. Tighten in the sequence shown to 90-120 in-lbs (10.2-13.6 Nm).
- Install the exhaust system. See <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.

# <u>HOME</u>

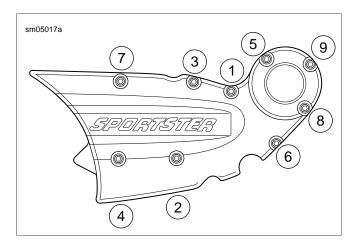


Figure 3-143. Oil Pump Cover Torque Sequence: XR 1200X

# **BOTTOM END OVERHAUL: ASSEMBLY**

## **CRANKCASE**

PART NUMBER	TOOL NAME
B-45520	GEAR DETENT ASSEMBLY AID
B-45655	CRANKCASE BEARING REMOVER/INSTALLER
B-45676-A	SPROCKET SHAFT SEAL/SPACER INSTALLER
HD-42326-B	CRANKSHAFT GUIDE TOOL
HD-42579-6	SPROCKET SHAFT ADAPTER
HD-42579-A	SPROCKET SHAFT BEARING/SEAL INSTALLATION TOOL
HD-42720-2	CRANKCASE BEARING REMOVER/INSTALLER BASE
J-5586-A	TRANSMISSION SHAFT RETAINING RING PLIERS

FASTENER	TORQUE VALUE	
Piston oil jet screw	38-48 <b>in-lbs</b>	4.3-5.4 Nm
Oil deflector plate screw: XR 1200X	38-48 in-lbs	4.3-5.4 Nm
Crankcase fastener	15-19 ft-lbs	20.3-25.8 Nm
Cylinder stud	120-240 <b>in-lbs</b>	13.6-27.1 Nm

# **Installing Piston Oil Jets**

## NOTES

- Damaged gaskets will result in either oil leakage or low oil pressure.
- See <u>Figure 3-144</u>. Gasket (4) is part of piston oil jet (2) assembly and is not sold separately.
- See <u>Figure 3-144</u>. With oil jet pointed upward, install **new** piston oil jet assemblies (2) with gaskets (4) in right crankcase.
- 2. Apply LOCTITE 222 LOW STRENGTH THREADLOCKER AND SEALANT (purple) to TORX screws (3) and screws (6).
- Install TORX screws to secure piston oil jet assembly to crankcase. Tighten to 38-48 in-lbs (4.3-5.4 Nm).
- 4. **XR 1200X:** Install oil deflector plate (5) using three screws (6). Tighten to 38-48 **in-lbs** (4.3-5.4 Nm).


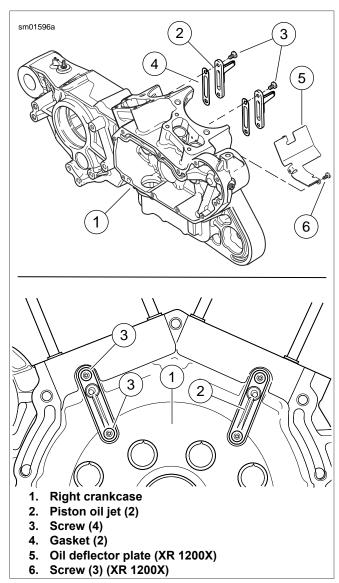


Figure 3-144. Piston Oil Jet Assemblies

# Installing Pinion Shaft Bearings

- See <u>Figure 3-145</u>. Lubricate pinion shaft and pinion shaft bearing (2) with SCREAMIN' EAGLE ASSEMBLY LUBE.
- 2. Slip bearing on pinion shaft.
- See <u>Figure 3-146</u>. Using TRANSMISSION SHAFT RETAINING RING PLIERS (Part No. J-5586-A), install new retaining ring in groove of pinion shaft bearing inner race. Make sure retaining ring is fully seated in groove.

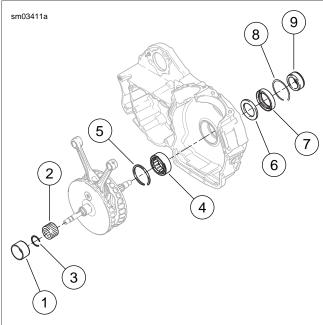

- 1. Outer bearing race
- 2. Pinion shaft bearing
- 3. Retaining ring
- 4. Left main bearing
- 5. Retaining ring
- 6. Thrust washer
- 7. Left main oil seal
- 8. Retaining ring
- 9. Sprocket shaft spacer

Figure 3-145. Pinion Shaft and Left Main Bearings

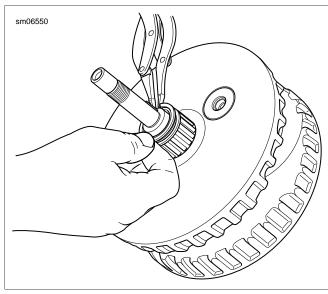


Figure 3-146. Installing Pinion Shaft Bearing and Retaining

## **Installing Left Main Bearing**

NOTE

When installing the left main bearing, the bearing presses from the inside of the left crankcase toward the outside. A shoulder is incorporated into the left crankcase which allows the bearing to be installed in one direction only.

- See <u>Figure 3-147</u>. Using CRANKCASE BEARING REMOVER/INSTALLER (Part No. B-45655) and CRANKCASE BEARING REMOVER/INSTALLER BASE (Part No. HD-42720-2), press left main bearing into the left crankcase.
  - Place support tube (1) on press bed with recessed cup end facing up.
  - b. With the inboard side of the left crankcase (2) facing upward, position crankshaft bearing bore (3) over support tube.
  - Place left main bearing (4) over bearing bore. Insert pilot/driver (5) through left main bearing, through crankshaft bearing bore and into support tube.
  - d. Apply pressure with press ram (6) until left main bearing bottoms out in bearing bore.
- See <u>Figure 3-148</u>. Install **new** retaining ring from the inside of the left crankcase.

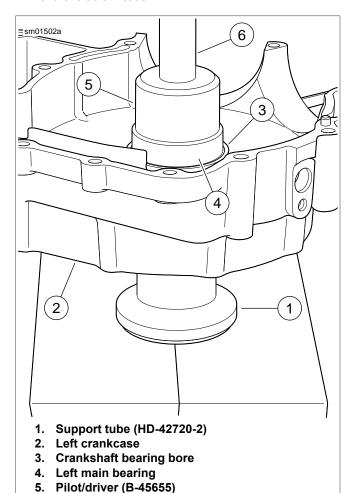


Figure 3-147. Installing Left Main Bearing in Crankcase

6. Press ram

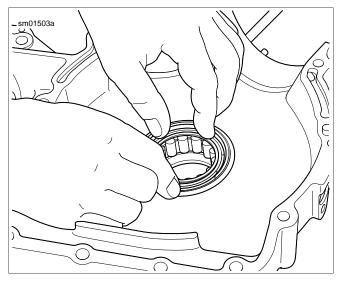


Figure 3-148. Installing Left Main Bearing Retaining Ring

# **Assembling Crankcase Halves**

 Install transmission assembly in left crankcase. See 5.14 TRANSMISSION INSTALLATION.

#### NOTE

See <u>Figure 3-149</u>. The gear detent assembly Aid is used to move the gear detent lever clear of the shifter drum for assembly.

- Retract detent assembly in right case half and install GEAR DETENT ASSEMBLY AID (Part No. B-45520) until it bottoms in right case half.
- 3. Shift transmission to 1st gear.
- Lubricate left main bearing with SCREAMIN' EAGLE ASSEMBLY LUBE.
- 5. Assemble crankcase halves together.
  - See <u>Figure 3-150</u>. Install flywheel assembly in right crankcase. Slide pinion shaft through outer race in right crankcase.
  - b. Slide CRANKSHAFT GUIDE TOOL (Part No. HD-42326-B) onto flywheel sprocket shaft.
  - Apply a thin coat of HARLEY-DAVIDSON HIGH-PERFORMANCE SEALANT - GRAY to crankcase joint faces.
  - d. See Figure 3-151. Carefully fit crankcases together.

#### NOTE

**XR 1200X:** See <u>Figure 3-152</u>. Install the double-ended bolt in position 8 to secure the front cylinder head oil return line.

- Apply a drop of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to last few threads of each crankcase fastener and install fasteners (thirteen long and four short) in crankcase assembly.
- f. In sequence, tighten fasteners to 15-19 ft-lbs (20.3-25.8 Nm).
- 6. Remove transmission gear detent assembly aid.

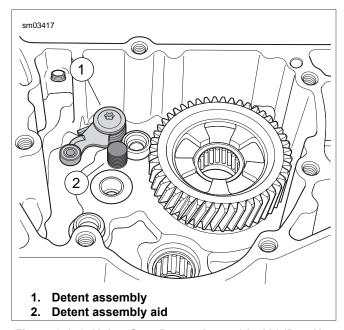


Figure 3-149. Using Gear Detent Assembly Aid (Part No. B-45520)

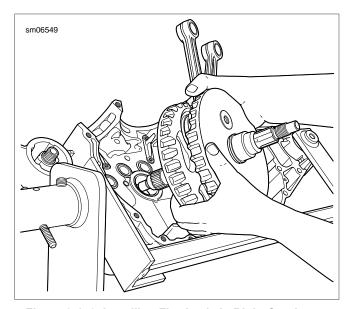


Figure 3-150. Installing Flywheels in Right Crankcase

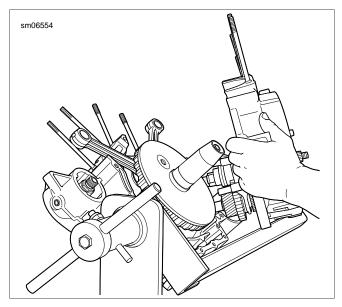


Figure 3-151. Assembling Crankcases with Crankshaft Guide Tool (Part No. HD-42326-B)

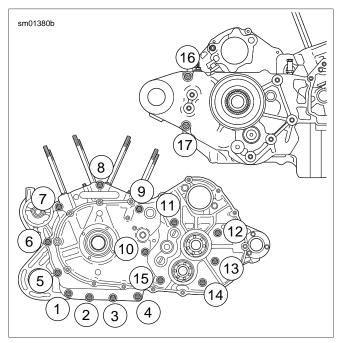


Figure 3-152. Crankcase Fastener Torque Sequence

See <u>Figure 3-153</u> and <u>Figure 3-154</u>. Install spacer in ID of **new** seal. With the open (lipped) side of seal facing outward, center seal/spacer assembly over bearing bore.

## **NOTES**

- Removing spacer after installation requires seal procedure to be repeated.
- The XR 1200X requires the use of the SPROCKET SHAFT ADAPTER (Part No. HD-42579-6).

- 8. See Figure 3-155. Install bearing seal and spacer.
  - a. Center seal/spacer driver (2) over seal, so that the sleeve (smaller O.D.) seats between seal wall and garter spring.
  - b. Assemble SPROCKET SHAFT BEARING/SEAL INSTALLATION TOOL (Part No. HD-42579-A) (1) and SPROCKET SHAFT SEAL/SPACER INSTALLER (Part No. B-45676-A) onto sprocket shaft.
  - Rotate handle clockwise until the spacer makes contact with the bearing. Remove tool from sprocket shaft.
- Install retaining ring into groove in sprocket shaft bearing bore.

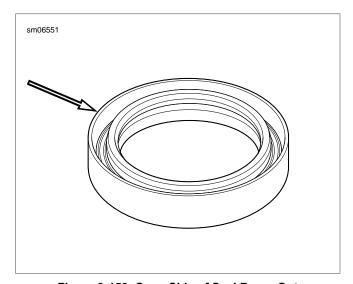


Figure 3-153. Open Side of Seal Faces Out

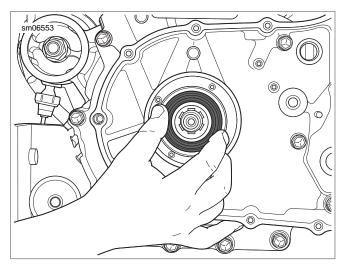


Figure 3-154. Install Spacer and Seal

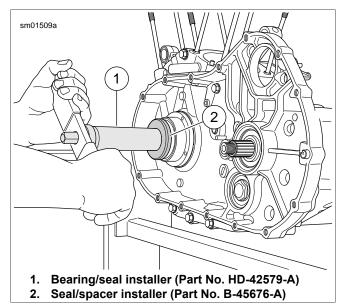


Figure 3-155. Install Bearing Seal/Spacer

# **Installing Cylinder Base Studs**

See Figure 3-156. If cylinder studs were removed, install them as follows:

- 1. Pack clean towels into crankcase opening.
- 2. Place a steel ball into a head screw (1).
- 3. The cylinder studs (2) have a shoulder (3) at the lower end. Place the end of the studs without the shoulder into the head screw.
- Install the studs in the crankcase with the shoulder end down. Use an air gun (4) to drive the stud until the shoulder reaches the crankcase.
- 5. Remove air gun. Use a torque wrench to tighten studs to 120-240 in-lbs (13.6-27.1 Nm).

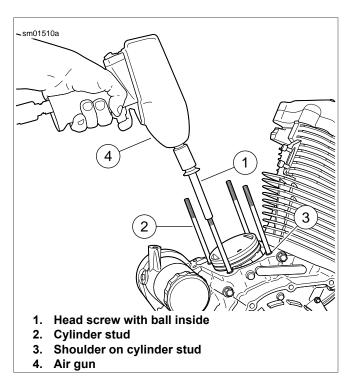


Figure 3-156. Cylinder Studs

## **CAM AND PINION GEAR IDENTIFICATION**

#### NOTE

Prior to changing any cam gears, check gear shaft fit within corresponding bushings. Worn bushings can cause excessive backlash.

See Figure 3-157. Cam lobes are stamped with a number (1, 2, 3, or 4) followed by a letter. The number identifies the cam location/function. The letter identifies the cam lobe profile. Refer to Table 3-42.

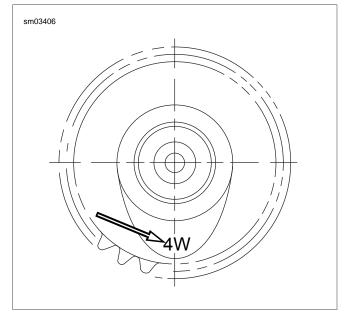


Figure 3-157. Cam Identification (typical)

Table 3-42. Cam Identification

CAM LOCATION	XL	XR
Rear exhaust	1W	1S
Rear intake	2W	2S
Front intake	3W	3S
Front exhaust	4W	48

# CAM GEARS AND GEARCASE COVER: XL MODELS

PART NUMBER	TOOL NAME
HD-43984	CRANKSHAFT LOCKING TOOL

FASTENER	TORQUE VALUE	
Pinion shaft locking nut: XR 1200X	19-21 ft-lbs	26-29 Nm
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm

1. See <u>Figure 3-158</u>. Make sure shaft key (1) is installed on flywheel pinion shaft. Install oil pump drive gear (10) and pinion gear (9) on pinion shaft.


### NOTE

See <u>Figure 3-159</u>. Timing mark on pinion gear tooth is aligned with keyway in ID of pinion gear. The timing mark will allow you to easily position pinion gear over shaft key and against oil pump drive gear on pinion shaft.

 See Figure 3-158. Clean threads on pinion shaft and nut (8). Apply several drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to threads of nut.

### NOTE

When using CRANKSHAFT LOCKING TOOL, do NOT use impact wrench to drive nut onto pinion shaft.

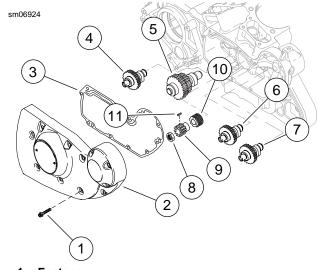

- 1. Fastener
- 2. Cover
- 3. Gasket
- 4. Rear exhaust cam
- 5. Rear intake cam
- 6. Front intake cam
- 7. Front exhaust cam
- 8. Nut
- 9. Pinion gear
- 10. Oil pump drive gear
- 11. Shaft key

Figure 3-158. Gearcase Cover and Cam Gears

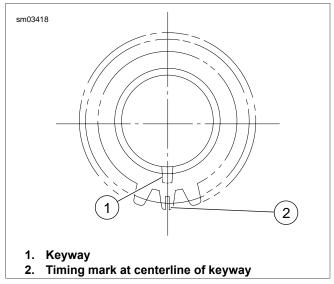


Figure 3-159. Pinion Gear Timing Mark and Keyway

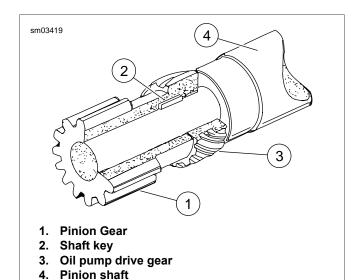


Figure 3-160. Oil Pump Drive Gear and Pinion Gear Installed on Pinion Shaft

- 3. See Figure 3-161. Install pinion shaft nut.
  - a. Install CRANKSHAFT LOCKING TOOL (Part No. HD-43984) over pinion shaft.
  - b. Install nut on pinion shaft.
  - c. Tighten to 19-21 ft-lbs (26-29 Nm).
  - d. Tighten an additional 15-19 degrees of rotation.
  - e. Remove CRANKSHAFT LOCKING TOOL (Part No. HD-43984).

## NOTE

See <u>Figure 3-162</u>. Install rear exhaust and front intake cam gears before rear intake cam gear. This prevents an alignment problem with the pinion gear.

- Lubricate all cams and all cam bushings in right crankcase with SCREAMIN' EAGLE ASSEMBLY LUBE.
- See <u>Figure 3-162</u>. Rotate crankshaft until timing mark on pinion gear points exactly at centerline of rear intake cam bushing.

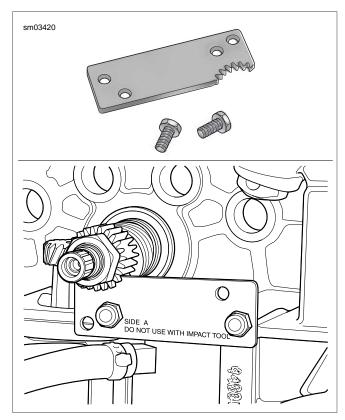


Figure 3-161. Crankshaft Locking Tool (Part No. HD-43984)

- See <u>Figure 3-158</u>. Install rear exhaust cam (4). Rotate cam until timing mark (a slot) points exactly at centerline of rear intake cam bushing.
- Install front intake cam (6). Rotate cam until slotted timing mark points exactly at centerline of rear intake cam bushing.

## NOTE

See <u>Figure 3-162</u>. "V" marks on rear intake cam are not used for timing of Sportster model engines.

- 8. See Figure 3-158. Install rear intake cam (5). As you install this cam, rotate it so that the three timing marks (dots) line up exactly with timing marks on the pinion gear, rear exhaust cam and front intake cam.
- 9. Install front exhaust cam (7). Rotate the cam to line up the timing mark with the timing mark of the front intake cam.
- 10. See <u>Figure 3-162</u>. Verify timing marks. If necessary, remove a cam, rotate it slightly, and install. If timing marks are off even one tooth, engine will not run correctly.
- 11. See <u>Figure 3-158</u>. Install a **new** dry gasket (3) on gearcase cover (2).

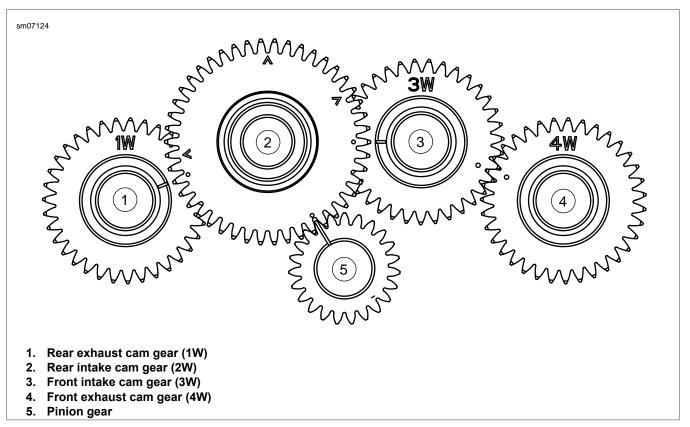


Figure 3-162. Cam, Pinion Gear and Timing Mark Indexing (cam #2 "V" marks are not used for timing)

- 12. Lubricate all cam bushings in gearcase cover with SCREAMIN' EAGLE ASSEMBLY LUBE.
- Install gearcase cover. Secure cover to crankcase with 11 fasteners.
- See <u>Figure 3-163</u>. Tighten in sequence to 90-120 in-lbs (10.2-13.6 Nm).
- 15. Gauge cam gear end play. See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Cam Gear End Play.</u>

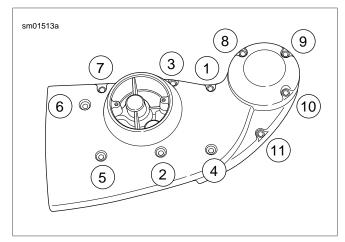


Figure 3-163. Gearcase Cover Mounting Screw Torque Sequence

## CAM GEARS AND GEARCASE COVER: XR 1200X

PART NUMBER	TOOL NAME
HD-43984	CRANKSHAFT LOCKING TOOL

FASTENER	TORQUE	VALUE
Pinion shaft locking nut: XR 1200X	19-21 ft-lbs	26-29 Nm
Gearcase cover fastener	90-120 in-lbs	10.2-13.6 Nm
Oil pump rotor cover screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm
Check valve housing fastener: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm

 See <u>Figure 3-164</u>. Make sure t-key (9) is installed on flywheel pinion shaft. Install spacer (6) and pinion gear (5) on pinion shaft.

#### NOTE

See <u>Figure 3-165</u>. Timing mark on pinion gear tooth is aligned with keyway in ID of pinion gear. The timing mark will allow you to easily position pinion gear over t-key and against oil pump drive gear on pinion shaft.

 See Figure 3-164. Clean threads on pinion shaft and nut
 (4). Apply several drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to threads of nut.

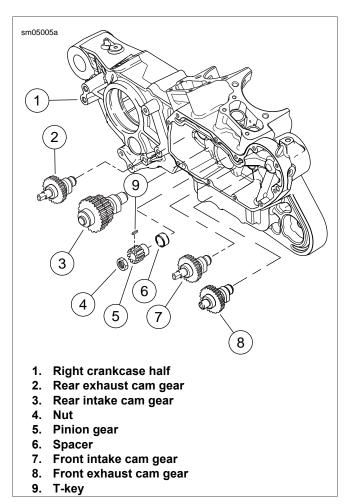


Figure 3-164. Gearcase and Valve Train Components: XR 1200X

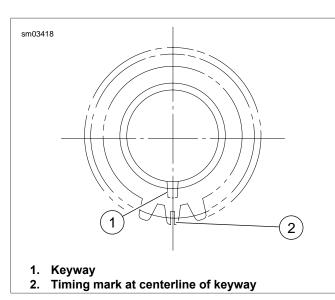


Figure 3-165. Pinion Gear Timing Mark and Keyway

#### NOTE

When using CRANKSHAFT LOCKING TOOL, do NOT use impact wrench to drive nut onto pinion shaft.

 See Figure 3-166. Install CRANKSHAFT LOCKING TOOL (Part No. HD-43984) over pinion shaft. Install nut on pinion shaft. Tighten to 19-21 ft-lbs (26-29 Nm). Then tighten nut 15-19 degrees of rotation. Remove CRANKSHAFT LOCKING TOOL (Part No. HD-43984).

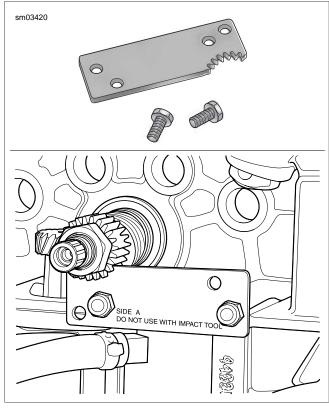


Figure 3-166. Crankshaft Locking Tool (Part No. HD-43984)

#### NOTE

Because of the larger diameter gear on the outboard end of the rear intake cam gear, install the rear exhaust and front intake cam gears before the rear intake cam gear.

- 4. Lubricate all cams and all cam bores in right crankcase with SCREAMIN' EAGLE ASSEMBLY LUBE.
- 5. See <u>Figure 3-167</u>. Rotate crankshaft until timing mark on pinion gear points exactly at centerline of rear intake cam hore.
- 6. Install rear exhaust cam. Rotate cam until timing mark (a slot) points exactly at centerline of rear intake cam bore.
- Install front intake cam. Rotate cam until slotted timing mark points exactly at centerline of rear intake cam bore.

#### NOTE

V marks on rear intake cam are not used for timing of Sportster model engines.

- 8. Install rear intake cam. Rotate the cam to line up the three timing marks (dots) exactly with timing marks on the pinion gear, rear exhaust cam and front intake cam.
- Install front exhaust cam. Rotate the cam to line up its timing mark (a dot) with timing mark (dot) of front intake cam

- Verify timing marks. If necessary, remove a cam, rotate it slightly and replace it. If timing marks are off even one tooth, engine will not run correctly.
- 11. Lubricate all cam bores in gearcase cover with engine oil.
- 12. See <u>Figure 3-168</u>. Install gearcase cover with **new** gasket and secure with three fasteners (6). Tighten fasteners to 90-120 **in-lbs** (10.2-13.6 Nm).
- 13. Install oil pump rotors. Orient the rotors as removed.
- Install new O-rings in oil pump cover and install using six fasteners (4). Tighten to 90-120 in-lbs (10.2-13.6 Nm).

- 15. Install check valve housing using a new base O-ring. Tighten fasteners (3) to 90-120 **in-lbs** (10.3-13.6 Nm).
- Connect rigid lines (1) and vent hose (2). See <u>3.12 PRE-CISION COOLING SYSTEM: XR 1200X</u>, Oil Pump Lines.
- 17. See <u>Figure 3-169</u>. Install gearcase and oil pump cover. Secure with 9 socket fasteners. Tighten in the sequence shown to 90-120 **in-lbs** (10.2-13.6 Nm).
- 18. Gauge cam gear end play. See <u>3.17 BOTTOM END OVERHAUL: DISASSEMBLY, Cam Gear End Play.</u>

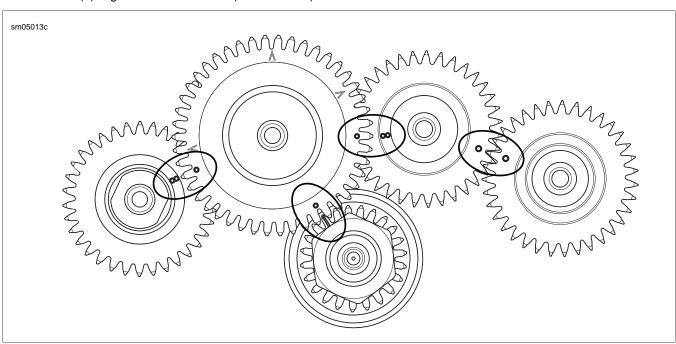


Figure 3-167. Cam and Pinion Gear Timing Marks: XR 1200X (V-marks are not used for timing)

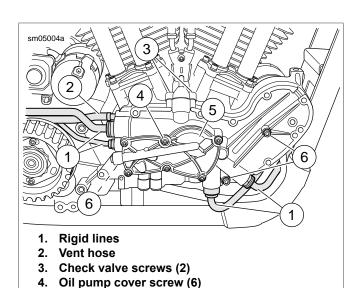


Figure 3-168. Gearcase Cover and Oil Pump: XR 1200X

5. Oil pump cover

6. Gearcase cover fastener (3)

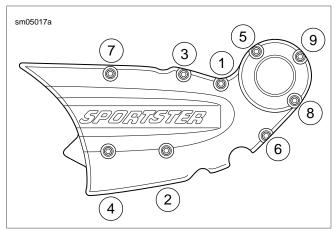


Figure 3-169. Oil Pump Cover Torque Sequence: XR 1200X

#### **TAPPETS**

FASTENER	TORQUE VALUE			
Tappet cover, anti-rotation mounting screw	90-120 <b>in-lbs</b>	10.2-13.6 Nm		

#### General

See Figure 3-170. The tappet and roller (4), under compression force from valve spring, follow the surface of the revolving cam. The up-and-down motion is transmitted to the valve by the pushrod and rocker arm. The tappet contains a piston (2) and cylinder. The check valve (3) allows the unit to fill with engine oil (1) reducing clearance in the valve train. The unit automatically compensates for heat expansion to maintain minimal clearances between the cam and the pushrod.

It is normal for tappets to click when engine is started after standing for some time. Tappets have a definite leakdown rate which permits the oil in the tappets to escape. This allows units to compensate for various expansion conditions of parts and still maintain minimal clearances. Tappets are functioning properly if they become quiet after a few minutes of engine operation.

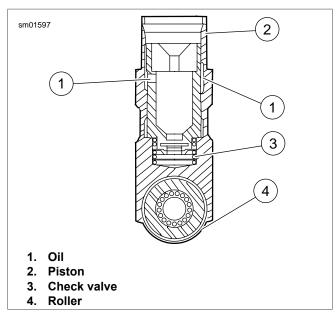


Figure 3-170. Tappet Assembly

### Cleaning and Inspection

#### WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Clean all parts, except roller/tappet assembly, in solvent. Blow dry with compressed air.
- Measure valve tappet OD and crankcase bore ID to calculate clearance. If guide clearance exceeds specification, replace the tappets and/or crankcases. Refer to <a href="Table 3-43">Table 3-43</a>.

- 3. Measure tappet roller free play. Recommended service practice is tappet replacement.
- 4. Measure tappet roller end clearance.
- Soak tappets in clean engine oil and kept covered until assembly.
- 6. Apply SCREAMIN' EAGLE ASSEMBLY LUBE to rollers and OD of tappet before installation.

**Table 3-43. Valve Tappet Specifications** 

ITEM	SERVICE WEAR LIMIT	
	in	mm
Tappet clearance in guide	0.0030	0.076
Tappet roller free play (clearance on pin)	0.0015	0.038
Tappet roller end clearance	0.026	0.660

#### Installation

- See <u>Figure 3-171</u>. Rotate engine so that both tappets (3) from the cylinder being serviced will be installed on the base circle (lowest position) of the cam.
- Apply a liberal amount of engine oil to tappet assembly (especially roller needles) for smooth initial operation.

#### NOTE

Face the flats of the tappets front and rear when installed in the engine and with the oil feed hole toward the gear cover.

- 3. Insert the intake and exhaust tappets into the anti-rotation blocks (2).
- 4. Install anti-rotation blocks with tappets into bore in right crankcase (4). Secure with screw (1). Tighten to 90-120 in-lbs (10.2-13.6 Nm).

#### NOTE

The front tappet cover has a tab on the front or right side. The rear tappet cover has a tab on the rear or left side.

Install the tappet covers, pushrod covers, and pushrods.
 See <u>3.16 TOP END OVERHAUL: ASSEMBLY, Tappet Covers, Pushrod Covers and Pushrods</u>.

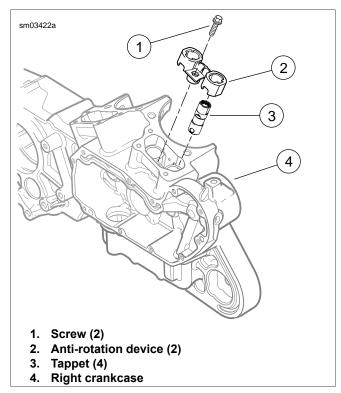


Figure 3-171. Tappet Components

## **OIL FILTER MOUNT**

#### **GENERAL**

Oil is pressure-fed from the oil pump to the oil filter mount via a hose connection. Oil travels through the filter mount into the filter via outer filter holes.

Adequate oil pressure activates the oil pressure indicator lamp switch in the filter mount, which turns off the oil pressure indicator lamp.

The check ball in the filter adapter opens at:

- XL Models: 10-13 psi (69-90 kPa) oil pressure.
- XR 1200X: 5-7 psi (34-48 kPa) oil pressure.

Filtered oil leaves the filter, flowing past the check ball.

#### DISASSEMBLY

- 1. Remove oil filter. See 1.6 ENGINE OIL AND FILTER.
- See Figure 3-172. Remove oil filter adapter (1) from oil filter mount (2).
- Remove check ball (3) and spring (4).

#### CLEANING AND INSPECTION

## WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

Thoroughly clean all parts in cleaning solvent. Blow out holes and passages using compressed air.

#### **ASSEMBLY**


FASTENER	TORQUE VALUE		
Oil filter adapter	18-22 ft-lbs	24.4-29.8 Nm	

#### NOTE

Use TEFLON PIPE SEALANT or HYLOMAR GASKET AND THREAD SEALANT on all fittings installed to oil filter mount.

See Figure 3-172. Place spring (4) and check ball (3) into threaded hole at center of mount (2). Push oil filter adapter against ball to compress spring.

- Install threaded end with LOCTITE 242 MEDIUM STRENGTH THREADLOCKER into threaded hole. Tighten oil filter adapter to 18-22 ft-lbs (24.4-29.8 Nm).
- Install oil filter. Fill oil tank with proper oil. See 1.6 ENGINE OIL AND FILTER, Changing Oil and Filter.

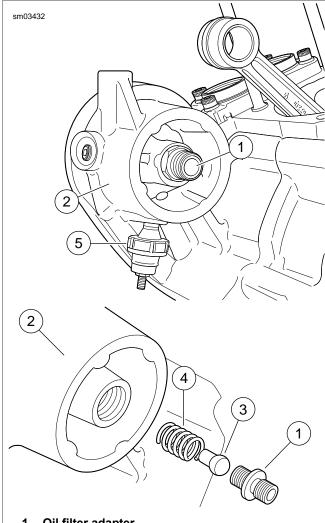

- 1. Oil filter adapter
- Oil filter mount (part of right crankcase housing)
- 3. Check ball
- 4. Spring
- 5. Oil pressure indicator lamp switch

Figure 3-172. Oil Filter Mount, Typical (XL model shown)

**OIL TANK** 

#### PRESSURE RELIEF VALVE

The oil tank has a pressure relief valve in the top of the tank. If the vent line is pinched, restricted or if the tank is overfilled, excessive pressure is created. The valve opens if the pressure in the tank exceeds 10 psi (68.9 kPA).

#### **OIL LINE ROUTING: XL MODELS**

See Figure 3-173. The feed, vent and return ports are located on the bottom of the oil tank to reduce under seat congestion. An oil line routes the oil from the feed port at the lower right front corner to a fitting on the oil pump.

From the feed section of the oil pump, another feed line directs the flow up to the oil filter mount. Eventually, oil drains to the sump where it collects in the scavenge section of the oil pump. The return line routes the oil back to the tank where the cycle is repeated.


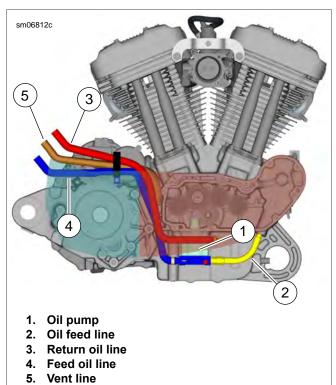


Figure 3-173. Engine Hose Routing: XL Models

#### **OIL LINE ROUTING: XR 1200X**

See Figure 3-174. The feed, vent and return ports are located on the bottom of the oil tank to reduce under seat congestion. An oil line routes the oil from the feed port at the lower right front corner to a fitting on the oil pump.

Oil travels to the feed pump through an internal passage in the pump housing. The feed pump pushes oil to the oil cooler, oil filter, and cylinder heads. Oil used for lubricating internal engine components eventually drains into the sump. Here the scavenge pump collects it and routes it back to the oil tank. The oil from the cylinder heads and from the scavenge pump is returned to the oil tank. See 3.6 ENGINE LUBRICATION SYSTEM, Oil Flow: XR 1200X.

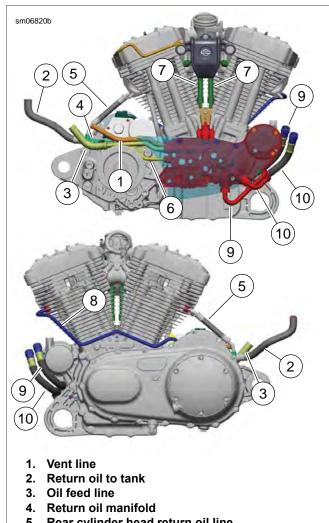

- 5. Rear cylinder head return oil line
- 6. Return oil from pump
- 7. Cylinder head feed oil lines
- 8. Front cylinder head return oil line
- 9. Oil from oil cooler
- 10. Oil to oil cooler

Figure 3-174. Engine Oil Line Routing: XR 1200X

#### REMOVAL

- Remove seat.
- 2. Remove left side cover. See 2.18 LEFT SIDE COVER.

## **A**WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- Disconnect negative (-) battery cable from ground stud on crankcase. Disconnect positive (+) battery cables at battery.
- Drain oil tank. See 1.6 ENGINE OIL AND FILTER, Changing Oil and Filter.

- Remove right side cover by gently prying bottom lip off tab on oil tank. Then lift top of cover off two stanchions molded into top of oil tank.
- Remove rear belt guard. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>.

#### NOTE

For ease of assembly, mark oil tank lines, oil feed, drain, vent and return, as they are removed from oil tank.

- 7. Remove clamp and disconnect the drain line from oil tank.
- Remove clamp from upper end of feed oil line and disconnect line from oil tank.
- Remove clamp from upper end of the return oil line and disconnect the line from oil tank.
- Remove rear fender. See 2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, 2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V or 2.35 REAR FENDER: XR 1200X.
- Remove clamp from upper end of vent oil line and disconnect line from oil tank.
- Remove three screws and remove oil tank from right side of motorcycle.

#### **INSTALLATION**

FASTENER	TORQUE VALUE		
Oil tank mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	

- Slide oil tank into position in frame from right side of vehicle.
- See <u>Figure 3-175</u> or <u>Figure 3-176</u>. Install oil tank mounting screw (3) through bracket (4) and loosely screw into oil tank to hold tank in place.
- Install remaining two mounting screws through frame and screw into oil tank. Tighten all three fasteners to 36-60 in-lbs (4.1-6.8 Nm).

#### **NOTES**

- All Models: The vent oil hose is composed of a flexible hose originating at the gearcase cover elbow fitting, mated to a hard plastic line, then another flexible hose at the oil tank vent fitting.
- XR 1200X: The return oil line is a manifold assembly that branches between the crankcase and the rear cylinder head.
- 4. Install the oil vent hose (5), the feed hose (8), the drain hose (9) and the return oil line (6) to the oil tank fittings. Secure with **new** clamps.
- Install rear fender. See <u>2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, 2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V or 2.35 REAR FENDER: XR 1200X.</u>
- Install rear belt guard. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>.

- 7. Install right side cover.
  - Engage two holes on top of cover onto stanchions on top of oil tank.
  - Rotate bottom end of cover downward until bottom lip of cover snaps in place on tab on bottom of oil tank.
- 8. Fill oil tank and install filler cap/dipstick. See <u>1.6 ENGINE</u> OIL AND FILTER, Checking and Adding Oil.

### **AWARNING**

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

- Connect positive (+) battery cables to battery. Connect negative (-) battery cable to ground point on engine crankcase. See <u>1.22 BATTERY MAINTENANCE</u>.
- 10. Install left side cover.

#### WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

11. Install seat.

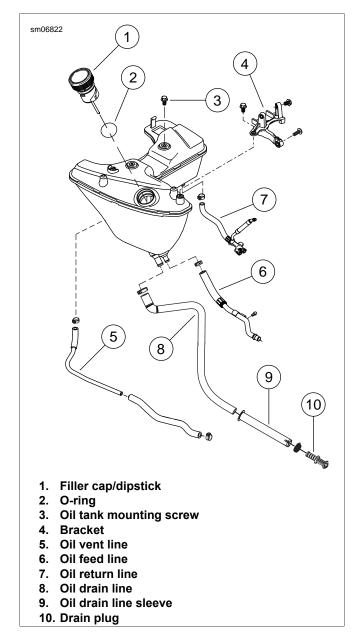


Figure 3-175. Engine Oil Tank Assembly: XR 1200X

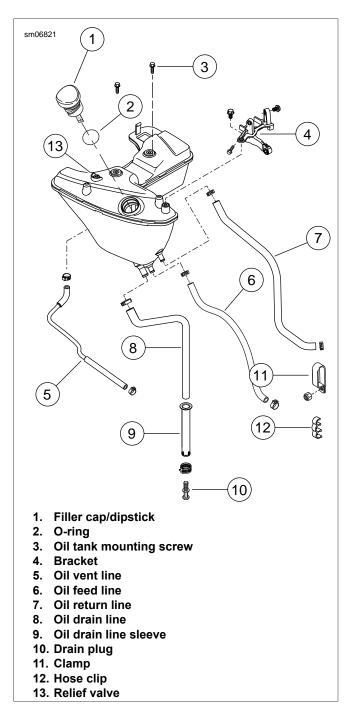


Figure 3-176. Engine Oil Tank Assembly: XL Models

## **NOTES**

## TABLE OF CONTENTS

SUBJECT	PAGE NO.
4.1 FASTENER TORQUE VALUES	4-1
4.2 SPECIFICATIONS: FUEL SYSTEM	4-4
4.3 AIR CLEANER ASSEMBLY	4-5
4.4 FUEL TANK: XL MODELS	4-8
4.5 FUEL TANK: XR 1200X	4-12
4.6 THROTTLE POSITION SENSOR (TPS)	4-17
4.7 ENGINE TEMPERATURE (ET) SENSOR	4-20
4.8 INDUCTION MODULE: XL MODELS	4-23
4.9 INDUCTION MODULE: XR 1200X	4-29
4.10 IDLE AIR CONTROL (IAC)	4-33
4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR	
4.12 OXYGEN (O2) SENSOR	
4.13 EXHAUST SYSTEM: XL MODELS	4-42
4.14 EXHAUST SYSTEM: XR 1200X	4-46
4.15 FUEL INJECTORS	4-49
4.16 FUEL PUMP	4-52
4.17 FUEL FILTER ELEMENT	4-57
4.18 FUEL PRESSURE TEST	
4.19 INTAKE LEAK TEST	4-61
4 20 EVAPORATIVE EMISSIONS CONTROL	4-63

# **FASTENER TORQUE VALUES**

# FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE VALUE		NOTES
Air box to bracket fasteners: XR 1200X	36-60 in-lbs	4.1-6.7 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank
Air cleaner breather screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm	4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V
Air cleaner breather screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm	4.3 AIR CLEANER ASSEMBLY, XL 1200V
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V
Air cleaner cover screw	36-60 in-lbs	4.1-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL 1200V
Air filter screw	40-60 <b>in-lbs</b>	4.5-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL 1200V
Brake rod to bell crank screw	120-180 in-lbs	13.6-20.4 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Cylinder head exhaust port nut	96-120 <b>in-lbs</b>	10.9-13.6 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Cylinder head oil feed flare fitting: XR 1200X	22-26 ft-lbs	29.8-35.3 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Cylinder head oil feed line flare nut: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
ET sensor	120-168 <b>in-lbs</b>	13.6-19.0 Nm	4.7 ENGINE TEMPERATURE (ET) SENSOR, Installation
EVAP canister clip mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
EVAP canister guard screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
EVAP canister mounting bracket screw	17-22 ft-lbs	23.1-29.9 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
EVAP canister mounting bracket screw	17-22 ft-lbs	23.1-29.9 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
Exhaust clamp, lower nut: XR 1200X	30-33 ft-lbs	40.7-44.7 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Exhaust flange nut: XR 1200X	96-120 <b>in-lbs</b>	10.8-13.6 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation/SPECIAL SEQUENCE TO TIGHTEN
Exhaust heat shield clamps	20-40 in-lbs	2.3-4.5 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Exhaust heat shield clamps	20-40 in-lbs	2.3-4.5 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Exhaust pipe clamp bracket screw: XL Models	30-33 ft-lbs	40.7-44.8 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Exhaust pipe clamp nut: XL Models	20-30 ft-lbs	27.1-40.7 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Filler housing screws	40-45 in-lbs	4.5-5.1 Nm	4.5 FUEL TANK: XR 1200X, Assemble Fuel Tank
Fuel hose retaining bracket screw	60 in-lbs	6.8 Nm	4.15 FUEL INJECTORS, Installation
Fuel pump bracket mounting screw	19-36 <b>in-lbs</b>	2.1-4.1 Nm	4.16 FUEL PUMP, Assembly
Fuel pump module mounting screw	40-45 <b>in-lbs</b>	4.5-5.1 Nm	4.16 FUEL PUMP, Installation
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm	4.17 FUEL FILTER ELEMENT, Installation
Fuel tank cover screw: XR 1200X	24-30 in-lbs	2.7-3.4 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank
Fuel tank fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank
Fuel tank fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank

FASTENER	TORQUE VALUE		NOTES
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm	4.4 FUEL TANK: XL MODELS, Installing Fuel Tank
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm	4.8 INDUCTION MODULE: XL MODELS, Installation
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm	4.15 FUEL INJECTORS, Installation
IAC mounting screw: XL models	60 in-lbs	6.8 Nm	4.10 IDLE AIR CONTROL (IAC), Installation: XL Models
IAC mounting screw: XL Models	60 in-lbs	6.8 Nm	4.8 INDUCTION MODULE: XL MODELS, Assembly
IAC mounting screw: XR 1200X	60 in-lbs	6.8 Nm	4.9 INDUCTION MODULE: XR 1200X, Assembly
IAC mounting screw: XR 1200X	60 in-lbs	6.8 Nm	4.10 IDLE AIR CONTROL (IAC), Installation: XR 1200X
Induction module cable bracket screw: XL Models	60 in-lbs	6.8 Nm	4.8 INDUCTION MODULE: XL MODELS, Assembly
Induction module cover to cylinder head fastener: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X
Induction module cover to cylinder head sockethead bolts: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Induction module cover to induction module fastener: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Induction module cover to induction module fastener: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X
Induction module cover to wire form fastener: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Induction module mounting bracket screw: XL models	90-120 <b>in-lbs</b>	10.2-13.6 Nm	4.8 INDUCTION MODULE: XL MODELS, Installation
Induction module screw: XL models	35 <b>in-lbs</b>	4.0 Nm	4.8 INDUCTION MODULE: XL MODELS, Assembly
Induction module screw: XL Models	35 <b>in-lbs</b>	4.0 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XL Models
Intake manifold mounting screw: XL models	96-120 <b>in-lbs</b>	10.9-13.6 Nm	4.8 INDUCTION MODULE: XL MODELS, Installation
Intake manifold mounting screw: XR 1200X	90-120 in-lbs	10.3-13.6 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Interconnect bracket to frame fastener: XR 1200X	30-33 ft-lbs	40.7-44.7 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Master cylinder mounting bracket, rear, screw: XL models	17-22 ft-lbs	23.0-29.8 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
Muffler interconnect bracket mounting screw: XL Models	30-33 ft-lbs	40.7-44.7 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Muffler mount to frame, front fastener: XR 1200X	45-50 ft-lbs	61.0-67.8 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler mount to frame, rear fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler to front muffler mount fastener: XR 1200X	120-180 in-lbs	13.6-20.3 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler to interconnect bracket screw: XL Models	15-19 ft-lbs	20.4-25.8 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Muffler to muffler bolt: XR 1200X	120-180 in-lbs	13.6-20.3 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler torca clamp nut	38-43 ft-lbs	51.6-58.4 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation

## <u>HOME</u>

FASTENER	TORQUE	VALUE	NOTES
Muffler to rear muffler mount fastener: XR 1200X	120-180 <b>in-lbs</b>	13.6-20.3 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
O2 sensor	29-44 ft-lbs	39.3-59.7 Nm	4.12 OXYGEN (O2) SENSOR, Installation
O2 sensor	29-44 ft-lbs	39.3-59.7 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Throttle cable bracket screw: XR 1200X	60 in-lbs	6.8 Nm	4.9 INDUCTION MODULE: XR 1200X, Assembly
TMAP sensor screw	80 <b>in-lbs</b>	9.0 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X
TPS screw: XL Models	35 <b>in-lbs</b>	4.0 Nm	4.6 THROTTLE POSITION SENSOR (TPS), Installation: XL Models
TPS screw: XR 1200X	29 <b>in-lbs</b>	3.3 Nm	4.6 THROTTLE POSITION SENSOR (TPS), Installation: XR 1200X
Wire form to induction module cover fastener: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X

# **SPECIFICATIONS: FUEL SYSTEM**

4 2

## **SPECIFICATIONS**

Table 4-1. Capacities: XL 883 Models

ITEM	XL 883R		XL 883L		XL 883N	
	U.S.	METRIC	U.S.	METRIC	U.S.	METRIC
Fuel tank (total)	3.3 gal	12.5 L	4.5 gal	17.0 L	3.3 gal	12.5 L
Oil tank with filter	2.8 qt	2.6 L	2.8 qt	2.6 L	2.8 qt	2.6 L
Transmission (approximate)	1.0 qt	0.95 L	1.0 qt	0.95 L	1.0 qt	0.95 L
Low fuel warning light	0.8 gal	3.0 L	1.0 gal	3.8 L	0.8 gal	3.0 L

Table 4-2. Capacities: XL 1200 Models and XR 1200X

ITEM	XL 1200C/C ANV/CP/CA/CB		XL 1200X/V		XR 1200X	
	U.S.	METRIC	U.S.	METRIC	U.S.	METRIC
Fuel tank (total)	4.5 gal	17.0 L	2.1 gal	7.9 L	3.5 gal	13.2 L
Oil tank with filter	2.8 qt	2.6 L	2.8 qt	2.6 L	2.8 qt	2.6 L
Transmission (approximate)	1.0 qt	0.95 L	1.0 qt	0.95 L	1.0 qt	0.95 L
Low fuel warning light	1 gal	3.8 L	0.65 gal	2.5 L	0.8 gal	3.0 L

4-4 2013 Sportster Service: Fuel System

## **AIR CLEANER ASSEMBLY**

#### XL MODELS EXCEPT XL 1200V

FASTENER	TORQUE VALUE	
Air cleaner breather screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm
Air filter screw	40-60 in-lbs	4.5-6.8 Nm
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm

#### Removal

- 1. See <u>Figure 4-1</u>. Remove two screws (1) and trim insert (2) from air cleaner cover (3).
- 2. Remove air cleaner cover from air cleaner backplate (10).
- 3. Remove air cleaner seal (4) from air cleaner cover.
- 4. Remove three screws (5). Remove air filter element (6) and gasket (7). Discard gasket.
- 5. Remove O-rings from the breather screws (9). Discard the O-rings.


#### **NOTICE**

Install air filter before running engine. Failure to do so can draw debris into the engine and could result in engine damage. (00207a)

- Remove two breather screws (9) from air cleaner backplate.
- 7. Remove air cleaner backplate and gasket (11).

#### Installation

- See <u>Figure 4-1</u>. Position **new** gasket (11) and air cleaner backplate (10) at induction module air inlet.
- Apply LOCTITE 243 MEDIUM STRENGTH THREAD-LOCKER AND SEALANT (blue) to existing screws or use new breather screws (9). Install air cleaner backplate to engine heads. Tighten to 84-120 in-lbs (9.5-13.6 Nm).
- 3. To prevent damage, apply a thin coat of engine oil to Orings (8). Install O-rings to breather tubes.
- 4. Position **new** gasket (7) on air cleaner backplate. Line up gasket holes with backplate holes.
- Install air filter element (6) onto backplate. Secure with three new screws (5) or apply LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to existing screws. Tighten to 40-60 in-lbs (4.5-6.8 Nm).
- 6. Install air cleaner seal (4) on air cleaner cover (3). Fit the air cleaner seal around the entire edge of cover.
- Install air cleaner cover onto backplate. Do not pinch or distort seal.
- Install trim insert (2) and air cleaner cover with two screws
   Tighten to 36-60 in-lbs (4.1-6.8 Nm).

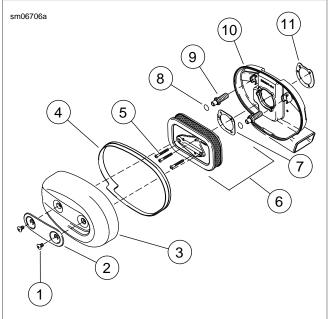

- 1. Screw (2)
- 2. Trim insert
- 3. Cover
- 4. Seal
- 5. Screw (3)
- 6. Filter element (includes item 7)
- 7. Filter element gasket
- 8. O-ring (2)
- 9. Breather screw (2)
- 10. Backplate
- 11. Gasket

Figure 4-1. Air Cleaner Assembly: All XL except XL 1200V

#### **XL 1200V**


FASTENER	TORQUE VALUE	
Air cleaner breather screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm
Air filter screw	40-60 in-lbs	4.5-6.8 Nm
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm

#### Removal

- 1. See Figure 4-2. Remove the cover screw (1).
- 2. Remove the cover (2) and the seal (3).
- 3. Remove the three screws (4), the air filter element (5) and gasket (9).
- 4. Remove the O-rings (10). Discard the O-rings.
- 5. Remove the two breather screws (6).
- 6. Remove the backplate (7) and gasket (8).
- 7. Inspect and replace parts as necessary.
- 8. Clean or replace the air filter element as necessary. See 1.7 AIR FILTER, Cleaning Filter Element.

#### Installation

- 1. See Figure 4-2. Install the gasket (8) and backplate (7).
- Apply LOCTITE 243 MEDIUM STRENGTH THREAD-LOCKER AND SEALANT (blue) to existing screws or use new breather screws (6). Install the breather screws. Tighten to 84-120 in-lbs (9.5-13.6 Nm).
- Apply engine oil to **new** O-rings (10). Install the O-rings on the breather tubes.
- 4. Install the filter gasket (9).
- 5. Install the air filter element (5) and screws (4). Tighten to 40-60 **in-lbs** (4.5-6.8 Nm).
- 6. Fit the cover (2) to the seal (3).
- Install the cover and screw (1). Tighten to 36-60 in-lbs (4.1-6.8 Nm).

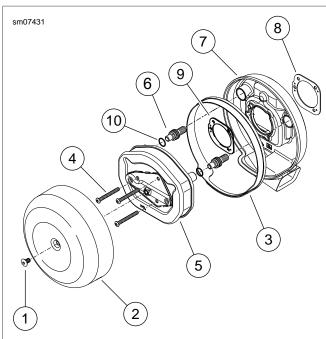

- 1. Screw
- 2. Cover
- 3. Seal
- 4. Screw (3)
- 5. Filter element
- 6. Breather screw
- 7. Backplate
- 8. Backplate gasket
- 9. Filter gasket
- 10. O-ring

Figure 4-2. Air Cleaner Assembly: XL 1200V

#### **XR 1200X**

#### Removal

- Remove the fuel tank. See <u>4.5 FUEL TANK: XR 1200X</u>.
- HDI Models: Disconnect active intake solenoid connector [178].

#### NOTE

Leave the rubber coupling attached to the induction module.

- 3. Lift the air box off induction module.
- 4. See <u>Figure 4-3</u>. Disconnect the crankcase breather hoses from the front and rear rocker cover fittings.
- 5. Remove the air box assembly.
- Remove the cover and air filter element as necessary. See 1.7 AIR FILTER, XR 1200X.
- 7. Replace damaged parts as necessary.

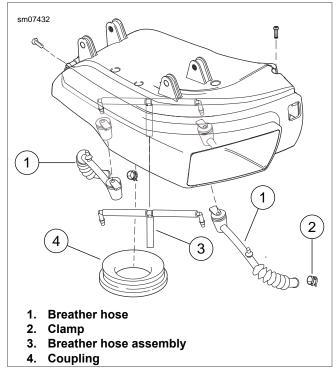


Figure 4-3. Air Box: XR 1200X

#### Installation

#### NOTE

See <u>Figure 4-4</u>. Check that the breather hose assembly (4) inside the air box does not interfere with the active air solenoid flapper.

- 1. Install all hoses.
- 2. Snap the anchor barb (1) of the front crankcase vent hose in the hole (2) in the air box bottom.
- 3. If removed, install the air filter element and cover. See 1.7 AIR FILTER, XR 1200X.
- 4. Seat the rubber coupling on the induction module.
- 5. Verify that the clamps are in place.
- See <u>Figure 4-5</u>. Hold the air box close. Connect crankcase vent hoses to the fittings (2) on the front and rear rocker covers.

#### NOTE

The edge of hole in air box must encircle the groove in the coupling.

- 7. Seat the coupling into the air box opening.
- 8. **HDI Models:** Connect the active intake solenoid connector [178].
- 9. Install the fuel tank. See <u>4.5 FUEL TANK: XR 1200X</u>.

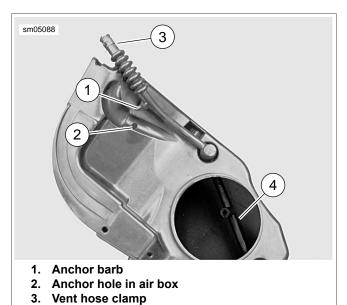


Figure 4-4. Front Crankcase Vent Hose

4. Breather hose assembly

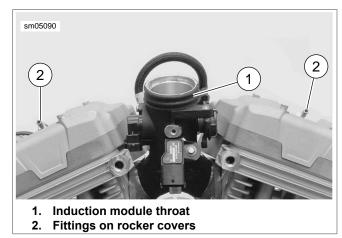


Figure 4-5. Air Box Connections

# PURGING AND DISCONNECTING FUEL SUPPLY HOSE

#### WARNING

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

## **AWARNING**

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

- 1. Purge the fuel supply line of high pressure gasoline.
  - a. Remove left side cover. See 2.18 LEFT SIDE COVER.
  - b. See <u>Figure 4-6</u>. Remove fuel pump connector from ECM caddy cover (2).
  - c. Unplug fuel pump connector [141].
  - d. Start engine and allow vehicle to run.
  - e. When engine stalls, operate starter for 3 seconds to remove any remaining fuel from fuel hose.
  - f. Shut off ignition.
- 2. See Figure 4-7. Push up on release sleeve (1) on fuel pump quick-connect fitting and pull down on fuel supply hose fitting (2) to disconnect fuel supply hose (3) from fuel pump module (4). Immediately clean up any fuel spills.


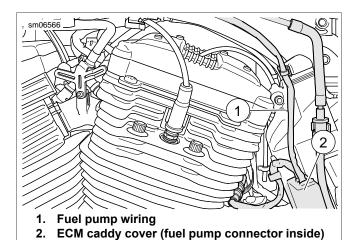


Figure 4-6. Fuel Pump Connector: XL Models

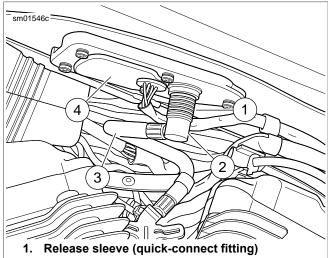

- 2. Fuel supply hose fitting
- 3. Fuel supply hose
- 4. Fuel pump module

Figure 4-7. Fuel Tank Quick-Connect Fitting

#### **REMOVING FUEL TANK**

## **A**WARNING


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Remove seat.

#### NOTES

- If the fuel tank is being removed only to gain access to items otherwise hidden, it is not necessary to drain the fuel from the tank. If the fuel tank is to be disassembled or repaired, follow the step below to drain the fuel.
- Drain fuel into an approved container.
- 3. Drain fuel tank:
  - Obtain a suitable fuel transfer pump with a long, flexible nozzle.
  - b. Position vehicle upright. Remove fuel tank filler cap.
  - Insert fuel transfer pump nozzle into fuel tank filler spout. Aim nozzle toward right side of fuel tank to avoid contacting and damaging fuel pump assembly.
  - d. Direct the pump output into an approved container.
  - e. Pump fuel until fuel tank is empty.
  - f. Immediately wipe up any spilled fuel.
- 4. See Figure 4-8. Remove vent hose (1) from fuel tank vent nipple. Remove cable clip (3) securing fuel pump wiring harness (2) to mounting boss on H-bracket.
- 5. Unplug fuel pump connector [141].

- 6. Remove protective caps, locknuts, screws and washers from front and rear of fuel tank.
- Place a clean, soft cloth over front of fuel tank to keep tank from contacting top fork clamp and damaging paint. Lift up rear of fuel tank. Remove fuel pump harness from clip on wire harness caddy latch clip on frame backbone.
- 8. Lift fuel tank off motorcycle.
- 9. Remove fuel pump assembly. See 4.16 FUEL PUMP.

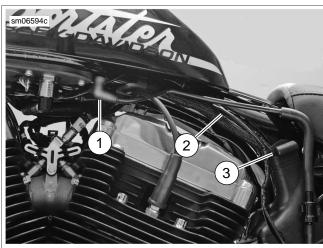

- 1. Vent hose
- 2. Fuel pump wiring harness
- 3. Cable clip

Figure 4-8. Fuel Tank Vent Hose

#### **CLEANING AND INSPECTION**

## **AWARNING**

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- Clean fuel tank interior with commercial cleaning solvent or a soap and water solution. Shake fuel tank to agitate cleaning agent.
- 2. Thoroughly flush fuel tank after cleaning. Allow fuel tank to air dry.
- Carefully inspect fuel hose and vent hose for damage, cuts, cracks, holes, wear or general deterioration. Replace as necessary.
- Inspect the fuel tank for leaks or other damage. If a damaged fuel tank cannot be successfully repaired, replace it.


#### INSTALLING FUEL TANK

FASTENER	TORQUE VALUE	
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm

#### NOTE

Verify wiring harnesses are not pinched between fuel tank and frame during tank installation.

- Install fuel pump into fuel tank using new gasket. See 4.16 FUEL PUMP.
- See <u>Figure 4-9</u>. Position fuel tank on motorcycle. Verify that front fuel tank brackets are located outboard of ignition coil bracket (8).
- Install front fastener.
  - a. Place washer (4) on long screw (2).
  - From right to left, push screw through front fuel tank bracket, ignition coil bracket and frame.
  - c. Place second washer over screw.
  - d. Hand-start locknut (5).

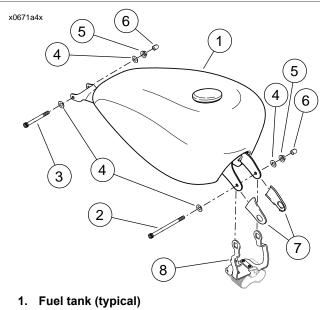


- 2. Screw (long)
- 3. Screw (short)
- 4. Washer (4)
- 5. Locknut (2)
- 6. Protective cap (2)
- 7. Cosmetic cover (2)
- 8. Ignition coil bracket

Figure 4-9. Fuel Tank Mounting (typical)

- See <u>Figure 4-10</u>. Place a clean, soft cloth over front of fuel tank to keep tank from contacting top fork clamp and damaging paint.
- 5. Lift up rear of fuel tank.
- Place fuel pump wiring harness (1) into clip on wire harness caddy latch clip on frame backbone tube. Verify that

the harness forms a loop (5) between caddy latch clip and fuel pump module (6). Do not pinch harness between fuel tank and frame backbone tube.

- 7. Route fuel pump wiring harness down along left side of H-bracket. Secure with cable clip (3). Push clip into hole in mounting boss (2) on H-bracket.
- 8. Install fuel tank.
  - a. Lower rear of fuel tank into position.
  - b. See Figure 4-9. Place washer (4) on short screw (3).
  - c. From right to left, push screw through rear fuel tank bracket and frame.
  - d. Place second washer over screw
  - e. Hand-start locknut (5).
  - f. Tighten both front and rear fuel tank mounting fasteners to 15-20 ft-lbs (20.3-27.1 Nm).
  - g. Install protective caps (6) on screw ends.
- 9. See Figure 4-8. Install vent hose onto fuel tank vent nipple.
- 10. Connect the fuel pump connector [141] housings.

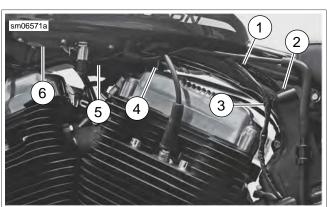

- 1. Fuel pump wiring harness
- 2. Cable clip mounting boss on ECM caddy
- 3. Cable clip
- 4. Wire harness caddy latch clip
- 5. Fuel pump wiring harness loop
- 6. Fuel pump module

Figure 4-10. Fuel Pump Wiring Harness Routing

# CONNECTING FUEL HOSE AND FILLING FUEL TANK

## **AWARNING**

To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

- 1. See Figure 4-7. Connect fuel hose.
  - a. Push up on release sleeve (1).
  - b. Push fuel hose fitting (2) into fuel pump module fuel pump quick-connect fitting.
  - Pull down on release sleeve to lock quick-connect fitting.
  - Tug on fuel hose fitting to make sure it is securely locked in place.
- 2. See Figure 4-8. Install vent hose onto vent nipple on fuel tank.

## **A**WARNING

Use care when refueling. Pressurized air in fuel tank can force gasoline to escape through filler tube. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00029a)

#### **A**WARNING

Avoid spills. Slowly remove filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028a)

- Fill fuel tank and carefully inspect for leaks around fuel pump module.
- 4. Install main fuse.
- Turn ignition switch ON and verify fuel pump is activated. Carefully inspect for leaks at quick-connect fitting. Turn ignition switch OFF.

#### **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

6. Install seat.

#### **VAPOR VALVE**

## **AWARNING**

Excessive pressure can build in the fuel tank if vapor valve is not mounted vertically with long fitting to top. Leaks due to excessive pressure can cause a fire or explosion, which could result in death or serious injury. (00265a)

See Figure 4-11. The fuel tank is vented through a standpipe (vent tube) within the tank. A hose (1) at the base of the fuel tank is connected to the standpipe.


## **A**WARNING

Keep vent and vapor valve lines away from exhaust and engine. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00263a)

The fuel tank vent hose is connected to a vapor valve (2). This valve attaches into a clip (3) on the ECM caddy behind the left side cover. On non-evaporative emission controlled models, another hose (4) vents the vapor valve to the atmosphere. On evaporative emission controlled models, that hose is routed to the charcoal canister. See <u>4.20 EVAPORATIVE EMISSIONS CONTROL</u>.

#### NOTES

- Mount the vapor valve in an upright position with the longer fitting positioned at the top or excessive fuel vapor pressure may build up within the fuel tank.
- Do NOT force vapor valve into clip. Forcing valve in to clip could cause clip to break, necessitating replacement of the ECM caddy.

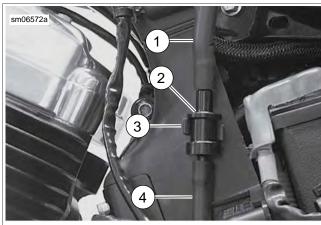

- 1. Fuel-to-vapor valve hose
- 2. Vapor valve
- 3. Vapor valve clip
- 4. Vapor valve-to-atmosphere hose (non-evaporative emission controlled models)

Figure 4-11. Vapor Valve

# PURGING AND DISCONNECTING FUEL SUPPLY HOSE

## **A**WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

#### **AWARNING**

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

#### WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

### **A**WARNING

Do not use solvents or other products that contain chlorine on plastic fuel system components. Chlorine can degrade plastic fuel system components, which can cause a loss of fuel system pressure or engine stalling and could result in death or serious injury. (000621b)

- 1. Purge the fuel supply line of high pressure gasoline.
  - a. See Figure 4-12. Unplug fuel pump connector [141].
  - b. Start engine and allow vehicle to run.
  - c. When engine stalls, operate starter for 3 seconds to remove any remaining fuel from fuel hose.
  - d. Shut off ignition.


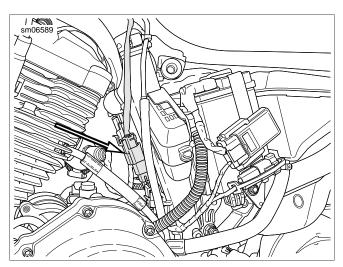


Figure 4-12. Fuel Pump Connector Location

## **A**WARNING

Gasoline can drain from quick-connect fitting when removing fuel line. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00267a)

2. See Figure 4-13. Push up on release sleeve (1) on fuel pump quick-connect fitting and pull down on fuel supply hose fitting (2) to disconnect fuel supply hose (3). Immediately clean up any fuel spills.

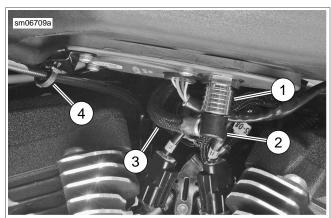

- 1. Release sleeve (quick-connect fitting)
- 2. Fuel supply hose fitting
- 3. Fuel supply hose
- 4. Throttle cable retainer

Figure 4-13. Fuel Tank Quick-Connect Fitting

#### REMOVING FUEL TANK

Purge the fuel supply line of high pressure gasoline. Disconnect fuel line from fuel tank. See <u>6.3 FUSES AND RELAYS, Main Fuse</u>.

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

2. Remove main fuse.

#### NOTES


- If the fuel tank is being removed only to gain access to items otherwise hidden, it is not necessary to drain the fuel from the tank. If the fuel tank is to be disassembled or repaired, drain the fuel tank.
- Drain fuel into an approved container.

- 3. Drain fuel tank:
  - Obtain a suitable fuel transfer pump with a long, flexible nozzle.
  - Position vehicle upright. Remove fuel tank filler cap.
  - Insert fuel transfer pump nozzle into fuel tank filler spout. Aim nozzle toward right side of fuel tank to avoid contacting and damaging fuel pump assembly.
  - Direct the pump output into an approved container.
  - Pump fuel until fuel tank is empty.
  - Replace fuel tank filler cap. f.
  - Immediately wipe up any spilled fuel.
- See Figure 4-13. Remove retainer (4) securing throttle cables to plate on bottom of fuel tank.

#### NOTE


See Figure 4-14. Short screws (2) secure trim ring to fuel tank cover only. It is not necessary to remove these screws unless either trim ring or fuel tank cover is being replaced.

- See Figure 4-14. Remove four long screws (1) that secure trim ring (4) and fuel tank cover (5) to fuel tank.
- Carefully lift fuel tank cover off fuel tank. Slide cover forward slightly as it is lifted to clear sides of fuel tank.
- 7. See Figure 4-15. Remove vent hose (3) from fuel tank vent fitting (4). With a gentle twisting motion, pull ground wire connector [210] (5) straight up off pin on fuel tank clamp ring (6).
- Remove vent hose and ground wire from trough in center of fuel tank. Pull vent hose and ground wire back out of the way.

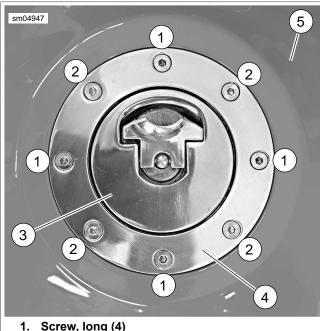

- 1. Screw, long (4)
- 2. Screw, short (4)
- 3. Fuel cap
- 4. Trim ring
- Fuel tank cover

Figure 4-14. Fuel Cap and Trim Ring

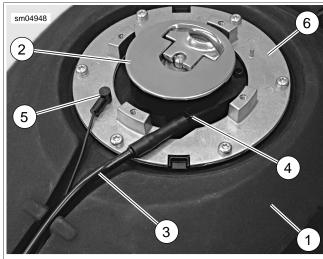


- 1. Fuel tank
- 2. Fuel cap
- Vent hose 3.
- 4. Vent fitting
- 5. **Ground wire connector [210]**
- Clamp ring

Figure 4-15. Fuel Tank Vent Hose and Ground Wire

- See Figure 4-16. Remove two screws and washers (3) securing air box to bottom of fuel tank.
- 10. Remove screw with washer (4) from rear of fuel tank. Remove protective plastic cap (not shown) from threaded end of screw (6). Remove screw, washers and locknut from the front of the fuel tank.
- 11. See Figure 4-13. Remove throttle cable retainer (4) from fuel tank.



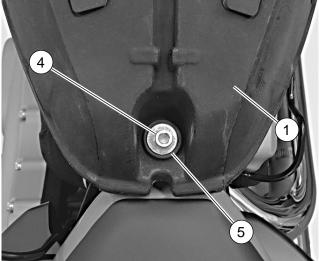

- 1. Fuel tank
- 2. Air box
- 3. Screw w/washer (2)
- 4. Screw w/washer
- 5. Rubber grommet
- 6. Screw w/washers and locknut

Figure 4-16. Fuel Tank and Air Box Mounting Fasteners

12. Lift fuel tank off motorcycle.

#### NOTE

See <u>Figure 4-19</u>. Metal bushings (4) inside the grommets (3) may fall when fuel tank is lifted off vehicle. Make sure they do not fall out and become lost.

13. Remove fuel pump assembly from fuel tank. See 4.16 FUEL PUMP.

## **DISASSEMBLE FUEL TANK**

## WARNING

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- 1. See Figure 4-17. Remove filler cap (1) with O-ring (2).
- 2. Remove screws (7) and clamp ring (3).

- 3. Remove top ring (4).
- 4. Remove O-ring (5).

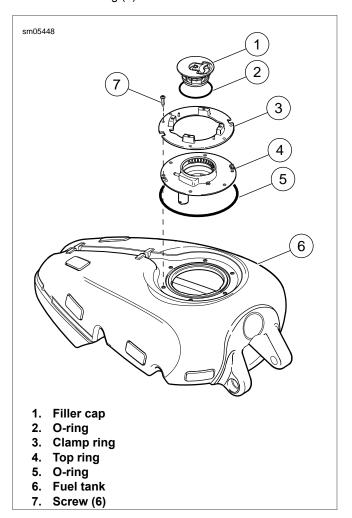


Figure 4-17. Fuel Tank Assembly

#### **CLEANING AND INSPECTION**

### **A**WARNING

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- Clean fuel tank interior with commercial cleaning solvent or a soap and water solution. Shake fuel tank to agitate cleaning agent.
- 2. Thoroughly flush fuel tank after cleaning. Allow fuel tank to air dry.
- Carefully inspect fuel hose and vent hose for damage, cuts, cracks, holes, wear or general deterioration. Replace as necessary.
- 4. Inspect the fuel tank for leaks or other damage. Replace the tank if necessary.

#### **ASSEMBLE FUEL TANK**

FASTENER	TORQUE VALUE	
Filler housing screws	40-45 <b>in-lbs</b>	4.5-5.1 Nm

## **A**WARNING

When servicing the fuel system, do not smoke or allow open flame or sparks in the vicinity. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00330a)

- See <u>Figure 4-17</u>. Install **new** O-ring (5) on the fuel tank (6). Verify that it is seated properly.
- 2. Install top ring and clamp ring with screws (7).
- 3. See <u>Figure 4-18</u>. Tighten screws in the sequence shown to 40-45 **in-lbs** (4.5-5.1 Nm).
- 4. See Figure 4-17. Install filler cap (1) with a **new** O-ring (2).

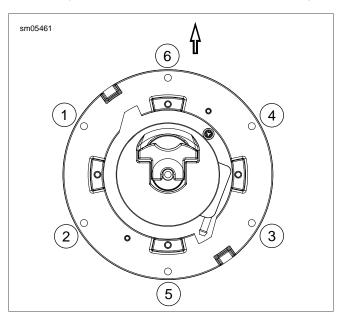


Figure 4-18. Filler Housing Torque Sequence

#### INSTALLING FUEL TANK

FASTENER	TORQUE VALUE	
Air box to bracket fasteners: XR 1200X	36-60 in-lbs	4.1-6.7 Nm
Fuel tank fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm
Fuel tank fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm
Fuel tank cover screw: XR 1200X	24-30 <b>in-lbs</b>	2.7-3.4 Nm

#### NOTE

Be sure that wiring harnesses do not get pinched between fuel tank and frame during tank installation.

 Install fuel pump into fuel tank using new gasket. See 4.16 FUEL PUMP. 2. See Figure 4-19. Install rubber grommets (3) in both front mounting holes of fuel tank. Insert metal bushings (4) into rubber grommets, oriented as shown. Verify that the clip nut (5) is installed on frame bracket.


#### **NOTES**

- Verify that the ignition coil bracket is positioned between the tank mount and the frame.
- Verify that the air box mounting brackets are mated.
- 3. Position fuel tank on motorcycle.
- Insert screw (6) with washer (2) through fuel tank front mounting brackets and vehicle frame. Install remaining washer and locknut (7) on other end of screw. Do not tighten at this time.
- Secure pump harness to main harness retainer located under fuel tank.
- Install rubber grommets (3) in rear mounting hole of fuel tank.

#### NOTE

Verify that the air box grommet is securely installed on induction module and air box opening. An improperly seated grommet could lead to accelerated engine wear. See <u>4.3 AIR CLEANER ASSEMBLY, XR 1200X</u>.

- Secure air box to brackets on bottom of fuel tank. Tighten to 36-60 in-lbs (4.1-6.7 Nm).
- Mount the fuel tank.
  - Locate the metal bushing (4) inside the rear lower rubber grommet (3) of fuel tank.
  - b. Install screw (1), washer (2) and upper grommet (3).
  - c. Thread into clip nut (5). Tighten to 15-20 ft-lbs (20.3-27.1 Nm).
  - d. Tighten front screw (6) and locknut (7) to 15-20 ft-lbs (20.3-27.1 Nm).
- See <u>Figure 4-13</u>. Secure throttle cables to bottom of fuel tank using a **new** loop retainer.
- See <u>Figure 4-15</u>. Connect vent hose (3) and ground wire (5) as shown. Route ground wire and vent hose in trough in top of tank.
- 11. See Figure 4-14. Install fuel tank cover and secure with four screws (1). Tighten screws to 24-30 **in-lbs** (2.7-3.4 Nm).
- 12. Connect fuel pump connector [141].
- 13. Connect fuel supply fitting. See <u>4.5 FUEL TANK: XR 1200X</u>, Connecting Fuel Hose and Filling Fuel Tank.

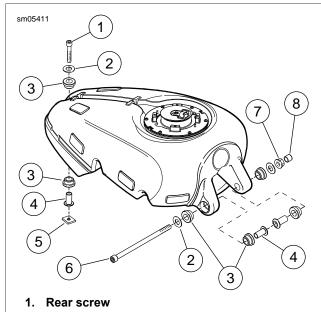

- 2. Washer (3)
- 3. Rubber grommet (6)
- 4. Metal bushing (3)
- 5. Clip nut
- 6. Front screw
- 7. Locknut
- 8. Cap

Figure 4-19. Fuel Tank Mounting

# CONNECTING FUEL HOSE AND FILLING FUEL TANK

## **A**WARNING

To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

- 1. See Figure 4-13. Connect the fuel hose fitting:
  - a. Push up on release sleeve (1).
  - b. Push fuel hose fitting (2) into fuel pump module fuel pump quick-connect fitting.
  - Pull down on release sleeve to lock quick-connect fitting.
  - d. Tug on fuel hose fitting to make sure it is securely locked in place.

## **A**WARNING

Use care when refueling. Pressurized air in fuel tank can force gasoline to escape through filler tube. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00029a)

## **AWARNING**

Avoid spills. Slowly remove filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028a)

- 2. Fill fuel tank and carefully inspect for leaks around fuel pump module.
- 3. Install main fuse.
- 4. Turn ignition switch ON and verify fuel pump is activated. Carefully inspect for leaks at quick-connect fitting and induction module. Turn ignition switch OFF.
- 5. Install left side cover.

# **THROTTLE POSITION SENSOR (TPS)**

#### **GENERAL**

## **AWARNING**

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

See <u>Figure 4-20</u> or <u>Figure 4-21</u>. The TPS is located on the side of the induction module. The TPS monitors the physical position of the throttle shaft. See the electrical diagnostic manual.

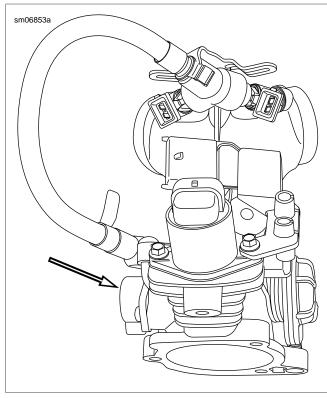


Figure 4-20. TPS Location: XL Models

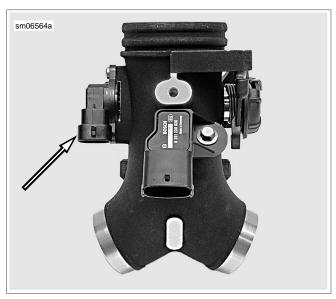



Figure 4-21. TPS Location: XR 1200X

#### **REMOVAL: XL MODELS**

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- Remove air cleaner assembly. See <u>4.3 AIR CLEANER</u> <u>ASSEMBLY</u>.
- 3. See <u>Figure 4-22</u>. Unplug TPS harness connector [88B] from connector socket [88A] (4). Cover both connectors with tape.
- 4. Remove two screws (5). Detach TPS (3) from induction module (1).

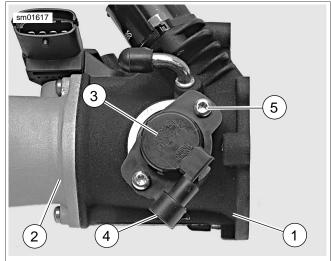

- 1. Induction module
- 2. Intake manifold
- 3. TPS
- 4. TPS connector socket [88A]
- 5. Screw (2)


Figure 4-22. Throttle Position Sensor (TPS) Removal: XL Models

#### **INSTALLATION: XL MODELS**

FASTENER	TORQUE VALUE	
TPS screw: XL Models	35 <b>in-lbs</b>	4.0 Nm

#### **NOTES**

- Throttle must be closed to install the TPS.
- See <u>Figure 4-22</u>. Note orientation of TPS (3) relative to induction module (1) body. The connector socket is at approximately the 7 o'clock position, facing toward intake manifold (2).
- 1. See <u>Figure 4-23</u>. Fit pocket (3) of TPS (2) over throttle shaft (4). Orient TPS correctly and line up mounting holes in sensor with holes in body of induction module (1).
- Make sure TPS body is flush against mounting boss on induction module body. Install two screws (5) to fasten sensor to induction module. Tighten screws to 35 in-lbs (4.0 Nm).
- Open and close throttle plates and check for proper operation. Be sure mechanism operates smoothly without binding or sticking.
- 4. Connect TPS harness socket connector [88B] to sensor pin connector [88A].
- Install air cleaner assembly. See <u>4.3 AIR CLEANER</u> <u>ASSEMBLY</u>.
- 6. Install main fuse.
- 7. Close left side cover.
- 8. Start motorcycle. Check throttle operation and idle speed.
- Check for leaks at the quick connect fitting and at the induction module.

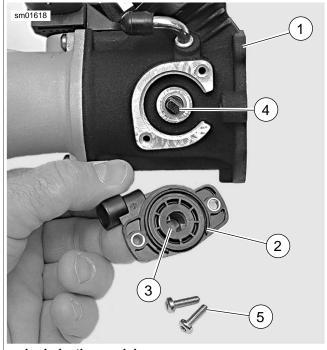

- 1. Induction module
- 2. TPS
- 3. Pocket
- 4. Throttle shaft
- 5. Screw (2)

Figure 4-23. Throttle Position Sensor (TPS) Installation: XL Models

#### **REMOVAL: XR 1200X**

#### **AWARNING**

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

#### **A**WARNING

Gasoline can drain from quick-connect fitting when removing fuel line. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00267a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.5 FUEL TANK: XR 1200X.

#### **WARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove fuel tank and air box. See <u>4.5 FUEL TANK: XR 1200X</u> and <u>4.3 AIR CLEANER ASSEMBLY, XR 1200X</u>.

- 4. See Figure 4-24. Remove induction module from vehicle. See 4.9 INDUCTION MODULE: XR 1200X.
- Remove two screws (4) and detach TPS (2) from induction module (1).

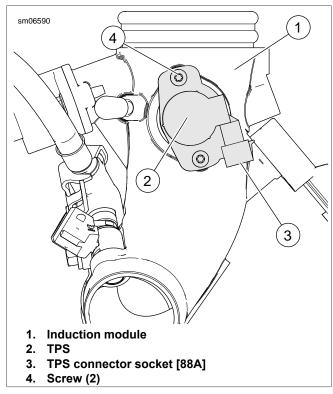


Figure 4-24. Throttle Position Sensor (TPS) Removal: XR 1200X

#### **INSTALLATION: XR 1200X**

FASTENER	TORQUE VALUE	
TPS screw: XR 1200X	29 <b>in-lbs</b>	3.3 Nm

#### NOTES

- Throttle must be closed for installation of throttle position sensor.
- See <u>Figure 4-24</u>. Note installed orientation of TPS (2) relative to induction module (1) body. The connector socket is at approximately the 5:00 o'clock position.
- See <u>Figure 4-25</u>. Place sensor over throttle shaft with the connector housing (1) facing toward the mounting flange (2).
- Rotate the TPS counterclockwise into position as shown in <u>Figure 4-24</u>.

- 3. Make sure TPS body is flush against mounting boss on induction module body. Install two screws (4). Tighten to 29 **in-lbs** (3.3 Nm).
- 4. Open and close throttle plate. Be sure mechanism operates smoothly without binding or sticking.

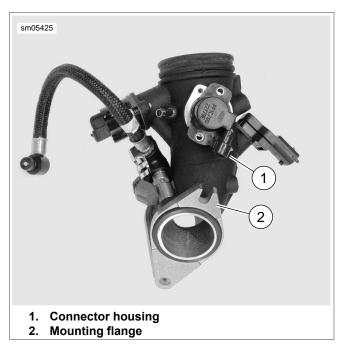


Figure 4-25. Throttle Position Sensor (TPS) Installation: XR 1200X

- Install induction module. See <u>4.9 INDUCTION MODULE:</u> XR 1200X.
- Install air box assembly and fuel tank. See <u>4.3 AIR</u> <u>CLEANER ASSEMBLY, XR 1200X</u> and <u>4.5 FUEL TANK:</u> <u>XR 1200X</u>.

## **AWARNING**

To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

- Connect fuel hose to fuel pump module. Fill fuel tank and carefully check for leaks around fuel hose fitting. See 4.5 FUEL TANK: XR 1200X.
- 8. Install main fuse.
- Turn ignition switch on. Check for leaks at the quick connect fitting and at the induction module.
- 10. Start motorcycle. Check throttle operation and idle speed.

## 47

#### **GENERAL**

See <u>Figure 4-26</u>. The ET sensor is located in the top of the rear cylinder head. See the electrical diagnostic manual.



Figure 4-26. ET Sensor Location

#### **REMOVAL**

PART NUMBER	TOOL NAME
HD-48116-A	TEMPERATURE SENSOR SOCKET

## **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

## **A**WARNING

Gasoline can drain from quick-connect fitting when removing fuel line. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00267a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X.</u>
- See <u>Figure 4-27</u> or <u>Figure 4-28</u>. Disconnect the ET sensor connector [90] (3) located on right side of H-bracket/ECM caddy.
- Cut barbed cable strap (2) to free sensor harness from Hbracket/ECM caddy.
- XR 1200X: See Figure 4-28. Disconnect the breather hose
   from the rear cylinder to gain access to the sensor.
- 7. Remove ET sensor as follows:
  - a. Attach a universal joint, a 6 inch extension and a ratchet to the TEMPERATURE SENSOR SOCKET (Part No. HD-48116-A).
  - See <u>Figure 4-29</u>. Fit engine temperature sensor harness (2) into slot in temperature sensor socket (3).
  - Slide socket down harness, through square hole in center of rear rocker cover assembly and fit onto ET sensor (1).
  - d. See <u>Figure 4-30</u>. Once you have installed the temperature sensor socket (1) onto the sensor (4), secure the sensor harness to the socket extension (3) with tape (6). This will facilitate removal of the sensor.
  - e. Remove ET sensor from rear cylinder head.

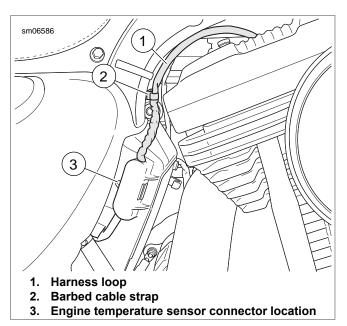


Figure 4-27. ET Sensor Harness: XL Models

4-20 2013 Sportster Service: Fuel System



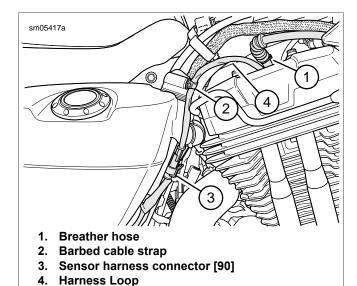



Figure 4-28. ET Sensor Harness: XR 1200X

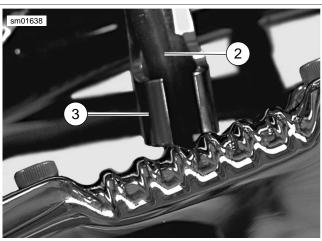

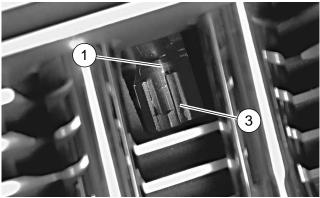

- 1. ET sensor
- 2. Sensor harness
- 3. Temperature sensor socket

Figure 4-29. Installing ET Sensor Socket (XL shown)

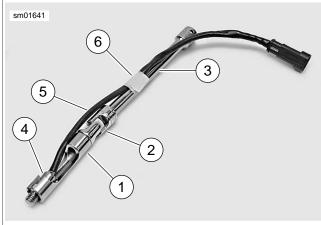

- 1. Temperature sensor socket
- 2. Universal joint
- 3. Socket extension
- 4. Engine temperature sensor
- 5. Sensor harness
- 6. Tape

Figure 4-30. Tape ET Sensor Harness to Extension

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
ET sensor	120-168 <b>in-lbs</b>	13.6-19.0 Nm

1. See <u>Figure 4-30</u>. Fit engine the ET sensor (4) into temperature sensor socket (1).

#### NOTE

The sensor harness MUST turn with the socket and extension. The harness may be damaged when the sensor is installed.

- 2. Holding sensor in place in socket, wrap a piece of tape (6) around sensor harness (5) and socket extension (3).
- Slide assembly down into top of rear head and carefully thread sensor into head. Do not cross-thread. Tighten to 120-168 in-lbs (13.6-19.0 Nm).

#### NOTE

See <u>Figure 4-27</u>. Make sure there is a loop (4) in sensor harness when securing harness. If harness is pulled tight or contacting the rear rocker cover, it could be damaged during vehicle operation.

- See <u>Figure 4-27</u> or <u>Figure 4-28</u>. Use a barbed cable strap
   to secure sensor harness. Position cable strap so harness forms a loop (4) between sensor and cable strap.
- Connect sensor connector [90] (3) and secure to Hbracket/ECM caddy.
- Install fuel tank and connect fuel supply hose. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR</u> <u>1200X</u>.
- 7. Install main fuse.
- 8. Close left side cover.

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

9. Install seat.

4-22 2013 Sportster Service: Fuel System

## INDUCTION MODULE: XL MODELS

#### **REMOVAL**

## **AWARNING**

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

## **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

## **AWARNING**


Gasoline can drain from quick-connect fitting when removing fuel line. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00267a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS.

#### **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)


- 2. Remove main fuse.
- Remove air cleaner assembly. See <u>4.3 AIR CLEANER</u> ASSEMBLY.
- 4. Remove seat.
- 5. Pull fuel tank back to access induction module.
  - Loosen (but do not remove) front fuel tank mounting screw.
  - Remove rear fuel tank mounting screw, washers and nut.
  - c. Carefully pivot rear of fuel tank upward and prop in position. See <u>4.4 FUEL TANK: XL MODELS</u>.
- See <u>Figure 4-31</u>. Remove screw (2) and mounting bracket (1).

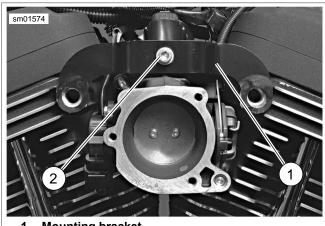

- 1. Mounting bracket
- 2. Screw

Figure 4-31. Induction Module Mounting Bracket

- 7. See Figure 4-32. Unplug the following connectors:
  - a. Front fuel injector (4) connector [84],
  - b. Rear fuel injector (5) connector [85],
  - c. TMAP sensor (6) connector [80],
  - d. IAC (7) connector [87],
  - e. TPS (8) connector [88].
- EVAP Controlled Models: remove purge hose from fitting (9) on induction module (1).

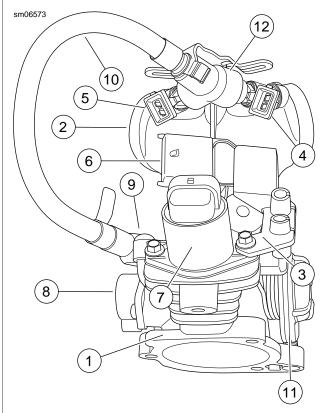

- 1. Induction module
- 2. Intake manifold
- 3. Throttle cable bracket
- 4. Front fuel injector [84A]
- 5. Rear fuel injector [85A]
- 6. TMAP sensor [80A]
- 7. IAC [87A]
- 8. TPS [88A]
- 9. Purge hose fitting (EVAP controlled models)
- 10. Fuel supply hose
- 11. Throttle wheel
- 12. Fuel rail

Figure 4-32. Induction Module Assembly

- See <u>Figure 4-33</u>. Slide rubber boot off idle control cable assembly (1).
- 10. Loosen jamnut (3).
- 11. Loosen cable adjuster as far as possible to provide maximum slack in idle cable.

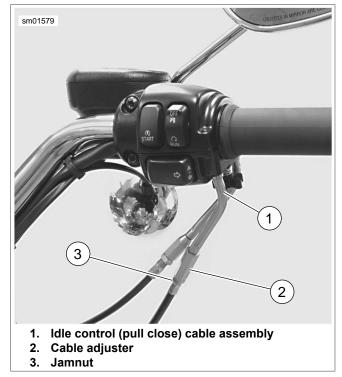


Figure 4-33. Idle Control Cable Adjustment

- See <u>Figure 4-34</u>. Loosen two screws (2) securing intake manifold to heads on left side of vehicle, but do not remove screws.
- 13. See <u>Figure 4-35</u>. Remove two screws (3) securing intake manifold to heads on right side of vehicle.
- 14. Pull mounting flanges (4) away from heads as much as possible and pull induction module and intake manifold assembly toward the right side, away from vehicle.


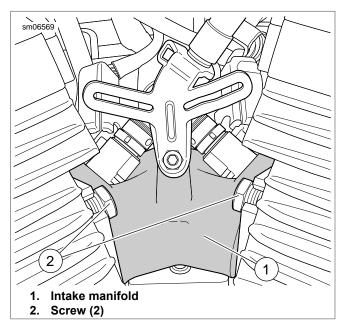



Figure 4-34. Intake Manifold Mounting Screws: Left Side

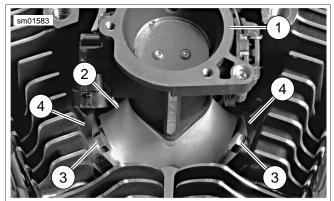

- 1. Induction module
- 2. Intake manifold
- 3. Screw (2)
- 4. Mounting flange (2)

Figure 4-35. Intake Manifold Mounting Screws: Right Side


- See <u>Figure 4-35</u>. Remove throttle cable (5) from throttle wheel (7)
  - a. Lift throttle cable housing (1) up out of cable guide(3) in throttle/idle cable bracket (2).
  - b. Slide throttle cable (5) out through slot (4) in cable guide.
  - Unwind throttle cable from groove in throttle wheel (7).
  - d. Slide cable out through slot (8) and remove throttle cable barrel (6) from throttle wheel.

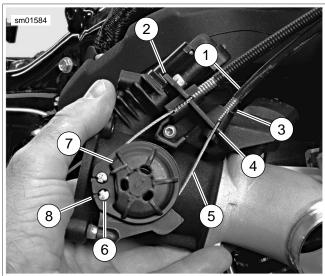

- 1. Throttle cable housing
- 2. Throttle/idle cable bracket
- 3. Cable guide
- 4. Slot
- 5. Throttle cable
- 6. Cable barrel
- 7. Throttle wheel
- 8. Slot

Figure 4-36. Removing/Installing Throttle Cable

- 16. See Figure 4-37. In a similar fashion, remove idle cable (3) from throttle wheel (6):
  - a. Lift idle cable housing (1) and spring (2) up out of cable guide (7) in throttle/idle cable bracket.
  - b. Slide idle cable (3) out through slot in cable guide.
  - c. Unwind idle cable from groove in throttle wheel (6).
  - d. Slide cable out through slot (5) and remove idle cable barrel (4) from throttle wheel.
- Remove induction module and intake manifold from vehicle.

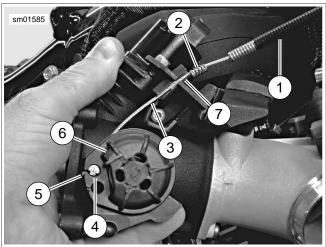

- 1. Idle cable housing
- 2. Spring
- 3. Idle cable
- 4. Cable barrel
- 5. Slot
- 6. Throttle wheel
- 7. Cable guide

Figure 4-37. Removing/Installing Idle Cable

#### **DISASSEMBLY**

PART NUMBER	TOOL NAME
HD-25070	HEAT GUN

# **AWARNING**

Gasoline can drain from the fuel line when disconnected from induction module. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00269a)

- 1. Remove fuel hose, fuel rail and fuel injectors. See 4.15 FUEL INJECTORS.
- 2. See <u>Figure 4-38</u>. Remove screws (1, 2) and cable bracket (3) from induction module (4).


#### VOTE

When removing the IAC, the mounting screws MUST be heated to soften the thread sealant and avoid breakage during removal. Use ONLY HEAT GUN (Part No. HD-25070) to heat the screws. NEVER use an open flame.

- 3. Remove the following assemblies:
  - a. TPS. See <u>4.6 THROTTLE POSITION SENSOR</u> (TPS).
  - b. TMAP sensor. See 4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR.
  - c. IAC. See 4.10 IDLE AIR CONTROL (IAC).
- See <u>Figure 4-39</u>. Remove two screws (3) to separate induction module (1) from intake manifold (2). Discard Oring (4).

#### NOTE

At this level of disassembly, induction module contains no more serviceable parts. If induction module is determined to be damaged or defective, replace it.

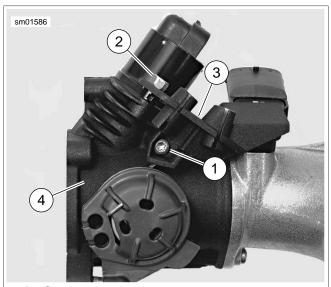

- 1. Screw
- 2. Screw
- 3. Cable bracket
- 4. Induction module

Figure 4-38. Removing/Installing Cable Bracket

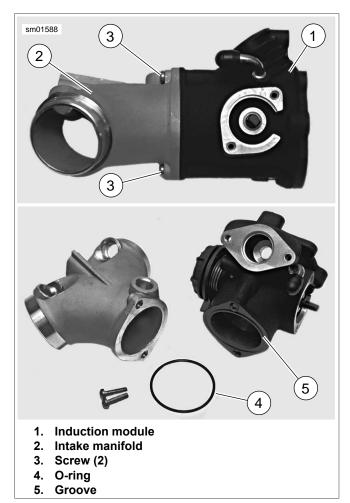


Figure 4-39. Induction Module Assembly

#### **ASSEMBLY**

FASTENER	TORQUE VALUE	
Induction module screw: XL models	35 in-lbs	4.0 Nm
IAC mounting screw: XL Models	60 in-lbs	6.8 Nm
Induction module cable bracket screw: XL Models	60 in-lbs	6.8 Nm

- See <u>Figure 4-39</u>. Place **new** O-ring (4) into groove (5) in induction module (1) mating surface.
- 2. Mate induction module to intake manifold (2). Secure with two screws (3). Tighten screws to 35 **in-lbs** (4.0 Nm).
- 3. Install the following assemblies:
  - a. TPS. See <u>4.6 THROTTLE POSITION SENSOR</u> (TPS).
  - b. TMAP sensor. See <u>4.11 TEMPERATURE MANIFOLD</u> <u>ABSOLUTE PRESSURE (TMAP) SENSOR</u>.
  - c. IAC. See 4.10 IDLE AIR CONTROL (IAC).

#### NOTE

Do not install IAC mounting screw on throttle wheel side of induction module until cable bracket is installed. Install other IAC mounting screw but do not tighten at this time.

- See <u>Figure 4-38</u>. Install cable bracket (3) onto induction module (4):
  - a. Obtain new screws (1, 2) or apply LOCTITE 243
     MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to existing screws.
  - b. Install both screws finger-tight.
  - Tighten both IAC mounting screws to 60 in-lbs (6.8 Nm). Tighten side screw (1) to 60 in-lbs (6.8 Nm).
- 5. Install fuel injectors, fuel rail and fuel hose. See <u>4.15 FUEL INJECTORS</u>.

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Induction module mounting bracket screw: XL models	90-120 <b>in-lbs</b>	10.2-13.6 Nm
Intake manifold mounting screw: XL models	96-120 <b>in-lbs</b>	10.9-13.6 Nm
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm


- 1. See Figure 4-34. Make sure two mounting screws (2) are screwed into heads two or three turns.
- 2. See Figure 4-40. Install mounting flanges (1) on intake manifold (5) with counterbore (2) facing away from manifold and open slotted ends of flanges facing away from induction module (6).
- 3. Place a **new** seal (3) into each mounting flange with the beveled edge (4) facing the mounting flange counterbore.

#### NOTE

When induction module is positioned on manifold mounting screws, Verify the flanges are correctly installed on the manifold. Verify the rubber seals are in place.

- Place induction module assembly in position between engine heads. Slide open slotted ends of mounting flanges under heads of two mounting screws on left side of engine.
- See <u>Figure 4-35</u>. Holding induction module/intake manifold assembly in place, install two mounting screws (3) into remaining mounting flange holes. Tighten all four screws finger-tight.
- See <u>Figure 4-31</u>. Install mounting bracket (1) and screw (2). Tighten screw finger-tight.
- Temporarily install two breather screws through mounting bracket. Thread breather screws into cylinder heads fingertight. This will properly line up induction module assembly.
- Tighten mounting bracket screws to 90-120 in-lbs (10.2-13.6 Nm).
- 9. Tighten all four intake manifold mounting screws to 96-120 **in-lbs** (10.9-13.6 Nm).

- 10. See <u>Figure 4-37</u>. Install idle cable barrel (4) into throttle wheel (6). Slide idle cable (3) through slot (5) and wind around groove in throttle wheel.
- 11. Pull cable through slot in cable guide (7). Slide spring (2) and end of idle cable housing (1) down into cable guide.
- See <u>Figure 4-36</u>. Install throttle cable barrel (6) into throttle wheel (7). Slide throttle cable through slot (8) and wind around groove in throttle wheel.
- 13. Pull cable through slot (4) in cable guide (3). Slide end of throttle cable housing (1) down into cable guide.
- Adjust throttle and idle cables. See <u>1.13 THROTTLE</u> CONTROL.

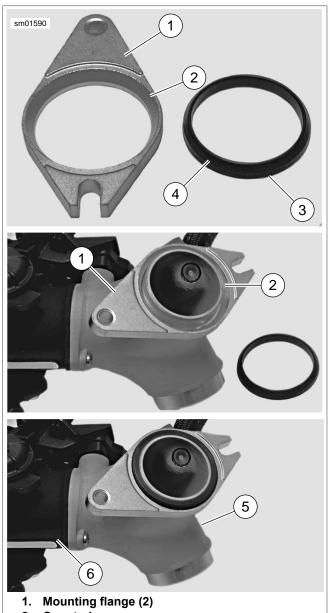

- 2. Counterbore
- 3. Seal (2)
- 4. Beveled edge
- 5. Intake manifold
- 6. Induction module

Figure 4-40. Installing Mounting Flange and Seal

- 15. **EVAP Controlled Models:** See <u>Figure 4-41</u>. Install purge hose onto fitting (2) on induction module (1).
- 16. See Figure 4-42. Plug in the following connectors:
  - a. Front fuel injector (1) connector [84],
  - b. Rear fuel injector (2) connector [85],
  - TMAP sensor (3) connector [80],
  - d. IAC (4) connector [87],
  - TPS (5) connector [88].
- 17. Remove prop from under rear of fuel tank. Lower rear of fuel tank into position. Install fastener, washer and nut in fuel tank rear mounting holes. Tighten to 15-20 ft-lbs (20.3-27.1 Nm). Install protective caps on screw ends. See 4.4 FUEL TANK: XL MODELS.
- 18. Install air cleaner assembly. See 4.3 AIR CLEANER ASSEMBLY.

# **A**WARNING


To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

- 19. Connect fuel hose to fuel pump module. Fill fuel tank. Carefully check for leaks around fuel pump module. See 4.4 FUEL TANK: XL MODELS.
- 20. Install main fuse.
- 21. Close left side cover.
- 22. Turn ignition switch to ON and OFF to reset IAC to park position.

## WARNING


After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

23. Install seat.

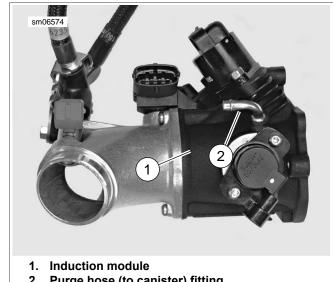

2. Purge hose (to canister) fitting

Figure 4-41. Purge Hose Fitting: CA Models

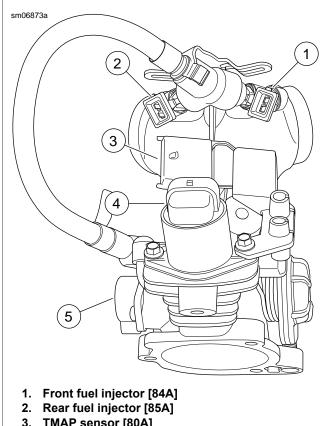

- TMAP sensor [80A]
- IAC [87A]
- TPS [88A]

Figure 4-42. Induction Module Electrical Connectors

# **INDUCTION MODULE: XR 1200X**

#### **REMOVAL**

## WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.5 FUEL TANK: XR 1200X.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove fuel tank and air box. See <u>4.5 FUEL TANK: XR 1200X</u> and <u>4.3 AIR CLEANER ASSEMBLY, XR 1200X</u>.
- 4. See Figure 4-43. Remove screws (3), fastener (1) and fastener (2).
- 5. Pull cover away from induction module and disengage cable retainer from back side of cover. Remove cover.
- Disengage throttle cables from induction module. See 2.28 THROTTLE CABLES: ALL MODELS.
- 7. See Figure 4-44. Unplug the following connectors:
  - a. Front fuel injector (3) [84],
  - b. Rear fuel injector (4) [85],
  - c. TMAP sensor (5) [80],
  - d. IAC (6) [87],
  - e. TPS (7) [88].
- 8. **EVAP Controlled Models:** Remove purge hose from fitting (8).
- 9. See <u>Figure 4-45</u>. Disconnect oil line flare nuts (1) from flare fittings (2) in cylinder heads. Remove flare fittings (2) from cylinder heads.
- 10. Loosen but do not remove left side screws holding induction module to cylinder head.
- Remove two screws (3) securing induction module to cylinder heads on right side of vehicle.
- 12. Remove induction module from engine.



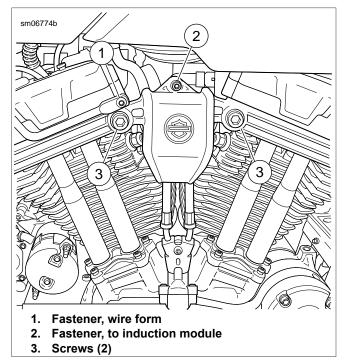


Figure 4-43. Induction Module Cover: XR 1200X

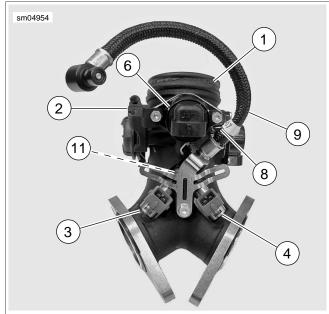

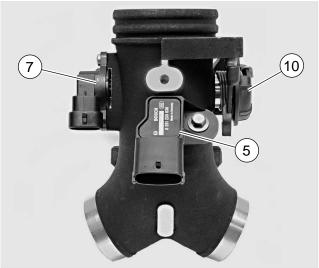

- 1. Induction module
- 2. Throttle cable bracket
- 3. Front fuel injector [84A]
- 4. Rear fuel injector [85A]
- 5. TMAP sensor [80A]
- 6. IAC [87A]
- 7. TPS [88A]
- 8. Purge hose fitting (EVAP models only)
- 9. Fuel supply hose
- 10. Throttle wheel
- 11. Fuel rail (not visible)

Figure 4-44. Induction Module

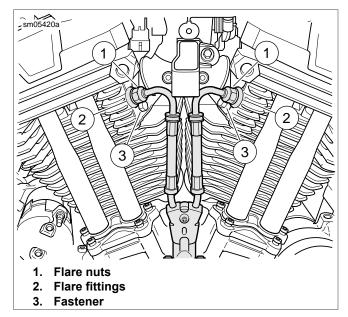


Figure 4-45. Remove Induction Module

## **DISASSEMBLY**


PART NUMBER	TOOL NAME
HD-25070	HEAT GUN

- See <u>Figure 4-46</u>. Remove retainer (7). Remove fuel rail (8) with hose (4) and injectors (10) from the induction module.
- 2. Remove hose (4) and injectors (10) from fuel rail.
- 3. Remove cable bracket (12).

#### NOTE

Screws (16) MUST be heated to soften the thread sealant and avoid breakage during removal. Use ONLY HEAT GUN (Part No. HD-25070) to heat the screws. NEVER use an open flame.

- 4. Remove IAC (3). See <u>4.10 IDLE AIR CONTROL (IAC)</u>, Removal: XR 1200X.
- 5. Remove TMAP (15), and TPS (1).
- 6. Remove mounting flanges (14) and seals (13).

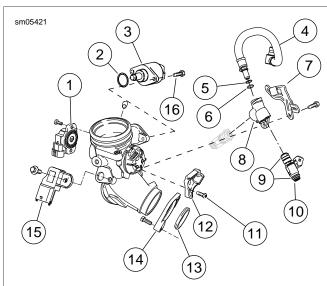

- 1. TPS
- 2. O-ring
- 3. IAC
- 4. Fuel hose
- 5. Nylon washer (included with hose (4))
- 6. O-ring (included with hose (4))
- 7. Retainer
- 8. Fuel rail
- 9. O-ring (4) (included in hardware and O-ring kit)
- 10. Fuel injector (2)
- 11. Screw
- 12. Throttle cable bracket
- 13. Intake seal
- 14. Mounting flange
- 15. TMAP sensor
- 16. Screw, IAC (2)

Figure 4-46. Induction Module

#### **ASSEMBLY**

FASTENER	TORQUE VALUE	
IAC mounting screw: XR 1200X	60 <b>in-lbs</b>	6.8 Nm
Throttle cable bracket screw: XR 1200X	60 <b>in-lbs</b>	6.8 Nm

- 1. See Figure 4-46. Install the following:
  - a. TPS. See <u>4.6 THROTTLE POSITION SENSOR</u> (TPS).
  - b. TMAP sensor. See 4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR.
  - IAC. See <u>4.10 IDLE AIR CONTROL (IAC)</u>.

#### NOTE

Do not install IAC mounting screw on throttle wheel side of induction module until cable bracket is installed. Install other IAC mounting screw but do not tighten at this time.

- 2. Install cable bracket (12) onto induction module:
  - a. Apply LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads of screw (11).
  - b. Install screw finger-tight.
  - Tighten both IAC mounting screws to 60 in-lbs (6.8 Nm).
  - d. Tighten screw (11) to 60 in-lbs (6.8 Nm).
- Install fuel injectors, fuel rail and fuel hose. See <u>4.15 FUEL INJECTORS</u>.

#### **INSTALLATION**


FASTENER	TORQUE VALUE	
Intake manifold mounting screw: XR 1200X	90-120 in-lbs	10.3-13.6 Nm
Cylinder head oil feed flare fit- ting: XR 1200X	22-26 ft-lbs	29.8-35.3 Nm
Cylinder head oil feed line flare nut: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm
Induction module cover to cylinder head sockethead bolts: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm
Induction module cover to induction module fastener: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm
Induction module cover to wire form fastener: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm

- Install the two left side mounting screws two or three turns into the heads.
- See <u>Figure 4-47</u>. Install mounting flanges (3) on induction module with counterbore (1) facing toward the engine.
- Install new seals (4).
  - Placed the beveled edge facing the mounting flange counterbore.
  - Rotate the flange to the slotted mounting hole is on the same side as the IAC solenoid.

#### NOTES

- Verify that the flanges are installed on the manifold.
- Verify that the rubber seals are in place.
- See <u>Figure 4-45</u>. Place induction module assembly in position between engine heads. Slide open slotted ends of mounting flanges under heads of two mounting screws on left side of engine.
- While holding induction module assembly in place, install two mounting screws (3) into remaining mounting flange holes. Tighten all four screws finger-tight.
- 6. Tighten to 90-120 in-lbs (10.3-13.6 Nm).
- 7. Inspect O-rings on flare fittings (2). Replace as necessary.
- Install flare fittings in cylinder heads. Tighten to 22-26 ftlbs (29.8-35.3 Nm).

- 9. Connect oil line flare nuts (1) to flare fittings (2). Tighten to 13-17 ft-lbs (17.6-23.0 Nm).
- Install throttle cables. See <u>2.28 THROTTLE CABLES: ALL MODELS.</u>
- 11. Adjust throttle and idle cables. See <u>1.13 THROTTLE</u> <u>CONTROL</u>.

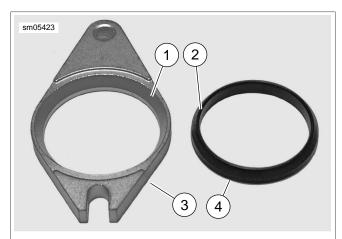

- 1. Beveled counterbore
- 2. Beveled edge
- 3. Mounting flange
- 4. Tapered seal

Figure 4-47. Mounting Flange and Seal


12. **EVAP Controlled Models:** See <u>Figure 4-44</u>. Install purge hose onto fitting (8) on induction module (1).

#### NOTE

XR 1200X: See <u>Figure 4-48</u>. The fuel injector harness leads must NEVER be routed between the retaining bracket (3) and the induction module body (4). Improper routing will result in chafing of the insulation resulting in poor engine performance.

- 13. See Figure 4-44. Plug in the following connectors:
  - a. Front fuel injector (3) [84],
  - b. Rear fuel injector (4) [85],
  - c. TMAP sensor (5) [80],
  - d. IAC (6) [87],
  - e. TPS (7) [88].
- Secure TPS harness to cover with a new cable strap with anchor.

- 15. Install induction module cover. Finger tighten the fasteners.
- 16. Tighten:
  - a. Socket headbolts to 20-24 ft-lbs (27.1-32.5 Nm).
  - b. Cover-to-induction module fastener to 90-120 in-lbs (10.2-13.6 Nm).
  - Cover-to-wire form fastener to 90-120 in-lbs (10.2-13.6 Nm).
- 17. Install air box. See <u>4.3 AIR CLEANER ASSEMBLY, XR</u> 1200X.
- 18. Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u>.
- Fill fuel tank. Check for leaks around fuel pump module and quick connector. See <u>4.4 FUEL TANK: XL MODELS</u>.
- 20. Install main fuse.
- 21. Close left side cover.
- 22. Reset IAC to park.
  - a. Turn ignition to ON.
  - b. Turn ignition to OFF.
- 23. Start engine. Check for fuel leaks.

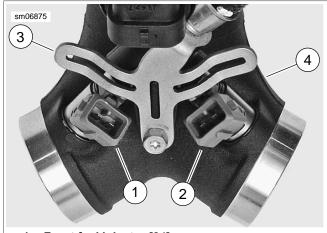

- 1. Front fuel injector [84]
- 2. Rear fuel injector [85]
- 3. Retaining bracket
- 4. Induction module

Figure 4-48. Fuel Injectors and Retaining Bracket

# 4.10

# **IDLE AIR CONTROL (IAC)**

#### **GENERAL**

## **AWARNING**

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

XL Models: See <u>Figure 4-49</u>. XR 1200X: See <u>Figure 4-50</u>.

The ECM uses the IAC to control engine idle speed. See the electrical diagnostic manual.

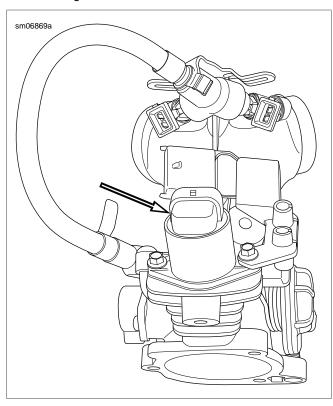


Figure 4-49. IAC: XL Models

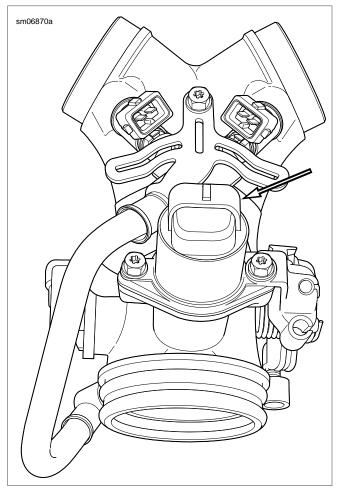


Figure 4-50. IAC: XR 1200X

#### **REMOVAL: XL MODELS**

PART NUMBER	TOOL NAME
HD-25070	HEAT GUN

# **A**WARNING


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- Remove air cleaner assembly. See <u>4.3 AIR CLEANER</u> ASSEMBLY.
- 3. See <u>Figure 4-51</u>. Unplug harness connector [87B] from IAC connector [87A] (1).

#### NOTE


Heat screws (2) to soften the thread sealant and avoid breakage during removal. Use ONLY HEAT GUN (Part No. HD-25070) to heat the screws. NEVER use an open flame.

- 4. Using a six-point socket (not a Torx wrench), remove two screws (2) in the following order:
  - Heat fastener nearest to throttle bracket for two minutes using HEAT GUN (Part No. HD-25070). Remove screw.
  - b. Heat remaining screw for one minute. Remove screw.
- See Figure 4-52. Grasp IAC and rotate clockwise until IAC mounting tab (1) clears throttle cable bracket (2).
- With a gentle twisting motion, pull IAC straight out of induction module body.

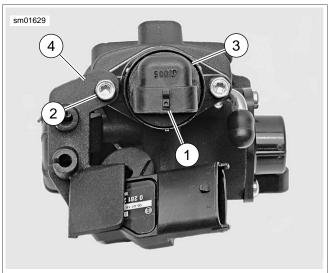

- 1. IAC Connector [87A]
- 2. Screw (2)
- IAC
- Throttle cable bracket

Figure 4-51. IAC Removal/Installation: XL Models

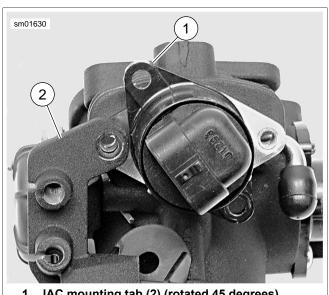

- IAC mounting tab (2) (rotated 45 degrees)
- Throttle cable bracket

Figure 4-52. Removing/Installing IAC: XL Models

#### **INSTALLATION: XL MODELS**

FASTENER	TORQUE VALUE	
IAC mounting screw: XL models	60 in-lbs	6.8 Nm

1. See Figure 4-53. If re-using IAC (1), inspect O-ring (2) for cuts, tears or signs of deterioration. Replace IAC if O-ring is damaged.

## WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Clean all locking agent from the threads of the attachment screws and holes. Blow debris from screw holes using low-pressure compressed air.
- 3. Apply a thin coat of clean engine oil to O-ring.
- See Figure 4-52. Rotate IAC approximately 45 degrees clockwise so IAC mounting tab will clear throttle cable bracket (2) when IAC is installed.
- With a gentle twisting motion, insert IAC into induction module.
- Rotate IAC so that harness connector faces intake manifold and mounting tab is underneath tab on throttle cable bracket.
- 7. Install IAC.
  - See Figure 4-51. Apply a drop of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads of each screw (2).
  - Install two screws (2).
  - Use a six-point socket (not a Torx wrench). Tighten to 60 in-lbs (6.8 Nm).
- Plug harness connector [87B] into IAC connector [87A] (1).
- Install air cleaner assembly. See 4.3 AIR CLEANER ASSEMBLY.
- 10. Install main fuse.
- 11. Close left side cover.



Figure 4-53. IAC and O-ring

#### **REMOVAL: XR 1200X**

PART NUMBER	TOOL NAME
HD-25070	HEAT GUN

#### NOTE

It is not necessary to remove the fuel tank, air box or induction module from the vehicle in order to replace the IAC.

# **AWARNING**

Gasoline can drain from quick-connect fitting when removing fuel line. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00267a)

1. Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.5 FUEL TANK: XR 1200X.

# **AWARNING**


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- Remove main fuse.
- See Figure 4-54. Unplug harness connector [87B] from IAC connector [87A] (1).

#### NOTE


Screws (2) MUST be heated to soften the thread sealant and avoid breakage during removal. Use ONLY HEAT GUN (Part No. HD-25070) to heat the screws. NEVER use an open flame.

- Using a six-point socket (not a Torx wrench), remove two screws (2) in the following order:
  - a. Heat fastener nearest to throttle bracket for two minutes using HEAT GUN (Part No. HD-25070). Remove screw.
  - b. Heat remaining screw for one minute and remove.
- See Figure 4-55. Grasp IAC and rotate counterclockwise until IAC mounting tab (1) clears throttle cable bracket (2).
- With a gentle twisting motion, pull IAC straight out of induction module body.

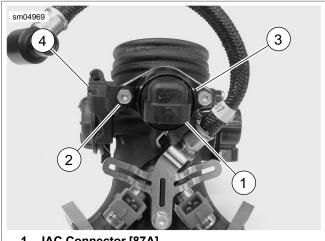

- 1. IAC Connector [87A]
- 2. Screw (2)
- 3. IAC
  - Throttle cable bracket

Figure 4-54. IAC Removal/Installation: XR 1200X

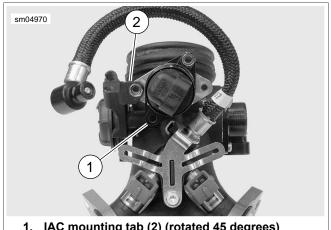

- 1. IAC mounting tab (2) (rotated 45 degrees)
- 2. Throttle cable bracket

Figure 4-55. Removing/Installing IAC: XR 1200X

#### **INSTALLATION: XR 1200X**

FASTENER	TORQUE VALUE	
IAC mounting screw: XR 1200X	60 in-lbs	6.8 Nm

1. See Figure 4-53. If re-using IAC (1), inspect O-ring (2) for cuts, tears or signs of deterioration. Replace IAC if O-ring is damaged.

## WARNING

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Clean all locking agent from the threads of the attachment screws and holes. Blow debris from screw holes using low-pressure compressed air.
- 3. Apply a thin coat of **clean** engine oil to O-ring.
- 4. See Figure 4-55. Rotate IAC approximately 45 degrees counterclockwise so IAC mounting tab will clear throttle cable bracket (2) when IAC is installed.
- With a gentle twisting motion, insert IAC into induction module.
- Rotate IAC so that harness connector points straight down and mounting tab is underneath tab on throttle cable bracket.
- 7. Install the IAC.
  - See Figure 4-54. Apply a drop of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads of each screw (2).
  - b. See Figure 4-54. Install two screws (2).
  - c. Use a six-point socket (not a TORX wrench). Tighten to 60 in-lbs (6.8 Nm).
- Plug harness connector [87B] into IAC connector [87A]
- Connect fuel hose to fuel pump module. See 4.5 FUEL TANK: XR 1200X.
- 10. Install main fuse.
- 11. Close left side cover.
- 12. Turn on ignition switch and start motorcycle. Carefully check for leaks around fuel hose fitting.

4-36 2013 Sportster Service: Fuel System

# TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR

4.11

#### **GENERAL**

#### WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

See <u>Figure 4-56</u> or <u>Figure 4-57</u>. The Temperature Manifold Absolute Pressure (TMAP) sensor performs the dual functions of monitoring air temperature and air pressure in the intake manifold. See the electrical diagnostic manual.



Figure 4-56. TMAP Location: XL Models



Figure 4-57. TMAP Location: XR 1200X

# **REMOVAL: XL MODELS**

#### WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

# **A**WARNING

Gasoline can drain from quick-connect fitting when removing fuel line. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00267a)

- 1. Remove main fuse.
- Remove air cleaner assembly. See <u>4.3 AIR CLEANER</u> <u>ASSEMBLY</u>.
- Remove fuel rail and fuel injectors. See 4.15 FUEL INJECTORS. This will allow access to the two screws that secure the induction module to the intake manifold.
- See <u>Figure 4-56</u>. Remove two screws (2) and separate induction module from intake manifold. See <u>4.8 INDUC-TION MODULE</u>: XL MODELS.
- See <u>Figure 4-58</u>. Pull induction module away from intake manifold far enough so that TMAP sensor retaining bracket (1) clears TMAP sensor body (2).
- Unplug harness connector [80B] from TMAP connector [80A] (3).
- 7. Grasp TMAP sensor and with a gentle twisting motion, pull sensor straight up out of intake manifold body.



- 1. TMAP sensor retaining bracket
- 2. TMAP sensor
- 3. Sensor connector [80A]
- 4. O-ring

Figure 4-58. TMAP Sensor Removal/Installation

#### **INSTALLATION: XL MODELS**

FASTENER	TORQUE VALUE	
Induction module screw: XL Models	35 <b>in-lbs</b>	4.0 Nm

- See <u>Figure 4-59</u>. If re-using TMAP sensor (1), inspect Oring (2) in groove of sensor for cuts, tears or signs of deterioration. Replace if necessary.
- Apply a thin coat of clean engine oil to TMAP sensor Oring.
- 3. See <u>Figure 4-58</u>. With a gentle twisting motion, insert sensor (2) into intake manifold with connector [80A] (3) facing rear cylinder head.
- 4. Plug harness connector [80B] into TMAP sensor.
- Inspect O-ring (4) between induction module and intake manifold for cuts, tears or signs of deterioration. Install new O-ring if necessary. Make certain O-ring is fully seated in its grove in induction module body.
- 6. Mate induction module to intake manifold. Secure with two screws. Tighten to 35 **in-lbs** (4.0 Nm).
- Install fuel injectors and fuel rail. See <u>4.15 FUEL INJECTORS</u>.
- Install air cleaner assembly. See <u>4.3 AIR CLEANER</u> ASSEMBLY.

## **A**WARNING

To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

# **AWARNING**

Use care when refueling. Pressurized air in fuel tank can force gasoline to escape through filler tube. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00029a)

# **AWARNING**

Avoid spills. Slowly remove filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028a)

- 9. Connect fuel hose to fuel pump module.
- Fill fuel tank. Carefully check for leaks around fuel pump module. See <u>4.4 FUEL TANK: XL MODELS, Connecting</u> <u>Fuel Hose and Filling Fuel Tank.</u>
- 11. Install main fuse.
- 12. Close left side cover.

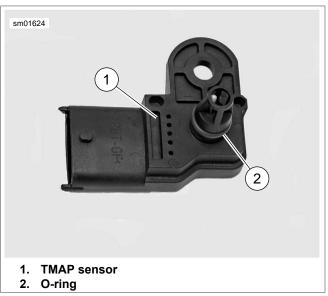


Figure 4-59. TMAP Sensor

#### **REMOVAL: XR 1200X**

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

1. Remove main fuse.

#### NOTE

See <u>Figure 4-60</u>. The TMAP sensor harness and TPS harness are attached to inside of induction module cover. It is not necessary to remove the retainer securing these harnesses to the induction module cover in order to access TMAP sensor.

2. Remove screws (3) and the wire form (1) and induction module fastener (2).

- 3. Carefully rotate induction module cover out of the way.
- 4. Unplug TMAP sensor harness connector [80B].
- 5. See Figure 4-61. Remove screw (2).
- 6. Grasp TMAP sensor (1) and with a gentle twisting motion, pull sensor straight up out of induction module body.

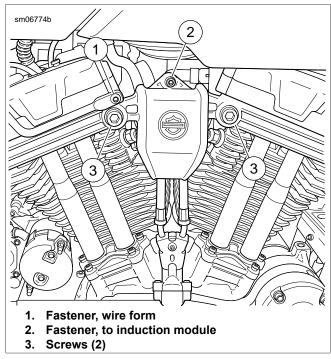


Figure 4-60. Induction Module Cover: XR 1200X

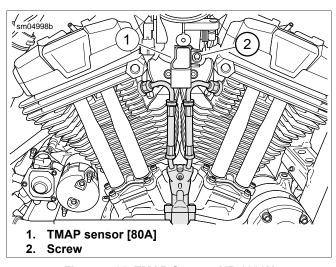


Figure 4-61. TMAP Sensor: XR 1200X

#### **INSTALLATION: XR 1200X**


FASTENER	TORQUE VALUE	
TMAP sensor screw	80 <b>in-lbs</b>	9.0 Nm
Induction module cover to cylinder head fastener: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm
Induction module cover to induction module fastener: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm
Wire form to induction module cover fastener: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm

- If re-using TMAP sensor, inspect O-ring for cuts, tears or signs of deterioration. Replace if necessary.
- Apply a thin coat of clean engine oil to TMAP sensor Oring.
- With a gentle twisting motion, insert sensor into induction module with connector [80A] pointing down. Secure sensor to induction module with screw. Tighten to 80 in-lbs (9.0 Nm).
- 4. Plug sensor harness connector [80B] into TMAP sensor.
- See <u>Figure 4-60</u>. Install the induction module cover.
  - a. Rotate cover between cylinder heads.
  - b. Install all fasteners finger-tight.
  - c. Verify cover alignment before proceeding.
  - d. Tighten socket head screws (3) to 20-24 ft-lbs (27.1-32.5 Nm).
  - e. Tighten fastener (2) to 84-108 in-lbs (9.5-12.2 Nm).
  - f. Tighten fastener (1) to 84-108 in-lbs (9.5-12.2 Nm).
- 6. Install main fuse.

# **OXYGEN (O2) SENSOR**

#### **GENERAL**

See <u>Figure 4-62</u>. The O2 sensors are installed in threaded bosses on the inboard side of the front and rear exhaust pipes. For O2 sensor troubleshooting, see the electrical diagnostic manual.

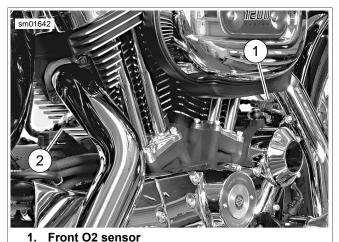

2. Rear O2 sensor

Figure 4-62. O2 Sensor Locations: XL Models

#### **REMOVAL**

PART NUMBER	TOOL NAME	
HD-48262	OXYGEN SENSOR SOCKET	
HD-48647	OXYGEN SENSOR SOCKET	


- All Models: See <u>Figure 4-63</u>. Disconnect the front O2 sensor connector:
  - a. Remove the frame clip (2).
  - b. Disconnect the sensor pin connector [138A] housing (3) from the socket connector [138B] housing.
- 2. **XL Models:** See <u>Figure 4-64</u>. Disconnect the rear O2 sensor connector:
  - a. Remove the rear O2 sensor connector [137] (2) from the ECM caddy (1).
  - b. Disconnect the rear O2 sensor pin connector [137A] housing from the socket connector [137B] housing.
- 3. **XR 1200X:** Disconnect the rear O2 sensor pin connector [137A] housing from the socket connector [137B] housing.

#### NOTE

If O2 sensors are to be reused:

- Mark each sensor FRONT or REAR.
- Do not damage the sensor wire harness.

- 4. Remove the front and rear sensor:
  - a. XL Models: Use the OXYGEN SENSOR SOCKET (Part No. HD-48262).
  - b. **XR 1200X:** Use the OXYGEN SENSOR SOCKET (Part No. HD-48647).

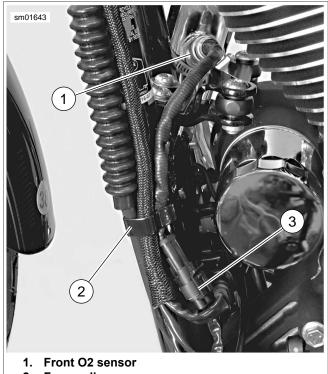

- 2. Frame clip
- 3. O2 sensor connector [138]

Figure 4-63. Front O2 Sensor and Connector (XL shown)



2. O2 sensor

Figure 4-64. Rear Oxygen Sensor: XL Models

4-40 2013 Sportster Service: Fuel System

#### INSTALLATION

PART NUMBER	TOOL NAME
HD-48262	OXYGEN SENSOR SOCKET
HD-48647	OXYGEN SENSOR SOCKET

FASTENER	TORQUE VALUE	
O2 sensor	29-44 ft-lbs	39.3-59.7 Nm

#### **NOTES**

- Do not install O2 sensors that have been dropped or impacted by other components. Damage to the sensor element may have occurred.
- New O2 sensors have threads coated with anti-seize material.
- If a sensor is being reused, apply a thin coat of ANTI-SEIZE LUBRICANT to the sensor threads and install new seal rings.
- Do not use any other grease or sealant product on sensor threads.
- 1. Install the front and rear sensors:
  - a. XL Models: Use the OXYGEN SENSOR SOCKET (Part No. HD-48262) to install the front and rear O2 sensors.
  - XR 1200X: Use the OXYGEN SENSOR SOCKET (Part No. HD-48647) to install the front and rear O2 sensors.

2. Tighten to 29-44 ft-lbs (39.3-59.7 Nm).

#### NOTE

The O2 connector must be clean and free of any dielectric grease.

- 3. All Models: Route the front O2 wire harness:
  - a. Connect the pin and socket connector [138] housings.
  - Install the frame clip over the sensor harness, clutch cable, and wiring harness on left frame down tube.

#### NOTE

Route rear O2 sensor harness toward left side in a loop away from the exhaust system. Avoid contact with exhaust port or exhaust pipe.

- 4. **XL Models:** Route the rear O2 sensor wire harness:
  - a. Connect the pin and socket connector [137] housings.
  - b. Route the wire harness and snap the connector into the ECM caddy.
  - c. Slide the caddy into place and tighten the fastener.
- XR 1200X: Route sensor harness and connect pin and socket connector [137] housings.


2013 Sportster Service: Fuel System 4-41

# **EXHAUST SYSTEM: XL MODELS**

## **GENERAL**

PART NUMBER	TOOL NAME
PFSX916	SNAP-ON WRENCH

To facilitate removing exhaust pipe header nuts, use SNAP-ON WRENCH (Part No. PFSX916).

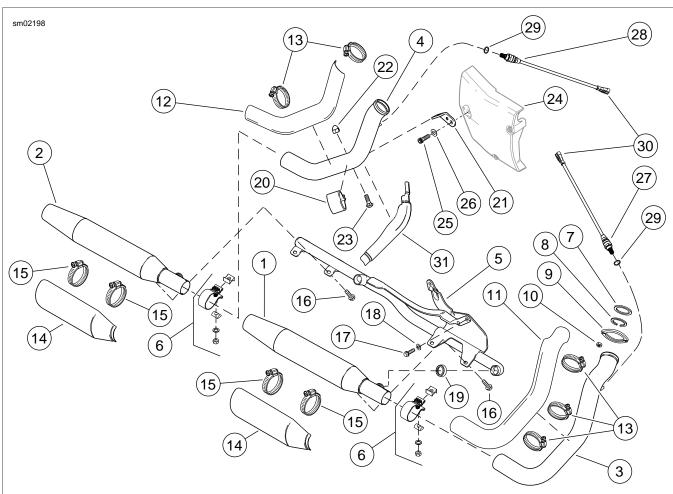

- 1. Muffler, front
- 2. Muffler, rear
- 3. Exhaust pipe, front
- 4. Exhaust pipe, rear
- 5. Muffler interconnect bracket
- 6. Torca muffler clamp assembly (2)
- 7. Exhaust port gasket (2)
- 8. Exhaust gasket retaining ring (2)
- 9. Exhaust pipe flange (2)
- 10. Nut (4)
- 11. Heat shield, front exhaust pipe

- 12. Heat shield, rear exhaust pipe
- 13. Worm drive clamp (5)
- 14. Muffler heat shield (2) (HDI, England, Japan, Brazil) (2)
- 15. Worm drive clamp (4)
- 16. Flanged bolt (4)
- 17. Screw (3)
- 18. Washer (3)
- 19. Muffler interconnect gasket (2)
- 20. Exhaust pipe clamp
- 21. Exhaust pipe clamp bracket
- 22. Acorn nut

- 23. Screw
- 24. Engine sprocket cover
- 25. Screw
- 26. Washer
- 27. Front O2 sensor assembly
- 28. Rear O2 sensor assembly
- 29. Seal ring (2)
- 30. O2 sensor connectors (2): [137], [138]
- 31. Heat shield, rear exhaust pipe (mid-control vehicles only)

Figure 4-65. Exhaust System, All XL Models

#### **REMOVAL**

# **Mufflers and Exhaust Pipes**

#### NOTE


See <u>Figure 4-66</u>. Vehicles with mid controls are equipped with an extra heat shield (2) on the rear exhaust pipe.

- 1. See Figure 4-65. Remove heat shields:
  - a. Models with Mid Controls: Remove worm drive clamps (13) from heat shield (12) completely. Remove bottom heat shield.
  - b. **All Models:** Open worm drive clamps (13) and remove exhaust pipe heat shields (11, 12).
  - HDI, England, Asia Pacific, India, Japan, Brazil Models: Open worm drive clamps (15) and remove muffler heat shields (14).
- Unplug O2 sensor connectors (30). Front connector [138] is mounted on left front frame downtube. Rear connector [137] is attached to the ECM caddy on the left.
- 3. Remove nuts (10) from front and rear cylinder head exhaust studs.
- 4. Remove flanged bolts (16) securing front and rear mufflers (1, 2) to muffler interconnect bracket (5).
- 5. Loosen Torca muffler clamp assemblies (6) on front and rear mufflers. Remove mufflers. Discard muffler interconnect gaskets (19).
- 6. Remove and discard Torca clamps.

#### NOTE

New Torca muffler clamps have eliminated the need for silicone or graphite tape during assembly. Always use **new** clamps during installation to maintain sealing integrity and prevent leakage.

- 7. Remove nut (22) and screw (23) from exhaust pipe clamp (20). Separate exhaust pipe clamp from clamp bracket (21).
- 8. Remove front and rear exhaust pipes (3, 4). Slide exhaust pipe clamp off rear exhaust pipe.
- Remove exhaust port gasket (7), retaining ring (8) and exhaust pipe flange (9) from each exhaust pipe. Discard gasket.
- Remove O2 sensor assemblies (27, 28) from front and rear exhaust pipes. Discard seal rings (29). See 4.12 OXYGEN (O2) SENSOR.

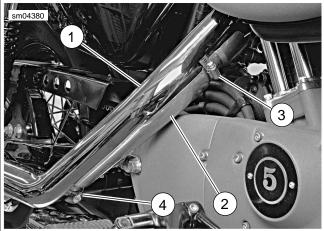


- 1. Top heat shield
- 2. Bottom heat shield
- 3. Upper worm drive clamp
- 4. Lower worm drive clamp

Figure 4-66. Rear Exhaust Pipe Heat Shields: Vehicles with Mid Controls

#### **Muffler Interconnect Bracket**

- See <u>Figure 4-67</u>. Remove screw (6), washer (5) and exhaust pipe clamp bracket (4). Remove two screws (2, 3). Remove sprocket cover (1).
- See <u>Figure 4-68</u>. Remove rear brake rod (1) at bell crank (2).
- See <u>Figure 4-65</u>. Remove three screws (17) and washers (18) securing muffler interconnect bracket (5) to engine crankcase. Remove muffler interconnect bracket.

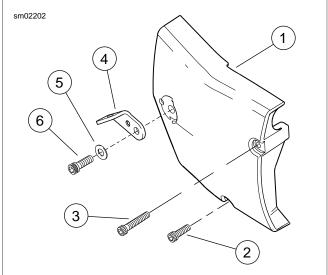

- 1. Sprocket cover
- 2. Screw
- 3. Screw
- 4. Exhaust pipe clamp bracket
- 5. Washer
- 6. Screw

Figure 4-67. Sprocket Cover

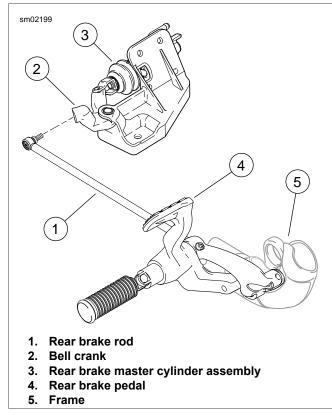


Figure 4-68. Rear Brake Linkage

#### INSTALLATION

PART NUMBER	TOOL NAME
	SNAP-ON SWIVEL BALL SOCKET EXTENSION

FASTENER	TORQUE VALUE	
Muffler interconnect bracket mounting screw: XL Models	30-33 ft-lbs	40.7-44.7 Nm
Brake rod to bell crank screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm
Exhaust pipe clamp bracket screw: XL Models	30-33 ft-lbs	40.7-44.8 Nm
Sprocket cover, forward and lower screws	80-120 in-lbs	9.0-13.6 Nm
O2 sensor	29-44 ft-lbs	39.3-59.7 Nm
Muffler to interconnect bracket screw: XL Models	15-19 ft-lbs	20.4-25.8 Nm
Cylinder head exhaust port nut	96-120 in-lbs	10.9-13.6 Nm
Muffler torca clamp nut	38-43 ft-lbs	51.6-58.4 Nm
Exhaust pipe clamp nut: XL Models	20-30 ft-lbs	27.1-40.7 Nm
Exhaust heat shield clamps	20-40 <b>in-lbs</b>	2.3-4.5 Nm

#### **Muffler Interconnect Bracket**

- 1. See <u>Figure 4-65</u>. Install muffler interconnect bracket (5) to engine case with three screws (17) and washers (18). Tighten to 30-33 ft-lbs (40.7-44.7 Nm).
- See Figure 4-68. Apply two drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to rear brake rod ball stud screw. Attach rear brake rod (1) to bell crank (2). Tighten screw to 120-180 in-lbs (13.6-20.4 Nm).
- 3. See Figure 4-67. Install sprocket cover (1). Install but do not tighten the screws (2, 3). Note that long screw goes in top hole, short screw in bottom hole.
- Install exhaust pipe clamp bracket (4), washer (5) and screw (6). Tighten to 30-33 ft-lbs (40.7-44.8 Nm). Now tighten screws (2, 3) to 80-120 in-lbs (9.0-13.6 Nm).

#### **Exhaust Pipes and Mufflers**

#### NOTES

- To facilitate installing exhaust pipe header nuts, use SNAP-ON SWIVEL BALL SOCKET EXTENSION (Part No. PFSX916).
- If reusing the O2 sensors, apply a thin coat of ANTI-SEIZE LUBRICANT to the threads prior to installation. Do not use any other grease or sealant product on sensor threads.
- The electrical connector must also be clean and free of dielectric grease.
- See <u>Figure 4-65</u>. If the front and rear O2 sensor assemblies (27, 28) are being reused, install **new** seal rings (29) onto each sensor. Apply a thin coat of ANTI-SEIZE LUB-RICANT to the sensor threads.

- Install sensor assemblies into front and rear exhaust pipes. Tighten to 29-44 ft-lbs (39.3-59.7 Nm). See <u>4.12 OXYGEN</u> (O2) SENSOR.
- Place exhaust pipe flange (9), exhaust gasket retaining ring (8) and **new** exhaust port gasket (7) over front end of each exhaust pipe (3, 4). Position flange so that inside counterbore faces cylinder head exhaust port.
- 4. Position front ends of front and rear exhaust pipes into front and rear cylinder heads, respectively. Position holes in flanges over mounting studs and loosely install nuts (10). Do not tighten nuts at this time.
- 5. Install exhaust pipe clamp (20) on rear exhaust pipe (4) with square hole facing down. Assemble exhaust pipe clamp to exhaust pipe clamp bracket (21) with screw (23) and acorn nut (22). Verify that the bracket fits between ends of clamp. Do not tighten at this time.
- 6. Install **new** muffler interconnect gaskets (19) in interconnect mating holes in mufflers (1, 2).
- Place new Torca clamp assemblies (6) over slotted end of each muffler. Install each muffler onto the end of its respective exhaust pipe.
- Rotate both mufflers until their mounting bosses line up with holes in muffler interconnect bracket. Carefully mate each muffler with exhaust port in interconnect bracket. Loosely install flanged bolts (16). Do not tighten at this time.

- Tighten exhaust system fasteners in the following sequence:
  - Tighten four flanged bolts securing mufflers to interconnect bracket to 15-19 ft-lbs (20.4-25.8 Nm).
  - b. Tighten four nuts at cylinder head exhaust studs to 96-120 **in-lbs** (10.9-13.6 Nm).
  - Tighten two Torca clamps to 38-43 ft-lbs (51.6-58.4 Nm).
  - Tighten rear exhaust pipe clamp nut (22) to 20-30 ftlbs (27.1-40.7 Nm).
- Plug in O2 sensor connectors (30). Front connector [138] is mounted on left front frame downtube. Rear connector [137] is attached to the left side of the ECM caddy. See 4.12 OXYGEN (O2) SENSOR.
- 11. Install heat shields:
  - Open worm drive clamps (13) and install heat shields (11, 12) on exhaust pipes. Position each clamp so that screw is on the outboard side in the most accessible position.
  - b. **Models with Mid Controls:** See Figure 4-66. Tighten lower worm drive clamp (4) a few turns. Slide lower portion of bottom heat shield (2) into lower worm drive clamp. Engage upper portion of bottom heat shield into upper worm drive clamp (3).
  - All Models: Tighten all exhaust pipe heat shield clamps to 20-40 in-lbs (2.3-4.5 Nm).
  - d. HDI, England, Asia Pacific, India, Japan and Brazil Models: Open worm drive clamps (15). Install the muffler heat shields (14). Position each clamp so that screw is on the outboard side in the most accessible position. Tighten clamps securely.

# **EXHAUST SYSTEM: XR 1200X**

#### **GENERAL**

PART NUMBER	TOOL NAME
PFSX916	SNAP-ON WRENCH

To facilitate removing exhaust pipe header nuts, use SNAP-ON WRENCH (Part No. PFSX916).

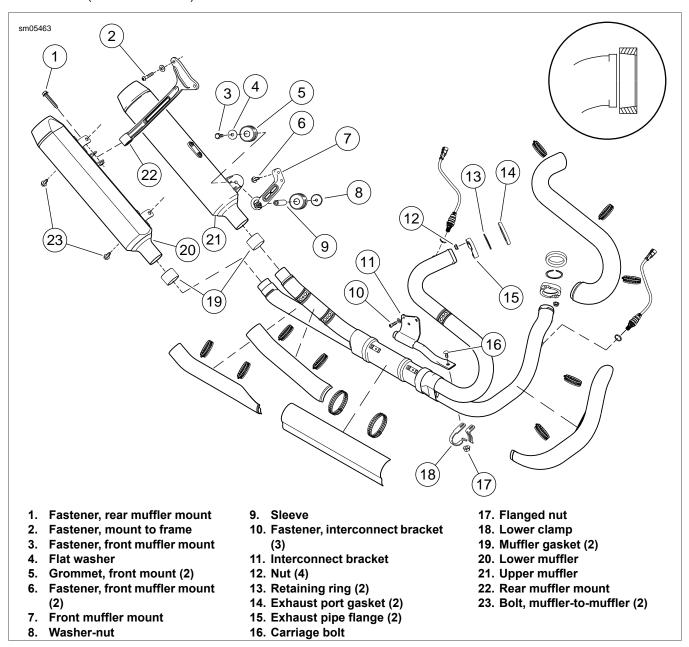


Figure 4-69. Exhaust System: XR 1200X

#### **REMOVAL**

## **Mufflers**

- See <u>Figure 4-69</u>. Remove forward muffler mount fastener
   and washer-nut (8).
- 2. Remove two bolts (23) fastening mufflers together.
- 3. Slide upper muffler (21) back off header pipe to remove.
- 4. Remove rear muffler mount fastener (1).

- Rotate lower muffler (20) counterclockwise to disengage from the rear mount (22) and slide back off header pipe to remove.
- 6. Remove mount grommets (5) and sleeve (9).
- 7. Inspect rear mount (22) and replace if damaged.
- 8. Inspect muffler seals (19) and replace if necessary:
  - Pull seal out of muffler using a hook-type tool.
  - Push **new** seal into place being careful not to distort or damage the new seal.

## **Header Pipes**

- 1. Remove mufflers.
- Disconnect O2 sensor connectors. Remove sensor if necessary. See 4.12 OXYGEN (O2) SENSOR.
- 3. See <u>Figure 4-69</u>. Loosen or remove head pipe heat shields to gain access to header pipe flange nuts (12).
- Remove flange nuts (12) and pull flanges (15) off from studs.
- 5. Remove nut (17) and carriage bolt (16) from lower clamp (18).

#### NOTE

Be careful not to drop or hit header pipe assembly. Damage to the catalytic converter may result.

- 6. Remove header pipe assembly from vehicle.
- Inspect exhaust port gasket (14) and replace if necessary.
  - a. Pry gasket from exhaust port in cylinder head being careful not to damage the bore.
  - Push **new** gasket into place with the larger ID facing the header pipe, as shown in the inset in <u>Figure 4-69</u>.
- 8. Remove retainer rings (13) and flanges (15) if necessary.
- If necessary, remove mount brackets (7, 22) and interconnect bracket (11).

#### INSTALLATION

FASTENER	TORQUE VALUE	
Muffler mount to frame, rear fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm
Muffler mount to frame, front fastener: XR 1200X	45-50 ft-lbs	61.0-67.8 Nm
Interconnect bracket to frame fastener: XR 1200X	30-33 ft-lbs	40.7-44.7 Nm
Exhaust flange nut: XR 1200X	96-120 in-lbs	10.8-13.6 Nm
Exhaust clamp, lower nut: XR 1200X	30-33 ft-lbs	40.7-44.7 Nm
Muffler to front muffler mount fastener: XR 1200X	120-180 <b>in-lbs</b>	13.6-20.3 Nm
Muffler to muffler bolt: XR 1200X	120-180 <b>in-lbs</b>	13.6-20.3 Nm
Muffler to rear muffler mount fastener: XR 1200X	120-180 <b>in-lbs</b>	13.6-20.3 Nm
Exhaust heat shield clamps	20-40 in-lbs	2.3-4.5 Nm

- 1. See <u>Figure 4-69</u>. If removed, install flanges (15) and retaining rings (13).
- 2. If removed, install rear mount (22), front mount (7) and interconnect bracket (11).
  - a. Tighten fasteners (2) to 15-20 ft-lbs (20.3-27.1 Nm).
  - b. Tighten fasteners (6) to 45-50 ft-lbs (61.0-67.8 Nm).
  - c. Tighten fasteners (10) to 30-33 ft-lbs (40.7-44.7 Nm).

#### NOTE

Do not damage exhaust port gaskets (14) when positioning header pipes in exhaust port area.

- Install new exhaust port gaskets (14).
- Install head pipe assembly in position and loosely secure lower clamp (18) with carriage bolt (16) and flange nut (17).
- 5. Install flanges (15) and finger-tighten nuts (12). Do not tighten until mufflers are installed.
- 6. Install mufflers.
- 7. Place lower muffler (20) on header pipe. Rotate until rear mount fastener (1) can be installed. Loosely install fastener (1).
- 8. Place upper muffler (21) on header pipe.
- 9. Install muffler-to-muffler bolts (23) finger-tight.
- 10. Install grommets (5), sleeve (9), fastener (3), washer (4) and washer nut (8). Tighten finger-tight.
- 11. Tighten the exhaust flange nuts (12) to 96-120 **in-lbs** (10.8-13.6 Nm) in the following sequence:
  - a. The front exhaust pipe lower exhaust flange nut
  - b. The front exhaust pipe upper exhaust flange nut
  - c. The rear exhaust pipe lower exhaust flange nut
  - d. The rear exhaust pipe upper exhaust flange nut

#### **HOME**

- 12. Verify the exhaust header pipes do not contact the drive belt idler pulley. Verify that there is sufficient clearance for proper operation of the rear brake pedal. Tighten nut (17) to 30-33 ft-lbs (40.7-44.7 Nm).
- 13. Tighten fastener (3) to 120-180 in-lbs (13.6-20.3 Nm).
- 14. Tighten muffler to muffler bolts (23) to 120-180 **in-lbs** (13.6-20.3 Nm).
- 15. Tighten rear mount fastener (1) to 120-180 **in-lbs** (13.6-20.3 Nm).
- 16. Install heat shields. Tighten to 20-40 in-lbs (2.3-4.5 Nm).
- 17. Install and connect the O2 sensors. See <u>4.12 OXYGEN</u> (O2) SENSOR.

4-48 2013 Sportster Service: Fuel System

# **FUEL INJECTORS**

## **REMOVAL**

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

# **AWARNING**

Do not use solvents or other products that contain chlorine on plastic fuel system components. Chlorine can degrade plastic fuel system components, which can cause a loss of fuel system pressure or engine stalling and could result in death or serious injury. (000621b)


 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- XL Models with 4.5 gal (17.0 L) fuel tank: Access to the fuel injectors and fuel rail may be easier if the fuel tank is raised up as follows:
  - Remove seat.
  - Loosen (but do not remove) front fuel tank mounting screw. Remove rear fuel tank mounting screw, washers and nut. See 4.4 FUEL TANK: XL MODELS.
  - c. Place a clean shop cloth between front of fuel tank and front fork upper bracket to protect fuel tank finish. Carefully pivot rear of fuel tank upward and prop in position with a block of soft wood or other suitable device.
- 4. See <u>Figure 4-72</u>. Unplug engine sub-harness connectors from fuel injector connectors [84A], [85A] (7, 8).
- 5. Remove screw (5) and retaining bracket (2).
- If replacing either the fuel supply hose (1) or fuel rail (6), disassemble as follows:
  - a. Hold fuel rail in place.
  - b. With a gentle twisting motion, pull fuel supply hose straight up out of fuel rail.
- 7. Hold fuel injectors (9, 10) in place by pressing down on harness connectors (7, 8) and with a gentle rocking motion, pull fuel rail off injectors.
- With a gentle twisting motion, pull fuel injectors out of intake manifold (XL models) or induction module (XR 1200X).

9. Remove and discard O-rings (11).

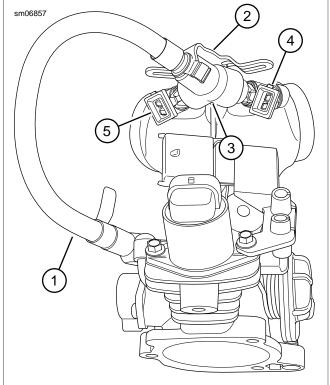

- 1. Fuel supply hose
- 2. Retaining bracket
- 3. Fuel rail
- 4. Front fuel injector and connector
- 5. Rear fuel injector and connector

Figure 4-70. Fuel Injector Assembly Location: XL Models


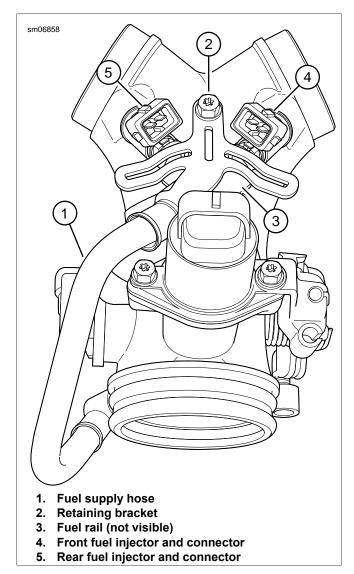


Figure 4-71. Fuel Injector Assembly Location: XR 1200X

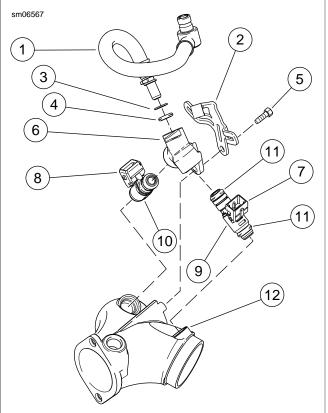

- 1. Fuel supply hose
- 2. Retaining bracket
- 3. Sealing washer (only available with fuel supply hose)
- 4. O-ring (only available with fuel supply hose)
- 5. Screw
- 6. Fuel rail
- 7. Front injector connector [84A]
- 8. Rear injector connector [85A]
- 9. Front fuel injector
- 10. Rear fuel injector
- 11. O-ring (4) (provided in repair kit)
- 12. Intake manifold

Figure 4-72. Fuel Injector Assemblies: XL Models

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Fuel hose retaining bracket screw	60 in-lbs	6.8 Nm
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm

- 1. See Figure 4-72. Apply a thin coat of clean engine oil to **new** fuel injector O-rings (11). Install O-rings onto fuel injectors (9, 10).
- 2. With harness connectors (7, 8) facing up, push fuel injectors into intake manifold (XL models) or induction module (XR 1200X).
- 3. See <u>Figure 4-70</u> or <u>Figure 4-71</u>. Rotate fuel injectors so that harness connectors are positioned as shown.

- 4. Gently press fuel rail onto free end of fuel injectors. Press fuel rail down until hole in fuel rail molded-in bracket lines up with mounting hole in intake manifold (12).
- 5. If the fuel supply hose and fuel rail were separated in the disassembly procedure, reassemble:
  - See <u>Figure 4-72</u>. Inspect sealing washer (3) and Oring (4) for damage. If either require replacement, install a **new** fuel line kit.
  - b. Lightly coat O-ring with clean engine oil. Push fuel supply hose into fuel rail bore until collar on hose is flush with top of fuel rail.
- 6. See <u>Figure 4-72</u>. Install retaining bracket (2) and fastener (5) as follows:
  - a. See <u>Figure 4-73</u>. Orient fuel supply hose so that locating flange (2) is positioned as shown.
  - b. Install retaining bracket (3). Fit the U-shaped opening in bracket around fuel supply hose and locating flange.
  - c. See <u>Figure 4-72</u>. Secure retaining bracket (2) with screw (5). Tighten to 60 **in-lbs** (6.8 Nm).

#### **NOTES**

- XL Models: See <u>Figure 4-70</u>. The fuel injector harness leads are mounted between the bracket and induction module.
- XR 1200X: See <u>Figure 4-71</u>. Do not route the fuel injector harness leads between the retaining bracket (2) and induction module body. Improper routing will result in chafing of the insulation resulting in poor engine performance.
- Connect engine sub-harness connectors to the fuel injectors. Verify that the wire harnesses are routed outside the wings of retaining bracket (2) on XR 1200X.

#### **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 8. XL Models with 4.5 gal (17.0 L) Fuel Tank: if the fuel tank was raised up to gain access to the fuel injectors, install fuel tank and seat:
  - a. Remove prop from under rear of fuel tank.
  - b. Lower rear of fuel tank into position.
  - Install fastener, washer and nut in fuel tank rear mounting holes.
  - Tighten front and rear fasteners to 15-20 ft-lbs (20.3-27.1 Nm).
  - Install protective caps on screw ends. See <u>4.4 FUEL</u> TANK: XL MODELS.
  - f. Install seat.
- Connect fuel hose to fuel pump module. Fill fuel tank. Check for leaks around fuel pump module. See <u>4.4 FUEL TANK: XL MODELS</u>.
- 10. Install main fuse.
- 11. Close left side cover.

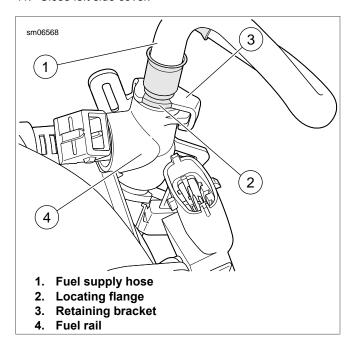


Figure 4-73. Mounting Fuel Hose and Fuel Rail: XL Models

FUEL PUMP 4.16

#### **GENERAL**

# **AWARNING**

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

# **A**WARNING

Do not replace the special Teflon coated fuel pump wiring with ordinary bulk wire. Ordinary insulation materials can deteriorate when put in contact with gasoline and cause an explosion, which could result in death or serious injury. (00566b)

# **A**WARNING

Do not use solvents or other products that contain chlorine on plastic fuel system components. Chlorine can degrade plastic fuel system components, which can cause a loss of fuel system pressure or engine stalling and could result in death or serious injury. (000621b)

Carefully inspect fuel hose for cuts, tears, holes or other damage. Replace hose if any damage is found. Even a small hole can cause a reduction in fuel pressure.

#### **REMOVAL**

# **AWARNING**

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)


 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)


- 2. Remove main fuse.
- 3. See Figure 4-74. Unplug fuel pump harness connector [141] (1), located forward of fuse/relay block on left side of vehicle.
- Drain and remove fuel tank from vehicle. See <u>4.4 FUEL</u> TANK: XL MODELS or <u>4.5 FUEL TANK</u>: XR 1200X.
- 5. See <u>Figure 4-75</u>. Lay fuel tank upside-down on a soft cloth.
- 6. Remove five screws (3).

- Carefully lift fuel pump module out of fuel tank. See <u>Figure 4-76</u>. To facilitate removal, tilt module when it is almost completely free of fuel tank.
- 8. See <u>Figure 4-74</u>. Remove and discard cover plate seal (7).

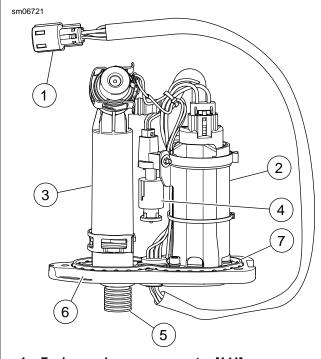

- 1. Fuel pump harness connector [141]
- 2. Fuel pump
- 3. Fuel filter housing
- 4. Sending unit float
- 5. Quick-connect fitting
- 6. Cover plate
- 7. Cover plate seal

Figure 4-74. Fuel Pump Module

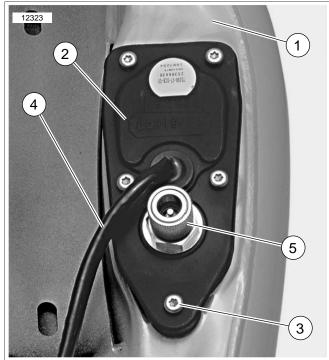

- 1. Fuel tank
- 2. Fuel pump module
- 3. Screw (5)
- 4. Fuel pump harness
- 5. Quick-connect fitting

Figure 4-75. Fuel Pump Module: All Models

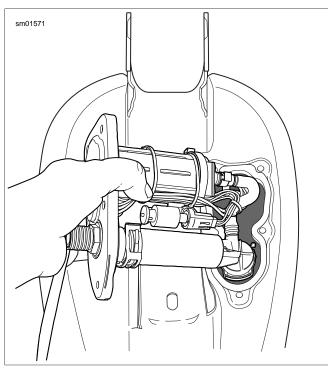


Figure 4-76. Removing/Installing Fuel Pump Module: All Models

#### **DISASSEMBLY**

The disassembly procedure consists of the following groups:

- Pressure regulator and filter housing.
- Fuel pump assembly and pump bracket.
- · Low fuel level sensor assembly.
- Fuel pump.

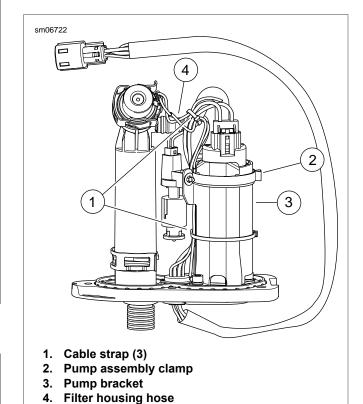


Figure 4-77. Fuel Pump Cable Straps and Pump Clamp

#### NOTE

See <u>Figure 4-77</u>. Maintain the relative positions of the wiring harness cable straps (1) and pump assembly clamp (2).

## **Pressure Regulator and Filter Housing**

- 1. See Figure 4-77. Remove cable strap (1) securing wiring harness to the filter housing hose (4).
- 2. See <u>Figure 4-78</u>. Remove ground clip (12) from top of filter housing (23).
- 3. Remove and discard clamp (1). Remove filter housing hose from top of fuel pump (2).
- 4. Remove retaining clip (24) from top of filter housing and remove pressure regulator (22).
- Remove second retaining clip (24) from bottom of filter housing and remove filter housing. Remove fuel filter element (25) from housing.
- 6. Remove O-ring (26) from filter housing mount (19).

## **Fuel Pump Assembly and Pump Bracket**

- See <u>Figure 4-77</u>. Make note of the location of any cable straps securing wiring harness to the fuel pump bracket (3). Remove cable straps.
- See <u>Figure 4-78</u>. Unplug fuel pump harness connector [86] (13).
- Unplug low fuel level sensor connector from fuel pump/sender harness (14).
- 4. Remove and discard clamp (1). Remove filter housing hose (11) from top of fuel pump (2).
- Remove and discard pump assembly clamp (7). Remove pump assembly with pump insulator (3) from pump bracket (5).
- Remove push nut (16) and low fuel level sensor assembly (17) from pump bracket.
- 7. Remove three screws w/lockwashers (6) and remove pump bracket from cover plate (9).

## Low Fuel Level Sensor Assembly

- See <u>Figure 4-77</u>. Make note of the location of cable strap

   securing low fuel level sensor connector to filter housing hose (4). Remove cable strap.
- 2. See <u>Figure 4-78</u>. Unplug the fuel pump/sender harness connector (15) from the low fuel level sensor (17).
- 3. Remove push nut (16) and low fuel level sensor assembly (17) from pump bracket (5).

#### **ASSEMBLY**

FASTENER	TORQUE VALUE	
Fuel pump bracket mounting	19-36 <b>in-lbs</b>	2.1-4.1 Nm
screw		

The assembly procedure consists of the following groups:

- · Low fuel level sensor assembly.
- · Fuel pump assembly and pump bracket.
- · Pressure regulator and filter housing.

#### Low Fuel Level Sensor Assembly

#### NOTE

The low fuel lamp will not turn off until there is sufficient fuel in the tank, the ignition switch has been turned off and on and the motorcycle has begun forward speed.

- 1. See <u>Figure 4-78</u>. Install low fuel level sensor assembly (17) onto pump bracket (5). Secure with push nut (16).
- 2. Plug the fuel pump/sender harness connector (15) into the low fuel level sensor (17).
- 3. See Figure 4-77. Secure low fuel level sensor connector and fuel pump/sender harness to filter housing hose (4) with cable strap (1).


#### **Fuel Pump Assembly and Pump Bracket**

- See <u>Figure 4-78</u>. Install pump bracket (5) onto cover plate (9). Secure with three screws w/lockwashers (6). Tighten to 19-36 in-lbs (2.1-4.1 Nm).
- Install low fuel level sensor assembly (17) onto pump bracket. Secure with push nut (16).
- Install fuel pump assembly (2) with pump insulator (3) onto pump bracket. Secure with pump assembly clamp (7) (for relative position of clamp, see <u>Figure 4-77</u>.)
- Install filter housing hose (11) on top of fuel pump. Secure with clamp (1).
- 5. Plug in fuel pump harness connector [86] (13).
- See <u>Figure 4-77</u>. Secure fuel pump/sender harness to fuel pump bracket (3) with cable straps (1).

#### **Pressure Regulator and Filter Housing**

- See <u>Figure 4-78</u>. Install the **new** O-ring onto filter housing mount (19).
- 2. Install fuel filter element (25) into filter housing (23). Install filter housing onto filter housing mount. Secure with retaining clip (24) at bottom of housing, making sure that clip is oriented exactly as shown in Figure 4-78.
- 3. Install pressure regulator (22) on top of filter housing. Secure with second retaining clip (24), making sure that clip is oriented exactly as shown in Figure 4-78.
- Install filter housing hose (11) on top of fuel pump (2).
   Secure with clamp (1).
- 5. Install ground clip (12) on top of filter housing.
- 6. See <u>Figure 4-77</u>. Secure fuel pump/sender harness to filter housing hose (4) with cable strap (1).

4-54 2013 Sportster Service: Fuel System

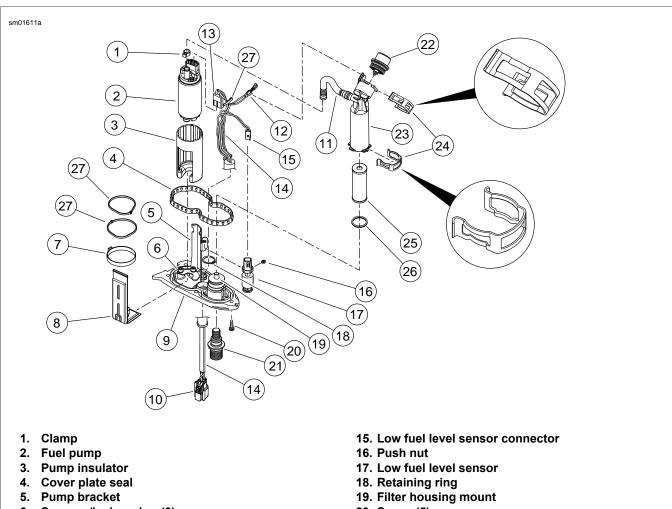

- 6. Screw w/lockwasher (3)
- 7. Pump assembly clamp
- 8. Inlet sock
- 9. Cover plate
- 10. Fuel pump/sender harness connector [141]
- 11. Filter housing hose
- 12. Ground clip
- 13. Fuel pump harness connector [86]
- 14. Fuel pump/sender harness

- 20. Screw (5)
- 21. Fuel outlet quick-connect fitting
- 22. Pressure regulator
- 23. Filter housing
- 24. Retaining clip (2)
- 25. Fuel filter element
- 26. O-ring
- 27. Cable strap

Figure 4-78. Fuel Pump and Sender Assembly

# **INSTALLATION**

FASTENER	TORQUE	VALUE
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm

- 1. See <u>Figure 4-78</u>. Install **new** cover plate seal (4) into groove in cover plate (9).
- See <u>Figure 4-76</u>. Carefully install fuel pump module into fuel tank.
  - Tilt module.
  - b. Lower it into fuel tank.
  - c. Straighten module to complete installation.

- 3. See Figure 4-79. Install screws. Tighten to 40-45 in-lbs (4.5-5.1 Nm) in sequence.
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
  - Verify that the fuel pump harness fits in wire harness caddy latch clip with loop in harness between latch clip and fuel pump module.
  - b. Plug in fuel pump harness connector [141].
  - Connect vent hose to fuel tank vent nipple.
- Connect fuel hose to fuel tank. Fill fuel tank. Check for leaks around fuel pump module. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- 6. Install main fuse.
- 7. Close left side cover.

- 8. Check for leaks:
  - a. Turn ignition switch to ON.
  - b. Verify fuel pump is activated.
  - c. Check for leaks at quick connect.
  - d. Turn ignition switch to OFF.

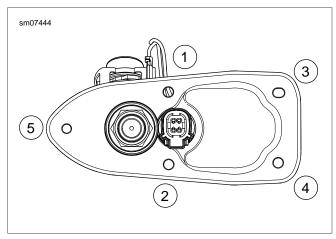


Figure 4-79. Fuel Pump Module Torque Sequence

# **FUEL FILTER ELEMENT**

#### **GENERAL**

## WARNING

Do not use solvents or other products that contain chlorine on plastic fuel system components. Chlorine can degrade plastic fuel system components, which can cause a loss of fuel system pressure or engine stalling and could result in death or serious injury. (000621b)

The fuel filter element is located in the fuel pump assembly inside the fuel tank.

Check fuel system hose and fittings for leaks.

#### **REMOVAL**

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

- Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.
- 2. Remove seat.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)


- 3. Remove main fuse.
- Drain and remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- Remove fuel pump assembly from fuel tank. See 4.16 FUEL PUMP.
- 6. See <u>Figure 4-80</u>. Remove and discard cover plate seal (6).
- 7. Remove retaining clip (4) and lift filter housing (5) off fuel pump assembly (1).
- 8. Remove and discard filter element (3).

#### INSTALLATION

FASTENER	TORQUE VALUE	
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm

1. See Figure 4-80. Install a new O-ring (2).

- 2. Install **new** filter element (3) into filter housing (5).
- Install filter housing onto base of fuel pump assembly (1).
   Secure with retaining clip (4), making sure that clip is oriented right side up, exactly as shown in the figure.
- Install new cover plate seal (6) into groove in cover plate (7).
- Install fuel pump assembly into fuel tank. Tighten mounting screws in a cross pattern to 40-45 in-lbs (4.5-5.1 Nm). See 4.16 FUEL PUMP.
- Install fuel tank and reconnect fuel hose. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>. Fill fuel tank and carefully check for leaks.
- 7. Install main fuse.
- 8. Install seat.
- 9. Turn ignition switch ON. Verify fuel pump operation.

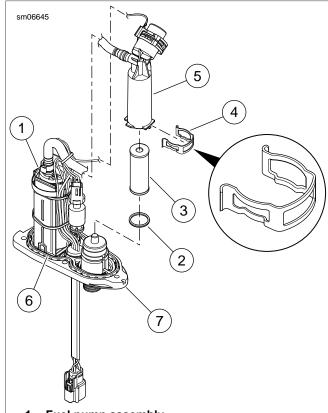

- 1. Fuel pump assembly
- 2. O-ring
- 3. Fuel filter element
- 4. Retaining clip
- 5. Filter housing
- 6. Cover plate seal
- 7. Cover plate

Figure 4-80. Replacing Fuel Filter Element

# **FUEL PRESSURE TEST**

#### **GENERAL**

PART NUMBER	TOOL NAME	
HD-48650	DIGITAL TECHNICIAN II	

## **A**WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

The fuel pump delivers fuel to the fuel hose, a cavity in the induction module that supplies the fuel injectors, and to the pressure regulator. Excess fuel pressure is bypassed to the fuel tank through the pressure regulator.

The fuel pump can be turned on with DIGITAL TECHNICIAN II (Part No. HD-48650).

Improper fuel system pressure may contribute to one of the following conditions:

- · Cranks, but does not run.
- Cuts out (may feel like ignition problem).
- · Hesitation, loss of power or poor fuel economy.

## **TESTING**

PART NUMBER	TOOL NAME	
HD-41142	FUEL PRESSURE GAUGE	
HD-44061	FUEL PRESSURE GAUGE ADAPTER	

## **Connect the Fuel Pressure Gauge**

- Purge the fuel supply hose and disconnect the fuel supply hose from the fuel pump module.
  - a. XL Models: See 4.4 FUEL TANK: XL MODELS.
  - b. XR 1200X:See 4.5 FUEL TANK: XR 1200X.
- Connect the fuel pump connector [141].

#### NOTE

Do not kink the fuel hose when installing or removing fuel pressure gauge and adapter.

- See <u>Figure 4-81</u>. Attach the FUEL PRESSURE GAUGE ADAPTER (Part No. HD-44061) as follows:
  - a. See <u>Figure 4-82</u>. Pull up on sleeve of fuel tank quick-connect fitting (2) and insert neck of the fuel pressure gauge adapter (3) into quick-connect fitting.
  - Push up on bottom of adapter and pull down on sleeve until it clicks. Tug on adapter to verify that it is locked in place.
  - In the same manner, connect vehicle's fuel supply hose fitting (1) to quick-connect fitting (4) on the adapter.

# **AWARNING**

To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

- Verify that the fuel valve (6) and air bleed petcock on the fuel pressure gauge are closed.
- See <u>Figure 4-83</u>. Remove protective cap from free end of fuel pressure gauge adapter.
- 6. Connect the FUEL PRESSURE GAUGE (Part No. HD-41142) to the Schroeder valve.

#### **Perform Test**

- 1. Start and idle engine to pressurize the fuel system. Open the fuel valve to allow the flow of fuel down the hose of the pressure gauge.
- 2. Purge air from gauge and hose:
  - Position the clear air bleed tube in a suitable container.
  - Open and close the air bleed petcock to purge the gauge and hose of air.
  - Repeat this step several times until only solid fuel (without bubbles) flows from the air bleed tube.
  - Close the petcock.
- 3. Open and close throttle to change engine speed. Note the reading of the pressure gauge.
- 4. Turn the engine OFF and service as necessary. Refer to Table 4-3.


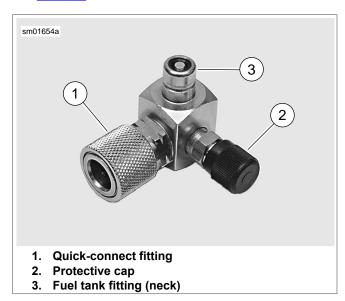


Figure 4-81. Fuel Pressure Gauge Adapter (Part No. HD-44061)

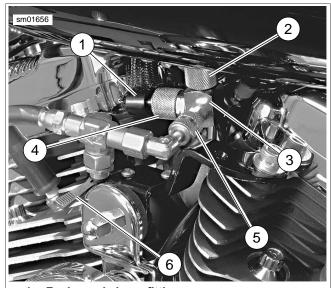

- 1. Fuel supply hose fitting
- 2. Fuel tank quick-connect fitting
- 3. Fuel pressure gauge adapter
- 4. Adapter quick-connect fitting
- 5. Pressure adapter/Schroeder valve fitting
- 6. Fuel valve (closed position)

Figure 4-82. Assembling Adapter, Gauge and Fuel Supply Hose to Fuel Tank: All Models



Figure 4-83. Fuel Pressure Gauge Installed: All Models

#### Table 4-3. Fuel Pressure Test

RESULTS	CAUSE	SOLUTION
Less than: 55 psi (380 kPa)	Restricted fuel filter	Replace.
	Restricted pump inlet screen	Clean.
	Restricted fuel line or hose to gauge	Clear.
	Faulty fuel pump	Replace.
	Restricted check valve fitting	Clear.
	Leak inside tank (hose or coupling)	Repair or replace as necessary.
	Faulty pressure regulator	Replace.
Steady at: 55-62 psi (380-425 kPa)	Operating fuel pressure	
More than: 62 psi (425 kPa)	Check valve fitting and fuel tank	Replace as necessary.
	Fuel pressure regulator	Replace.

#### **Return to Service**

1. Position the air bleed tube in a suitable container. Open the air bleed petcock to relieve the fuel system pressure and purge the pressure gauge of gasoline.

# **A**WARNING

Gasoline can drain from the adapter when gauge is removed. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00254a)

2. Remove fuel pressure gauge from the adapter. Install protective cap over Schroeder valve.

# **A**WARNING

Gasoline can drain from the fuel line and adapter when removed. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. Wipe up spilled fuel immediately and dispose of rags in a suitable manner. (00255a)

 Pull up on knurled sleeve of the fuel pressure gauge adapter quick-connect fitting and remove vehicle's fuel supply hose from adapter. Release adapter from fuel tank.

# **AWARNING**

To prevent spray of fuel, be sure quick-connect fittings are properly mated. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00268a)

4. Push up on release sleeve of fuel pump quick-connect fitting and push the fuel hose fitting into quick-connect fitting. Pull down on release sleeve to lock. Tug on fuel hose fitting to verify that it is locked.

4-60 2013 Sportster Service: Fuel System

# **INTAKE LEAK TEST**

# **GENERAL**

# **A**WARNING

Do not allow open flame or sparks near propane. Propane is extremely flammable, which could cause death or serious injury. (00521b)

# WARNING

Read and follow warnings and directions on propane bottle. Failure to follow warnings and directions can result in death or serious injury. (00471b)

### **NOTES**

- To prevent false readings, keep air cleaner cover installed when performing test.
- Do not direct propane into air cleaner. It will cause false readings.
- Be careful when testing vehicle with Screamin' Eagle air cleaner assembly. This type of air cleaner has an open backplate. Even with air cleaner cover on, directing nozzle too close to backplate can give false readings.

# **LEAK TESTER**

PART NUMBER	TOOL NAME
HD-41417	PROPANE ENRICHMENT KIT

# **Parts List**


- Standard 14 oz. propane cylinder.
- PROPANE ENRICHMENT KIT (Part No. HD-41417).

# **Tester Assembly**

- 1. See Figure 4-84. Make sure valve knob (6) is closed (fully clockwise).
- 2. Screw valve assembly (5) onto propane bottle (1).

# **Tester Adjustment**

- 1. See Figure 4-84. Press and hold trigger button (8).
- Slowly open valve knob (6) until pellet in flow gauge (7) rises 5-10 SCFH on gauge.
- Release trigger button.

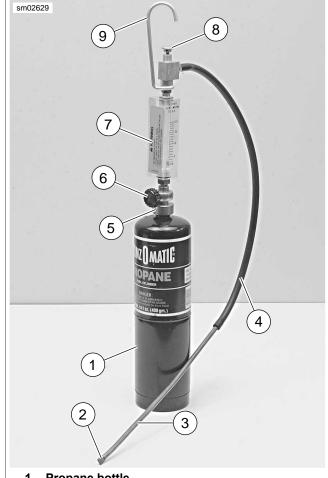

- 1. Propane bottle
- 2. Nozzle
- 3. Copper tube
- 4. Hose
- 5. Valve assembly
- 6. Valve knob
- 7. Flow gauge
- 8. **Trigger button**
- 9. Hanger

Figure 4-84. Leak Tester

# **PROCEDURE**

- Start engine.
- Warm up engine to operating temperature.

### NOTE

Do not direct propane stream toward air cleaner. If propane enters air cleaner, a false reading will be obtained.

- 3. See Figure 4-85. Aim nozzle (3) toward possible sources of leak such as intake manifold mating surfaces.
- Press and release trigger button (2) to dispense propane. Tone of engine will change when propane enters source of leak. Repeat as necessary to detect leak.

5. When test is finished, close valve knob (turn knob fully clockwise).

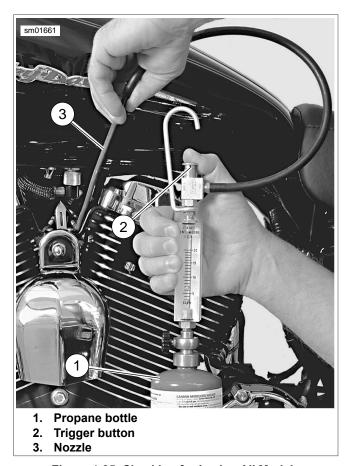


Figure 4-85. Checking for Leaks: All Models

# **EVAPORATIVE EMISSIONS CONTROL**

# **GENERAL**

Motorcycles sold in some markets have an evaporative (EVAP) emissions control system.

See <u>Figure 4-86</u>. The EVAP functions in the following manner:


- Hydrocarbon vapors in the fuel tank (2, 10) are vented through the vapor valve (4) or vent fitting (9). The vapors are stored in the charcoal canister (3). When tipped, the valve closes. Gasoline cannot leak into the charcoal canister from the vapor valve hoses (5, 6).
- When the engine is running, intake negative pressure (vacuum) slowly draws hydrocarbon vapors from the charcoal canister through the purge hose (7). These vapors pass through the intake and are burned as part of normal combustion in the engine.

# **A**WARNING

Keep evaporative emissions vent lines away from exhaust and engine. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00266a)

### NOTE

The EVAP system is designed to operate with a minimum of maintenance. Check that all hoses are connected and correctly routed. They cannot be pinched, kinked, cracked or torn. Improper connections could leak charcoal from canister.

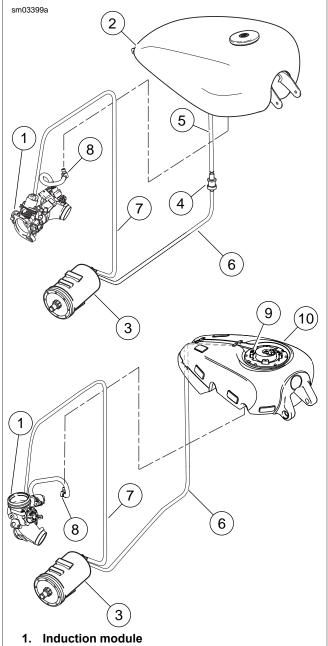

- 2. Fuel tank (XL models only)
- 3. Charcoal canister
- 4. External vapor valve (XL models only)
- 5. Fuel tank-to-vapor valve hose
- 6. Vapor valve-to-canister hose
- 7. Purge hose
- 8. Fuel supply hose
- 9. Vent fitting (XR 1200X)
- 10. Fuel tank (XR 1200X)

Figure 4-86. Evaporative Emissions Control System (typical)

# **CHARCOAL CANISTER**

FASTENER	TORQUI	E VALUE
EVAP canister mounting bracket screw	17-22 ft-lbs	23.1-29.9 Nm
Master cylinder mounting bracket, rear, screw: XL models	17-22 ft-lbs	23.0-29.8 Nm
EVAP canister mounting bracket screw	17-22 ft-lbs	23.1-29.9 Nm
EVAP canister clip mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm
EVAP canister guard screw	35-45 in-lbs	4.0-5.1 Nm


The charcoal canister is mounted to a bracket attached to the rear brake master cylinder bracket, near the bottom of the frame in front of the rear fork pivot point.

### Removal

- 1. See <u>Figure 4-87</u>. Remove two screws (1) and canister guard (2).
- Mark the two hoses (9, 10) connected to charcoal canister
   (6). Disconnect hoses from canister.
- Press the locking tabs at the left end of canister clip (5).
   Slide canister towards left side of vehicle until it disengages from canister clip.
- 4. Remove two screws (7) and washers (8) to detach canister clip from canister mounting bracket (3).
- XL Models: If canister mounting bracket requires repair/replacement, proceed as follows:
  - a. Remove two screws (13) and washers (14) securing rear master cylinder to mounting bracket. This will allow you to move the rear master cylinder to access the remaining fasteners.
  - Remove two screws (4) to detach canister mounting bracket from rear master cylinder mounting bracket.
- XR 1200X: See <u>Figure 4-88</u>. If canister mounting bracket requires repair/replacement, remove two screws (2) to detach canister mounting bracket from frame.


# NOTE

It is not necessary to remove brake line clamp screw (1).

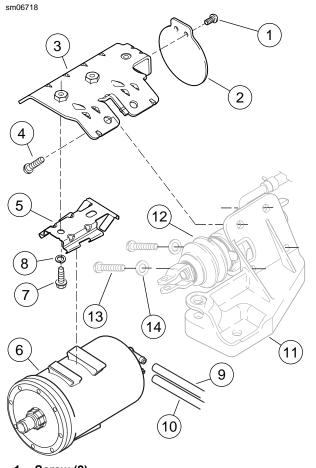

- 1. Screw (2)
- 2. Canister guard
- 3. Canister mounting bracket
- 4. Screw (2)
- 5. Canister clip
- 6. Charcoal canister
- 7. Screw (2)
- 8. Washer (2)
- 9. Purge hose from induction module
- 10. Vent hose from vapor valve
- 11. Rear master cylinder bracket
- 12. Rear master cylinder
- 13. Screw (2)
- 14. Washer (2)

Figure 4-87. Charcoal Canister Mounting (typical)

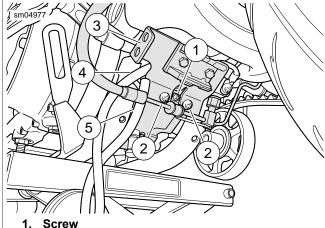

- Canister mounting bracket screws (2)
- **Canister mounting bracket**
- 4. Fuel tank-to-canister hose
- 5. Canister-to-induction module hose


Figure 4-88. Charcoal Canister Mount: XR 1200X

# Installation

### NOTE

XL Models: Verify that the EVAP canister mounting hardware does not contact the rear stabilizer ground strap.

- 1. **XL Models:** See Figure 4-87. If canister mounting bracket (3) was removed, proceed as follows:
  - a. Attach bracket (3) to rear master cylinder mounting bracket and frame with two screws (4). Tighten to 17-22 ft-lbs (23.1-29.9 Nm).
  - b. Apply one or two drops of LOCTITE 243 to screws (13). Install rear master cylinder (12) to mounting bracket (11) with screws and washers (14). Tighten to 17-22 ft-lbs (23.0-29.8 Nm).
- 2. XR 1200X: See Figure 4-88. If canister mounting bracket (3) was removed, proceed as follows:
  - a. Apply LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads of the mounting screws (2).
  - Install bracket and tighten screws (2) to 17-22 ft-lbs (23.1-29.9 Nm).
- 3. See Figure 4-87. Attach canister clip (5) to canister mounting bracket with two screws (7) and two washers (8). Tighten to 36-60 **in-lbs** (4.1-6.8 Nm).
- 4. Starting at left side of canister clip, slide charcoal canister (6) to the right until tabs on canister clip lock canister in place. Bend tabs outward somewhat if canister is not held securely.
- 5. See Figure 4-89. Connect two hoses (1, 2), marked during disassembly, to their proper fittings on canister.
- 6. See Figure 4-87. Install canister guard (2) using two screws (1). Tighten to 35-45 in-lbs (4.0-5.1 Nm).

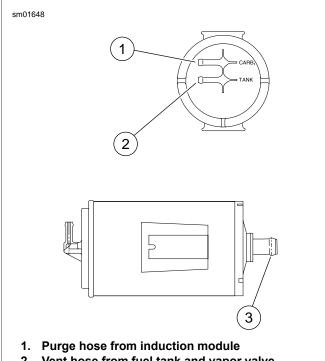

- 2. Vent hose from fuel tank and vapor valve
- 3. Clean air port (no hose connection)

Figure 4-89. Charcoal Canister Connections

# VAPOR VALVE: XL MODELS

# Removal

### **NOTES**

- XL Models: The vapor valve is located under the left side cover in a clip molded into the ECM caddy.
- XR 1200X: The vapor valve is incorporated in the fuel tank filler housing. See 4.5 FUEL TANK: XR 1200X.
- Open left side cover. See 2.18 LEFT SIDE COVER.
- See Figure 4-90. Carefully remove vapor valve (2).
- 3. Mark two hoses (1, 3) connected to upper and lower fittings of vapor valve. Remove hoses from fittings.

### NOTE

On non-EVAP system models, charcoal canister is absent and bottom hose of vapor valve is vented to the atmosphere.

### Installation

# **A**WARNING

Keep vent and vapor valve lines away from exhaust and engine. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00263a)

### NOTE


Mount the vapor valve in an upright position with the longer fitting positioned at the top or excessive fuel vapor pressure may build up within the fuel tank. Mounting the vapor valve upside down will result in fuel flow problems.

- 1. See Figure 4-90. Hold vapor valve (2) in an upright position with the long necked end pointing up. Insert top fitting of vapor valve into fuel tank-to-vapor valve hose (1). Install bottom vapor valve fitting into vapor valve-to-canister hose (3).
- Carefully push body of vapor valve into clip (4) molded into the ECM caddy (6).

#### NOTE

Do NOT force vapor valve into clip. Forcing valve in to clip could cause clip to break, necessitating replacement of the ECM caddy.

3. Close left side cover.

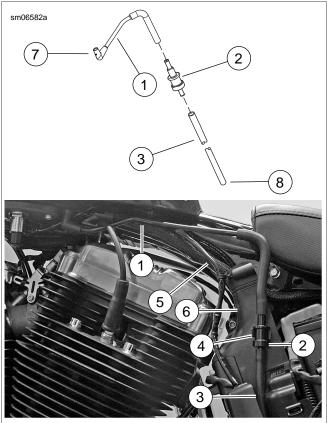

- Fuel tank-to-vapor valve hose 1.
- Vapor valve
- 3. Vapor-valve-to-canister hose
- 4. Vapor valve clip
- 5. Fuel pump harness
- 6. ECM caddy
- 7. To fuel tank
- 8. To charcoal canister


Figure 4-90. Vapor Valve and Hose Routing: XL EVAP Models

# **HOSE ROUTING**

# **Induction Module**

XL Models: Remove the fuel tank and air cleaner/backplate assembly to access the induction module.

**XR 1200X:** See Figure 4-91. Route the evaporative emissions control hose to the purge hose fitting (2) on the induction module (1).

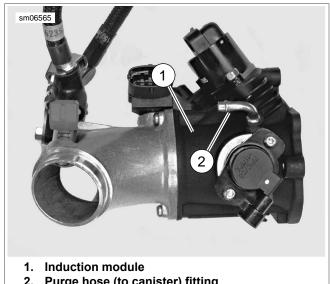

2. Purge hose (to canister) fitting

Figure 4-91. Emissions Hose Routing at Induction Module

# **Canister Hose Routings: XL Models**

- 1. See Figure 4-92. Connect the vapor valve-to-canister hose (1) to the canister lower fitting marked TANK and the canister-to-induction module purge hose (2) to the upper fitting labeled CARB.
- Route the vapor valve-to-canister hose:
  - Under the frame.
  - b. Behind the rear brake master cylinder bracket.
  - Up the frame tube in front of the rear fork pivot.
  - Inside the electrical caddy to the vapor valve inside the left side cover.
- Connect the vapor valve-to-canister hose to the vapor
- Connect fuel tank-to-vapor valve hose the the vapor valve.
- Route the fuel tank-to-vapor valve hose forward along the left side of frame backbone and connect to fitting on bottom of fuel tank.
- Route the canister-to-induction module purge hose:
  - Loop behind the brake fluid lines and around the master cylinder.
  - b. Behind the frame.
  - Between the rear fork and the rear fork pivot.
  - Behind the oil lines and up behind the oil tank.
  - Route canister-to-induction module purge hose up right side of frame rear downtube.
  - Loop the hose over the wire harness caddy and forward along the caddy and the frame backbone.
  - Connect the hose to the induction module.

### NOTE

Position the hose against the engine sub-harness and as far from the rear rocker cover as possible.

7. See Figure 4-93. Secure the hose to the holes in the wire harness caddy with barbed cable straps.

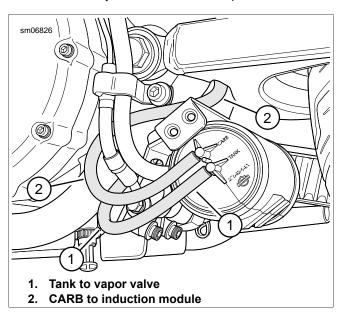


Figure 4-92. EVAP Canister and Hose Routing


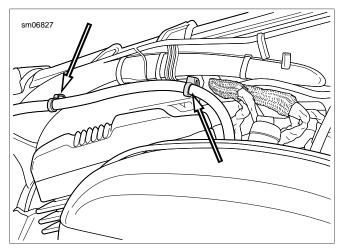


Figure 4-93. Cable Strap Locations

# Canister Hose Routings: XR 1200X


- See Figure 4-94. Route both hoses up past canister mount and between rear fork pivot point and rear end of crankcase as shown.
- See Figure 4-95. Route fuel vapor hose (4) up along left side of frame rear downtube and outside the left electrical caddy. Connect to vapor tube (2).
- Connect vapor tube (2) to fitting (1) on fuel tank filler housing and place in channel on top of fuel tank.
- 4. Secure to electrical caddy with barbed clamp (3).
- See Figure 4-96. Route canister-to-induction module purge hose (1) up right side of frame rear downtube. Continue routing hose forward along right side of frame backbone tube and down, connecting hose to induction module fitting (3).

- 6. Secure hose to channels on rear end of right wire harness caddy (4). Verify that hose is positioned up against engine sub-harness. Secure hose and harness with clamp (2).
- Connect hoses to labeled fittings on left side of charcoal canister.

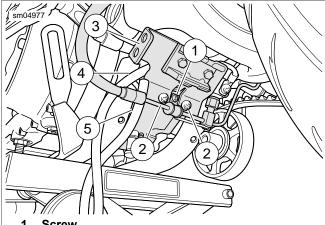

- 2. Canister mounting bracket screws (2)
- 3. Canister mounting bracket
- 4. Fuel tank-to-canister hose
- Canister-to-induction module hose

Figure 4-94. Charcoal Canister Mount: XR 1200X

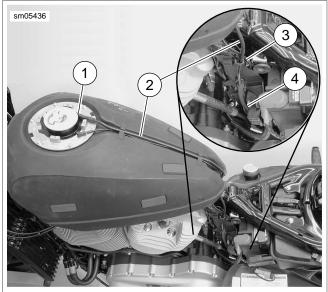

- Vapor fitting
- 2. Vapor tube
- 3. Clamp
- Vapor hose

Figure 4-95. Vapor Hose Routing

# **HOME**

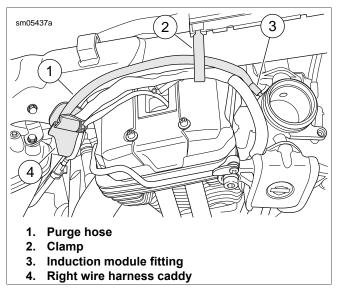


Figure 4-96. Purge Hose Routing

# TABLE OF CONTENTS

SUBJECT	PAGE NO.
5.1 FASTENER TORQUE VALUES	5-1
5.2 SPECIFICATIONS: DRIVE	5-3
5.3 PRIMARY COVER	5-4
5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS	
5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X	5-15
5.6 DRIVE BELT	5-24
5.7 TRANSMISSION POWER FLOW	5-28
5.8 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL	
5.9 TRANSMISSION REMOVAL AND DISASSEMBLY	
5.10 TRANSMISSION ASSEMBLY	5-37
5.11 MAIN DRIVE GEAR AND BEARING	
5.12 TRANSMISSION RIGHT CASE BEARINGS	5-49
5.13 TRANSMISSION LEFT CASE BEARINGS	
5.14 TRANSMISSION INSTALLATION	5-51
5.15 TRANSMISSION SPROCKET	5-56

# **FASTENER TORQUE VALUES**

# FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE	EVALUE	NOTES
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	5.6 DRIVE BELT, Drive Belt: XL Models
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	5.6 DRIVE BELT, Drive Belt: XR 1200X
Clutch cable fitting	36-108 in-lbs	4.1-12.2 Nm	5.3 PRIMARY COVER, Installation
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	5.3 PRIMARY COVER, Installation
Countershaft retaining screw	33-37 ft-lbs	44.8-50.2 Nm	5.14 TRANSMISSION INSTALLATION, Shifter Shaft Installation
Crankcase fastener	15-19 ft-lbs	20.3-25.8 Nm	5.14 TRANSMISSION INSTALLATION, Assembling Crankcases
Engine sprocket bolt: XR 1200X	155-165 ft-lbs	210.0-224.0 Nm	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation
Engine sprocket nut: XL Models	240-260 ft-lbs	326-353 Nm	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Installation
Exhaust pipe clamp bracket fastener: XL Models	30-33 ft-lbs	40.7-44.8 Nm	5.6 DRIVE BELT, Drive Belt: XL Models
Exhaust pipe clamp bracket fastener: XR 1200X	30-33 ft-lbs	40.7-44.8 Nm	5.15 TRANSMISSION SPROCKET, Installation
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	5.15 TRANSMISSION SPROCKET, Installation
Gear detent assembly screw	90-110 <b>in-lbs</b>	10.2-12.4 Nm	5.14 TRANSMISSION INSTALLATION, Installation
Gear shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm	5.3 PRIMARY COVER, Installation
Idler pulley bracket flanged nut: XR 1200X	33-35 ft-lbs	44.7-47.5 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Idler pulley fastener: XR 1200X	70-80 ft-lbs	95-109 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Muffler interconnect bracket mounting screw: XR 1200X	30-33 ft-lbs	40.7-44.8 Nm	5.15 TRANSMISSION SPROCKET, Installation
Neutral indicator switch	120-180 <b>in-lbs</b>	13.6-20.3 Nm	5.14 TRANSMISSION INSTALLATION, Assembling Crankcases
Primary chain adjuster locknut	20-25 ft-lbs	27.1-33.9 Nm	5.3 PRIMARY COVER, Installation
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	5.3 PRIMARY COVER, Installation
Primary chain cover screw	100-120 in-lbs	11.3-13.6 Nm	5.3 PRIMARY COVER, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.6 DRIVE BELT, Drive Belt: XL Models
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.6 DRIVE BELT, Drive Belt: XR 1200X
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.15 TRANSMISSION SPROCKET, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.15 TRANSMISSION SPROCKET, Installation
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	5.6 DRIVE BELT, Drive Belt: XR 1200X
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	5.15 TRANSMISSION SPROCKET, Installation

# <u>HOME</u>

FASTENER	TORQUE VALUE		NOTES
Transmission mainshaft nut: XL Models	50-60 ft-lbs	67.8-81.3 Nm	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Installation
Transmission mainshaft nut: XR 1200X	50-60 ft-lbs	67.8-81.3 Nm	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation
Transmission sprocket lockplate fastener	90-120 <b>in-lbs</b>	10.3-13.6 Nm	5.15 TRANSMISSION SPROCKET, Installation
Transmission sprocket nut	50 ft-lbs	68 Nm	5.15 TRANSMISSION SPROCKET, Installation/Initial torque plus 30-40 degrees.

5-2 2013 Sportster Service: Drive/Transmission

# **SPECIFICATIONS: DRIVE**

# **SPORTSTER SPECIFICATIONS**

Table 5-1. Sprocket Teeth

DRIVE	ITEM	NUMBER OF TEETH				
		XL 883 I	XL 883 MODELS		MODELS	XR 1200X
		U.S.	WORLD	U.S.	WORLD	U.S./WORLD
Primary	Engine	34	34	38	38	34
	Clutch	57	57	57	57	57
Final	Transmission	29	29	29	30	28
	Rear wheel	68	68	68	68	68

**Table 5-2. Overall Drive Ratios** 

GEAR	XL 883 MODELS	XL 1200 MODELS		XR 1200X
	ALL	U.S.	WORLD	U.S./WORLD
1st	10.407	9.315	9.004	10.782
2nd	7.436	6.653	6.432	7.702
3rd	5.530	4.948	4.783	5.728
4th	4.583	4.102	3.965	4.748
5th	3.931	3.517	3.400	4.071

NOTE

 $not \ given \ under \ SERVICE \ WEAR \ LIMITS, \ see \ NEW \ COMPONENTS.$ 

Service wear limits are given as a guideline for measuring components that are not new. For measurement specifications

**Table 5-3. Clutch Pack Plate Specifications** 

ITEM	NEW COMPONENTS		SERVICE W	EAR LIMIT
	in	mm	in	mm
CLUTCH PLATE THICKNESS				
Friction plate (fiber)	0.8661 ± 0.0031	2.2000 ± 0.0800	0.0795	2.0200
Steel plate	0.0629	1.6000	N/A	N/A
MAXIMUM ALLOWABLE WARPAGE				
Friction plate (fiber)	N/A	N/A	0.0059	0.1500
Steel plate	N/A	N/A	0.0059	0.1500

# PRIMARY COVER

### REMOVAL

# **AWARNING**


To prevent accidental vehicle start-up, which could cause death or serious injury, disconnect battery cables (negative (-) cable first) before proceeding. (00307a)

- Disconnect the negative (-) battery cable from the engine stud on the back of the crankcase behind the starter motor assembly. See <u>1.22 BATTERY MAINTENANCE</u>.
- Remove left side rider footrest and mounting bracket assembly.
  - a. Models with Mid-mount Controls: See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS or 2.42 RIDER FOOT CONTROLS: XR 1200X.
  - b. **Models with Forward Controls:** See <u>2.41 RIDER FOOT CONTROLS:</u> XL FORWARD CONTROLS.
- See <u>Figure 5-1</u>. Place a drain pan under the engine. Remove drain plug (1) and drain lubricant from primary drive housing.

#### NOTE


Dispose of primary lubricant in accordance with local regulations.

- Loosen locknut (2). Turn chain adjuster screw (3) counterclockwise to relax primary chain tension.
- Remove gear shift lever (4) and rubber washer from transmission shifter shaft.
- Loosen the clutch cable tension at the clutch cable adjuster.
- 7. Remove the clutch inspection cover (5).
- 8. See <u>Figure 5-2</u>. Remove the quad ring (1) from the groove in the primary cover. Discard the quad ring.
- 9. Slide hex lockplate (2) and attached spring from flats of adjusting screw.
- Turn adjusting screw clockwise to release ramp assembly
   and coupling mechanism. As the adjusting screw is turned, ramp assembly moves forward. Remove nut from end of adjusting screw.
- Remove hook (4) of ramp (3) from cable coupling (5).
   Remove clutch cable end from slot in coupling. Remove coupling and ramp assembly.
- 12. See <u>Figure 5-4</u>. Turn cable end fitting counterclockwise to remove clutch cable lower section from primary cover. Remove and discard O-ring from cable end fitting.
- Remove sixteen screws with captive washers securing primary cover to engine crankcase. Remove cover and gasket. Discard gasket.
- 14. See Figure 5-5. Remove and discard shifter shaft oil seal.

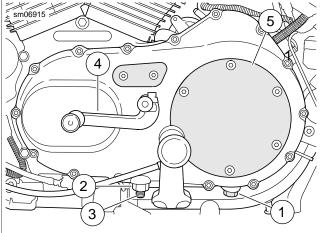

- 1. Primary drain plug
- 2. Locknut
- 3. Adjuster screw
- 4. Shift lever
- 5. Clutch inspection cover

Figure 5-1. Primary Cover

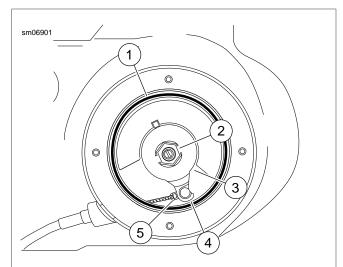

- 1. Quad ring
- 2. Hex lockplate
- 3. Ramp assembly
- 4. Hook
- 5. Cable coupling

Figure 5-2. Clutch Release Ramp

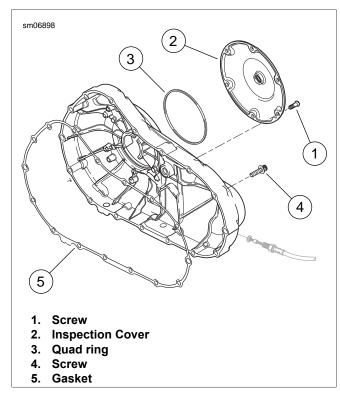


Figure 5-3. Primary Cover

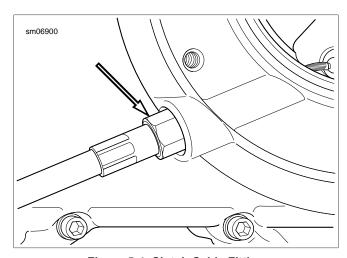


Figure 5-4. Clutch Cable Fitting

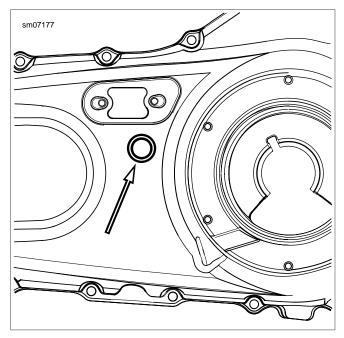


Figure 5-5. Shifter Shaft Oil Seal

# **CLUTCH RELEASE RAMP**

- Clean all parts in cleaning solvent. Dry with a clean, lintfree cloth.
- 2. See Figure 5-6. Inspect three balls (1) and ball socket surfaces of inner ramp (2) and outer ramp (3). Replace parts as necessary.
- 3. Check hub fit of inner and outer ramps. Replace ramps if excessively worn.
- 4. Assemble inner and outer ramps.
  - a. Apply a light coat of multi-purpose grease to balls and ramps.
  - b. Insert balls in sockets of outer ramp.
  - c. Install inner ramp on hub of outer ramp with tang on inner ramp 180 degrees from hook of outer ramp.
  - d. Install **new** retaining ring (4) in groove of outer ramp hub.
- 5. Install clutch release ramp.
  - Fit adapter (5) over clutch cable end with the rounded side inboard, the ramp connector button outboard.
  - b. With retaining ring side of ramp assembly facing inward, place hook of ramp around coupling button.
  - c. Rotate assembly counterclockwise until tang on inner ramp fits in slot of primary cover.

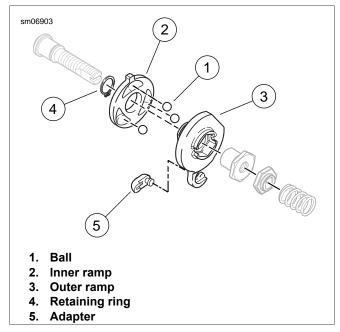


Figure 5-6. Clutch Release Ramp


# PRIMARY CHAIN ADJUSTER

- See Figure 5-7. Remove locknut (1) from adjuster screw (4). Turn adjuster screw out of the threaded boss in the primary cover (3).
- Inspect the adjuster shoe (5). Replace if worn or damaged.
- Position the adjuster inside the primary cover (3) with the closed side of shoe against the cover. Thread the adjuster screw (4) all the way into the threaded boss at the bottom of the cover.

### NOTE

Hold adjuster screw in place with a hex key while threading locknut on.

Thread the locknut (1) onto the adjuster screw with the nylon sealing surface (2) toward the cover.

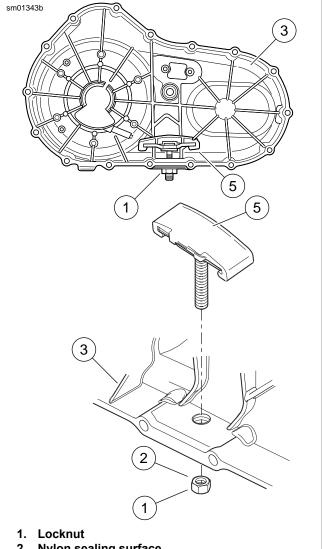

- Nylon sealing surface
- Primary cover
- 4. Adjuster screw

Figure 5-7. Primary Chain Adjuster Assembly

# **INSTALLATION**

FASTENER	TORQUE	VALUE
Primary chain cover screw	100-120 <b>in-lbs</b>	11.3-13.6 Nm
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm
Clutch cable fitting	36-108 <b>in-lbs</b>	4.1-12.2 Nm
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm
Primary chain adjuster locknut	20-25 ft-lbs	27.1-33.9 Nm
Gear shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm

- 1. Install a new shifter shaft oil seal.
- Install a new gasket on the primary cover.

- Apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to threads of primary cover screws.
- 4. See <u>Figure 5-8</u>. Install primary cover and gasket using sixteen screws with captive washers. Tighten to 100-120 **in-lbs** (11.3-13.6 Nm) in sequence.
- 5. Install drain plug:
  - a. Clean the magnetic drain plug.
  - b. Inspect O-ring and replace if necessary.
  - c. Apply LOCTITE 565 PIPE SEALANT WITH TEFLON to the drain plug.
  - d. Install plug. Tighten to 14-30 ft-lbs (19.0-40.7 Nm).
- Install new O-ring over cable end fitting of clutch cable lower section. Turn fitting clockwise to install into primary cover. Tighten fitting to 36-108 in-lbs (4.1-12.2 Nm).
- 7. Fit coupling over cable end with rounded side of coupling inboard and ramp connector button outboard. With retaining ring side of ramp assembly facing inward, place hook of ramp around coupling button. Rotate assembly counterclockwise until tang on inner ramp fits in slot of primary cover.
- Thread nut on adjusting screw assembly until slot of screw is accessible with a screwdriver. Fit nut hex into recess of outer ramp and turn adjusting screw counterclockwise until resistance is felt. Back off adjusting screw 1/4 turn.
- Slide lockplate and spring onto flats of adjusting screw. If necessary, turn adjusting screw clockwise slightly until the lockplate slides onto flats. Fit the lockplate within recess of outer ramp.
- 10. Install the oil drain plug. Tighten the oil drain plug.
- 11. Fill transmission to specification.
- 12. Install **new** quad ring in groove of primary cover. Verify that quad ring is fully seated in groove.
- Install six screws to secure clutch inspection cover to primary cover. Tighten in a crosswise pattern to 90-120 in-lbs (10.3-13.6 Nm).

- Adjust the clutch and the clutch lever free play. See 1.11 CLUTCH.
- 15. Install left side rider footrest and mounting bracket assembly.
  - a. Models with Mid-mount Controls: See <u>2.40 RIDER</u> <u>FOOT CONTROLS</u>: XL MID-MOUNT CONTROLS or <u>2.42 RIDER FOOT CONTROLS</u>: XR 1200X.
  - b. **Models with Forward Controls:** See <u>2.41 RIDER</u> FOOT CONTROLS: XL FORWARD CONTROLS.
- Adjust primary chain free play. When tension is set, tighten locknut to 20-25 ft-lbs (27.1-33.9 Nm). See <u>1.9 PRIMARY</u> CHAIN.
- Install rubber washer and gear shift lever on shifter shaft.
   Secure with pinch screw and washer. Tighten to 16-20 ft-lbs (21.7-27.1 Nm).

# **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

18. Install the battery cables.

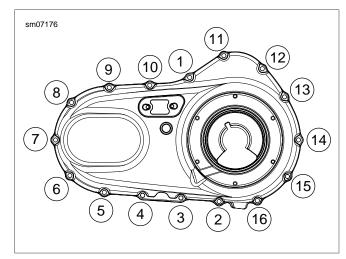


Figure 5-8. Outer Primary Cover Torque Sequence

# **TROUBLESHOOTING**

Refer to Table 5-4.

### Table 5-4. Clutch Troubleshooting

SYMPTOM	CHECK ORDER	CAUSE	REMEDY
Clutch slips	1	Incorrect clutch release adjustment	Check and adjust clutch release mechanism.
	2	Worn clutch plates	Check service wear limits. Replace plates.
Clutch drags	1	Incorrect clutch release adjustment	Check and adjust clutch release mechanism.
	2	Worn clutch release ramps or balls	Replace release ramps and/or balls.
	3	Warped clutch steel plates	Replace clutch steel plates.
	4	Worn or damaged clutch gear splines	Replace clutch gear or hub as required.
	5	Overfilled primary	Drain lubricant to correct level.

### **REMOVAL**

PART NUMBER	TOOL NAME
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK
HD-46283	PRIMARY DRIVE LOCKING TOOL

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, disconnect battery cables (negative (-) cable first) before proceeding. (00307a)

# NOTE

See <u>Figure 5-10</u>. If replacement of clutch pack (28) is the only service work required, perform REMOVAL steps 1 and 4 only, and then proceed to the NOTES under DISASSEMBLY.

- Disconnect negative (-) battery cable from stud on engine crankcase behind starter motor assembly. See 1.22 BATTERY MAINTENANCE.
- 2. Open left side cover. See 2.18 LEFT SIDE COVER.
- 3. Remove positive (+) battery cable from battery positive (+) terminal. See <u>1.22 BATTERY MAINTENANCE</u>.
- 4. Remove the primary cover. Discard the primary cover gasket. See <u>5.3 PRIMARY COVER</u>.

### NOTE

See <u>Figure 5-9</u>. Do not position the sprocket locking link too close to the shifter shaft (2). If the sprocket locking link contacts the shifter shaft the sprocket locking link may damage the shifter shaft and/or the engine crankcase.

- Install a locking link:
  - XL 883 Models: Use SPORTSTER 5-SPEED SPROCKET LOCKING LINK (Part No. HD-38362).
  - XL 1200 Models: Use PRIMARY DRIVE LOCKING TOOL (Part No. HD-46283).

- Remove the engine sprocket nut. Do not remove engine sprocket at this time.
- 7. See <u>Figure 5-10</u>. Remove large retaining ring (16). Remove adjusting screw assembly (12, 13, 14 and 15) from pressure plate (11).

#### NOTE

Transmission mainshaft nut (7) has left-hand threads. Turn nut clockwise to loosen and remove from mainshaft.

- 8. Remove mainshaft nut (7) and spring washer (6).
- 9. Remove the clutch assembly, primary chain and engine sprocket as an assembly from the vehicle.
- 10. Inspect primary chain. Replace if necessary.
- Inspect stator and rotor. Replace if necessary. See 6.24 ALTERNATOR.

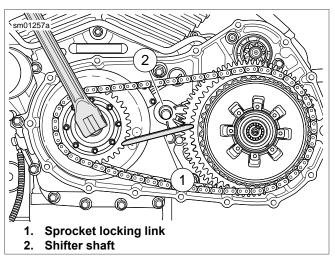


Figure 5-9. Using Sprocket Locking Link (Part No. HD-46283 or HD-38362) to Loosen Engine Sprocket Nut

5-8 2013 Sportster Service: Drive/Transmission

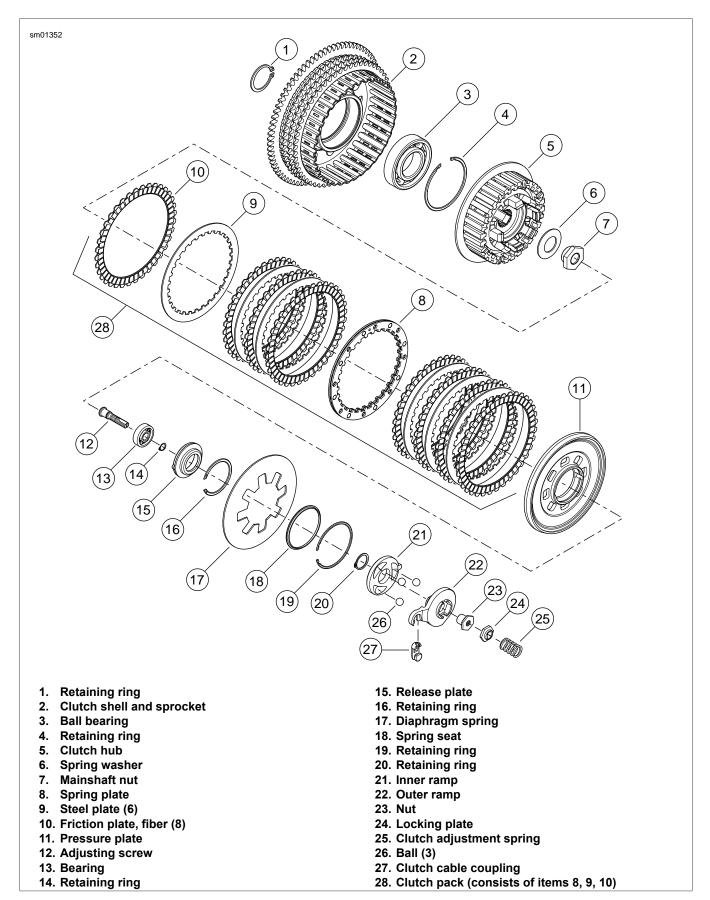


Figure 5-10. Clutch Assembly: XL Models

### DISASSEMBLY

PART NUMBER	TOOL NAME
HD-38515-91	CLUTCH SPRING FORCING SCREW
HD-38515-A	SPRING COMPRESSING TOOL

#### **NOTES**

- See <u>Figure 5-10</u>. If replacement of clutch pack (28) is the only service work required, perform DISASSEMBLY Steps 2-5 and 7 only, and then proceed to the NOTE under INSPECTION AND REPAIR.
- Observe all WARNING and CAUTION statements which apply to the steps specified.
- 1. See <u>Figure 5-10</u>. With clutch assembly removed from primary chaincase, install the adjusting screw assembly (12, 13, 14 and 15) into the pressure plate (11):
  - a. Match the two tabs on release plate (15) to the notches in the pressure plate.
  - b. Install the retaining ring (16).

# WARNING

Disassemble clutch using a spring compressing tool. The diaphragm spring is compressed and, if removed without proper tools can fly out, which could result in death or serious injury. (00292a)

- 2. See Figure 5-11. Compress clutch diagram spring.
  - a. Thread the CLUTCH SPRING FORCING SCREW (Part No. HD-38515-91) onto the clutch adjusting screw.
  - Place the bridge of the SPRING COMPRESSING TOOL (Part No. HD-38515-A) against diaphragm spring.
  - c. Thread the tool handle onto end of forcing screw.

### NOTE

See <u>Figure 5-10</u>. Turn compressing tool handle only enough to remove retaining ring (19) and spring seat (18). Excessive compression of diaphragm spring could damage clutch pressure plate.


- 3. See Figure 5-10. With a wrench on the clutch spring forcing screw flats to prevent the forcing screw from turning, turn handle clockwise until tool relieves pressure on retaining ring (19) and spring seat (18).
- Remove and discard retaining ring. Remove spring seat from the groove in clutch hub (5) prongs. Remove the assembly of diaphragm spring (17), pressure plate (11), adjusting screw components (12, 13, 14 and 15) and compressing tool.
- Turn the compressing tool handle counterclockwise until the clutch spring forcing screw disconnects from the clutch adjusting screw. Remove spring seat and diaphragm spring from pressure plate assembly.
- Remove retaining ring (16) and adjusting screw assembly from pressure plate. If necessary, disassemble adjusting screw assembly by removing retaining ring (14), and then

- separating the remaining adjusting screw components (12, 13, and 15).
- 7. Remove the clutch pack (28) from the clutch hub. The clutch pack consists of one spring plate (8), six steel plates (9), and eight friction (fiber) plates (10).

#### NOTE

See <u>Figure 5-10</u>. Bearing (3) will be damaged by disassembly of clutch hub (5) and shell (2). Always replace bearing (3) if hub and shell are disassembled. If the assembly is pressed apart, the bearing must be replaced.

- If necessary, disassemble clutch shell and clutch hub as follows:
  - Remove retaining ring (1) from inboard end of clutch hub (5).
  - b. Using an arbor press, separate clutch hub from assembly of clutch shell (2), bearing (3), and retaining ring (4).
  - c. Remove retaining ring (4) from groove in clutch shell.
  - d. Press on the inboard side of bearing (3) outer race to remove bearing from clutch shell.

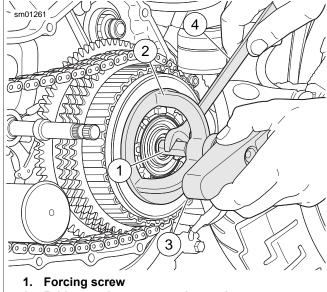

- 2. Bridge, spring compressing tool
- 3. Handle
- 4. Open-end wrench

Figure 5-11. Compressing Clutch Diaphragm Spring

### **INSPECTION AND REPAIR: XL MODELS**

### NOTE

See <u>Figure 5-10</u>. If replacement of clutch pack (28) is the only service work required, perform all INSPECTION AND REPAIR steps (except Step 2f), and then proceed to the NOTES under ASSEMBLY.

# **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- See <u>Figure 5-10</u>. Wash all parts, except the friction plates (10) and bearings (3 and 13), in a non-volatile cleaning solution or solvent. Blow parts dry with low pressure compressed air.
- 2. Examine the clutch components as follows:
  - a. Inspect all clutch plates for wear and discoloration.
  - Inspect all friction plates (10) for worn lining surfaces or checked or chipped linings.
  - c. Inspect each steel plate (9) for grooves.
  - d. Place each steel plate on a flat surface. Using a feeler gauge, check for flatness in several places. If any one of the plates are damaged, or warped more than 0.006 in (0.15 mm), replace the entire clutch pack.
  - e. Wipe the lubricant from the seven wide friction plates.
  - f. See <u>Figure 5-12</u>. Measure the thickness of each friction plate. If any one of the plates is less than 0.0795 in (2.02 mm), replace the entire clutch pack.
  - g. See <u>Figure 5-10</u>. Inspect clutch shell ball bearing (3) for smoothness by rotating clutch shell while holding clutch hub. If bearing is rough or binds, it must be replaced.
  - h. See <u>Figure 5-13</u>. Check the primary chain sprocket (3) and the starter ring gear (4) on the clutch shell (1). If either sprocket or ring gear are badly worn or damaged, replace the clutch shell.
  - Check the slots (5, 6) that mate with the clutch plates on both clutch shell and clutch hub (2). If slots are worn or damaged, replace shell and/or hub.
  - See <u>Figure 5-10</u>. Check the diaphragm spring (17) for cracks or bent tabs. Install a **new** spring if either condition exists.

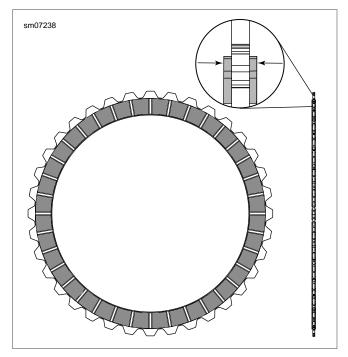


Figure 5-12. Friction Plate Thickness

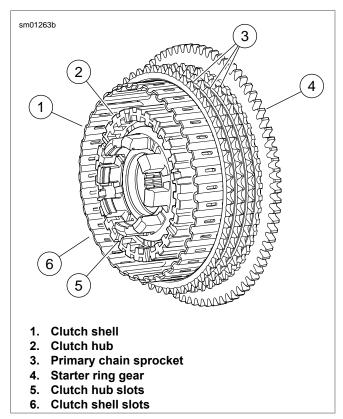


Figure 5-13. Checking Clutch Hub and Clutch Shell

# **ASSEMBLY**

PART NUMBER	TOOL NAME	
HD-38515-91	CLUTCH SPRING FORCING SCREW	
HD-38515-A	SPRING COMPRESSING TOOL	

#### NOTES

- See <u>Figure 5-10</u>. If replacement of clutch pack (28) is the only service work required, perform all ASSEMBLY Steps except 2, 5 and 6, and then proceed to the NOTE under INSTALLATION.
- Replace the clutch pack, steel plates, friction plates and spring plate, as a set.
- Submerge and soak all friction and steel plates in GENUINE HARLEY-DAVIDSON FORMULA+ TRANSMIS-SION AND PRIMARY CHAINCASE LUBRICANT for at least five minutes.
- 2. See <u>Figure 5-14</u>. Assemble the clutch hub (1) and clutch shell (4):
  - a. Press a **new** ball bearing (3) into clutch shell.
  - b. Secure the bearing with a **new** retaining ring (2).
  - Press inboard end of clutch hub into clutch shell bearing.
  - d. Secure with a **new** retaining ring (5) on end of hub.

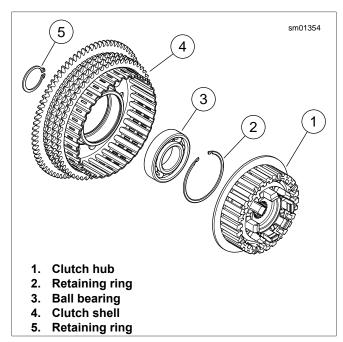


Figure 5-14. Clutch Hub and Shell Assembly

### NOTE

See <u>Figure 5-10</u>. The clutch pack (28) consists of one spring plate (8), six steel plates (9) and eight friction (fiber) plates (10).

- 3. Install clutch pack into clutch shell in order:
  - F St F -

- 4. Place pressure plate (11) and adjusting screw onto clutch pack (28).
- 5. Assemble bearing (13) and adjusting screw (12) in release plate (15). Secure with **new** retaining ring (14).
- Align the two tabs on perimeter of release plate (15) with the corresponding recesses in pressure plate. Install adjusting screw assembly (12, 13, 14, 15) into pressure plate (11). Secure adjusting screw assembly with new retaining ring (16).
- Install diaphragm spring (17) with its concave side facing inboard (toward pressure plate), onto pressure plate assembly. Align square openings of pressure plate and diaphragm spring (17).
- 8. Position spring seat (18) with its flat, larger outer diameter side facing inboard (toward diaphragm spring).
- 9. Install a **new** retaining ring (19) onto convex (outboard) side of diaphragm spring.
- 10. Thread the CLUTCH SPRING FORCING SCREW (Part No. HD-38515-91) onto the clutch adjusting screw. Place the bridge of the SPRING COMPRESSING TOOL (Part No. HD-38515-A) against diaphragm spring. Thread the tool handle onto end of forcing screw. Do not tighten compressing tool against diaphragm spring at this time.
- 11. See Figure 5-11. Place an open-end wrench (4) on the clutch spring forcing screw (1) flats to prevent the forcing screw from turning.

#### NOTE

Turn compressing tool handle only enough to install spring seat and retaining ring. Excessive compression of diaphragm spring could damage clutch pressure plate.

- 12. See Figure 5-10. Turn compressing tool handle clockwise to compress diaphragm spring (17). Compresses just enough to install spring seat (18) and retaining ring (19) into the groove in clutch hub (5) prongs.
- Verify retaining ring is positioned against flange face (outboard side) of spring seat and fully seated in groove of clutch hub. Carefully loosen and remove compressing tool.

### NOTE

As the compressing tool is removed, the diaphragm spring will move outward. This movement will force the spring seat up into the inside of the retaining ring. The spring seat provides an operating surface for the diaphragm spring. Additionally, it prevents the retaining ring from coming out during operation.

### INSTALLATION

PART NUMBER	TOOL NAME
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK
HD-46283	PRIMARY DRIVE LOCKING TOOL

FASTENER	TORQUE VALUE	
Engine sprocket nut: XL Models	240-260 ft-lbs	326-353 Nm
Transmission mainshaft nut: XL Models	50-60 ft-lbs	67.8-81.3 Nm

### NOTE

See <u>Figure 5-10</u>. If replacement of clutch pack (28) is the only service work required, perform INSTALLATION last step only.

- See <u>Figure 5-10</u>. Remove retaining ring (16). Remove adjusting screw assembly (12, 13, 14, 15) from pressure plate (11). This allows installation of the transmission mainshaft nut and washer.
- Clean the oil off the threads of the engine sprocket shaft, the engine sprocket nut, the transmission mainshaft and the mainshaft nut.
- 3. Install the engine sprocket, primary chain and clutch assembly as a unit.

### NOTE

See <u>Figure 5-15</u>. Do not position the sprocket locking link too close to the shifter shaft (2). If the sprocket locking link contacts the shifter shaft while tightening the engine sprocket nut, the shifter shaft and/or the engine crankcase may be damaged.

- 4. See <u>Figure 5-15</u>. Install the sprocket locking link.
  - a. XL 883 Models: Use the SPORTSTER 5-SPEED SPROCKET LOCKING LINK (Part No. HD-38362).
  - b. **XL 1200 Models:** Use the PRIMARY DRIVE LOCKING TOOL (Part No. HD-46283).
- 5. Apply two or three drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) onto threads of engine sprocket shaft.
- Install engine sprocket nut. Tighten to 240-260 ft-lbs (326-353 Nm).

### NOTE

See <u>Figure 5-16</u>. Washer (2) must be installed with the word "out" facing the transmission mainshaft nut (1). Incorrect assembly can result in clutch and/or transmission failure.

- See Figure 5-16. Apply two or three drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) onto threads of transmission mainshaft. Install spring washer (2) and mainshaft nut (1) (left-hand threads) on transmission mainshaft. Tighten nut to 50-60 ft-lbs (67.8-81.3 Nm).
- 8. Remove the sprocket locking link.
- See <u>Figure 5-17</u>. Install adjusting screw assembly (1) in pressure plate, noting that two tabs on perimeter of release plate must be inserted into corresponding recesses in

- pressure plate. Secure assembly with a **new** retaining ring (2).
- Install primary cover using **new** gasket. See <u>5.3 PRIMARY</u> COVER.
- Adjust primary chain and clutch. See <u>1.9 PRIMARY CHAIN</u> and 1.11 CLUTCH.
- Fill transmission with GENUINE HARLEY-DAVIDSON FORMULA+ TRANSMISSION AND PRIMARY CHAIN-CASE LUBRICANT. See <u>1.10 TRANSMISSION LUB-RICANT</u>.
- Connect battery and close left side cover. See <u>1.22 BAT-TERY MAINTENANCE</u>.

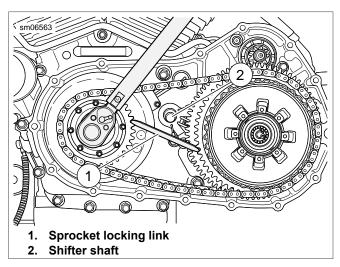


Figure 5-15. Tighten Engine Sprocket Fastener (typical)

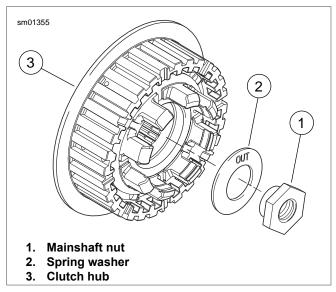


Figure 5-16. Mainshaft Nut and Washer

# **HOME**

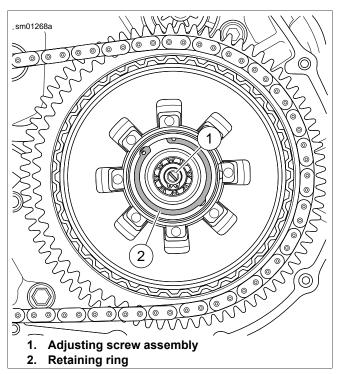


Figure 5-17. Clutch Adjusting Screw Assembly and Retaining Ring

# PRIMARY DRIVE AND CLUTCH: XR 1200X

# **TROUBLESHOOTING**

See <u>5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Troubleshooting.</u>

### **REMOVAL**

PART NUMBER	TOOL NAME
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK
HD-46283	PRIMARY DRIVE LOCKING TOOL

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, disconnect battery cables (negative (-) cable first) before proceeding. (00307a)

- Disconnect negative (-) battery cable from stud on engine crankcase behind starter motor assembly. See 1.22 BATTERY MAINTENANCE.
- 2. Open left side cover. See <u>2.18 LEFT SIDE COVER</u>.
- 3. Remove positive (+) battery cable from battery positive (+) terminal. See 1.22 BATTERY MAINTENANCE.
- 4. Remove primary cover and discard primary cover gasket. See <u>5.3 PRIMARY COVER</u>.

### **NOTES**

- See <u>Figure 5-18</u>. Make sure not to position the sprocket locking link (1) too close to the shifter shaft (2). Contact between sprocket locking link and shifter shaft during engine sprocket bolt removal will cause damage to the surrounding assemblies.
- The engine sprocket bolt is a single-use fastener. Discard and replace with a **new** bolt upon removal.
- Japanese models require PRIMARY DRIVE LOCKING TOOL (Part No. HD-46283).
- Install SPORTSTER 5-SPEED SPROCKET LOCKING LINK (Part No. HD-38362). Remove and discard the

- engine sprocket bolt. Do not remove engine sprocket at this time.
- See <u>Figure 5-19</u>. Remove large retaining ring (12). Remove adjusting screw assembly (13, 14, 15 and 16) from pressure plate (17).

#### NOTE

Transmission mainshaft nut (23) has left-hand threads. Turn nut clockwise to loosen and remove from mainshaft.

- 7. Remove nut (23) and spring washer (24). Remove the clutch assembly, primary chain and engine sprocket from the vehicle as an assembly.
- 8. Inspect primary chain. Replace as necessary.
- Inspect stator and rotor. See <u>6.24 ALTERNATOR</u>. Replace damaged parts as necessary.

#### NOTE

If replacement of primary chain is the only service work required, proceed directly to <u>5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation</u>. Skip Step 1 of that procedure and begin with the NOTE preceding Step 2.

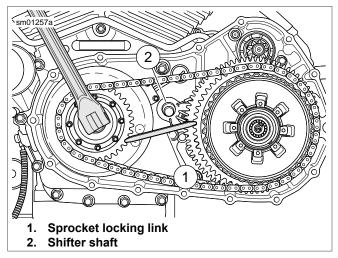


Figure 5-18. Loosen Engine Sprocket Bolt

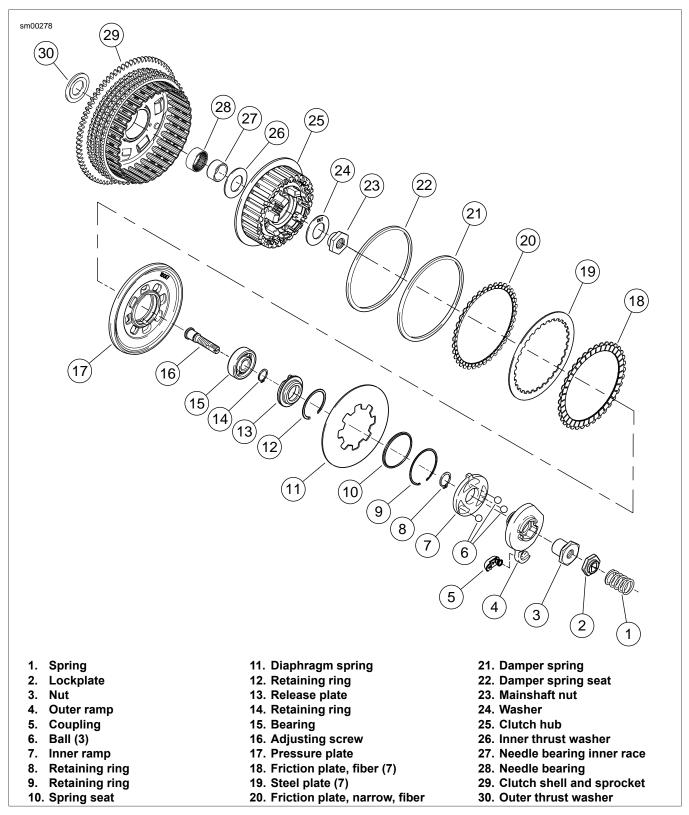


Figure 5-19. Clutch Assembly: XR 1200X

### DISASSEMBLY

PART NUMBER	TOOL NAME	
HD-38515-91	CLUTCH SPRING FORCING SCREW	
HD-38515-A	SPRING COMPRESSING TOOL	

- See <u>Figure 5-19</u>. With clutch assembly removed from primary chaincase, install adjusting screw assembly (13, 14, 15 and 16) into pressure plate (17):
  - a. Match the two tabs on perimeter of release plate (13) to the notches in pressure plate.
  - b. Install the retaining ring (12).

# **AWARNING**

Disassemble clutch using a spring compressing tool. The diaphragm spring is compressed and, if removed without proper tools can fly out, which could result in death or serious injury. (00292a)

- 2. Assemble the compressing tool:
  - a. Thread the CLUTCH SPRING FORCING SCREW (Part No. HD-38515-91) onto the clutch adjusting screw.
  - b. Place the bridge of SPRING COMPRESSING TOOL (Part No. HD-38515-A) against diaphragm spring.
  - c. Thread the tool handle onto end of forcing screw.


#### NOTE

Excessive compression of diaphragm spring could damage clutch pressure plate.

- 3. With a wrench on the clutch spring forcing screw flats to prevent the forcing screw from turning, turn handle clockwise until tool relieves pressure on retaining ring (9) and spring seat (10).
- Remove and discard retaining ring. Remove spring seat from the groove in clutch hub prongs. Remove the diaphragm spring (11), pressure plate (17), adjusting screw components (13, 14, 15 and 16) and compressing tool as an assembly.
- Turn the compressing tool handle counterclockwise until the clutch spring forcing screw disconnects from the clutch adjusting screw. Remove spring seat and diaphragm spring from pressure plate assembly.
- Remove retaining ring (12) and adjusting screw assembly from pressure plate. If necessary, disassemble adjusting screw assembly. See <u>5.5 PRIMARY DRIVE AND CLUTCH:</u> XR 1200X, Adjusting Screw.
- 7. Remove the clutch pack from the clutch hub. The clutch pack consists of seven friction (fiber) plates (18), seven steel plates (19), one narrow friction plate (20), one damper spring (21) and one seat (22).

# ADJUSTING SCREW

- See <u>Figure 5-20</u>. Remove adjusting screw assembly.
  - a. Remove large retaining ring (1).
  - Remove adjusting screw assembly from pressure plate (9).
- If necessary, disassemble adjusting screw assembly.
  - a. Remove and discard small retaining ring (6).
  - Separate the adjusting screw (8) from the bearing (7) and release plate (5).
  - c. Remove bearing (7) from release plate (5).
- Replace components as required and reassemble adjusting screw assembly in reverse order.
- 4. Install adjusting screw assembly into pressure plate.
  - See <u>Figure 5-35</u>. Align two tabs on perimeter of release plate with corresponding recesses (3) in pressure plate.
  - Secure the adjusting screw assembly with new retaining ring.

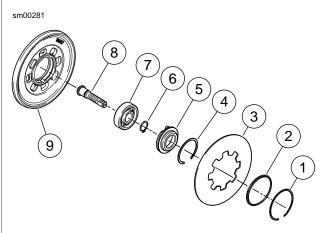

- 1. Retaining ring
- 2. Spring seat
- 3. Diaphragm spring
- 4. Retaining ring
- 5. Release plate
- 6. Retaining ring
- 7. Bearing
- 8. Adjusting screw
- 9. Pressure plate

Figure 5-20. Adjusting Screw Assembly

# CLUTCH PACK CLEANING AND INSPECTION

### Steel Plates

 Wash the steel plates, and the damper spring and seat in solvent.

- 2. See Figure 5-21. Inspect each steel plate.
  - a. Check for wear, grooves, or discoloration.
  - Gauge warpage around the plate. If warpage exceeds specifications, replace the entire clutch pack. Refer to Table 5-5.
- Inspect the damper spring and the spring seat. Replace as required.

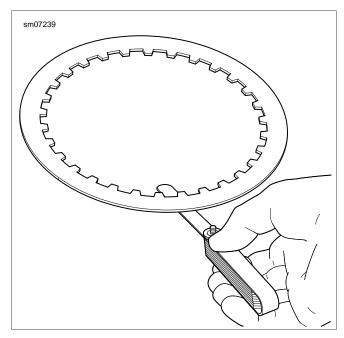


Figure 5-21. Gauging a Steel Plate

# **Friction Plates**

### NOTE

Do not wash the friction plates in solvent.

- 1. Wipe the friction plates clean of lubricant.
- 2. See Figure 5-22. Inspect each friction plate.
  - a. Check for wear or discoloration.
  - Measure the seven friction plates. If one thickness is less than specified, replace the entire clutch pack. Refer to <u>Table 5-5</u>.

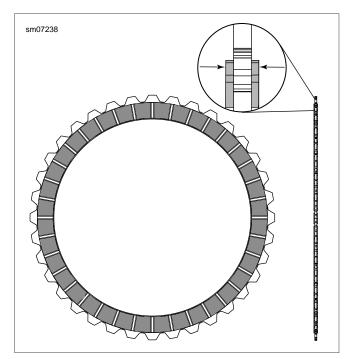


Figure 5-22. Friction Plate Thickness

Table 5-5. Clutch Pack Plate Specifications

ITEM	SERVICE WEAR LIMIT		
	in	mm	
CLUTCH PLATE THICKNESS			
Friction plate (fiber)	0.0795	2.0200	
Steel plate	N/A	N/A	
MAXIMUM ALLOWABLE WARPAGE			
Friction plate (fiber)	0.0059	0.1500	
Steel plate	0.0059	0.1500	

# **CLUTCH SHELL/HUB INSPECTION**

- Inspect engine sprocket for damage or excessive wear. Replace as required.
- Disassemble adjusting screw assembly and inspect bearing, release plate, and adjusting screw. See 5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Adjusting Screw.
- 3. Remove clutch hub from clutch shell. Inspect primary chain sprocket and the starter ring gear on the clutch shell.
- 4. Inspect slots that mate with the clutch plates on both clutch shell and hub.
- See <u>Figure 5-23</u>. Inspect the clutch shell compensating spring set.

### NOTE

It is possible for the compensating springs to float and move during inspection. This condition is normal.

 See <u>Figure 5-24</u>. Inspect clutch shell needle bearing for smoothness. Rotate the clutch shell while holding the clutch hub. If bearing is rough or binds, it must be replaced.

- See 5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Clutch Shell Bearing Replacement.
- 7. See Figure 5-25. Inspect clutch shell bearing inner race on the back side of the clutch hub for pitting and wear. If the inner race shows any signs of damage, the complete hub assembly must be replaced.
- 8. Replace damaged parts as necessary.

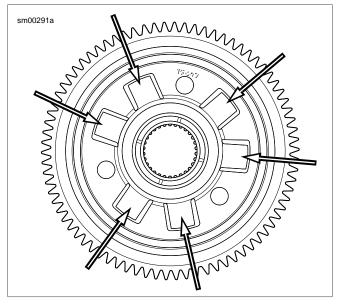


Figure 5-23. Compensating Spring Set

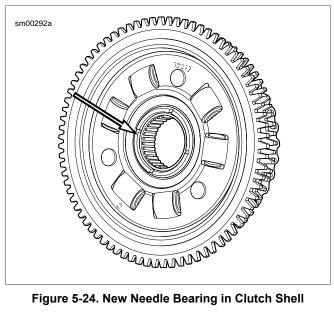


Figure 5-24. New Needle Bearing in Clutch Shell

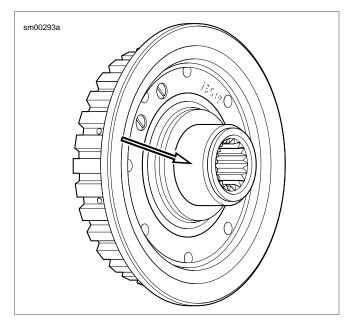


Figure 5-25. Clutch Hub Bearing Race

# **CLUTCH SHELL BEARING REPLACEMENT**

PART NUMBER	TOOL NAME
B-45926	CLUTCH SHELL BEARING
	REMOVER/INSTALLER

### NOTE

The clutch shell uses a caged needle bearing that corresponds to an inner race installed on the clutch hub.

See Figure 5-27. Place clutch shell on support blocks with sprocket side facing up.

### NOTE

The CLUTCH SHELL BEARING REMOVER/INSTALLER (Part No. B-45926) is clearly marked for removal and installation purposes.

- See Figure 5-27. Insert removal end of tool into bearing assembly and remove bearing from clutch shell.
- See Figure 5-28. Remove bearing guide from end of CLUTCH SHELL BEARING REMOVER/INSTALLER (Part No. B-45926).
- Place new needle bearing onto installer end of tool and insert the bearing guide.
- See Figure 5-29. Place clutch shell on support blocks with sprocket side facing up.
- Press bearing into clutch shell until tool bottoms on the shell. This will be the correct installed height.

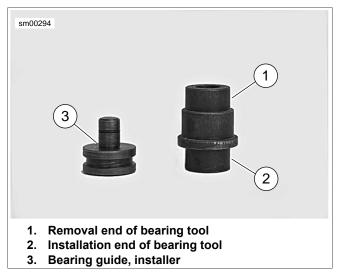


Figure 5-26. Clutch Shell Bearing Remover/Installer

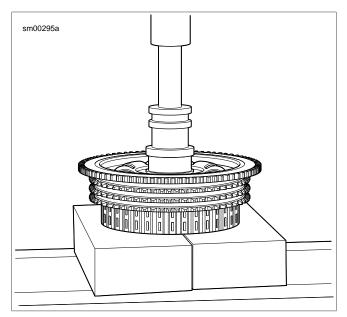


Figure 5-27. Removing Clutch Shell Needle Bearing





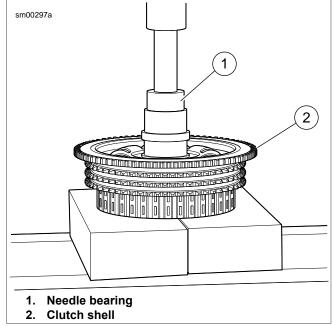


Figure 5-29. Installing Clutch Shell Needle Bearing

# **ASSEMBLY**

PART NUMBER	TOOL NAME
HD-38515-A	SPRING COMPRESSING TOOL

- Submerge and soak all friction and steel plates in GENUINE HARLEY-DAVIDSON FORMULA+ TRANSMIS-SION AND PRIMARY CHAINCASE LUBRICANT for at least five minutes.
- 2. See <u>Figure 5-30</u>. Install narrow friction plate on the clutch hub, engaging tabs on plate with slots in clutch shell.
- 3. See <u>Figure 5-31</u>. Install damper spring seat (1) on clutch hub so that it seats inboard of narrow friction plate (3).

- 4. Install damper spring (2) on clutch hub with the concave side up (facing opposite damper spring seat).
- 5. Install a steel plate (4) and then a friction plate (5) on the clutch hub. Install six remaining sets in the same manner, alternating between steel plates and friction plates.

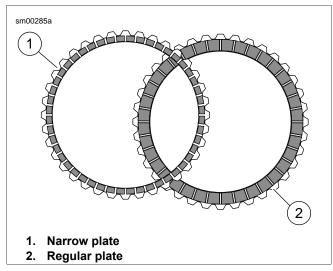


Figure 5-30. Friction Plates

- Place pressure plate, diaphragm spring, adjusting screw assembly with **new** retaining ring and spring seat onto clutch pack.
- 7. Install the retaining ring:
  - See <u>Figure 5-32</u>. Align square openings of pressure plate and diaphragm spring so that the assembly can be installed over prongs on clutch hub.
  - Position spring seat with its larger outer diameter side toward diaphragm spring.

### NOTE

Turn compressing tool handle only the amount required to install spring seat and retaining ring. Excessive compression of diaphragm spring could damage clutch pressure plate.

- Install SPRING COMPRESSING TOOL (Part No. HD-38515-A) onto clutch hub against diaphragm spring.
- d. Place a wrench on the clutch spring forcing screw flats to prevent the forcing screw from turning.
- Turn compressing tool handle clockwise until diaphragm spring compresses just enough to install new retaining ring into the groove in clutch hub prongs.
- f. With retaining ring fully seated in groove of clutch hub, remove the compression tool.

### NOTE

Remove the tool to allow the diaphragm spring to move outward forcing the spring seat up into the inside of the retaining ring. The spring seat is an operating surface for the diaphragm spring and prevents the retaining ring from coming out.

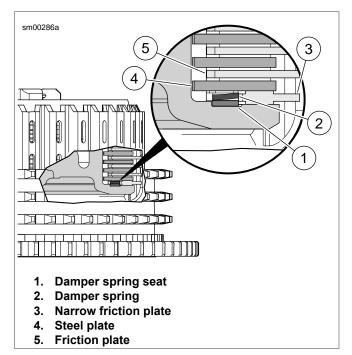


Figure 5-31. Clutch Pack Stack-Up

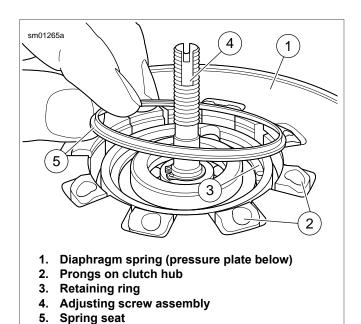


Figure 5-32. Spring Seat Installation

# INSTALLATION

PART NUMBER	TOOL NAME
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK
HD-46283	PRIMARY DRIVE LOCKING TOOL

FASTENER	TORQUE VALUE	
Engine sprocket bolt: XR 1200X	155-165 ft-lbs	210.0-224.0 Nm
Transmission mainshaft nut: XR 1200X	50-60 ft-lbs	67.8-81.3 Nm

 See <u>Figure 5-19</u>. Remove retaining ring (12). Remove adjusting screw assembly (13, 14, 15, 16) from pressure plate (17) to allow installation of the transmission mainshaft nut and washer.

### NOTE

Prior to installing engine sprocket bolt and transmission mainshaft nut, thoroughly clean threads of engine sprocket shaft, transmission mainshaft and mainshaft nut to remove any oil that might contaminate and interfere with locking agent.

Thoroughly clean threads of engine sprocket shaft, transmission mainshaft and mainshaft nut to remove any oil.

### **NOTES**

- See <u>Figure 5-33</u>. Do not position the sprocket locking link
   (1) too close to the shifter shaft (2). The sprocket locking
   can damage the shifter shaft and/or engine crankcase.
- Japan models use PRIMARY DRIVE LOCKING TOOL (Part No. HD-46283).
- See <u>Figure 5-33</u>. Install SPORTSTER 5-SPEED SPROCKET LOCKING LINK (Part No. HD-38362) (1).
- Install new engine sprocket bolt. Tighten to 155-165 ft-lbs (210.0-224.0 Nm).

### NOTE

See <u>Figure 5-34</u>. Washer (2) must be installed with the word "out" facing the transmission mainshaft nut (1). Incorrect assembly can result in clutch and/or transmission failure.

- 5. Install mainshaft nut.
  - a. See <u>Figure 5-34</u>. Apply two or three drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) onto threads of transmission mainshaft.
  - b. Install spring washer (2) and mainshaft nut (1) (left-hand threads) on transmission mainshaft.
  - c. Tighten to 50-60 ft-lbs (67.8-81.3 Nm).
- 6. Remove the sprocket locking link.
- See <u>Figure 5-35</u>. Install adjusting screw assembly in pressure plate with two tabs on perimeter of release plate matched to recesses in pressure plate. Secure with a **new** retaining ring.
- Install primary cover using **new** gasket. See <u>5.3 PRIMARY</u> COVER.

- Adjust primary chain and clutch. See <u>1.9 PRIMARY CHAIN</u> and <u>1.11 CLUTCH</u>.
- 10. Fill transmission. See 1.10 TRANSMISSION LUBRICANT.
- Connect battery and close left side cover. See <u>1.22 BAT-TERY MAINTENANCE</u>.

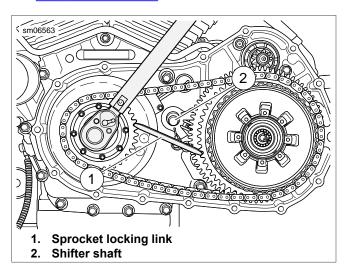


Figure 5-33. Tighten Engine Sprocket Bolt

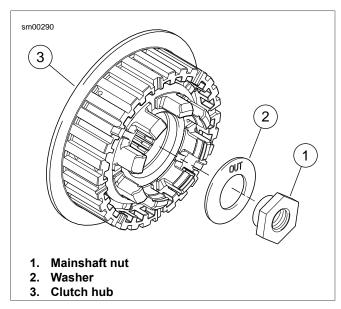


Figure 5-34. Mainshaft Nut and Washer

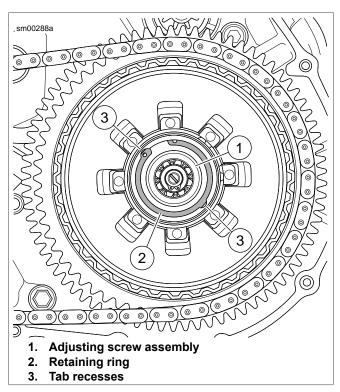


Figure 5-35. Clutch Adjusting Screw Assembly and Retaining Ring

DRIVE BELT 5.6

# **DRIVE BELT HANDLING**

See Figure 5-36.

- Do not exceed 5 in (127 mm) forward bend (1).
- Do not exceed 10 in (254 mm) reverse bend (2).
- Do not twist (3).
- · Do not crimp, pinch or kink (4).
- Do not pry (5).

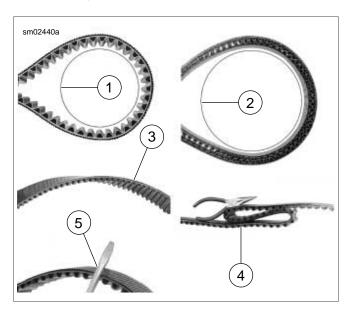


Figure 5-36. Drive Belt Handling

# **DRIVE BELT: XL MODELS**

FASTENER	TORQUE	VALUE
Exhaust pipe clamp bracket fastener: XL Models	30-33 ft-lbs	40.7-44.8 Nm
Sprocket cover, forward and lower screws	80-120 in-lbs	9.0-13.6 Nm
Axle, rear, nut	95-105 ft-lbs	129-142 Nm

### Removal


- Remove mufflers and rear exhaust pipe. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u>.
- Mid-Mount Controls: Remove right side rider footrest/brake pedal and mounting bracket assembly. See 2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CON-TROLS.
- 3. See <u>Figure 5-37</u>. Remove screw (6), washer (5) and exhaust pipe clamp bracket (4).
- 4. Remove two screws (2, 3).
- 5. See <u>Figure 5-38</u>. Remove E-clip (1). Discard E-clip.
- 6. Loosen rear axle nut (4).

- Turn the axle adjuster nut (2) on each side of rear fork an equal number of turns counterclockwise to decrease belt tension.
- 8. Remove right lower shock absorber screw, washer and locknut. See 2.24 SHOCK ABSORBERS, Removal.
- 9. Remove the belt guard. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>, Belt Guard: XL Models.
- Remove the debris deflector. See <u>2.22 BELT GUARD</u> AND DEBRIS DEFLECTOR, Debris Deflector: XL Models.

# **A**WARNING

Never bend belt forward into a loop smaller than the drive sprocket diameter. Never bend belt into a reverse loop. Over bending can damage belt resulting in premature failure, which could cause loss of control and death or serious injury. (00339a)

11. See Figure 5-39. Remove belt.

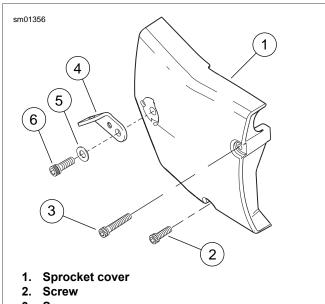

- 3. Screw
- 4. Exhaust pipe clamp bracket
- 5. Washer
- 6. Screw

Figure 5-37. Sprocket Cover: XL Models

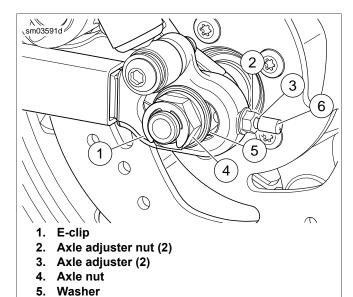


Figure 5-38. Drive Belt Adjustment: XL Models

Protective cap (2)

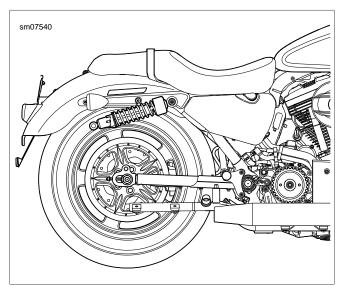


Figure 5-39. Drive Belt Removal: XL Models

# Installation

- 1. Install belt onto sprockets.
- Install the front of belt guard. See <u>2.22 BELT GUARD AND</u> DEBRIS DEFLECTOR, Belt Guard: XL Models.
- Install the debris deflector. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>, Debris Deflector: XL Models.
- Install right lower shock absorber bolt, washer and locknut.
   See <u>2.24 SHOCK ABSORBERS</u>, Installation.

### NOTE

See <u>Figure 5-37</u>. Short screw (2) goes in bottom hole. Long screw (3) goes in top hole. Do not tighten screws.

- 5. Install sprocket cover (1). Secure with two screws.
- 6. Install exhaust pipe clamp bracket (4), washer (5) and screw (6).

- 7. Tighten:
  - Exhaust pipe clamp bracket fastener 30-33 ft-lbs (40.7-44.8 Nm)
  - b. Sprocket cover fasteners 80-120 in-lbs (9.0-13.6 Nm)
- Mid-Mount Controls: Install right side rider footrest/brake pedal and mounting bracket assembly. See <u>2.40 RIDER</u> <u>FOOT CONTROLS: XL MID-MOUNT CONTROLS</u>.
- Install rear exhaust pipe and mufflers. See <u>4.13 EXHAUST</u> SYSTEM: XL MODELS.
- Adjust belt tension. See <u>1.12 DRIVE BELT AND SPROCKETS</u>, Drive Belt Deflection.
- Check wheel alignment. See <u>1.24 WHEEL ALIGNMENT</u>, Wheel Alignment.
- See <u>Figure 5-38</u>. Tighten rear axle nut (4) to 95-105 ft-lbs (129-142 Nm).
- 13. Install new E-clip (1).

# **IDLER PULLEY: XR 1200X**

FASTENER TO		VALUE
Idler pulley fastener: XR 1200X	70-80 ft-lbs	95-109 Nm
Idler pulley bracket flanged nut: XR 1200X	33-35 ft-lbs	44.7-47.5 Nm
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm

### Removal

1. See Figure 5-40. Remove sprocket cover (1).

### NOTE

It is not necessary to remove the drive belt completely.

Release tension from drive belt and slide belt off drive sprocket (5). See <u>5.6 DRIVE BELT, Drive Belt: XL Models</u>.

### NOTE


If exhaust system interference prevents removal, loosen all exhaust system mount fasteners and flange nuts. Pull exhaust system away from engine to allow room to remove idler assembly.

- 3. Remove nuts (3) and washers (4). Remove idler pulley and bracket assembly from vehicle.
- Spin and check idler pulley (7) for bearing wear. See 1.12 DRIVE BELT AND SPROCKETS, Inspection.

### NOTE

The idler pulley bearings can not be replaced separately.

 If idler pulley needs replacement, remove fastener (8) and bushings (2). Discard idler pulley and replace with new idler pulley (7).

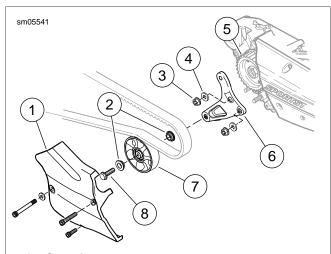

- 1. Sprocket cover
- 2. Bushing (2)
- 3. Flanged nut (2)
- 4. Washer (2)
- 5. Drive sprocket
- 6. Idler pulley bracket
- 7. Idler pulley
- 8. Fastener

Figure 5-40. Drive Belt Idler: XR 1200X

# Installation

- See <u>Figure 5-40</u>. Install **new** or existing idler pulley (7), if removed. Tighten fastener (8) to 70-80 ft-lbs (95-109 Nm).
- Install idler pulley and bracket assembly. Install washers (4) and flanged nuts (3). Tighten to 33-35 ft-lbs (44.7-47.5 Nm).
- Install drive belt and adjust belt tension and wheel alignment. See <u>1.24 WHEEL ALIGNMENT</u>.
- 4. Install sprocket cover:
  - a. Tighten rear (larger) screw to 30-33 ft-lbs (40.7-44.8 Nm).
  - b. Tighten forward and lower (smaller) screws to 80-120 in-lbs (9.0-13.6 Nm).
- If loosened, align. Tighten exhaust system components.
   See <u>4.14 EXHAUST SYSTEM: XR 1200X</u>.

### **DRIVE BELT: XR 1200X**

FASTENER	TORQUE VALUE	
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm
Sprocket cover, forward and lower screws	80-120 in-lbs	9.0-13.6 Nm
Axle, rear, nut	95-105 ft-lbs	129-142 Nm

### Removal

- Remove exhaust system. See <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.
- See <u>Figure 5-41</u>. Remove screws (2, 3, 4). Remove sprocket cover (1).

- 3. See Figure 5-42. Remove E-clip. Discard E-clip (1).
- 4. Loosen rear axle nut (4).
- Turn the axle adjuster nut (2) on each side of rear fork an equal number of turns counterclockwise to release belt tension.
- 6. Remove right lower shock absorber screw, washer and locknut. See <u>2.24 SHOCK ABSORBERS, Removal.</u>
- 7. Remove belt guard. See <u>2.22 BELT GUARD AND DEBRIS</u> DEFLECTOR, Belt Guard: XR 1200X.
- 8. Remove debris deflector. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>, <u>Debris Deflector</u>: XR 1200X.

# **A**WARNING

Never bend belt forward into a loop smaller than the drive sprocket diameter. Never bend belt into a reverse loop. Over bending can damage belt resulting in premature failure, which could cause loss of control and death or serious injury. (00339a)

9. See Figure 5-43. Remove belt.

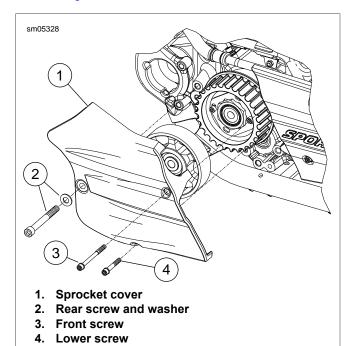


Figure 5-41. Sprocket Cover: XR 1200X

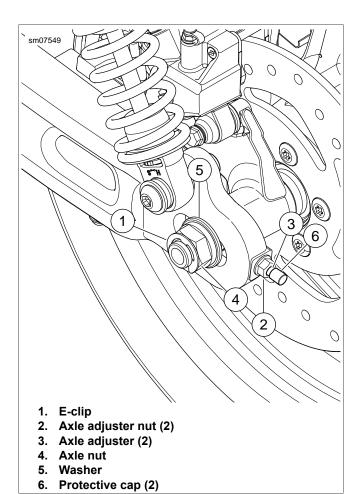


Figure 5-42. Drive Belt Adjustment: XR 1200X

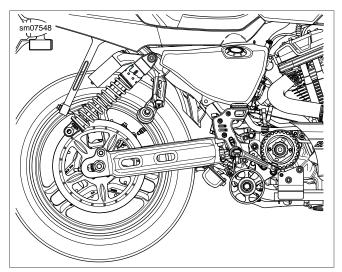


Figure 5-43. Drive Belt Removal: XR 1200X

## Installation

- Install belt onto sprockets.
- Install belt guard. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>, Belt Guard: XR 1200X.
- Install debris deflector. See <u>2.22 BELT GUARD AND DEBRIS DEFLECTOR</u>, <u>Debris Deflector</u>: XR 1200X.
- Install right lower shock absorber bolt, washer and locknut.
   See <u>2.24 SHOCK ABSORBERS</u>, <u>Installation</u>.

#### NOTE

See <u>Figure 5-41</u>. Long screw (3) goes in top hole. Short screw (4) goes in bottom hole.

- 5. Install sprocket cover (1).
  - a. Tighten screw (2) to 30-33 ft-lbs (40.7-44.8 Nm).
  - b. Tighten screws (3, 4) to 80-120 **in-lbs** (9.0-13.6 Nm).
- 6. Install exhaust system. See <u>4.14 EXHAUST SYSTEM: XR 1200X</u>, Installation.
- 7. Adjust belt tension. See <u>1.12 DRIVE BELT AND SPROCKETS, Drive Belt Deflection</u>.
- Check rear wheel alignment. See <u>1.24 WHEEL ALIGN-MENT, Wheel Alignment</u>.
- See <u>Figure 5-42</u>. Tighten rear axle nut (4) to 95-105 ft-lbs (129-142 Nm). Install **new** E-clip (1).

## TRANSMISSION POWER FLOW

5.7

## **GENERAL**

See <u>Figure 5-44</u>. The transmission is a five-speed constantmesh type housed in an extension of the crankcase. The transmission permits the rider to vary the ratio of engine speed-to-rear driving wheel speed in order to meet the varying conditions of operation.

The transmission is foot-operated by the gear shifter lever, which transmits the force through a gear shifter shaft. The shifter shaft actuates a pawl and a shifter fork drum. The shifter fork drum moves shifter forks. The shifter forks slide a series of shifter dogs into and out of mesh with the other gears.

5-28 2013 Sportster Service: Drive/Transmission

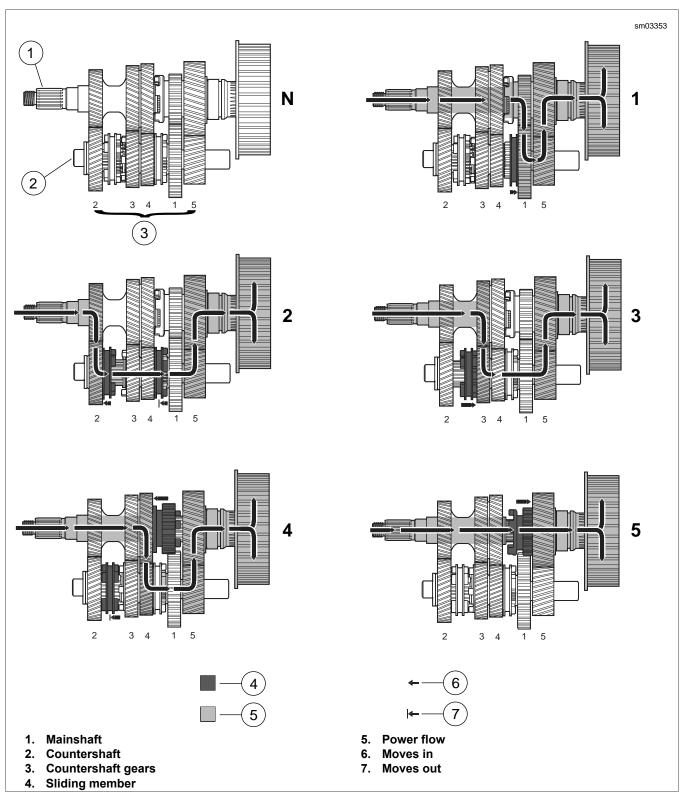


Figure 5-44. Transmission Power Flow

# CASE DISASSEMBLY FOR TRANSMISSION REMOVAL

5.8

## **GENERAL**

The rear compartment of the left and right crankcase halves form the transmission case. Servicing of transmission components requires removing the engine and disassembling (splitting) the crankcase.

## **ENGINE REMOVAL AND DISASSEMBLY**

PART NUMBER	TOOL NAME
HD-42310-45	ENGINE SUPPORT CRADLE

- Remove engine from chassis. See <u>3.10 REMOVING</u> <u>ENGINE FROM CHASSIS</u>.
- Support engine using ENGINE SUPPORT CRADLE (Part No. HD-42310-45).
- Disassemble top end. See <u>3.13 TOP END OVERHAUL</u>: DISASSEMBLY.
- Remove primary cover, clutch assembly, primary chain and engine sprocket. See <u>5.4 PRIMARY DRIVE AND</u> <u>CLUTCH: XL MODELS</u> or <u>5.5 PRIMARY DRIVE AND</u> <u>CLUTCH: XR 1200X.</u>
- 5. Disassemble gearcase. See <u>3.17 BOTTOM END OVER-HAUL: DISASSEMBLY</u>.
- 6. Remove transmission sprocket.
- See <u>Figure 5-45</u>. Place transmission in 1st gear. Remove countershaft retaining screw (1).
- Place transmission in neutral. See <u>Figure 5-46</u>. Unplug neutral switch connector [131] (2) by pulling connector straight off neutral switch (1). Remove neutral switch and flat washer.
- See <u>Figure 5-47</u>. Verify shifter drum detent is visible in neutral switch hole indicating that transmission is in neutral.


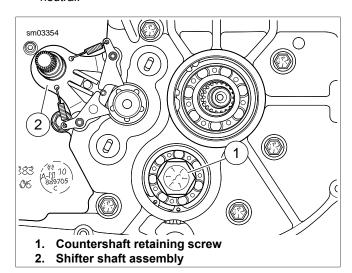


Figure 5-45. Countershaft Retaining Screw

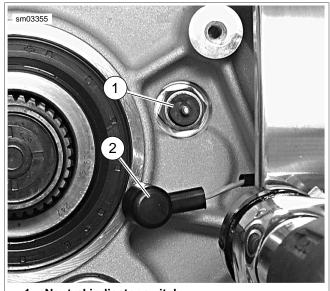

- 1. Neutral indicator switch
- 2. Neutral switch connector

Figure 5-46. Neutral Switch and Connector

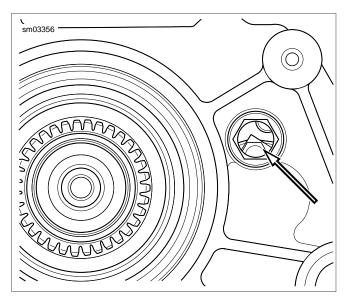


Figure 5-47. Shifter Drum Neutral Detent

- See <u>Figure 5-48</u> and <u>Figure 5-49</u>. Compress the ratchet arms (item 2, <u>Figure 5-48</u>) in order to clear the shifter drum, and remove shifter shaft assembly from left crankcase half.
- 11. Remove starter. See <u>6.10 STARTER</u>.
- 12. See <u>Figure 5-50</u>. With transmission still in neutral, scribe a line on the end of the shifter drum at the 12 o'clock position for later reference.

5-30 2013 Sportster Service: Drive/Transmission

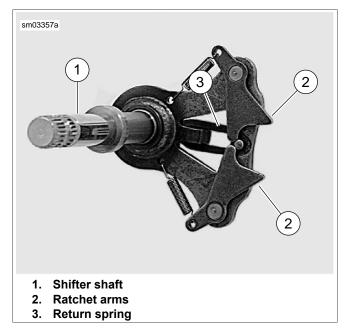


Figure 5-48. Shifter Shaft Assembly

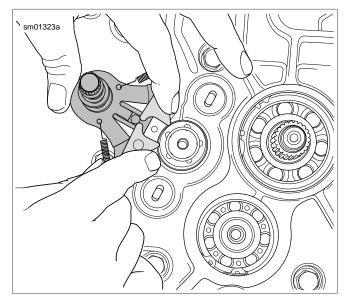


Figure 5-49. Removing Shifter Shaft Assembly

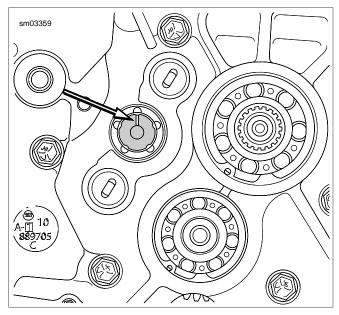


Figure 5-50. Scribed Line on Shifter Drum at 12 o'clock

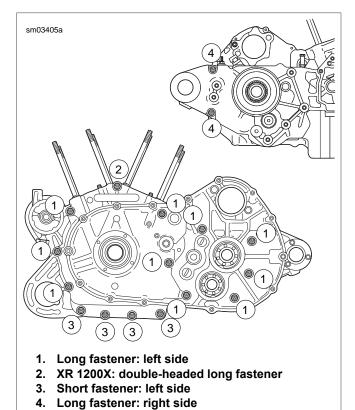


Figure 5-51. Crankcase Fasteners

#### NOTE

Crankcase assembly has 17 fasteners: 15 inserted from left side and two inserted from right side. Make certain all fasteners have been removed before attempting to separate crankcase halves.

 See <u>Figure 5-51</u>. Remove 15 crankcase fasteners (11 long and four short) from left side of crankcase assembly. Remove two fasteners from right side of crankcase assembly. 14. Tap crankcase gently with rawhide mallet to loosen and separate the halves. See <u>Figure 5-52</u>. Remove left crankcase assembly with transmission.

#### NOTE

Flywheel assembly slides off left main bearing by hand. No tools are required for this operation.

- 15. See <u>Figure 5-53</u>. Remove flywheel assembly from right crankcase half.
- See <u>Figure 5-54</u>. Remove screw (1), gear detent assembly
   and detent spring (3) from inside transmission cavity of right crankcase.

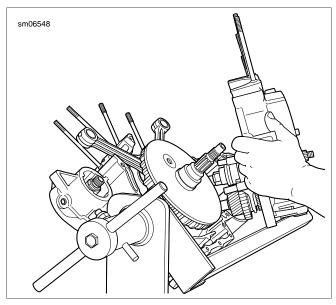


Figure 5-52. Separating Crankcase Halves

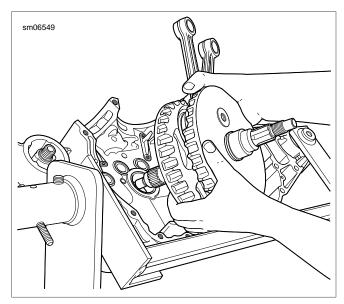


Figure 5-53. Removing Flywheel Assembly From Right Crankcase Half

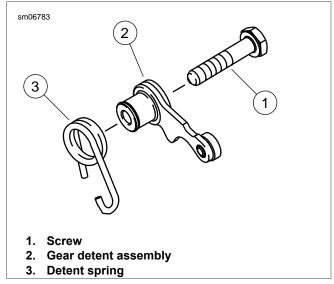


Figure 5-54. Gear Detent Assembly


## TRANSMISSION REMOVAL AND DISASSEMBLY

# TRANSMISSION REMOVAL FROM LEFT CRANKCASE

PART NUMBER	TOOL NAME
B-43895-1	REMOVER
B-43985	TRANSMISSION REMOVAL AND INSTALLATION TOOL

#### NOTE

See <u>Figure 5-55</u>. Shifter design allows for one common part number for both countershaft shifter forks (4, 5). As the transmission runs, each shifter fork develops a certain wear pattern with its mating parts. Install shifter forks in original locations.

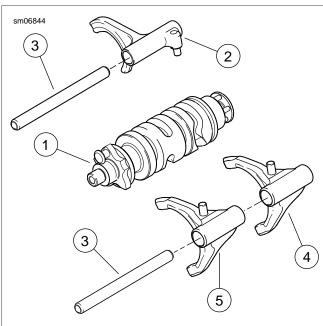

- 1. Shifter drum
- 2. Mainshaft shifter fork (4th/5th)
- 3. Shifter fork shaft
- 4. Countershaft shifter fork (1st)
- 5. Coutnershaft shifter fork (2nd/3rd)

Figure 5-55. Shifter Forks, Drum and Shafts

 See <u>Figure 5-56</u>. Remove shifter fork shafts by inserting a small flat punch in the slots and tapping on the end of each shaft until it falls free.

#### NOTE

Carefully tap on alternate sides of the shaft using the provided slots.

See <u>Figure 5-57</u>. Remove shifter drum (1) and shifter forks
 Mark each shifter fork as it is removed, so it can be reinstalled in the same location.

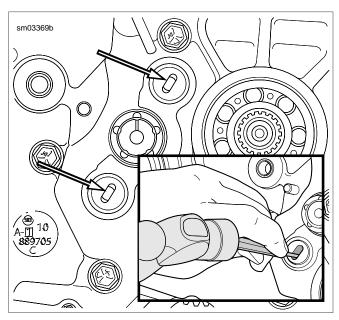


Figure 5-56. Slots For Removing Shifter Fork Shafts


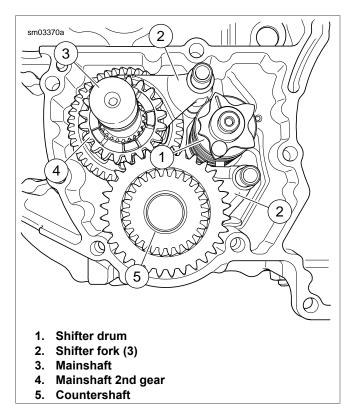


Figure 5-57. Transmission Assembly

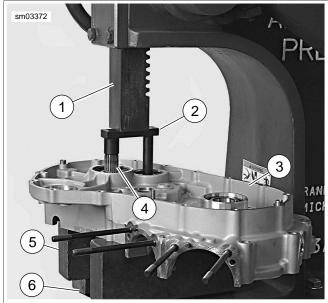

- 1. Press ram
- 2. Transmission remover
- 3. Crankcase
- 4. Transmission assembly (countershaft visible)
- 5. Parallel support (2)
- 6. Press bed

Figure 5-58. Pressing Transmission From Left Crankcase

## **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE

Use the TRANSMISSION REMOVAL AND INSTALLATION TOOL (Part No. B-43985) to remove the transmission.

- 3. See <u>Figure 5-58</u>. Remove left crankcase half and transmission assembly (4) from engine stand.
  - a. Place crankcase half (3) and transmission assembly
     (4) on arbor press (1) and support transmission assembly on parallel supports (5).
  - Press transmission assembly using REMOVER (Part No. B-43895-1) (2) to remove transmission from crankcase half.
  - c. Remove crankcase from press.

#### MAINSHAFT/COUNTERSHAFT

#### **NOTES**

- Transmission operation creates a specific wear pattern on the parts. Always install parts in their original locations and orientations.
- See <u>Figure 5-59</u>. As each component is removed, place it on a clean surface in the exact order of removal.

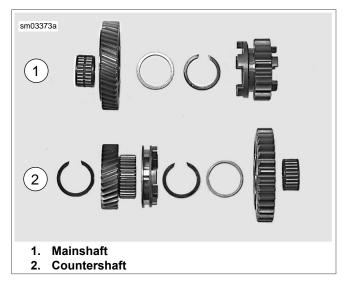


Figure 5-59. Transmission Parts Identification

## MAINSHAFT DISASSEMBLY

PART NUMBER	TOOL NAME
J-5586-A	TRANSMISSION SHAFT RETAINING
	RING PLIERS

#### NOTES

- Mainshaft 2nd and 3rd gears are integral to the shaft.
- Mainshaft 1st gear is directional. Mark gear when removed for correct installation.
- Press transmission assembly out of left crankcase half to service mainshaft and countershaft.
- All thrust washers are one common part number. This transmission requires no shimming.
- Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

## **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- 1. See Figure 5-60. Remove 1st gear (1).
- Use TRANSMISSION SHAFT RETAINING RING PLIERS (Part No. J-5586-A) to expand and remove retaining ring (2). Discard retaining ring.
- 3. Slide thrust washer (3) off end of mainshaft.
- 4. Remove 4th gear (4) and split bearing (5). Discard bearing.

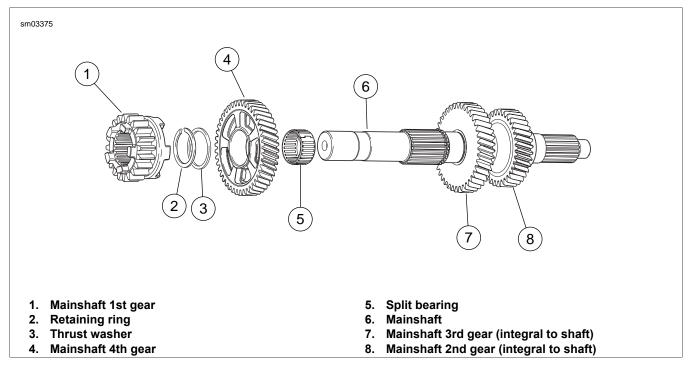


Figure 5-60. Transmission Mainshaft Assembly Once Removed from Left Crankcase/Disassembly

## **Cleaning and Inspection**

## **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- Clean all parts in cleaning solvent. Blow dry with compressed air.
- Check gear teeth for damage. Replace if necessary.
- Inspect the engaging dogs on the gears. Replace if necessary.

## **COUNTERSHAFT DISASSEMBLY**

PART NUMBER	TOOL NAME
J-5586-A	RETAINING RING PLIERS

#### NOTES

- Countershaft 5th gear is integral to the shaft.
- Once the transmission assembly has been pressed out of the left crankcase half, the mainshaft and countershaft assemblies can be serviced separately.
- All thrust washers are one common part number. This transmission requires no shimming.
- Use correct retaining ring pliers with correct tips. Verify that tips are not excessively worn or damaged.

## **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

- See <u>Figure 5-61</u>. Remove spacer (19) and 2nd gear (18) from the end of the of the countershaft (2). Remove and discard split bearing (17).
- 2. Remove spacer (16).

#### NOTE

When removing the dog ring (15), it is important to mark the direction of the ring on the shaft as parts establish wear patterns.

- 3. Remove dog ring (15).
- Using RETAINING RING PLIERS (Part No. J-5586-A), expand and remove retaining ring (14). Discard retaining ring.
- Remove thrust washer (13), 3rd gear (12), and split bearing (11). Discard bearing.
- 6. Remove thrust washer (10).
- 7. Expand, remove and discard retaining ring (9).
- 8. Remove 4th gear (8) and dog ring (7).
- 9. Expand, remove and discard retaining ring (6).
- 10. Remove thrust washer (5), 1st gear (4) and split bearing (3). Discard bearing.

## **Cleaning and Inspection**

## **AWARNING**

Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)

- 1. Clean all parts (except bearings) in cleaning solvent and blow dry with compressed air.
- 2. Check gear teeth for damage. Replace if necessary.
- 3. Inspect the engaging dogs on the gears. Replace if necessary.

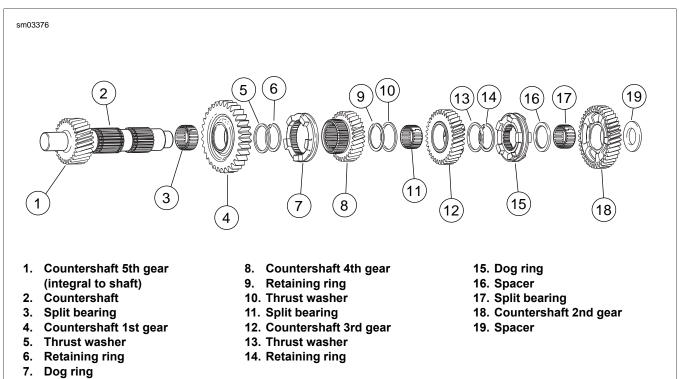


Figure 5-61. Transmission Countershaft Assembly Once Removed from Left Crankcase/Disassembly

## TRANSMISSION ASSEMBLY

#### MAINSHAFT ASSEMBLY

PART NUMBER	TOOL NAME
J-5586-A	RETAINING RING PLIERS

## **AWARNING**

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### **NOTES**

- Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.
- Lubricate spit bearings and internal bores of gears with SCREAMIN' EAGLE ASSEMBLY LUBE prior to assembly.
- See <u>Figure 5-62</u>. Install **new** split bearing (5) in 4th gear position on mainshaft.
- 2. Install 4th gear (4) and thrust washer (3).
- 3. Using RETAINING RING PLIERS (Part No. J-5586-A), expand and install new retaining ring (2).
- 4. Install 1st gear (1).

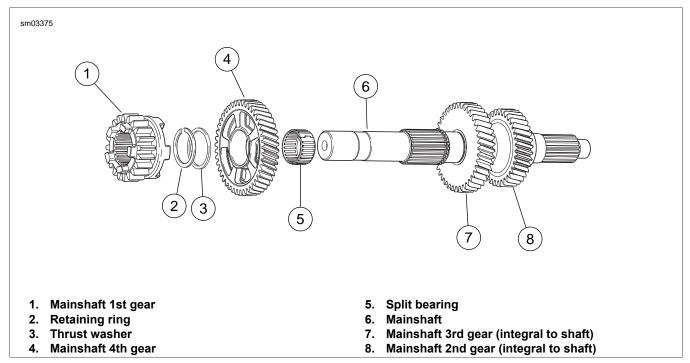


Figure 5-62. Transmission Mainshaft Assembly Once Removed from Left Crankcase/Disassembly

## **COUNTERSHAFT ASSEMBLY**

PART NUMBER	TOOL NAME
J-5586-A	RETAINING RING PLIERS

## **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### **NOTES**

- Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.
- During assembly, the split bearings and the internal bores of the gears must be lubricated with SCREAMIN' EAGLE

- ASSEMBLY LUBE prior to assembly. Leaving these parts dry could accelerate wear at start-up.
- See <u>Figure 5-63</u>. Install **new** split bearing (3) in 1st gear position on mainshaft.
- 2. Install 1st gear (4) and thrust washer (5).
- 3. Using RETAINING RING PLIERS (Part No. J-5586-A), expand and install **new** retaining ring (6).
- 4. Install dog ring (7) onto 4th gear (8). Now install dog ring and gear assembly onto countershaft.
- 5. Expand and install **new** retaining ring (9).
- 6. Install thrust washer (10).
- Install new split bearing (11) in 3rd gear position on mainshaft.
- 8. Install 3rd gear (12) and thrust washer (13).

- 9. Expand and install **new** retaining ring (14).
- 10. Install dog ring (15). Make sure to install with dog ring facing same direction as when it was removed.
- 11. Install spacer (16).

- 12. Install **new** split bearing (17) in 2nd gear position on shaft.
- 13. Install 2nd gear (18) and spacer (19).

#### NOTE

At this point both mainshaft and countershaft sub-assemblies are ready to be pressed into the left crankcase half.

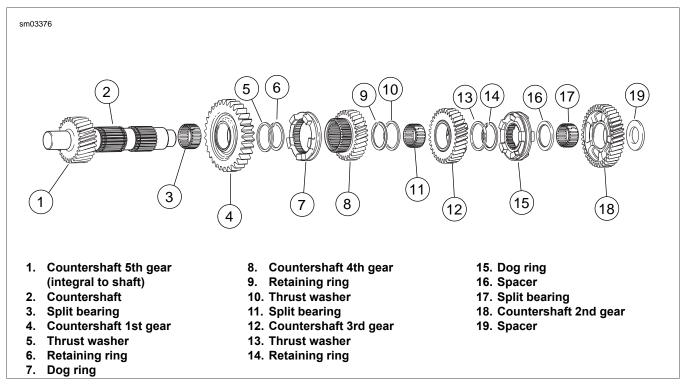


Figure 5-63. Transmission Countershaft Assembly Once Removed from Left Crankcase/Disassembly

## MAIN DRIVE GEAR AND BEARING

## **GENERAL**

#### NOTE

See <u>Figure 5-64</u>. Main drive gear (2) removal requires replacement of the main drive gear bearing (7 or 14). Gear removal procedure destroys bearing's inner race.

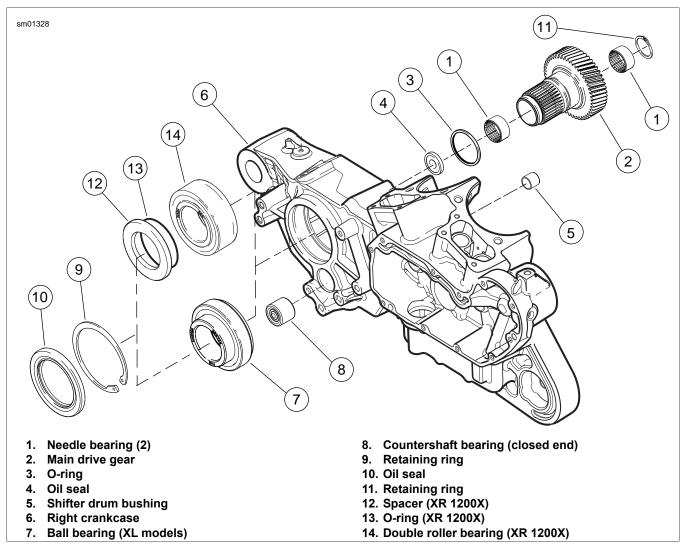


Figure 5-64. Main Drive Gear and Bearing Assembly

## **REMOVAL**

PART NUMBER	TOOL NAME
B-45847	CROSS PLATE
HD-35316-11	RECEIVER CUP
HD-35316-13	BEARING DRIVER
HD-35316-4A	8 INCH BOLT
HD-35316-7	WASHER
HD-35316-9	BEARING DRIVER
HD-35316-D	MAIN DRIVE GEAR REMOVER AND INSTALLER SET

#### Main Drive Gear

- Split crankcases. See <u>5.8 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL</u>.
- 2. See <u>Figure 5-65</u>. From inside right crankcase, tap out seal (3) at end of main drive gear (1). Discard seal.
- 3. Obtain MAIN DRIVE GEAR REMOVER AND INSTALLER SET (Part No. HD-35316-D). See Figure 5-66. Position CROSS PLATE (Part No. B-45847) (1) on right crankcase as shown. Position so roll pins (2) fit into crankcase mating screw holes and bolt hole (3) is centered over main drive gear (4).


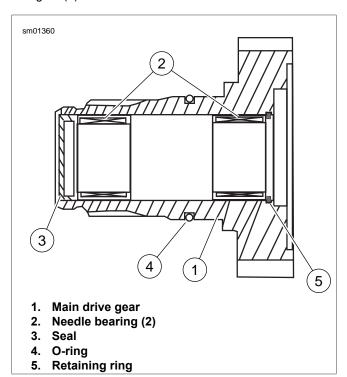



Figure 5-65. Main Drive Gear Assembly (typical)

- 4. See <u>Figure 5-67</u>. Insert 8 INCH BOLT (Part No. HD-35316-4A) (2) through cross plate (1) and main drive gear (3).
- At outside of case, place WASHER (Part No. HD-35316-7) (4), BEARING (5), FLAT WASHER (6) and NUT (7) over end of bolt. Tighten nut until main drive gear is free.

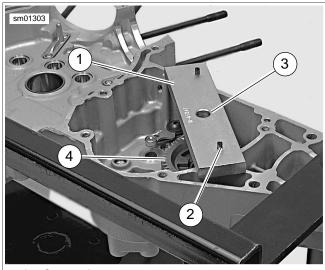

- 1. Cross plate
- 2. Roll pin (2)
- 3. Bolt hole
- 4. Main drive gear

Figure 5-66. Positioning Cross Plate (typical)

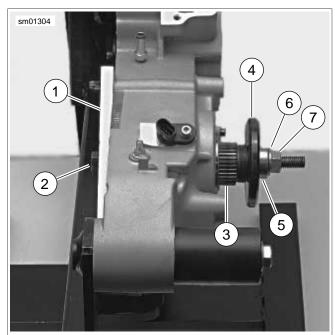

- 1. Cross plate
- 2. 8 in bolt
- 3. Main drive gear
- 4. Washer
- 5. Bearing
- 6. Washer
- 7. Nut

Figure 5-67. Removing Main Drive Gear (typical)

## Main Drive Gear Ball Bearing

## **A**WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE


Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.


- 1. See <u>Figure 5-64</u>. Remove and discard oil seal (10). Remove and discard main drive gear bearing retaining ring (9).
- 2. **XR 1200X:** Remove spacer (12) and O-ring (13).
- See <u>Figure 5-68</u>. Install driver components: From inside crankcase, position bearing driver (2) over main drive gear bearing.
  - a. **XL Models:** Use the BEARING DRIVER (Part No. HD-35316-9).
  - XR 1200X: Use the BEARING DRIVER (Part No. HD-35316-13).
- 4. Insert 8 INCH BOLT (Part No. HD-35316-4A) (1) through bearing driver and bearing.
- 5. At outside of case, slide RECEIVER CUP (Part No. HD-35316-11) (3) onto bolt and over bearing. Install the bearing (4), flat washer (5) and nut (6) over end of bolt.

#### NOTE

Support bearing remover assembly as you remove bearing in the following step. Entire assembly will fall out of crankcase when bearing comes free.

- 6. Tighten nut until main drive gear ball bearing is free.
- 7. Discard main drive gear ball bearing.

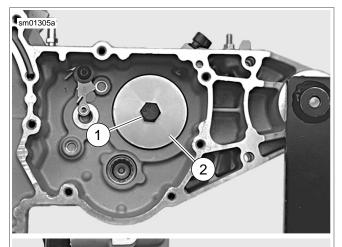

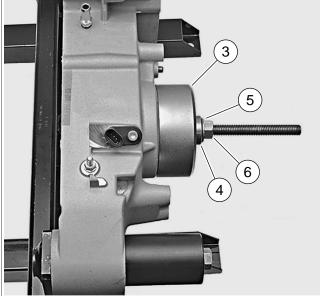

- 1. 8 inch bolt
- 2. Bearing driver
- 3. Receiver cup
- 4. Bearing
- 5. Flat washer
- 6. Nut

Figure 5-68. Removing Main Drive Gear Bearing (typical)

#### DISASSEMBLY

PART NUMBER	TOOL NAME
HD-95637-46B	BEARING RACE PULLER

- 1. See <u>Figure 5-64</u>. Remove retaining ring (11) from inboard end of main drive gear (2). Discard retaining ring.
- See <u>Figure 5-65</u>. Drive out needle bearings (2) from inside bore of main drive gear (1). Discard needle bearings. Do not reuse bearings after removal from drive gear bore.
- 3. Remove and discard O-ring (4).

#### NOTE


When the main drive gear is removed, a portion of the bearing inner race remains attached to the main drive gear. Remove this inner race before installing main drive gear.

- 4. See Figure 5-69. Attach BEARING RACE PULLER (Part No. HD-95637-46B) (3) to inner race (2) on main drive gear (1).
- Place main drive gear with bearing race puller assembly onto press bed as shown in the photo.

#### NOTE

Provide a soft surface to catch the main drive gear when it falls free in the next step.

6. Press main drive gear out of inner bearing race. Discard inner bearing race.

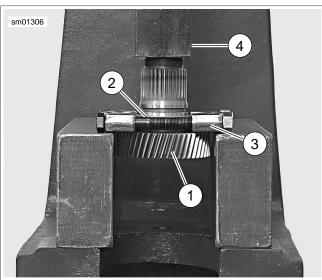

- 1. Main drive gear
- 2. Inner bearing race (not visible in this photo)
- 3. Bearing race puller
- 4. Press ram

Figure 5-69. Removing Inner Bearing Race From Main Drive Gear (typical)

#### **ASSEMBLY**

PART NUMBER	TOOL NAME
HD-47855	INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL: XL MODELS
HD-48643	INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL: XR 1200X

#### NOTE

The correct installed bearing depth is reached when the installation tool bottoms on the gear.

- See <u>Figure 5-70</u> or <u>Figure 5-71</u>. Place main drive gear (4) on press bed with gear end facing up.
- Place needle bearing (3) squarely into end of drive gear with lettered side of bearing facing up. Always press on

lettered side of bearing to install. Insert the installation tool (2) with end stamped "INNER" facing needle bearing.

- XL Models: INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL: XL MODELS (Part No. HD-47855)
- b. XR 1200X: INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL: XR 1200X (Part No. HD-48643)
- Press in the inner bearing until the installation tool bottoms on the main drive gear.


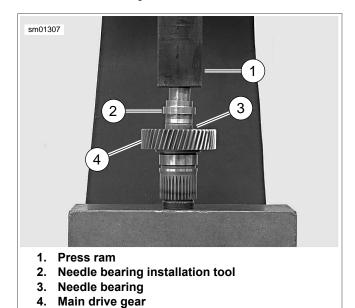


Figure 5-70. Pressing Inner Needle Bearing Assembly into Main Drive Gear: XL Models

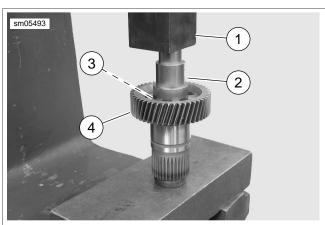


- 1. Press ram
- 2. Needle bearing installation tool
- 3. Needle bearing (not visible)
- 4. Main drive gear

Figure 5-71. Pressing Inner Needle Bearing Assembly into Main Drive Gear: XR 1200X


- 4. See <u>Figure 5-72</u> or <u>Figure 5-73</u>. Place main drive gear (4) on press bed with gear end facing down.
- Place needle bearing (3) squarely into end of drive gear with lettered side of bearing facing up. Always press on

- lettered side of bearing to install. Insert installation tool (2) with end stamped "OUTER" facing needle bearing.
- 6. Press in the outer needle bearing until the installation tool bottoms on the main drive gear.
- 7. See Figure 5-64. Install **new** retaining ring (11) in inboard end of main drive gear (2).

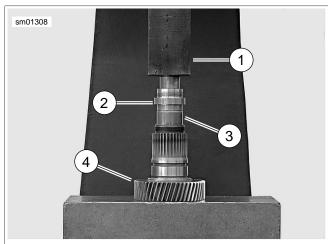

- 1. Press ram
- 2. Needle bearing installation tool
- 3. Needle bearing
- 4. Main drive gear

Figure 5-72. Pressing Outer Needle Bearing Assembly into Main Drive Gear: XL Models

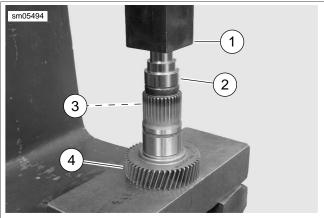

- 1. Press ram
- 2. Needle bearing installation tool
- 3. Needle bearing (not visible)
- 1. Main drive gear

Figure 5-73. Pressing Outer Needle Bearing Assembly into Main Drive Gear: XR 1200X

#### INSTALLATION

PART NUMBER	TOOL NAME
B-45847	CROSS PLATE
HD-35316-12	INSTALLER CUP
HD-35316-13	BEARING DRIVER
HD-35316-4A	8 INCH BOLT
HD-35316-7	WASHER
HD-35316-8	BEARING DRIVER
HD-35316-C	MAIN DRIVE GEAR REMOVER AND INSTALLER SET
HD-47856	MAIN DRIVE GEAR SEAL INSTALLER KIT
HD-47856-1	INSTALLER
HD-47856-2	PILOT
HD-47856-4	ADAPTER
HD-47856-5	LARGE NUT

## Main Drive Gear Bearing: XL Models

- See <u>Figure 5-74</u>. Place CROSS PLATE (Part No. B-45847)

   (1) on right crankcase as shown. Position cross plate so that roll pins (2) fit into crankcase mating screw holes and bolt hole (3) in cross plate is centered over crankcase bearing bore (4).
- See <u>Figure 5-75</u>. Insert 8 INCH BOLT (Part No. HD-35316-4A) (2) through cross plate (1) and main drive gear bearing bore.
- Place main drive gear bearing (3), BEARING DRIVER (Part No. HD-35316-8) (4), BEARING (5), FLAT WASHER (6) and NUT (7) over end of bolt.

#### NOTE

Do not continue to tighten nut after bearing bottoms against lip in crankcase bearing bore. Tightening nut too much can break lip in bearing bore casting.

- 4. Tighten nut until main drive gear bearing bottoms against lip cast into crankcase bearing bore.
- 5. Remove main drive gear bearing installer tool.


## WARNING

Wear safety glasses or goggles when removing or installing retaining rings. Retaining rings can slip from the pliers and could be propelled with enough force to cause serious eye injury. (00312a)

#### NOTE

Use correct retaining ring pliers and correct tips. Verify that tips are not excessively worn or damaged.

- 6. See <u>Figure 5-78</u>. At outside of case install **new** beveled retaining ring (9) in groove inside bearing bore with beveled side facing outside of case.
- Lubricate main drive gear bearing with SCREAMIN' EAGLE ASSEMBLY LUBE.

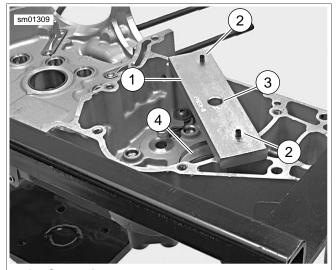

- **Cross plate**
- 2. Roll pin (2)
- 3. Bolt hole
- 4. Crankcase bearing bore

Figure 5-74. Positioning Cross Plate: XL Models

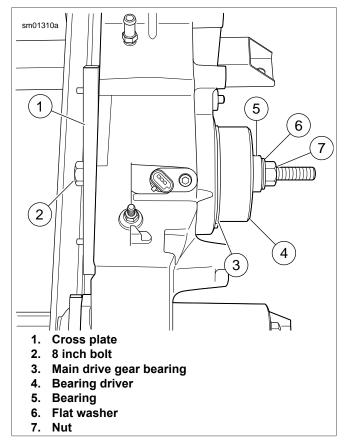



Figure 5-75. Installing Main Drive Gear Bearing: XL Models

## Main Drive Gear Bearing: XR 1200X

NOTE

Due to the design of the bearing, BEARING DRIVER (Part No. HD-35316-13) and an arbor press must be used to press the main drive gear bearing on all XR 1200X.

- See <u>Figure 5-76</u>. From the outside of the case, position the main drive gear bearing (3) and bearing driver (2) over bearing bore in crankcase.
- Press on main drive gear bearing driver until driver bottoms against lip cast into crankcase bearing bore.

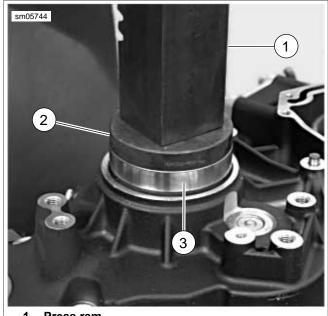

- 1. Press ram
- 2. Bearing driver
- 3. Main drive gear bearing

Figure 5-76. Installing Main Drive Gear Bearing: XR 1200X

#### Main Drive Gear

- See Figure 5-77. Lubricate both main drive gear needle bearing assemblies with SPECIAL PURPOSE GREASE.
- See Figure 5-78. Install **new** O-ring (3) into groove in main drive gear (2). Lubricate O-ring with SCREAMIN' EAGLE ASSEMBLY LUBE.



Figure 5-77. Lubricating Main Drive Gear Needle Bearing

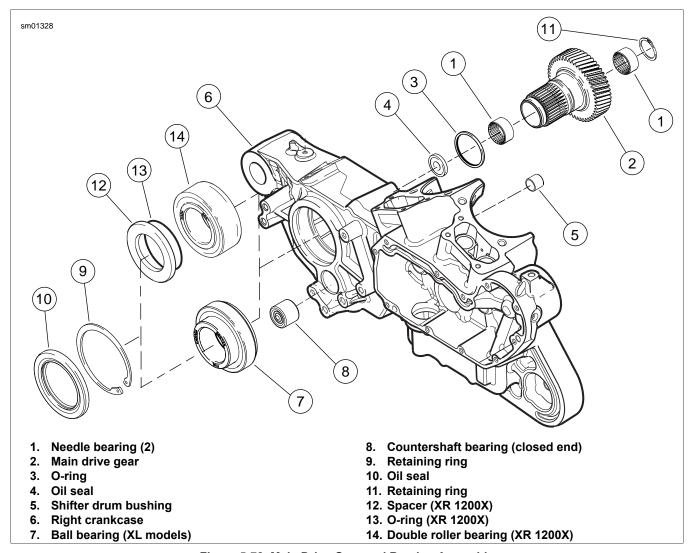


Figure 5-78. Main Drive Gear and Bearing Assembly

- See Figure 5-79. Insert 8 INCH BOLT (Part No. HD-35316-4A) (1) through WASHER (Part No. HD-35316-7) (2) and main drive gear (3). From inside of case insert bolt with washer and main drive gear through inner race of main drive gear bearing.
- At outside of case, place INSTALLER CUP (Part No. HD-35316-12) (4), BEARING (5), FLAT WASHER (6) and NUT (7) over end of bolt. Tighten nut until main drive gear bottoms against main drive gear bearing.
- 5. Remove MAIN DRIVE GEAR REMOVER AND INSTALLER SET (Part No. HD-35316-C) set.
- See <u>Figure 5-78</u>. Tap in **new** oil seal (4) at threaded end of main drive gear to a depth of 0.060-0.030 in (1.524-0.762 mm).

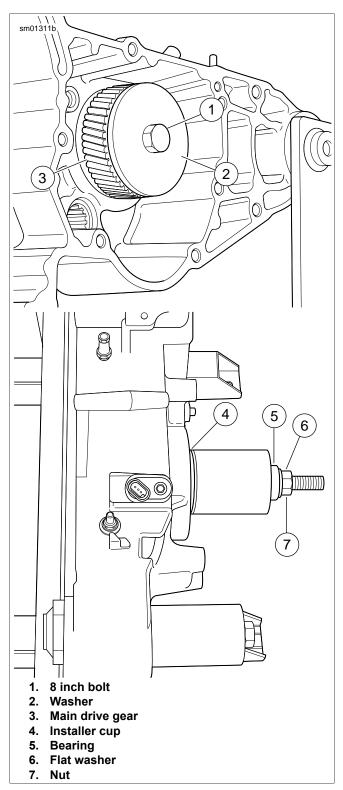


Figure 5-79. Installing Main Drive Gear (typical)

## **Main Drive Gear Seal**

- XR 1200X: See <u>Figure 5-78</u>. Install spacer (12) and new O-ring (13) onto main drive gear.
- 2. Obtain MAIN DRIVE GEAR SEAL INSTALLER KIT (Part No. HD-47856).

- 3. See <u>Figure 5-80</u>. From outside of crankcase, install PILOT (Part No. HD-47856-2) over end of main drive gear bearing inner race.
- Coat lips of new main drive gear seal with SCREAMIN' EAGLE ASSEMBLY LUBE.
- 5. See <u>Figure 5-81</u>. Place seal over pilot and position seal squarely in end of crankcase bore.

#### NOTE

ADAPTER (Part No. HD-47856-4) and main drive gear have left-hand threads.

See <u>Figure 5-82</u>. Thread ADAPTER (Part No. HD-47856-4) onto end of main drive gear several turns. Do NOT tighten on drive gear. Doing so could make it difficult to remove adapter after seal has been installed.

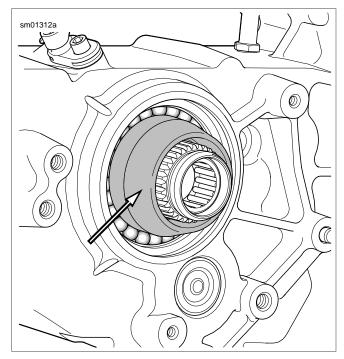


Figure 5-80. Install Pilot (typical)

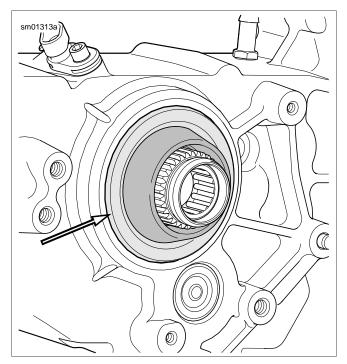


Figure 5-81. Install Main Drive Gear Seal (typical, XL model shown)

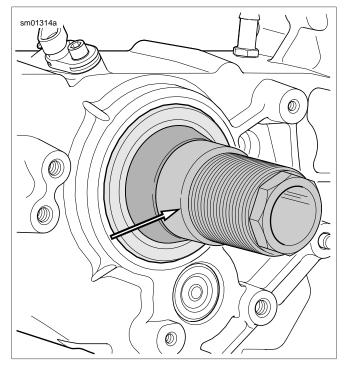


Figure 5-82. Install Adapter (typical, XL model shown)

- See <u>Figure 5-83</u>. Slide INSTALLER (Part No. HD-47856-1) over adapter until cupped end of installer is flat against seal.
- See <u>Figure 5-84</u>. Thread LARGE NUT (Part No. HD-47856-5) onto end of adapter, until it tightens against installer.

- 9. See <u>Figure 5-85</u>. Place crow's foot wrench (1) with 1/2 inch drive breaker bar (2) on large nut. Place an adjustable wrench (3) on flats of hex head cast into end of adapter.
- Holding adjustable wrench, tighten large nut with crow's foot wrench until outer face of seal is flush with outer edge of crankcase bore.

#### NOTE

It is acceptable to recess seal to about 0.030 in (0.762 mm) below outer edge of bore. Seal will be controlled by tool.

11. Remove nut, installer, adapter and pilot.

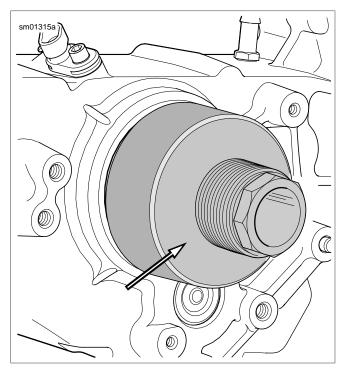


Figure 5-83. Place Installer over Adapter (typical, XL model shown)

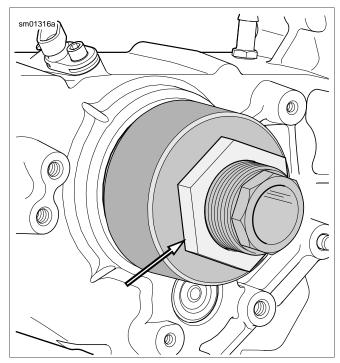


Figure 5-84. Install Nut (typical, XL model shown)

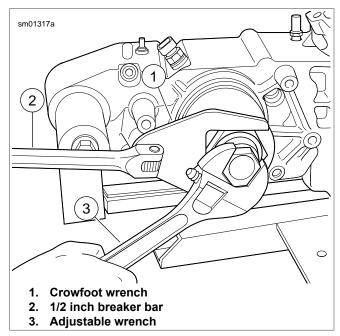


Figure 5-85. Press Seal Into Crankcase (typical, XL model shown)

## TRANSMISSION RIGHT CASE BEARINGS

#### REMOVAL

PART NUMBER	TOOL NAME
HD-95760-69A	BUSHING AND BEARING PULLER
HD-95765-69A	1/2 INCH COLLET

Split crankcases. See  $\underline{5.8}$  CASE DISASSEMBLY FOR TRANSMISSION REMOVAL.

## **Countershaft Needle Bearing**

See <u>Figure 5-86</u>. From inside transmission case use a bearing driver to remove countershaft bearing (1) from crankcase bore.

## **Shifter Drum Bushing**

- See <u>Figure 5-86</u>. The shifter drum bushing (2) is a press fit in the right crankcase half. Inspect the bushing against the corresponding end of the shifter drum for proper fit and wear.
- 2. If bushing is to be replaced, use BUSHING AND BEARING PULLER (Part No. HD-95760-69A) with 1/2 INCH COLLET (Part No. HD-95765-69A) to remove bushing from crankcase bore.

## **INSTALLATION**

PART NUMBER	TOOL NAME
A-157C	SNAP-ON BUSHING DRIVER SET

## **Countershaft Needle Bearing**

- 1. Find a bearing driver 1-1/4 inch in diameter.
- 2. See <u>Figure 5-86</u>. Position the open end of the countershaft bearing (1) toward the bore in the outside of the case.
- 3. Square the driver against the closed end of the bearing.

- Drive the bearing flush or no more than 0.030 in (0.762 mm) below the outside surface.
- 5. Lubricate with SCREAMIN' EAGLE ASSEMBLY LUBE.

## Shifter Drum Bushing

- 1. See Figure 5-86. Using SNAP-ON BUSHING DRIVER SET (Part No. A-157C) and the 1/2 inch adapter (Part No. A157-8), install a **new** shifter drum bushing (2).
- 2. Lubricate with SCREAMIN' EAGLE ASSEMBLY LUBE.

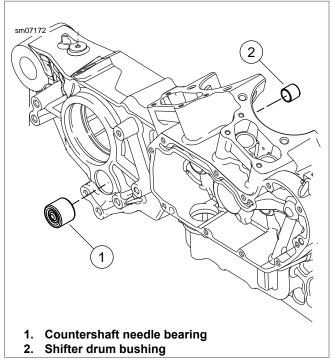


Figure 5-86. Transmission Right Case Bearings

#### **REMOVAL**

PART NUMBER	TOOL NAME	
PR-36	SNAP-ON SNAP RING PLIERS	

## **Mainshaft and Countershaft Bearings**

- Split crankcases. See <u>5.8 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL</u>.
- Disassemble transmission. See <u>5.9 TRANSMISSION</u> REMOVAL AND DISASSEMBLY.
  - a. Remove shifter forks and drum.
  - b. Remove countershaft and mainshaft.
- 3. Inspect the mainshaft and countershaft ball bearings for pitting, scoring, discoloration or other damage.
- See <u>Figure 5-88</u>. If bearing replacement is required, remove retaining rings (1, 2) using SNAP-ON SNAP RING PLIERS (Part No. PR-36).
- 5. Press out bearings (3, 4) from the inside of the crankcase.

## **Shifter Drum Bushing**

- Inspect the shifter drum bushing for pitting, scoring, discoloration or excessive wear.
- 2. If bushing requires replacement, press bushing out of crankcase from primary side toward inside of case.


## **INSTALLATION**

## **Mainshaft and Countershaft Bearings**

- Place crankcase on press with inside surface of crankcase downward.
- Lay bearing squarely over bore with printed side of bearing upward.
- 3. Place a driver (slightly smaller than outside diameter of bearing) against outer race.
- 4. Press bearing into bore until bearing bottoms against shoulder.
- 5. Install **new** retaining ring with beveled side facing away from bearing.

## **Shift Drum Bushing**

- Place crankcase on press with outside surface of crankcase downward.
- See <u>Figure 5-87</u>. Lay bushing squarely over bore. Using a pressing tool larger than OD of bushing, press bushing into bore until tool contacts crankcase.

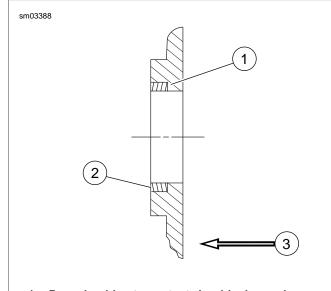

- Press bushing to contact shoulder in crankcase half
- 2. Shifter drum bushing.
- 3. Outside crankcase

Figure 5-87. Shifter Drum Bushing Assembly

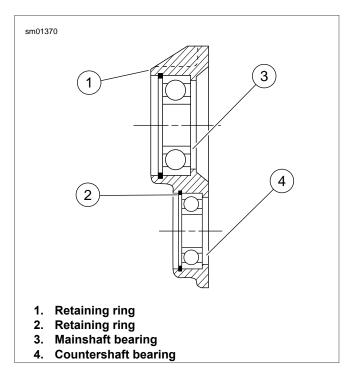


Figure 5-88. Ball Bearing Assembly

## TRANSMISSION INSTALLATION

## **GENERAL**

Before reinstalling transmission and reassembling crankcase halves, perform any necessary engine overhaul procedures. See 3.9 BOTTOM END SERVICE and 3.8 TOP END SERVICE.

## **INSTALLATION**

PART NUMBER	TOOL NAME
B-43985	TRANSMISSION REMOVAL AND INSTALLATION TOOL
B-43985-3	INSTALLER
B-43985-4	GUIDE
HD-46285-2	CASE HOLDING FIXTURE

FASTENER	TORQUE VALUE		
Gear detent assembly screw	90-110 <b>in-lbs</b>	10.2-12.4 Nm	

- See <u>Figure 5-89</u>. Assemble detent spring (3) onto gear detent assembly (2).
- Install detent assembly with spring into place in transmission cavity of right crankcase.
- Secure with screw (1). Tighten to 90-110 in-lbs (10.2-12.4 Nm).

#### NOTE

Use the TRANSMISSION REMOVAL AND INSTALLATION TOOL (Part No. B-43985) to install the countershaft.

- See <u>Figure 5-90</u>. Place transmission assembly (2) onto CASE HOLDING FIXTURE (Part No. HD-46285-2) (3) on press bed. Use support block(s) (4) if necessary.
- Screw the GUIDE (Part No. B-43985-4) (1) into end of countershaft.

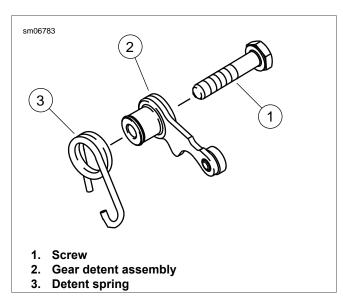


Figure 5-89. Gear Detent Assembly

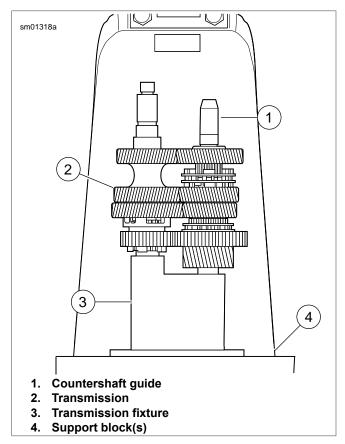


Figure 5-90. Transmission on Fixture

- See <u>Figure 5-91</u>. Install left crankcase (3) over transmission assembly (4).
- Place the INSTALLER (Part No. B-43985-3) (2) over mainshaft and countershaft bearings in crankcase.
- 8. Position crankcase and transmission assemblies on press with installer under press ram (1).

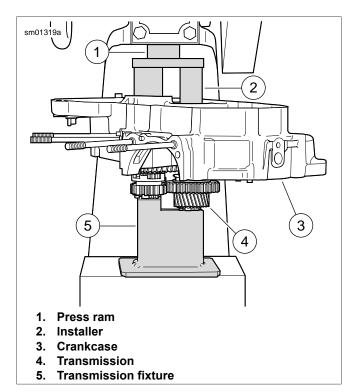


Figure 5-91. Pressing Transmission into Left Crankcase

#### NOTE

Verify that the crankcase does not tilt when pressed onto transmission assembly. Place press ram on the installer closer to mainshaft to keep the crankcase level.

- Press crankcase onto transmission assembly until shafts bottom out on bearings.
- Remove left crankcase with transmission assembly from press.

#### NOTE

When removing assembly from fixture, prevent 1st gear from falling off shaft. Gear can be damaged if it strikes a hard surface.

## SHIFTER FORKS AND DRUM ASSEMBLY

#### **NOTES**

- See <u>Figure 5-92</u>. Each shifter fork develops a wear pattern with its mating parts. Install each shifter fork in its original location.
- Lubricate the shaft bore in each shifter fork with SCREAMIN' EAGLE ASSEMBLY LUBE before assembly.
- Place 2nd/3rd gear shifter fork onto dog ring between countershaft 2nd and 3rd gears.
- Install shifter drum into left case half with scribed line at 12 o'clock. This will place shifter drum in neutral position.

## NOTE


See <u>Figure 5-93</u>. Install shifter fork shafts in the left case half by lightly tapping on the end of the shaft with a brass or hard plastic hammer until shaft is seated in bore.

Place 1st gear shifter fork onto dog ring between countershaft 1st and 4th gear gears. Install shifter fork shaft

- through two installed shifter forks and into left crankcase
- Install 4th/5th gear shifter fork onto sliding gear with dogs located on mainshaft. Install remaining shifter fork shaft through last installed shifter fork and into left crankcase half

#### NOTE

Seat shifter fork shafts in left crankcase half bore using light taps with a brass hammer.

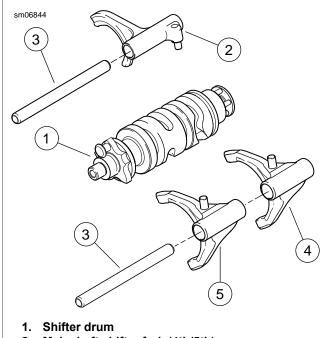

- 2. Mainshaft shifter fork (4th/5th)
- 3. Shifter fork shaft
- 4. Countershaft shifter fork (1st)
- 5. Coutnershaft shifter fork (2nd/3rd)

Figure 5-92. Shifter Forks, Drum and Shafts

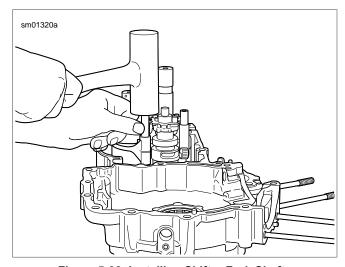


Figure 5-93. Installing Shifter Fork Shafts

## **ASSEMBLING CRANKCASES**

PART NUMBER	TOOL NAME		
B-45520	GEAR DETENT ASSEMBLY AID		
HD-42326-A	CRANKSHAFT GUIDE TOOL		

FASTENER	TORQUE VALUE	
Crankcase fastener	15-19 ft-lbs	20.3-25.8 Nm
Neutral indicator switch	120-180 <b>in-lbs</b>	13.6-20.3 Nm

- See <u>Figure 5-94</u>. Retract detent assembly in right case half and thread GEAR DETENT ASSEMBLY AID (Part No. B-45520) into neutral switch hole until it has bottomed in right case half.
- See <u>Figure 5-95</u>. Install flywheel assembly into right crankcase half.

## **A**CAUTION

Do not rotate right crankcase half in engine stand such that flywheel sprocket shaft is facing down. The flywheel assembly can fall out, resulting in parts damage or moderate injury. (00553b)

#### NOTE

Always place transmission in 1st gear when assembling crankcases. Other gear selections could cause damage.

- 3. Place transmission in 1st gear.
- 4. See Figure 5-96. Assemble crankcase halves together.
  - a. Slide CRANKSHAFT GUIDE TOOL (Part No. HD-42326-A) onto flywheel sprocket shaft.
  - b. Apply a thin coat of HARLEY-DAVIDSON GRAY HIGH-PERFORMANCE SEALANT GRAY to crankcase joint faces.
  - c. Lubricate main drive gear inner bearings with SCREAMIN' EAGLE ASSEMBLY LUBE.
  - d. Carefully fit crankcases together.
  - e. Apply several drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to last few threads of crankcase fasteners.
  - f. Install 11 long and four short from the left side and two long from the right side.
  - g. See <u>Figure 5-97</u>. In sequence, tighten to 15-19 ft-lbs (20.3-25.8 Nm).
- Remove GEAR DETENT ASSEMBLY AID and install neutral indicator switch and flat washer. Tighten to 120-180 in-lbs (13.6-20.3 Nm).

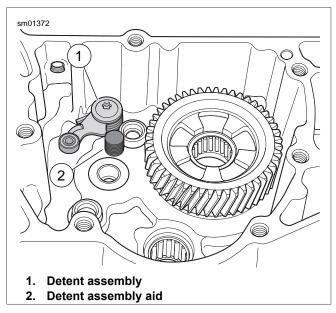


Figure 5-94. Using Gear Detent Assembly Aid (Part No. B-45520)

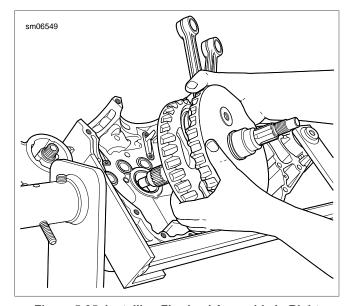


Figure 5-95. Installing Flywheel Assembly In Right Crankcase

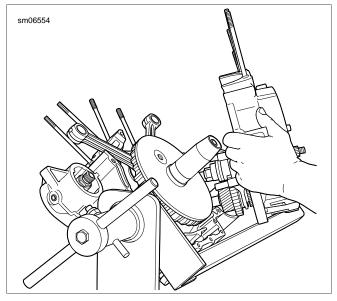


Figure 5-96. Assembling Crankcases With Crankshaft Guide Tool (Part No. HD-42326-A)

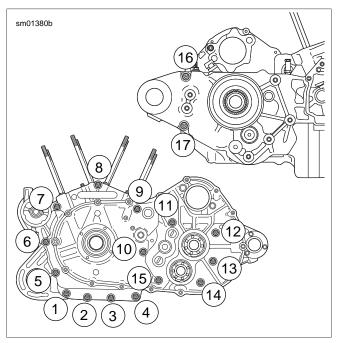


Figure 5-97. Crankcase Fastener Torque Sequence

## SHIFTER SHAFT INSTALLATION

FASTENER	TORQUE VALUE		
Countershaft retaining screw	33-37 ft-lbs	44.8-50.2 Nm	

 See <u>Figure 5-98</u>. Correctly install shifter return spring onto the reverse side of the shifter shaft assembly before placing shaft in left crankcase half.

## NOTE

See <u>Figure 5-100</u>. Verify shifter shaft return spring assembly and installation. Incorrect spring installation could cause problems with shifting.

- See Figure 5-100. Press the ratchet arms and insert shaft
  assembly into the bushing in the left case half and release.
  Ratchet arms should now be inside the end plate of the
  shifter drum contacting the shifter drum pins.
- See <u>Figure 5-101</u>. Apply several drops of LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to last few threads of countershaft retaining screw. Thread screw into end of shaft.
- 4. Place transmission in gear and tighten screw to 33-37 ft-lbs (44.8-50.2 Nm).
- Install transmission sprocket. See <u>5.15 TRANSMISSION</u> SPROCKET.
- Continue assembling engine. See <u>3.22 BOTTOM END</u> <u>OVERHAUL: ASSEMBLY</u> and <u>3.16 TOP END OVER-HAUL: ASSEMBLY</u>.
- 7. Install primary chain and engine sprocket, clutch assembly, and primary cover. See <u>5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS</u> or <u>5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X.</u>
- 8. Install engine in chassis. See <u>3.11 INSTALLING ENGINE</u> IN CHASSIS.

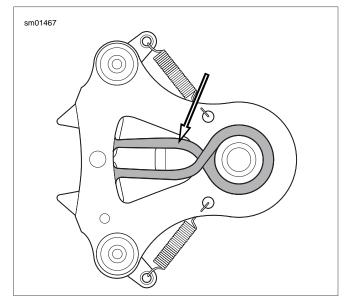


Figure 5-98. Shifter Shaft Return Spring (Correctly Installed)

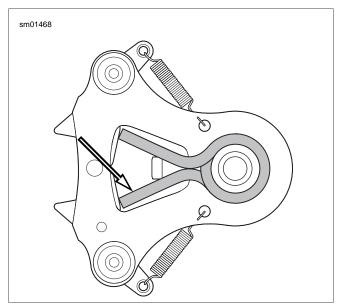


Figure 5-99. Shifter Shaft Return Spring (Incorrectly Installed)

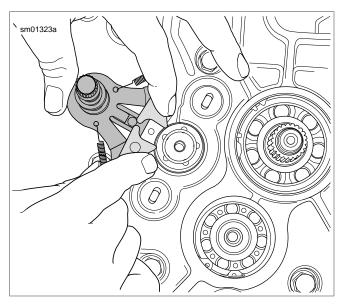


Figure 5-100. Installing Shifter Shaft Assembly

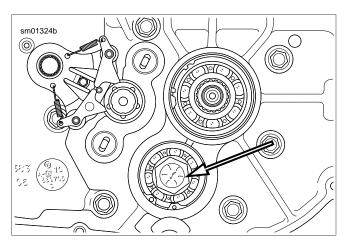


Figure 5-101. Countershaft Retaining Screw

## TRANSMISSION SPROCKET

#### REMOVAL

PART NUMBER	TOOL NAME
HD-42310-45	ENGINE CRADLE
HD-46282-1A	FINAL DRIVE SPROCKET HOLDING TOOL REACTION ADAPTER
HD-46282-A	FINAL DRIVE SPROCKET HOLDING TOOL
HD-46288	MAINSHAFT LOCKNUT WRENCH

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

## **Preparation**


- 1. Remove main fuse.
- 2. Shift transmission into neutral.

## **XL Models**

- 1. Remove rear muffler and rear exhaust pipe. See 4.13 EXHAUST SYSTEM: XL MODELS.
- See <u>Figure 5-102</u>. Remove screw (6), washer (5) and exhaust pipe clamp bracket (4). Remove two screws (2, 3) and remove sprocket cover (1).
- 3. Remove belt guard. See <u>2.22 BELT GUARD AND DEBRIS</u> DEFLECTOR.
- Remove rear drive belt from transmission sprocket. Pull belt back out of the way. Do not bend belt too tightly or twist belt. See 5.6 DRIVE BELT.
- See <u>Figure 5-103</u>. Remove screw and washer (6) from exhaust interconnect bracket.

#### XR 1200X

- Remove exhaust system. See <u>4.14 EXHAUST SYSTEM:</u> XR 1200X.
- 2. Remove three screws securing sprocket cover to engine crankcase. Remove sprocket cover.
- Remove belt guard. See <u>2.22 BELT GUARD AND DEBRIS</u> DEFLECTOR.
- 4. Remove the rear brake master cylinder assembly:
  - Remove two screws securing rear brake master cylinder assembly, rider footrest and mounting bracket to vehicle's frame.
  - b. Carefully pull assembly back out of the way. Secure to frame with cable strap or bungee cord.
  - c. Do not kink or bend metal portion of brake line.
- Remove rear drive belt from transmission sprocket. Pull belt back out of the way. Do not bend belt too tightly or twist belt. See <u>5.6 DRIVE BELT</u>.

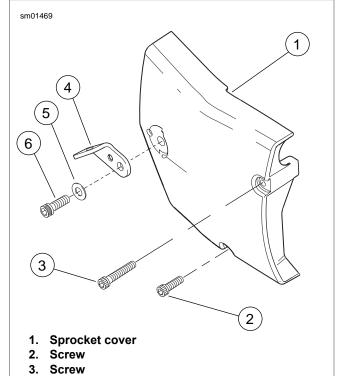

- 4. Exhaust pipe clamp bracket
- 5. Washer
- 6. Screw

Figure 5-102. Sprocket Cover: XL Models

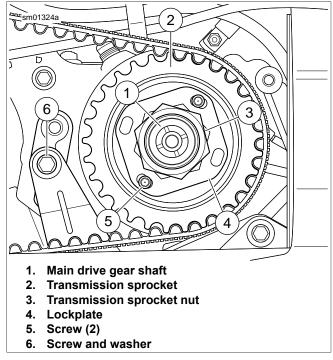


Figure 5-103. Transmission Sprocket Assembly: All Models

#### All Models

1. See <u>Figure 5-103</u>. Remove two screws (5) and sprocket lockplate (4).

#### NOTES

- See <u>Figure 5-105</u>. On XR 1200X and XL models without passenger footrests, install FINAL DRIVE SPROCKET HOLDING TOOL REACTION ADAPTER (Part No. HD-46282-1A) into bottom footrest bracket hole in frame. Place handle of tool underneath adapter.
- If the engine is mounted in the ENGINE CRADLE (Part No. HD-42310-45), the rear crankcase support serves as a tool stop for the sprocket holding tool.
- See Figure 5-104. Install the FINAL DRIVE SPROCKET HOLDING TOOL (Part No. HD-46282-A) (1). Hold the sprocket nut with MAINSHAFT LOCKNUT WRENCH (Part No. HD-46288) (2). Use a breaker bar (3) to loosen the nut. Place handle of sprocket holding tool under bottom of footrest bracket. Turn nut clockwise to remove it.

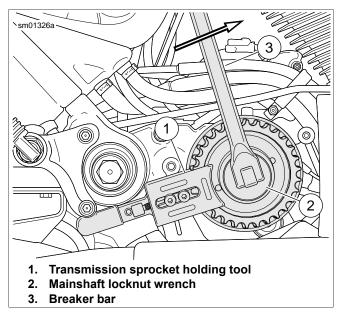


Figure 5-104. Removing Transmission Locknut

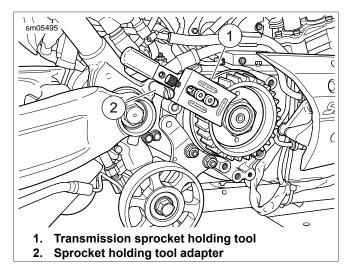


Figure 5-105. Sprocket Holding Tool and Adapter (installation XR 1200X)

#### INSTALLATION

PART NUMBER	TOOL NAME
HD-46282	TRANSMISSION SPROCKET HOLDING TOOL
HD-46282-1A	SPROCKET HOLDING TOOL ADAPTER
HD-46288	MAINSHAFT LOCKNUT WRENCH

FASTENER	TORQUE VALUE		
Transmission sprocket nut	50 ft-lbs	68 Nm	
Transmission sprocket lock- plate fastener	90-120 in-lbs	10.3-13.6 Nm	
Muffler interconnect bracket mounting screw: XR 1200X	30-33 ft-lbs	40.7-44.8 Nm	
Exhaust pipe clamp bracket fastener: XR 1200X	30-33 ft-lbs	40.7-44.8 Nm	
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	
Sprocket cover, forward and lower screws	80-120 in-lbs	9.0-13.6 Nm	

## **Preparation**

 See <u>Figure 5-103</u>. Install transmission sprocket (2) onto main drive gear shaft (1).

#### NOTE

See <u>Figure 5-105</u>. On XR 1200X and XL models without passenger footrests, screw SPROCKET HOLDING TOOL ADAPTER (Part No. HD-46282-1A) into top footrest bracket hole in frame. Place handle of tool on top of adapter.

- Shift transmission into neutral. Apply LOCTITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to the left-hand threads of transmission sprocket nut (3). Apply a thin film of SCREAMIN' EAGLE ASSEMBLY LUBE to the back face of the sprocket nut. Turn the nut counterclockwise to install it onto main drive gear shaft.
  - a. See Figure 5-106. Use TRANSMISSION SPROCKET HOLDING TOOL (Part No. HD-46282) (1), MAIN-SHAFT LOCKNUT WRENCH (Part No. HD-46288) (2), and a torque wrench (3). Place handle of sprocket holding tool on top of footrest bracket. Tighten nut to 50 ft-lbs (68 Nm) initial torque, ONLY.
  - See <u>Figure 5-107</u>. Scribe a line on the transmission sprocket nut and continue the line on the transmission sprocket as shown.
  - Tighten the transmission sprocket nut an additional 30-40 degrees.

#### NOTE

The lockplate has can be turned to either side to align the screw holes. If the screw holes cannot be properly aligned,

tighten the nut slightly until the holes align. Do not exceed 45 degrees. Never LOOSEN nut to align the screw holes.

d. See <u>Figure 5-103</u>. Install lockplate (4) over nut (3) so that two of lockplate's four drilled holes (diagonally opposite) align with sprocket's (2) two tapped holes.

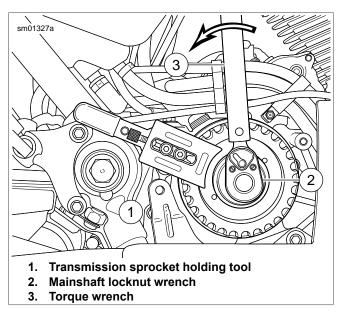


Figure 5-106. Tightening Transmission Locknut: All Models

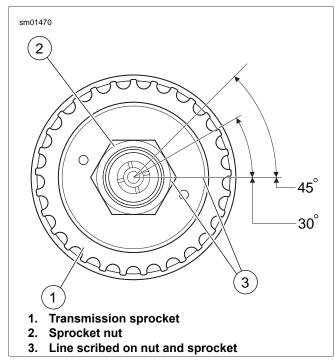


Figure 5-107. Transmission Sprocket Nut Final Tightening Procedure

#### NOTE

Always install BOTH screws to secure the lockplate.

- 3. Install socket head screws (5) through two of the four holes in lockplate, then into two corresponding tapped holes in sprocket. Tighten to 90-120 **in-lbs** (10.3-13.6 Nm).
- 4. XR 1200X and XL Models without Passenger Footrests: Remove SPROCKET HOLDING TOOL ADAPTER (Part No. HD-46282-1A).

#### **XL 1200X**

- 1. See <u>Figure 5-103</u>. Install screw and washer (6) to secure muffler interconnect bracket to engine crankcase. Tighten to 30-33 ft-lbs (40.7-44.8 Nm).
- Install rear drive belt onto transmission sprocket. See 5.6 DRIVE BELT.
- Adjust rear belt deflection and rear wheel alignment. See 1.24 WHEEL ALIGNMENT.
- 4. Install belt guard. See <u>2.22 BELT GUARD AND DEBRIS</u> DEFLECTOR.
- See <u>Figure 5-102</u>. Install sprocket cover (1). Secure with two screws (2, 3). Note that long screw goes in top hole, short screw in bottom hole. Do not tighten screws at this time.
- 6. Install exhaust pipe clamp bracket (4), washer (5) and screw (6). Tighten to 30-33 ft-lbs (40.7-44.8 Nm). Now tighten screws (2, 3) to 80-120 **in-lbs** (9.0-13.6 Nm).
- 7. Install rear exhaust pipe and rear muffler. See 4.13 EXHAUST SYSTEM: XL MODELS.

#### XR 1200X

- Install rear drive belt onto transmission sprocket. See 5.6 DRIVE BELT.
- Adjust rear belt deflection and rear wheel alignment. See 1.24 WHEEL ALIGNMENT.
- 3. Attach rear brake master cylinder, rider footrest and mounting bracket assembly to frame with two screws. Tighten to 45-50 ft-lbs (61-68 Nm).
- 4. Install belt guard. See <u>2.22 BELT GUARD AND DEBRIS</u> DEFLECTOR.
- 5. Install sprocket cover.
  - a. Install longer screw in top hole.
  - b. Install shorter one in bottom hole.
  - c. Install larger diameter fastener in rear hole.
  - d. Tighten rear (larger dia.) fastener to 30-33 ft-lbs (40.7-44.8 Nm).
  - e. Tighten forward and lower (smaller) screws to 80-120 in-lbs (9.0-13.6 Nm).
- Install exhaust system. See <u>4.14 EXHAUST SYSTEM: XR</u> 1200X.

## **All Models**

Install main fuse.

## TABLE OF CONTENTS

SUBJECT	PAGE NO.
6.1 FASTENER TORQUE VALUES	6-1
6.2 SPECIFICATIONS: ELECTRICAL	6-5
6.3 FUSES AND RELAYS	6-6
6.4 SPEEDOMETER: XL MODELS	6-8
6.5 SPEEDOMETER AND TACHOMETER: XR 1200X	6-10
6.6 ELECTRONIC CONTROL MODULE (ECM)	
6.7 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)	6-14
6.8 BATTERY CABLES	6-15
6.9 BATTERY TRAY	6-17
6.10 STARTER	6-19
6.11 IGNITION SWITCH	6-23
6.12 SPARK PLUG CABLES	6-24
6.13 IGNITION COIL	6-27
6.14 HEADLAMP	
6.15 INDICATOR LAMP MODULE	
6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V	
6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V	
6.18 FRONT TURN SIGNALS	6-45
6.19 REAR TURN SIGNALS	
6.20 REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM)	6-55
6.21 REAR STOP LAMP SWITCH	
6.22 CRANK POSITION SENSOR (CKP)	6-59
6.23 VOLTAGE REGULATOR	6-60
6.24 ALTERNATOR	
6.25 VEHICLE SPEED SENSOR (VSS)	
6.26 NEUTRAL INDICATOR SWITCH	
6.27 MAIN WIRING HARNESS	
6.28 ELECTRICAL CADDIES	
6.29 JIFFY STAND SENSOR (JSS): INTERNATIONAL MODELS	6-80
6.30 SECURITY SYSTEM/OPTIONAL SIREN	
6.31 OIL PRESSURE SWITCH	
6.32 HORN	
6.33 HANDLEBAR SWITCH ASSEMBLIES	
6.34 RIGHT HANDLEBAR SWITCHES	
6.35 LEFT HANDLEBAR SWITCHES	
6.36 PERSONAL IDENTIFICATION NUMBER (PIN)	
6.37 H-DSSS ACTUATION	
6.38 TSM/HFSM: PASSWORD LEARN	6-104

## **FASTENER TORQUE VALUES**

# FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE	E VALUE	NOTES
Alternator rotor to sprocket screw	120-140 <b>in-lbs</b>	13.6-15.8 Nm	6.24 ALTERNATOR, Assembly and Installation
Alternator stator mounting screw	30-40 in-lbs	3.4-4.5 Nm	6.24 ALTERNATOR, Assembly and Installation
Battery negative cable to crankcase nut	55-75 <b>in-lbs</b>	6.2-8.5 Nm	6.8 BATTERY CABLES, Installation
Battery negative terminal screw	60-70 in-lbs	6.8-7.9 Nm	6.8 BATTERY CABLES, Installation
Battery positive cable to starter post locknut	60-85 <b>in-lbs</b>	6.8-9.6 Nm	6.8 BATTERY CABLES, Installation
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	6.8 BATTERY CABLES, Installation
Battery strap screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.8 BATTERY CABLES, Installation
Battery tray mounting fasteners	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.9 BATTERY TRAY, Installation
Brake hose clamp to battery tray screw	30-40 in-lbs	3.4-4.5 Nm	6.9 BATTERY TRAY, Installation
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	6.21 REAR STOP LAMP SWITCH, Replacement
CKP screw	90-120 in-lbs	10.3-13.6 Nm	6.22 CRANK POSITION SENSOR (CKP), Installation
Clutch cable guide: XL 1200C/C ANV/CP/CA/CB	45-65 <b>in-lbs</b>	4.0-7.3 Nm	6.14 HEADLAMP, Headlamp Mounts
Coil mounting bracket screw	35-45 in-lbs	4.0-5.1 Nm	6.13 IGNITION COIL, Installation
Coil mounting screw	24-72 in-lbs	2.7-8.1 Nm	6.13 IGNITION COIL, Installation
Coil mounting screw	24-72 in-lbs	2.7-8.1 Nm	6.13 IGNITION COIL, Installation
Converter module bracket fasteners, rear lighting	36-60 in-lbs	4.1-6.8 Nm	6.20 REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM), Installation
ECM caddy fastener	72-96 in-lbs	8.1-10.8 Nm	6.9 BATTERY TRAY, Installation
ECM caddy fastener	72-96 in-lbs	8.1-10.8 Nm	6.20 REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM), Installation
ECM caddy fastener	72-96 in-lbs	8.1-10.8 Nm	6.27 MAIN WIRING HARNESS, Installation
ECM cover fastener: XL Models	30-60 in-lbs	3.4-6.8 Nm	6.6 ELECTRONIC CONTROL MODULE (ECM), Installation
ECM fasteners: XR 1200X	18-22 <b>in-lbs</b>	2.0-2.5 Nm	6.6 ELECTRONIC CONTROL MODULE (ECM), Installation
Fender brace, rear, screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Fender support, rear, screw: XL 883N	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Fork bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	6.18 FRONT TURN SIGNALS, XL 1200X
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 883R/L/N, XL 1200X/V, XL 1200CP/CB with Mini-Ape Handlebar/XL883N - Tighten rear first, front second.
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 883R/L/N, XL 1200X/V, XL 1200CP/CB with Mini-Ape Handlebar/Tighten rear first, front second: XL883N.

2013 Sportster Service: Electrical 6-1

FASTENER	TORQUE	VALUE	NOTES
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XR 1200X
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	6.34 RIGHT HANDLEBAR SWITCHES, Installation
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	6.35 LEFT HANDLEBAR SWITCHES, Installation
Handlebar riser clamp screw	12-18 ft-lbs	16.3 -24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 1200C/C ANV/CP/CA except with Mini-Ape Handlebar/XL1200C
Handlebar riser clamp screw	12-18 ft-lbs	16.3 -24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 1200C/C ANV/CP/CA except with Mini-Ape Handlebar/XL1200C
Handlebar riser cover screw	8-12 <b>in-lbs</b>	0.9-1.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 1200C/C ANV/CP/CA except with Mini-Ape Handlebar/XL1200C
Headlamp assembly: XL 1200X	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp assembly: XL 1200X	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp clamp nut: XL 883L/N/R, XR 1200X	120-240 <b>in-lbs</b>	14-27 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp mount: XL 1200V/C/CP/CA/CB	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp mount: XL 1200X	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp upper bracket fasteners: XL 883L/R/N, XR 1200X	120-192 <b>in-lbs</b>	14-22 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp visor: XL 1200C/C ANV/CP/CA/CB	120-192 <b>in-lbs</b>	14-22 Nm	6.14 HEADLAMP, Headlamp Mounts
Horn, side mounted, acorn nut	60-180 in-lbs	6.8-20.4 Nm	6.32 HORN, Replacement: Side Mount
Horn, side mounted, stud nut	80-100 in-lbs	9.0-11.3 Nm	6.32 HORN, Replacement: Side Mount
Horn mounting screw	36-48 in-lbs	4.1-5.4 Nm	6.32 HORN, Replacement: Front Mount
Ignition switch bracket screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.28 ELECTRICAL CADDIES, Wire Harness Caddy: XL Models
Ignition switch mounting screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.11 IGNITION SWITCH, Installation
Ignition switch mounting screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.28 ELECTRICAL CADDIES, Wire Harness Caddy: XR 1200X
JSS screw	96-120 <b>in-lbs</b>	10.9-13.6 Nm	6.29 JIFFY STAND SENSOR (JSS): INTERNA- TIONAL MODELS, Installation
License plate lamp housing screw: XL 883N	14-16 <b>in-lbs</b>	1.2-1.3 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Neutral indicator switch	120-180 <b>in-lbs</b>	13.6-20.3 Nm	6.26 NEUTRAL INDICATOR SWITCH, Replacement
Oil pressure switch	50-70 <b>in-lbs</b>	5.6-7.9 Nm	6.31 OIL PRESSURE SWITCH, Installation
Oil pressure switch adapter: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	6.31 OIL PRESSURE SWITCH, Installation
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: Domestic Only
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Solenoid contact post jamnut	65-80 in-lbs	7.3-9.0 Nm	6.10 STARTER, Solenoid
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm	6.5 SPEEDOMETER AND TACHOMETER: XR 1200X, Speedometer Installation
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm	6.5 SPEEDOMETER AND TACHOMETER: XR 1200X, Trip Odometer Reset Switch Replace- ment/XL 1200X

FASTENER	TORQUE VALUE		NOTES	
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm	6.5 SPEEDOMETER AND TACHOMETER: XR 1200X, Tachometer Installation/XL 1200X	
Speedometer backplate fasteners: XL models	8-12 <b>in-lbs</b>	0.9-1.4 Nm	6.4 SPEEDOMETER: XL MODELS, Installation	
Starter motor oil line clamp fastener	16-21 <b>in-lbs</b>	1.8-2.4 Nm	6.10 STARTER, Installation	
Starter mounting bolt	13-20 ft-lbs	17.6-27.1 Nm	6.10 STARTER, Installation	
Starter positive terminal nut	60-85 in-lbs	6.8-9.6 Nm	6.10 STARTER, Installation	
Starter ring terminal hex nut	60-80 in-lbs	6.8-9.0 Nm	6.10 STARTER, Solenoid	
Stator harness retainer screw	56 in-lbs	6.3 Nm	6.24 ALTERNATOR, Assembly and Installation/Screw must be flush with plate. Do not exceed torque specification.	
Stop lamp switch bracket screw	72-120 in-lbs	8.1-13.6 Nm	6.9 BATTERY TRAY, Installation	
Stop lamp switch to tee nut	132-168 in-lbs	14.9-18.9 Nm	6.21 REAR STOP LAMP SWITCH, Replacement	
Strut cover screw	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883R/L	
Strut cover screw	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883N and XL 1200X/V	
Switch housing screw	35-45 in-lbs	4.0-5.1 Nm	6.34 RIGHT HANDLEBAR SWITCHES, Installation	
Switch housing screw	35-45 in-lbs	4.0-5.1 Nm	6.35 LEFT HANDLEBAR SWITCHES, Installation	
Tail lamp base mounting screw: XL Models	45-48 in-lbs	5.1-5.4 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X	
Tail lamp base mounting screw: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X	
Tail lamp LED base fasteners: XL 1200C/C ANV/CP/CA/CB	40-50 <b>in-lbs</b>	4.5-5.6 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB	
Tail lamp LED screws: XL 1200C/C ANV/CP/CA/CB	20-25 <b>in-lbs</b>	2.3-2.8 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB	
Tail lamp lens screw	20-24 in-lbs	2.3-2.7 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Bulb Replacement Except XL 1200C/C ANV/CP/CA/CB	
Tail lamp lens screw	20-24 in-lbs	2.3-2.7 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X	
Turn signal, front, ball head studs	96-144 in-lbs	10.8-16.3 Nm	6.18 FRONT TURN SIGNALS, All Except XL 1200X	
Turn signal clamp, front, screw	96-120 in-lbs	10.8-13.6 Nm	6.18 FRONT TURN SIGNALS, All Except XL 1200X	
Turn signal housing, rear, screws: XR 1200X	30-40 in-lbs	3.4-4.5 Nm	6.19 REAR TURN SIGNALS, XR 1200X	
Turn signal housing to bracket: XL 1200X	12-16 ft-lbs	16.3-21.7 Nm	6.18 FRONT TURN SIGNALS, XL 1200X	
Turn signal housing to mount, rear, fastener	96-156 in-lbs	10.9-17.6 Nm	6.19 REAR TURN SIGNALS, XL 883R/L	
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.19 REAR TURN SIGNALS, XL 883N and XL 1200X/V	
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.19 REAR TURN SIGNALS, XL 1200C/C ANV/CP/CA/CB	
Turn signal stalk nut	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883R/L	
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883N and XL 1200X/V	

2013 Sportster Service: Electrical 6-3

# <u>HOME</u>

FASTENER	TORQUI	VALUE	NOTES	
Turn signal stalk nut	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 1200C/C ANV/CP/CA/CB	
Turn signal stalk nut	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 1200C/C ANV/CP/CA/CB	
Voltage regulator mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.23 VOLTAGE REGULATOR, Installation: XL Models	
Voltage regulator mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.23 VOLTAGE REGULATOR, Installation: XR 1200X	
VSS screw	90-120 in-lbs	10.2-13.6 Nm	6.25 VEHICLE SPEED SENSOR (VSS), Installation	

#### 6.2

# **SPECIFICATIONS: ELECTRICAL**

# **SPECIFICATIONS**

Table 6-1. Electrical: XL Models

COMPONENT	SPECIFICATION		
Ignition timing	Not adj	ustable	
Battery	12 V, 225 CCA, 12 Ah, sealed and maintenance free		
Charging system	Single-phase, 30 A system (357 W @ 13.5 V, 2000 rpm, 405 W max power @ 13.5 V)		
Spark plug type	6R12		
Spark plug size	12 mm		
Spark plug gap	0.038-0.043 in	0.97-1.09 mm	
Spark plug torque	12-18 ft-lbs 16.3-24.4 Nm		

Table 6-2. Electrical: XR 1200X

COMPONENT	SPECIFICATION		
Ignition timing	Not adj	ustable	
Battery	12 V, 225 CCA, 12 Ah, sealed and maintenance free		
Charging system	Single-phase, 30 A system (357 W @ 13.5 V, 2000 rpm, 405 W max power @ 13.5 V)		
Spark plug type	10R12X		
Spark plug size	12 mm		
Spark plug gap	0.032-0.038 in	0.81-0.97 mm	
Spark plug torque	12-18 ft-lbs	16.3-24.4 Nm	

Table 6-3. Ignition Coil Resistance

RESISTANCE	PRIMARY	SECONDARY
All Models	0.3-0.7 Ohm	1500-2400 Ohm

Table 6-4. Alternator

ITEM	SPECIFICATION
AC voltage output	20-28 VAC per 1000 engine rpm
Stator coil resistance	0.1-0.3 Ohm

Table 6-5. Voltage Regulator

ITEM	SPECIFICATION
Voltage output @ 75 °F	14.3-14.7 VDC
Current @ 3600 rpm	32 A

Table 6-6. Fuses

ITEM	AMP RATING
Main fuse	30
Battery	15
Ignition	15
Lights	15
Accessories	15
Electronic Control Module (ECM)	15

**Table 6-7. Starter Specifications** 

STARTER DATA		
Free speed	3000 rpm (min) @ 11.5 V	
Free current	90 A (max) @ 11.5 V	
Cranking current 200 A (max) @ 68 °F		
Stall torque	8.0 ft-lbs (10.8 Nm) @ 2.4 V	

**Table 6-8. Starter Service Wear Limits** 

ITEM	in	mm
Brush length (minimum)	0.443	11.0
Commutator runout	0.016	0.41
Commutator diameter (minimum)	1.141	28.98
Commutator mica depth (minimum)	0.008	0.203

# **FUSES AND RELAYS**

#### **GENERAL**

The starter relay allows a relatively small amount of current flowing through the starter button to control the large current flow required to activate the starter solenoid.

See Figure 6-3. The electrical system relay/fuse block is located in front of the battery under the left side cover. The relays and fuses are mounted in the relay/fuse block. All fuses are rated at 15 amperes.

#### **MAIN FUSE**

#### Removal

1. Open left side cover. See 2.18 LEFT SIDE COVER.

#### NOTE

**Models with Sirens:** Verify that fob is present and turn ignition key to IGNITION before removing main fuse or disconnecting battery.

- See Figure 6-1. Squeeze cover release latches (4) 2. together and pull fuse holder [5] (1) from protective cover
- See Figure 6-2. Grasp fuse holder (2) and pull main fuse (1) straight out.
- Close left side cover.

#### NOTE

Always close left side cover if performing other procedures. Failure to close cover will cause cosmetic damage.


#### Installation

- Open left side cover. See 2.18 LEFT SIDE COVER.
- 2. Verify ignition key is turned to OFF position.
- See Figure 6-1. Install main fuse (1) by lining up spade terminals on fuse with sockets in fuse holder [5] (2). Press fuse firmly into holder.
- See Figure 6-2. While holding protective cover (3) in place, push fuse holder [5] (1) into cover until cover release latches (4) snap into place.
- Close left side cover.

# **AWARNING**

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

Turn ignition switch ON. Verify proper operation of electrical system.

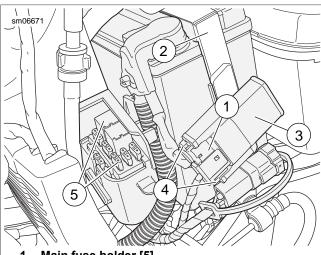

- Main fuse holder [5]
- **Battery strap**
- **Protective cover**
- Cover release catches
- Relay and fuse blocks

Figure 6-1. 30 A Main Fuse Location: All Models

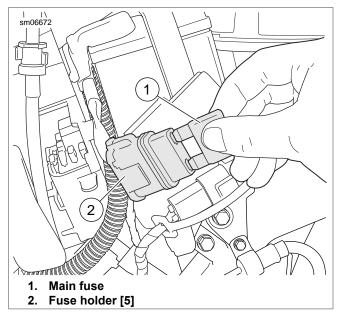


Figure 6-2. Removing/Installing Main Fuse

#### **FUSES**

- 1. Open left side cover. See 2.18 LEFT SIDE COVER.
- See <u>Figure 6-3</u>. Remove suspect fuse (3-7).
  - Inspect fuse for damage. Always discard damaged fuses.
  - Replace fuse by pressing firmly into socket.
- Close left side cover.

4. Turn ignition switch ON. Verify operation of electrical system.

#### **RELAYS**

1. Open left side cover. See 2.18 LEFT SIDE COVER.

#### **NOTICE**

Always use replacement fuses that are of the correct type and amperage rating. Use of incorrect fuses can result in damage to electrical systems. (00222a)

- 2. See <u>Figure 6-3</u>. To unplug old relay (1 or 2), grasp body of relay and with a gentle rocking motion, pull straight out from relay/fuse block.
- To install new relay, line up spade terminals of relay with sockets in relay/fuse block and push relay firmly into sockets.
- 4. Close left side cover.
- 5. Verify operation of lighting system.

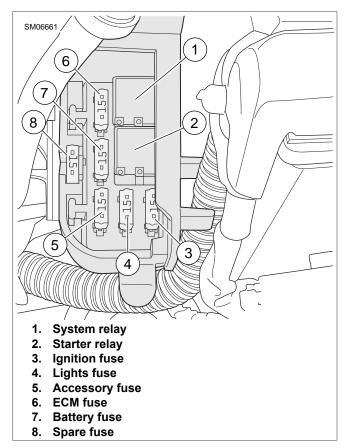


Figure 6-3. Relay/Fuse Block (typical)

# SPEEDOMETER: XL MODELS

#### REMOVAL

#### NOTE

The speedometer has backlight LEDs that cannot be replaced. If an LED fails, replace the entire unit.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- Remove reset switch boot from trip odometer reset switch on speedometer housing back plate.
- 3. Remove two screws and back plate.
- Unplug speedometer socket connector [39B] from back of speedometer.
- 5. Gently push out speedometer and front gasket.

#### NOTE

XL 1200X: This model does not have a back gasket.

 Inspect front and back gaskets, speedometer connector [39] and wiring, trip odometer reset switch and wiring and reset switch boot. Repair or replace as required.

#### **INSTALLATION**

PART NUMBER	TOOL NAME
HD-45929	CRIMPING TOOL

FASTENER	TORQUE VALUE	
Speedometer backplate fasteners: XL models	8-12 <b>in-lbs</b>	0.9-1.4 Nm

#### **Reset Switch**

- Push trip reset socket terminals out the front of the speedometer socket connector half [39B].
- Cut off socket terminals. Pull faulty switch wires out of connector.
- 3. Push wires of a replacement switch through speedometer connector (sockets 8, 11) and crimp **new** socket terminals using CRIMPING TOOL (Part No. HD-45929).
- 4. Draw terminal back into connector until terminal seats.

#### **Speedometer**

#### **NOTES**


- XL 883L/N/R and XL 1200V and XL 1200CP/CB Models with Mini Ape Handlebar: See <u>Figure 6-4</u>.
- XL 1200X: See <u>Figure 6-5</u>.
- XL 1200C/C ANV/CP/CA except XL 1200CP/CB Models with Mini Ape Handlebar: See <u>Figure 6-6</u>.
- Install front gasket on speedometer.

 Threading speedometer harness and connector [39B] through back gasket, install matching tabs of gasket to locating keys in instrument housing/bracket.

#### NOTE

If necessary, lubricate rubber gaskets with alcohol or glass cleaner.


- 3. Orient face upright. Press speedometer into instrument housing/bracket. Wiring must past between locating keys and gasket and through cutout in speedometer back.
- Plug speedometer socket connector [39] into back of speedometer.
- Push trip odometer reset switch through backplate. Thread on reset switch boot.
- Hold backplate in place with reset switch in rectangular boss in back of speedometer and vent hole at bottom. Install fasteners. Tighten to 8-12 in-lbs (0.9-1.4 Nm).
- 7. Install main fuse.

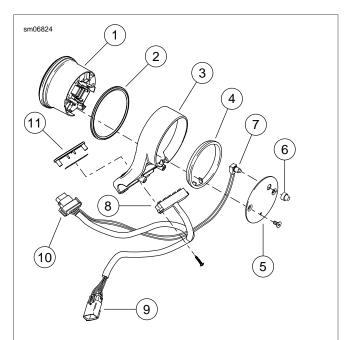

- 1. Speedometer
- 2. Front gasket
- 3. Instrument housing/bracket
- 4. Back gasket
- 5. Backplate
- 6. Reset switch boot
- 7. Trip odometer reset switch
- 8. Indicator lamp module
- Speedometer harness connector [39B]
- 10. Instrument harness connector [20A]
- 11. Indicator lamp bezel

Figure 6-4. Speedometer Components: XL 883L/N/R, XL 1200V, XL 1200CP/CB Mini-Ape Handlebar

6-8 2013 Sportster Service: Electrical

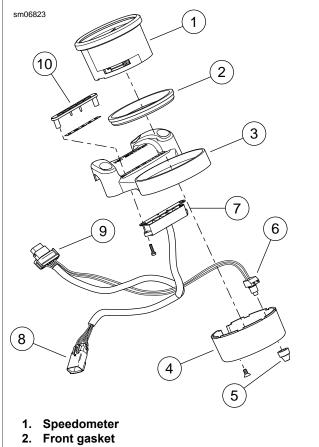

- 3. Instrument housing/bracket
- 4. Back plate
- 5. Reset switch boot
- 6. Trip odometer reset switch
- 7. Indicator lamp module
- 8. Speedometer harness connector [39B]
- 9. Instrument harness connector [20A]
- 10. Indicator lamp bezel

Figure 6-5. Speedometer Components: XL 1200X

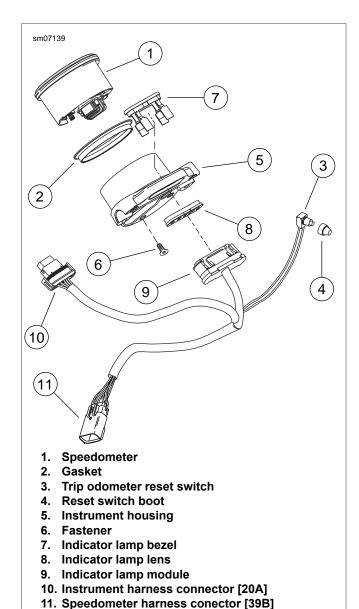


Figure 6-6. Speedometer: XL 1200C/C ANV/CP/CA

#### SPEEDOMETER REMOVAL

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

#### NOTE


This part cannot be repaired. Replace upon failure.

- 1. Remove main fuse.
- 2. See Figure 6-7. Remove reset switch boot (11).
- 3. Remove screws (6) and back cover (5).
- 4. Disconnect speedometer connector [39B] (8).
- 5. Push out the speedometer (2) with gasket (3).
- Inspect gasket (3), speedometer connector [39B] (8), and wiring. Repair or replace as required.

#### SPEEDOMETER INSTALLATION

FASTENER	TORQUE VALUE	
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm

- 1. See Figure 6-7. Install gasket (3) on speedometer (2).
- Orient face upright and press speedometer (2) into instrument housing/bracket (4).
- 3. Install speedometer connector [39B] (8).
- Attach trip odometer reset switch (10) into squared boss on back cover (5) and secure with reset switch boot (11).
- Place back cover over speedometer and tachometer while positioning harness to avoid damage. Rotate speedometer and tachometer as needed to align mounting holes. Install screws (6). Tighten to 12-18 in-lbs (1.4-2.0 Nm).
- 6. Install main fuse.

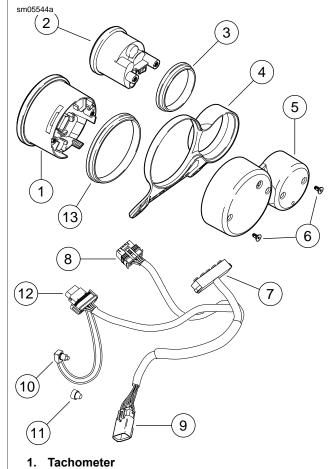

- 2. Speedometer
- 3. Speedometer gasket
- 4. Instrument housing/bracket
- 5. Back cover
- 6. Screw
- 7. Indicator lamp module
- 8. Speedometer connector [39B]
- 9. Instrument harness connector [20A]
- 10. Trip odometer reset switch
- 11. Reset switch boot
- 12. Tachometer connector [108B]
- 13. Tachometer gasket

Figure 6-7. Instruments: XR 1200X

# TRIP ODOMETER RESET SWITCH REPLACEMENT

PART NUMBER	TOOL NAME
HD-45929	CRIMPING TOOL

FASTENER	TORQUE VALUE	
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- See <u>Figure 6-7</u>. Remove reset switch boot (11) from back cover (5).
- 3. Remove screws (6) and back cover (5).
- 4. Remove tachometer connector [108B] (12).
- Follow instructions to push the trip reset socket terminals out the front of the tachometer connector [108B]. See A.10 DELPHI MICRO 64 SEALED CONNECTOR.
- Cut off the socket terminals. Pull the faulty switch out of the connector.
- Push the wires of a replacement switch through the tachometer connector [108B] (sockets 8, 11) and crimp new socket terminals using CRIMPING TOOL (Part No. HD-45929), on replacement switch wiring.
- Draw the terminals back into the connector until the terminal seats.
- 9. Install tachometer connector [108B] (12).
- Position reset switch in squared boss on back cover (5).
   Secure with a new reset switch boot (11).
- Place back cover over speedometer and tachometer while positioning harness to avoid damage. Align mounting holes. Install screws (6). Tighten to 12-18 in-lbs (1.4-2.0 Nm).
- 12. Install main fuse.

#### **TACHOMETER REMOVAL**

#### NOTE

The speedometer and tachometer have backlight LEDs that cannot be replaced. If an LED fails, replace the entire unit.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- Remove main fuse.
- See <u>Figure 6-7</u>. Remove reset switch boot (11) from back cover (5).
- 3. Remove screws (6) and back cover (5).
- Open latches on each side of tachometer connector [108B] (12) and separate connector halves.
- 5. Push out the tachometer with gasket (13).
- Inspect gasket, tachometer connector, trip odometer reset switch, reset switch boot and wiring. Repair or replace as required.

#### TACHOMETER INSTALLATION

FASTENER	TORQUE VALUE	
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm

- 1. If replacing the trip odometer reset switch, see 6.5 SPEEDOMETER AND TACHOMETER: XR 1200X. Trip Odometer Reset Switch Replacement.
- 2. See Figure 6-7. Install gasket (13) on tachometer (1).
- Orient face upright and press tachometer (1) into instrument housing/bracket (4).
- 4. Attach tachometer connector [108B] (12) to tachometer.
- Attach trip odometer reset switch (10) into squared boss on back cover (5) and secure with reset switch boot (11).
- Place back cover over speedometer and tachometer while positioning harness to avoid damage. Align mounting holes. Install screws (6). Tighten to 12-18 in-lbs (1.4-2.0 Nm).
- 7. Install main fuse.

# **ELECTRONIC CONTROL MODULE (ECM)**

#### **GENERAL**


See Figure 6-9. The ECM receives data from sensors such as the CKP sensor and the TMAP sensor. The ECM uses this data to time the ignition spark as well as providing other engine management functions.

#### NOTE

This part cannot be repaired. Replace upon failure.

**XL Models:** The ECM is mounted in front of the battery in a caddy.

**XR 1200X:** The ECM is mounted in a bracket on the rear fender under the seat.

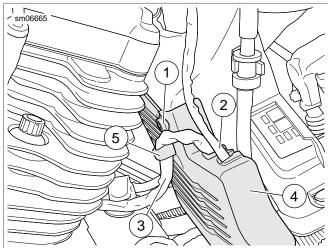

- 1. ECM cover fastener
- 2. Fuel pump wiring
- 3. Rear O2 sensor wiring
- 4. ECM cover
- 5. Rear O2 sensor wiring clip

Figure 6-8. ECM Cover: XL Models

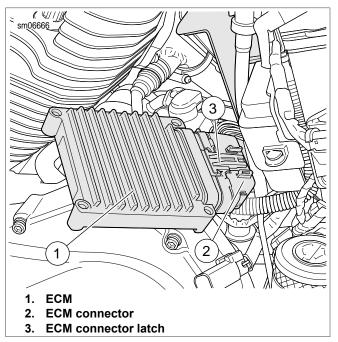


Figure 6-9. ECM: XL Models

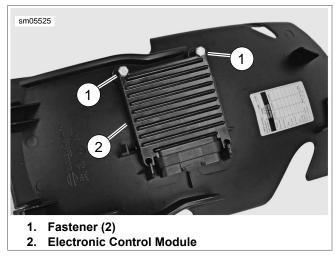


Figure 6-10. Electronic Control Module (ECM): XR 1200X

#### **REMOVAL**

#### **XL Models**

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. See <u>Figure 6-8</u>. Remove fuel pump wiring (2) from ECM cover (4). Disconnect fuel pump connector [141].

6-12 2013 Sportster Service: Electrical

- 3. Remove rear oxygen sensor (O2) wiring (3) from rear O2 sensor wiring clip (5) and ECM cover. Disconnect rear O2 connector [85].
- 4. Remove ECM cover fastener (1).
- 5. Slide ECM cover out from left side of vehicle.
- Press the clip holding the ECM to the caddy and remove the ECM.
- See <u>Figure 6-9</u>. Press the connector latch (3) and unplug ECM wiring harness connector (2) [78B] from ECM (1).

#### **XR 1200X**

### **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- Remove main fuse.
- Remove rear fender. See <u>2.35 REAR FENDER: XR</u> <u>1200X</u>.
- 3. See Figure 6-10. Remove fasteners (1) and ECM (2).

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
ECM cover fastener: XL Models	30-60 in-lbs	3.4-6.8 Nm
ECM fasteners: XR 1200X	18-22 <b>in-lbs</b>	2.0-2.5 Nm

### **XL Models**

See <u>Figure 6-9</u>. Plug ECM wiring harness connector [78B]
 (2) into ECM. Gently press connector until latch (3) clicks in place.

- Install ECM into caddy. Press ECM into caddy until it is held by clip.
- 3. See Figure 6-8. Slide ECM cover (4) into position from left side of motorcycle.
- Install ECM cover fastener (1). Tighten to 30-60 in-lbs (3.4-6.8 Nm).
- Connect rear O2 connector [85]. Install O2 sensor wiring
   into ECM cover and clip (5)
- 6. Connect fuel pump connector [141]. Install fuel pump wiring (2) into ECM cover (4).
- 7. Install main fuse.
- Perform password learn procedure. See <u>6.38 TSM/HFSM:</u> PASSWORD LEARN.

#### **XR 1200X**

- 1. See Figure 6-10. Install ECM (2) and fasteners (1).
- 2. Tighten fasteners to 18-22 **in-lbs** (2.0-2.5 Nm).
- Install rear fender. See <u>2.35 REAR FENDER: XR 1200X</u>.
- 4. Install main fuse.
- Perform password learn procedure. See <u>6.38 TSM/HFSM:</u> PASSWORD LEARN.

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

6. Install seat.

# TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

6.7

#### **GENERAL**

See Figure 6-11. The TSM has two functions:

- Control turn signals.
- Serve as the BAS.

The optional factory-installed security system provides the same functionality as the TSM, but also includes security and immobilization functions.

Two security system modules are available: The TSSM for Japan/Korea markets and the HFSM for all other markets.

See the electrical diagnostic manual for complete details of the TSM/TSSM/HFSM features and functions.

#### NOTE

This part cannot be repaired. Replace upon failure.



Figure 6-11. TSM/TSSM/HFSM (TSM Shown)

#### **REMOVAL**

#### NOTE

See <u>Figure 6-12</u>. The TSM/TSSM/HFSM (3) is located in a cavity in the bottom of the battery tray (1).

- 1. Remove battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- Unplug wiring harness connectors: 4-pin connector [208] (HFSM only) has one latch. Unplug this connector first. Then unplug 12-pin connector [30B].
- See <u>Figure 6-12</u>. Reach under the battery tray (1) and push upward on TSM/TSSM/HFSM (3) to lift it out of its cavity (2).

Remove TSM/TSSM/HFSM from vehicle.

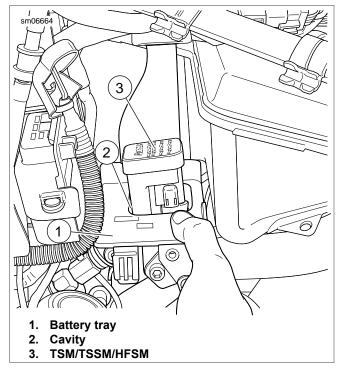


Figure 6-12. TSM/TSSM/HFSM Connectors: All Models

#### **INSTALLATION**


- 1. See Figure 6-12. Pull wiring harness connector [208] (HFSM only) and connector [30B] up through cavity (2) in bottom of battery tray (1).
- 2. Position TSM/TSSM/HFSM (3) over cavity with connector(s) facing oil tank.
- Lower TSM/TSSM/HFSM into cavity. See <u>Figure 6-12</u>.
   Make sure top of TSM/TSSM/HFSM is flush with bottom of battery tray.
- Plug 4-pin [208] (HFSM only) and 12-pin [30B] wiring harness connectors into TSM/TSSM/HFSM.
- Install battery. Do not install left side cover at this time.
   See <u>1.22 BATTERY MAINTENANCE</u>.
- 6. Perform TSM/TSSM/HFSM password learn and set-up procedure. See <u>6.38 TSM/HFSM: PASSWORD LEARN</u> for procedure.
- Install left side cover. See <u>2.18 LEFT SIDE COVER</u>.

6-14 2013 Sportster Service: Electrical

# **BATTERY CABLES**

#### REMOVAL


- Remove left side cover. See <u>2.18 LEFT SIDE COVER</u>.
- 2. See Figure 6-13. Slide main fuse and holder (1) toward rear of motorcycle to detach from battery strap (4).
- 3. Remove battery. See 1.22 BATTERY MAINTENANCE.
- Disconnect negative (-) battery cable from crankcase.
- 5. Inspect main fuse wiring harness and holder
- Note routing of negative (-) battery cable around frame downtube.

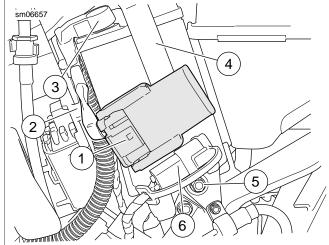

- 1. Main fuse and holder
- 2. Positive (+) battery cable holder
- 3. Positive (+) battery terminal (under protective rubber boot)
- 4. Battery strap
- 5. Screw
- 6. Data link connector

Figure 6-13. Main Fuse and Battery Location: All Models

- 7. Inspect positive (+) and negative (-) cables for cuts, fraying or other damage. See <u>1.22 BATTERY MAINTENANCE</u>.
- 8. See Figure 6-14. As required, pull back rubber cap (3) and using a 12 mm wrench, remove nut with captive lockwasher (5) and positive (+) battery cable (2) from starter post (4).

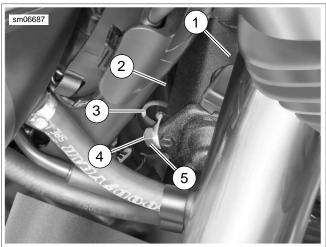

- 1. Starter assembly
- 2. Positive (+) battery cable
- 3. Rubber cap
- 4. Starter post
- 5. Nut with captive lockwasher

Figure 6-14. Positive (+) Cable Starter Post Connection:
All Models

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm
Battery strap screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm
Battery positive cable to starter post locknut	60-85 <b>in-lbs</b>	6.8-9.6 Nm
Battery negative cable to crankcase nut	55-75 <b>in-lbs</b>	6.2-8.5 Nm

- 1. Apply a light coat of petroleum jelly or corrosion retardant material to the negative battery terminal.
- 2. Slide battery in battery tray. Connect negative (-) battery cable to battery. Tighten to 60-70 **in-lbs** (6.8-7.9 Nm).

#### **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

- 3. See <u>Figure 6-13</u>. With negative (-) battery cable disconnected from ground on crankcase, install the fuse cable and the positive (+) battery cable.
  - a. Thread fastener through main fuse cable.
  - b. Thread fastener through the positive (+) battery cable.
  - c. Thread fastener into the positive battery terminal (3).
  - Tighten to 60-70 in-lbs (6.8-7.9 Nm).

- Apply a light coat of petroleum jelly or corrosion retardant material to the positive battery terminal. Place protective rubber boot over terminal.
- 5. Hook top of battery strap (4) to battery tray mount on top of battery. Install screw (5). Tighten to 36-60 **in-lbs** (4.1-6.8 Nm).
- 6. Place positive battery cable into holder on ECM caddy.
- 7. Hook main fuse and holder (1) to pin on battery strap and slide forward until it snaps into place.
- 8. Hook data link connector [91A] (6) to pin on battery strap and slide forward until it snaps into place.
- 9. See <u>Figure 6-14</u>. Install positive (+) battery cable (2) and nut with captive lockwasher (5) on starter post (4). Using a 12 mm wrench, tighten to 60-85 **in-lbs** (6.8-9.6 Nm).
- 10. Push rubber cap (3) over starter post.
- Place negative battery cable connector onto stud on crankcase boss behind starter motor assembly. Thread nut onto crankcase ground stud behind starter motor.
- 12. See <u>Figure 6-14</u>. Press negative battery cable connector against cable stop on crankcase. Using a swivel socket, tighten to 55-75 **in-lbs** (6.2-8.5 Nm).

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

13. Install seat.

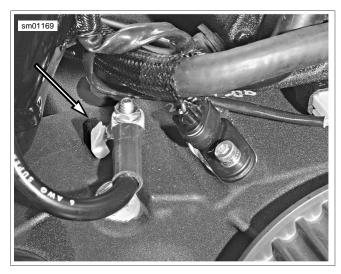


Figure 6-15. Negative Battery Cable Stop on Crankcase (typical)

# **BATTERY TRAY**

#### **GENERAL**


See <u>Figure 6-16</u>. The battery tray is located behind the left side cover. The battery tray supports the battery, TSM/TSSM/HFSM and rear stop lamp switch (XL models only).

#### **REMOVAL**

# **A**WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- 1. Remove battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- 2. Unplug and remove TSM/TSSM/HFSM. See <u>6.7 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)</u>.
- 3. **XL Models:** see <u>Figure 6-16</u>. Position rear stop lamp switch as follows:
  - a. Remove rear brake master cylinder reservoir cover.
  - b. Secure the reservoir out of the way. See <u>2.13 REAR BRAKE MASTER CYLINDER RESERVOIR</u>.
  - c. Remove brake line clamp fastener (5) from battery tray (4).
  - d. Remove TORX fastener (3) securing rear stop lamp switch assembly (2) to battery tray. Gently pull stop lamp switch assembly back out of the way. Do not bend or stress metal brake lines.
  - e. Remove ECM caddy fastener (1).

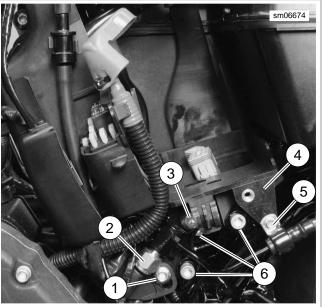

- 1. ECM caddy fastener
- 2. Rear stop lamp switch assembly
- 3. TORX fastener
- 4. Battery tray
- 5. Brake line clamp fastener
- 6. Battery tray fastener

Figure 6-16. Battery Tray Assembly

- 4. See <u>Figure 6-17</u>. Remove three fasteners (3) securing battery tray to mounting tabs on frame.
- Lift up battery tray slightly so that mounting tabs will clear mounts on frame. As you lift up on tray, pull down gently on end of battery strap support (2) to clear frame and wiring harnesses above battery tray.
- 6. Remove negative battery cable and vent line from battery tray retaining clips.
- 7. Slide battery tray out and remove from left side.

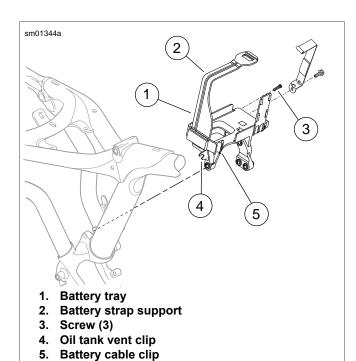


Figure 6-17. Battery Tray

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Battery tray mounting fasteners	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Stop lamp switch bracket screw	72-120 in-lbs	8.1-13.6 Nm
Brake hose clamp to battery tray screw	30-40 in-lbs	3.4-4.5 Nm
ECM caddy fastener	72-96 in-lbs	8.1-10.8 Nm

See <u>Figure 6-16</u>. Make sure the TSM/TSSM/HFSM connector [30B], the antenna connector [208B] (HFSM only)

- and the rear stop lamp switch assembly (2) are out of the way.
- 2. See <u>Figure 6-17</u>. Slide battery tray (1) into place. Make sure battery tray mounting tabs are positioned behind (to the right of) frame mounts.
- 3. Secure the negative battery cable and the oil tank vent line to the battery tray retaining clips (4, 5).
- Install three screws (3) to secure battery tray to frame. Do not tighten screws until all three have been started. Tighten to 96-156 in-lbs (10.9-17.6 Nm).
- XL models only: see <u>Figure 6-16</u>. Position rear stop lamp switch as follows:
  - Install rear stop lamp switch (2). Secure with TORX screw (3). Tighten to 72-120 in-lbs (8.1-13.6 Nm).
  - b. Secure brake hose clamp (5) to battery tray with screw. Tighten to 30-40 **in-lbs** (3.4-4.5 Nm).
  - c. Install ECM caddy fastener (1). Tighten to 72-96 in-lbs (8.1-10.8 Nm).
  - d. Install rear brake master cylinder reservoir. See 2.13 REAR BRAKE MASTER CYLINDER RESER-VOIR.
  - e. Install reservoir cover.
- Install TSM/TSSM/HFSM into cavity in bottom of battery tray. See <u>6.7 TURN SIGNAL AND SECURITY MODULE</u> (TSM/TSSM/HFSM).

# **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

- 7. Install battery. See 1.22 BATTERY MAINTENANCE.
- 8. Install left side cover. See 2.18 LEFT SIDE COVER.

STARTER 6.10

### **REMOVAL**

# **AWARNING**

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- 1. Disconnect battery. See 1.22 BATTERY MAINTENANCE.
- Drain transmission lubricant and remove primary cover. See <u>5.3 PRIMARY COVER</u>.
- Remove rear muffler and exhaust pipe. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u> or <u>4.14 EXHAUST SYSTEM: XR 1200X</u>.
- Remove the starter solenoid connector [128].
- Remove positive (+) battery lead and solenoid wire from starter.

#### NOTE

A ball hex driver may be required to gain access to the starter mounting bolts.

- See <u>Figure 6-18</u>. Remove the two starter mounting bolts and washers.
- 7. **XL Models:** Remove fastener securing oil line retaining clamp to starter.
- 8. Remove starter and gasket from right side of motorcycle.

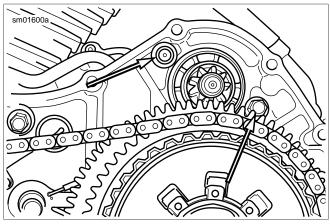


Figure 6-18. Starter Mounting Bolts

#### **TOUCH-UP PAINT**

Touch up damaged paint before installation. Follow the directions provided with the touch-up paint. Paint flaking does not require starter replacement.

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Starter mounting bolt	13-20 ft-lbs	17.6-27.1 Nm
Starter motor oil line clamp fastener	16-21 <b>in-lbs</b>	1.8-2.4 Nm
Starter positive terminal nut	60-85 in-lbs	6.8-9.6 Nm

- Install starter and starter gasket from right side of motorcycle.
- 2. See <u>Figure 6-18</u>. Install two starter mounting bolts and washers. Tighten to 13-20 ft-lbs (17.6-27.1 Nm).
- 3. **XL Models:** Install oil line clamp to starter motor. Tighten to 16-21 **in-lbs** (1.8-2.4 Nm).
- 4. Connect the starter solenoid connector [128].
- 5. Install positive (+) battery cable and solenoid wire to solenoid stud. Tighten to 60-85 **in-lbs** (6.8-9.6 Nm). Place rubber boot securely over terminal.
- 6. Install primary cover. See <u>5.3 PRIMARY COVER</u>.
- 7. Fill primary chaincase / transmission with proper lubricant. See 1.10 TRANSMISSION LUBRICANT.
- Install rear exhaust pipe and muffler. See <u>4.13 EXHAUST SYSTEM: XL MODELS</u> or <u>4.14 EXHAUST SYSTEM: XR 1200X.</u>

# **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

9. Connect battery. See <u>1.22 BATTERY MAINTENANCE</u>.

#### **SOLENOID**

FASTENER	TORQUE VALUE	
Solenoid contact post jamnut	65-80 in-lbs	7.3-9.0 Nm
Starter ring terminal hex nut	60-80 in-lbs	6.8-9.0 Nm

### **Cover and Plunger Removal**

- 1. See Figure 6-19. Remove fasteners (1), cover (2) and gasket (3).
- Remove the plunger (4) with spring (5).

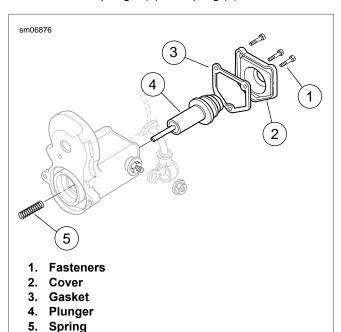


Figure 6-19. Soleniod Plunger

#### **Short Post Contact: Starter**

- Disassemble the short post contact:
  - Remove the hex nut and the ring terminal from the
  - See Figure 6-20. Remove jamnut (8), wave washer (7), O-ring (6) and round bushing (5):
  - Remove the post bolt (1).
  - Remove the hold-in terminal (2) from the post bolt.
  - e. Remove the contact plate (3) and the square bushing (4).
- Assemble the short post contact:
  - Insert the square bushing into the housing.
  - Install the contact plate with the 90 degree part of the contact plate against the solenoid winding.
  - Install the post bolt through the hold-in terminal, the contact plate and the square bushing.
  - Install the round bushing, O-ring, wave washer and jamnut.

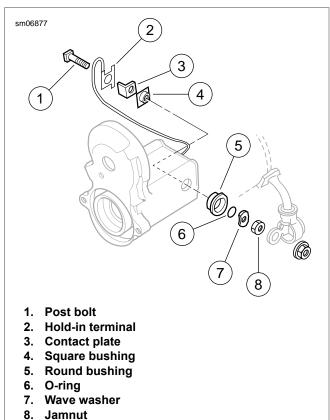


Figure 6-20. Short Post Contact (starter)


### **Long Post Contact: Battery Positive**

- 1. See Figure 6-21. Remove the long post contact:
  - Remove hex nut (9).
  - Remove jamnut (8), wave washer (7), O-ring (6) and the round bushing (5).
  - Remove post bolt (4), contact plate (3), square bushing (2) and paper insulator (1).
- Install the long post contact:
  - Insert the square bushing through the paper insulator into the housing.
  - Install the contact plate with the foot against the solenoid winding.
  - Install the post bolt.

#### NOTE

Check that the index pin on the round bushing fits the blind hole in the housing.

Install the round bushing, O-ring, wave washer and jamnut.

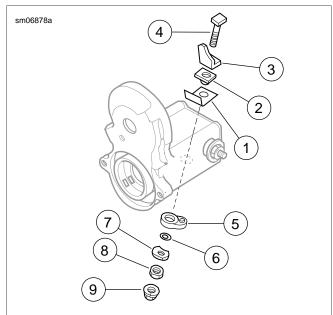

- 1. Paper insulator
- 2. Square bushing
- 3. Contact plate
- 4. Post bolt
- 5. Round bushing
- 6. O-ring
- 7. Wave washer
- 8. Jamnut
- 9. Hex nut

Figure 6-21. Long Post Contact (battery)

### **Plunger and Cover Installation**

- Apply LUBRIPLATE 110 to the plunger shaft. Install the spring.
- 2. Install the plunger and spring in the housing.
- 3. While compressing the plunger, alternately tighten the contact post jamnuts to 65-80 **in-lbs** (7.3-9.0 Nm).
- Check that the contact plates are aligned to the solenoid winding.
- 5. Install the cover:
  - a. Install a new gasket on the cover.
  - b. Install the cover.
  - c. Install the fasteners until snug.
- 6. Install the starter ring terminal.
- 7. Install the hex nut. Tighten to 60-80 in-lbs (6.8-9.0 Nm).

#### **CLUTCH SHAFT ASSEMBLY**


#### Removal

- See <u>Figure 6-22</u>. Loosen the two long starter support bolts (1).
- 2. Remove the two fasteners (2) and separate the clutch assembly housing (4) from the starter/solenoid housing (3).
- 3. Save the spring (5) from the solenoid plunger shaft.

#### NOTE

Remove the old assembly lube to release the steel ball (8).

- Remove and save the steel ball from the bearing end of the clutch shaft assembly (6) bore.
- 5. Tap on the end of the shaft to remove the clutch shaft assembly from the housing.
- 6. Remove the idler gear (7) from the bearing cage.
- 7. Remove bearing cage and the five steel cylinders.

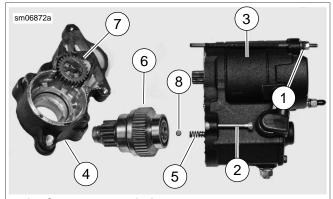

- 1. Starter support bolts
- 2. Fasteners
- 3. Starter/solenoid housing
- 4. Clutch assembly housing
- 5. Spring
- 6. Clutch shaft assembly
- 7. Idler gear
- 8. Steel ball

Figure 6-22. Starter Drive Housing and Clutch Shaft

#### Inspection

- 1. Inspect the O-rings in the clutch assembly housing bore.
- 2. Inspect the spring for kinks or elongation.
- 3. Inspect the steel ball.
- Inspect the idler gear and the cage.
- Inspect the clutch shaft assembly pinion gear for missing or damaged teeth.
- Check that the roller bearings and the clutch gear on the clutch shaft rotate freely.

#### Installation

- 1. Lubricate components with LUBRIPLATE 110.
- See <u>Figure 6-23</u>. Install the bearing cage (1) with the five steel cylinders (2).
- Install the idler gear (3) over the bearing cage.
- Match the gear teeth to the idler gear and install the clutch assembly (4) in the housing. Seat the bearing in the counterbore.
- 5. Install the steel ball (5) in the bore of the shaft.
- Apply a light film of LUBRIPLATE 110 to solenoid plunger shaft. Install return spring (6) on solenoid plunger shaft.

#### **HOME**

- 7. Apply a thin layer of HARLEY-DAVIDSON HIGH PER-FORMANCE SEALANT GRAY to the face of the clutch assembly housing.
- 8. Fit the clutch assembly housing to the starter/solenoid housing to the clutch assembly housing.
- 9. Install the fasteners and alternately tighten until snug.

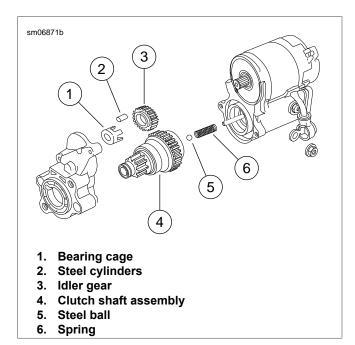


Figure 6-23. Starter Clutch Assembly

# 6.11

# **IGNITION SWITCH**

#### REMOVAL

### WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- Remove seat.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- 5. See Figure 6-24. Remove ignition switch face nut (5).
- 6. Remove mounting screw (7). Remove switch cover (3). Remove switch (2) from switch cover (3).
- Remove cable strap securing switch harness to wire harness caddy.
- 8. Cut switch wires 3.0 in (76.2 mm) from switch.
- 9. Remove harness covering.

#### INSTALLATION

PART NUMBER	TOOL NAME
HD-39969	ULTRA TORCH UT-100

FASTENER	TORQUE VALUE	
Ignition switch mounting screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

1. Slide replacement conduit on harness wires.

# **A**WARNING

Be sure to follow manufacturer's instructions when using the UltraTorch UT-100 or any other radiant heating device. Failure to follow manufacturer's instructions can cause a fire, which could result in death or serious injury. (00335a)

- Observing color codes, install seal splice connectors to harness wires. Complete sealed splice to **new** ignition switch. Seal splice connectors with ULTRA TORCH UT-100 (Part No. HD-39969) or other radiant heating device. See <u>A.23 SEALED SPLICE CONNECTOR</u>.
- 3. Slide conduit over sealed splice connectors.

- See <u>Figure 6-24</u>. Insert ignition switch into hole of switch cover. The word "TOP" stamped on the switch body should face upward toward the lettering on the switch position decal. Loosely install face nut (5).
- Install mounting screw (7). Tighten to 35-45 in-lbs (4.0-5.1 Nm).
- 6. Tighten face nut (5) to secure switch (2) within cover (3).
- 7. Using **new** cable strap (6), secure ignition switch harness to wire harness caddy.
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.

# **A**WARNING


After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 9. Install seat.
- 10. Install main fuse.

# **WARNING**

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

11. Check ignition switch.

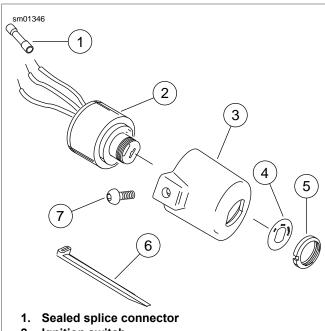

- 2. Ignition switch
- 3. Switch cover
- 4. Decal
- 5. Face nut
- 6. Cable strap
- 7. Mounting screw

Figure 6-24. Ignition Switch

# SPARK PLUG CABLES

#### **GENERAL**

Resistor-type high-tension spark plug cables have a carbonimpregnated fabric core (instead of solid wire) for radio noise suppression and improved reliability of electronic components. Use the exact replacement cable for best results.

#### REMOVAL

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high-pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

# **A**WARNING


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove seat.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or 4.5 FUEL TANK: XR 1200X.
- XL Models: See <u>Figure 6-25</u>. Remove screw (1) securing left wire harness caddy (2) to right wire harness caddy. See <u>6.28 ELECTRICAL CADDIES</u>. Carefully disengage left wire harness caddy and pull away from frame backbone.

#### NOTE

Always grasp rubber boot as close as possible to the spark plug terminal when removing spark plug cables. Do not pull on the cable portion itself. Pulling on the cable will damage the cable's carbon core.


 See <u>Figure 6-26</u> or <u>Figure 6-27</u>. Pull front spark plug boot and cable (2) from left side ignition coil (1) tower.

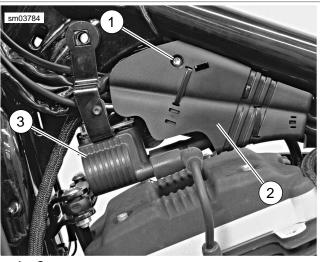

- 1. Screw
- 2. Left wire harness caddy
- 3. Ignition coil


Figure 6-25. Ignition Coil and Left Wire Harness Caddy: XL Models

- 7. Pull rear spark plug boot (3) and cable from right side ignition coil tower.
- 8. Unplug spark plug boot and cable assemblies from front and rear spark plugs.
- 9. **XL Models:** Disengage rear spark plug cable from notch in right wire harness caddy (5). Remove the cable.
- 10. **XR 1200X:** See <u>Figure 6-27</u>. Disengage rear spark plug cable from wire harness caddy (5). Remove the cable.
- 11. **XL Models:** See <u>Figure 6-28</u>. Remove rear spark plug cable (2) from curved trough on wire harness caddy (1).
  - a. Cut cable strap (4).
  - Feed spark plug cable out from between frame and engine. Remove the cable.
  - c. Remove cable strap from mounting boss on caddy latch clip (5). Discard cable strap.

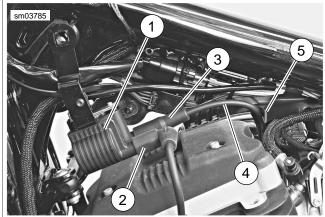


- 1. Ignition coil
- 2. Front spark plug cable boot
- 3. Rear spark plug cable boot
- 4. Rear spark plug cable
- 5. Notch in right wire harness caddy


Figure 6-26. Spark Plug Cable Routing: XL Models

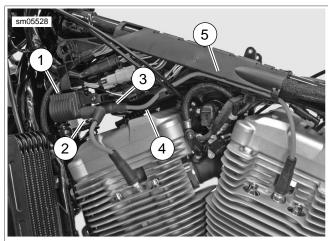

- 1. Ignition coil
- 2. Front spark plug cable boot
- 3. Rear spark plug cable boot
- 4. Rear spark plug cable
- 5. Harness caddy

Figure 6-27. Spark Plug Cable Routing: XR 1200X

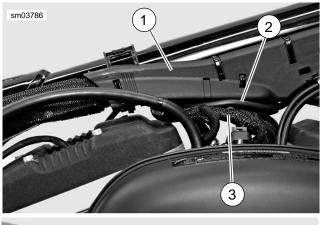

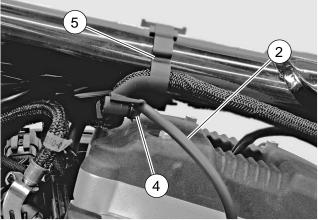

- 1. Right wire harness caddy
- 2. Rear spark plug cable
- 3. Engine sub-harness
- 4. Cable strap
- 5. Caddy latch clip

Figure 6-28. Rear Spark Plug Cable Routing: XL Models

#### INSTALLATION

- 1. See <u>Figure 6-26</u> or <u>Figure 6-27</u>. Plug rear spark plug cable boot (3) into right side ignition coil (1) tower.
- XL Models: Route cable between wire harness caddies, and down through notch (5) in right caddy, toward right side of engine.
- 3. **XR 1200X:** Route rear spark plug cable through harness caddy (5) as shown.
- XL Models: See <u>Figure 6-28</u>. Route rear spark plug cable

   in trough in right wire harness caddy (1), over top of engine sub-harness (3) and back toward left side of engine.
- 5. **XL Models:** See <u>Figure 6-29</u>. Install **new** barbed cable strap (3) onto spark plug cable (1), 7.0-7.25 in (178-184 mm) from tip of spark plug cable boot (2).
  - Orient the cable strap so that the spark plug cable is above the mounting boss on the caddy latch clip.
  - b. Press the cable strap barbed prong firmly into the hole in the caddy latch clip mounting boss.
- Plug rear spark plug cable and boot onto rear spark plug until it clicks.

7. See Figure 6-26 or Figure 6-27. Plug front spark plug cable and boot (2) into left side ignition coil (1) tower. Plug other end of cable onto front spark plug until it clicks.

#### NOTE

Make sure rear spark plug cable is routed properly and cannot chafe against frame, fuel tank or rear cylinder head.

- 8. **XL Models:** See <u>Figure 6-25</u>. Mate left wire harness caddy (2) to right wire harness caddy. Secure with screw (1) and tighten. See <u>6.28 ELECTRICAL CADDIES</u>.
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X.</u>

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

10. Install seat.

- 11. Install main fuse.
- 12. Start the engine. Verify ignition function.

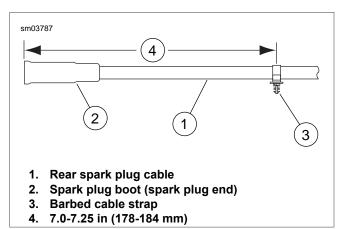


Figure 6-29. Rear Spark Plug Cable and Cable Strap: XL Models

#### **GENERAL**

The ignition coil is attached to a mounting bracket secured by the front fuel tank mounting bolt. The unit is divided into separate front and rear coils that fire the spark plugs one cylinder at a time.

The ignition coil is mounted on the left half of a two-piece bracket assembly. The right half of the bracket assembly secures the ignition switch and right wire harness caddy to the vehicle. The two bracket halves are secured together with a screw.

#### NOTE

This part cannot be repaired. Replace upon failure.

See the electrical diagnostic manual for troubleshooting.

#### **REMOVAL**

#### **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module on bottom left side of fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.


# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove seat.
- 4. Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- XL Models Only: See <u>Figure 6-30</u>. Remove screw (1) securing left wire harness caddy (2) to right wire harness caddy. Carefully disengage left wire harness caddy and pull away from frame backbone. See <u>6.28 ELECTRICAL CADDIES</u>.

#### NOTE


Always grasp rubber boot as close as possible to the spark plug terminal when removing spark plug cables. Do not pull on the cable portion itself. Pulling on the cable will damage the cable's carbon core.

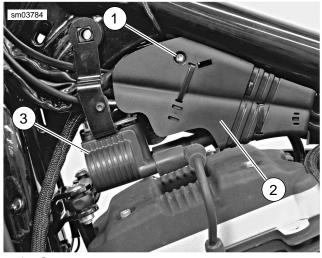

- 1. Screw
- 2. Left wire harness caddy
- 3. Ignition coil


Figure 6-30. Ignition Coil and Left Wire Harness Caddy: XL Models

- See <u>Figure 6-31</u> or <u>Figure 6-32</u>. Unplug coil harness connector [83B] (2) from ignition coil (1).
- Pull front spark plug boot and cable (3) from left ignition coil tower.
- Pull rear spark plug boot and cable (4) from right ignition coil tower.
- Remove screw (5) securing coil bracket (6). Remove coil and bracket from vehicle.
- See <u>Figure 6-33</u> or <u>Figure 6-34</u>. Remove two screws (4) to separate ignition coil (1) from mounting bracket (2) and plate (3).

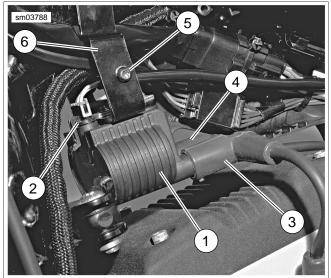

- 1. Ignition coil
- 2. Coil harness connector [83B]
- 3. Front spark plug boot and cable
- 4. Rear spark plug boot and cable
- 5. Screw
- 6. Mounting bracket

Figure 6-31. Ignition Coil Mounting and Connections: XL Models Only

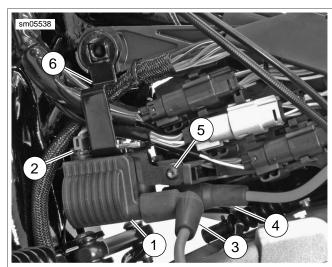

- 1. Ignition coil
- 2. Coil harness connector [83B]
- 3. Front spark plug boot and cable
- 4. Rear spark plug boot and cable
- 5. Screw
- 6. Mounting bracket

Figure 6-32. Ignition Coil Mounting and Connections: XR 1200X


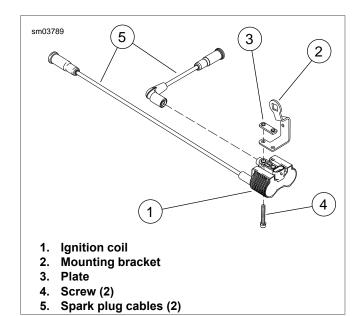


Figure 6-33. Ignition Coil Mounting: XL Models Only

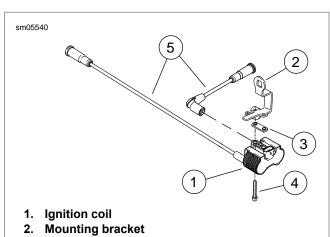

- 3. Plate
- 4. Screw (2)
- 5. Spark plug cables (2)

Figure 6-34. Ignition coil Mounting: XR 1200X

#### **INSTALLATION**

FASTENER	TORQUE VALUE	
Coil mounting screw	24-72 in-lbs	2.7-8.1 Nm
Coil mounting screw	24-72 in-lbs	2.7-8.1 Nm
Coil mounting bracket screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

- XL Models: See <u>Figure 6-33</u>. Position new ignition coil

   (1) on underside of mounting bracket (2). Fasten coil to mounting bracket with two screws (4) and nut plate (3).
   Tighten to 24-72 in-lbs (2.7-8.1 Nm).
- 2. **XR 1200X:** See <u>Figure 6-34</u>. Position plate (3) over **new** ignition coil (1). Place screws (4) through coil and plate and secure to mounting bracket (2). Tighten to 24-72 **in-lbs** (2.7-8.1 Nm).

- 3. See <u>Figure 6-31</u> or <u>Figure 6-32</u>. Install the coil:
  - a. Slide coil (1) with mounting bracket (6) into position.
  - Make sure all wiring harnesses from front or motorcycle are positioned between coil bracket upright and vehicle frame.
  - c. Secure bracket with screw (5). Tighten to 35-45 **in-lbs** (4.0-5.1 Nm).
- 4. Plug spark plug cables into ignition coil towers: front spark plug cable (3) to left side of coil, rear spark plug cable (4) to right side of coil.
- 5. **XL Models:** See <u>Figure 6-30</u>. Mate left wire harness caddy (2) to right wire harness caddy. Secure with screw (1) and tighten. See <u>6.28 ELECTRICAL CADDIES</u>.
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.

### **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 7. Install seat.
- 8. Install main fuse.

2013 Sportster Service: Electrical 6-29

HEADLAMP 6.14

#### **BULB REPLACEMENT**

#### Hi/Lo Beam

#### NOTE

Replace the bulb with the specified H4 halogen bulb.

- 1. Remove the trim ring.
  - a. XL 883L/N/R, XR 1200X: See Figure 6-35. Remove the screw (1), nut (2)and the trim ring (3).
  - b. **XL 1200V/C/CP/CA/CB:** See <u>Figure 6-36</u>. Remove the screw (1) and the trim ring.
- Hold the lens and compress the release tabs of the bulb connector (11) to disconnect from spade terminals.
- 3. Pull the rubber boot (9) from back of the lens.
- 4. Compress the ends of the retaining clip (8) to release from the retaining tabs and pivot retaining clip back.
- 5. Remove and replace the bulb (7).


#### NOTE

The tab opposite the center spade connector of bulb fits the top notch in the reflector which points to the top of the lens.

- 6. Pivot the retaining clip over the bulb. Press the ends into the retaining tabs.
- Install the rubber boot with the word TOP over the top notch. Press the center ring down flush with base of the bulb.
- 8. Connect the bulb connector to the bulb.
- 9. Install the lens.
  - a. XL 883L/N/R, XR 1200X: Fit the adapter ring and the lens to the headlamp shell.
  - XL 1200V/C/CP/CA/CB: With the finger gasket in place, fit the adapter ring and the lens to the headlamp shell.
- 10. Install the trim ring, screw and nut as necessary.


#### **Position Lamp: HDI**

- Disconnect the spade connectors from the position lamp bulb holder.
- 2. Pull the bulb holder from the lens.
- 3. Quarter turn the bulb to remove and replace.
- 4. Replace the bulb holder and connect the connectors.

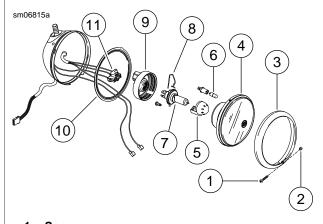

- 1. Screw
- 2. Nut
- 3. Trim ring
- 4. Lens
- 5. Bulb shield
- 6. Position lamp (HDI)
- 7. Bulb
- 8. Wire clip
- 9. Rubber boot
- 10. Adapter ring
- 11. Connector

Figure 6-35. Headlamp Assembly: XL 883L/N/R, XR 1200X

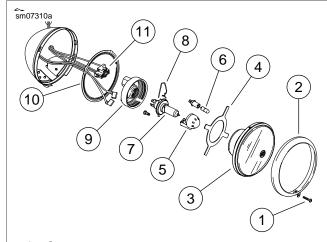

- 1. Screw
- 2. Trim ring
- 3. Lens
- 4. Finger gasket
- 5. Bulb shield
- 6. Position lamp (HDI)
- 7. Bulb
- 8. Wire clip
- 9. Rubber boot
- 10. Adapter ring
- 11. Connector

Figure 6-36. Headlamp Assembly: XL 1200V/C/CP/CA/CB

#### **HEADLAMP MOUNTS**


FASTENER	TORQUE VALUE	
Headlamp upper bracket fasteners: XL 883L/R/N, XR 1200X	120-192 <b>in-lbs</b>	14-22 Nm
Headlamp clamp nut: XL 883L/N/R, XR 1200X	120-240 in-lbs	14-27 Nm
Headlamp mount: XL 1200X	30-35 ft-lbs	41-47 Nm
Headlamp assembly: XL 1200X	30-35 ft-lbs	41-47 Nm
Headlamp mount: XL 1200V/C/CP/CA/CB	30-35 ft-lbs	41-47 Nm
Headlamp assembly: XL 1200X	30-35 ft-lbs	41-47 Nm
Clutch cable guide: XL 1200C/C ANV/CP/CA/CB	45-65 <b>in-lbs</b>	4.0-7.3 Nm
Headlamp visor: XL 1200C/C ANV/CP/CA/CB	120-192 in-lbs	14-22 Nm

# Mount: XL 883L/N/R, XR 1200X Models

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Install the headlamp assembly:
  - a. See <u>Figure 6-37</u>. Mount the upper bracket (1) to the upper fork clamp with a washer (3) and fastener (4). Tighten to 120-192 **in-lbs** (14-22 Nm).
  - XR 1200X: The headlamp assembly installs directly into the upper fork clamp (2).
- 3. Install the headlamp assembly with a washer (5), lockwasher (6) and nut (7) and hand tighten.
- 4. Install main fuse.
- Align the headlamp. Final tighten to 120-240 in-lbs (14-27 Nm).
- 6. Install the plug (8).

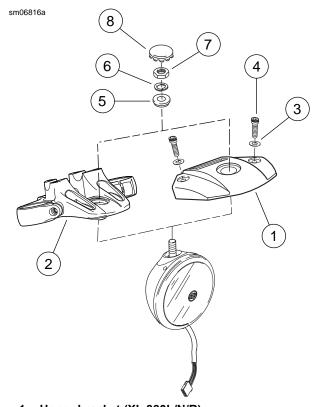

- 1. Upper bracket (XL 883L/N/R)
- 2. Upper fork clamp (XR 1200X)
- 3. Washer
- 4. Fastener
- 5. Washer
- 6. Lockwasher
- 7. Nut
- 8. Plug

Figure 6-37. Headlamp Mount

#### Mount: XL 1200X

- 1. Remove main fuse.
- See <u>Figure 6-38</u>. Install the fastener (1), washer (2) and mounting post (3). Tighten to 30-35 ft-lbs (41-47 Nm).
- Install the headlamp with the fastener (4), washer (5).
   Secure with the washer (6), lockwasher (7) and nut (8).
   Hand tighten.
- 4. Install main fuse.
- 5. Align the headlamp.
- Tighten the headlamp assembly to 30-35 ft-lbs (41-47 Nm).

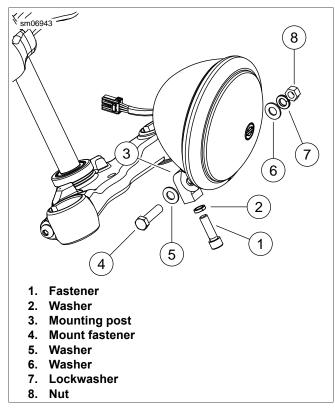


Figure 6-38. Headlamp Assembly Mount: XL 1200X

#### Mount: XL 1200V/C/CP/CA/CB

- 1. See Figure 6-39. Remove main fuse.
- 2. Install the fastener (2), washer (3) and mounting post (1). Tighten to 30-35 ft-lbs (41-47 Nm).
- 3. Assemble the washer stack (5) and fastener (4). Install the headlamp assembly. Hand tighten.
- 4. Install main fuse.
- 5. Align the headlamp.
- Tighten the headlamp locknut (6) to 30-35 ft-lbs (41-47 Nm).

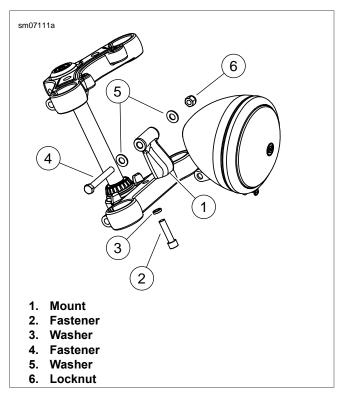


Figure 6-39. Headlamp Mount: XL 1200V/C/CP/CA/CB

#### Visor: XL 1200C/C ANV/CP/CA/CB

- See <u>Figure 6-40</u>. Install the clutch cable guide (1) with fastener (2). Tighten to 45-65 in-lbs (4.0-7.3 Nm).
- 2. Install the headlamp visor (3) with fasteners (4) and washers (5). Tighten to 120-192 **in-lbs** (14-22 Nm).

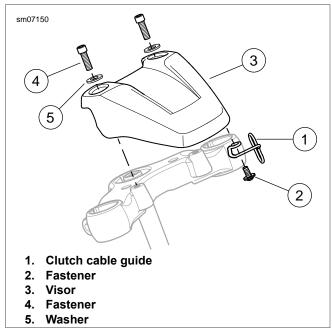


Figure 6-40. Headlamp Visor: XL 1200C/C ANV/CP/CA/CB

# INDICATOR LAMP MODULE

#### **GENERAL**

The indicator lamps are LEDs housed in a self-contained, non-repairable module.

#### NOTE

This part cannot be repaired. Replace upon failure.

# PRELIMINARY DISASSEMBLY: ALL MODELS

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Position vehicle upright. Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See <u>4.4 FUEL TANK: XL MODELS</u> or 4.5 FUEL TANK: XR 1200X.

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)


- 2. Remove main fuse.
- 3. Remove seat.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- 5. See 6.28 ELECTRICAL CADDIES:
  - a. **XL Models:** Remove screw securing left wire harness caddy to right wire harness caddy.
  - Locate instruments connector [20] on right wire harness caddy for XL models and on left side of caddy for XR 1200X. Unplug connector [20A].
- Record the location of all cable straps securing instrument harness to vehicle. Cut cable straps to free instrument harness.

# REPLACEMENT: XL 1200C/C ANV/CP/CA EXCEPT WITH MINI-APE HANDLEBAR

FASTENER	TORQUE VALUE	
Handlebar riser clamp screw	12-18 ft-lbs	16.3 -24.4 Nm
Handlebar riser clamp screw	12-18 ft-lbs	16.3 -24.4 Nm
Handlebar riser cover screw	8-12 <b>in-lbs</b>	0.9-1.4 Nm

- 1. See Figure 6-41. Remove two screws (1) and riser cover (2) from behind handlebar riser (3).
- Remove four screws (4) securing speedometer housing/handlebar clamp (5) to handlebar riser.

- 3. Carefully bend back four latches (8) on indicator lamp bezel (6). Remove indicator lamp module (7).
- Remove the speedometer. See <u>6.4 SPEEDOMETER: XL MODELS</u>, Removal.

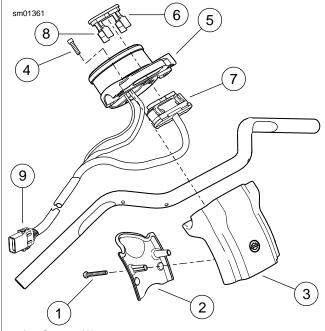

- 1. Screw (2)
- 2. Riser cover
- 3. Handlebar riser
- 4. Screw (4)
- 5. Speedometer housing/handlebar clamp
- 6. Indicator lamp bezel with lens
- 7. Indicator lamp module
- 8. Latch (4)
- 9. Instrument harness connector [20A]

Figure 6-41. Indicator Lamps: XL 1200C/C ANV/CP/CA Except w/Mini-Ape Handlebar

- Carefully pull harness with connector [39B] and trip odometer reset button from back of speedometer housing/handlebar clamp.
- 6. Pull instrument harness with connector [20A] up through upper fork bracket and remove harness from vehicle.
- 7. Place **new** instrument harness in position.
- 8. Carefully feed connector [20A] end down through upper fork bracket and along left side of frame steering head.

#### NOTE

Verify that speedometer harness and trip odometer switch harness are positioned underneath the handlebar and that the indicator lamp module harness feeds over the top of the handlebar.


Carefully feed end of harness with connector [39B] and trip odometer reset button through back of speedometer housing/handlebar clamp.

- Install the speedometer. See <u>6.4 SPEEDOMETER: XL MODELS, Installation.</u>
- 11. See Figure 6-41. Install indicator lamp module (7) into back of speedometer housing/handlebar clamp (5). Secure with four latches (8) on indicator lamp bezel (6).
- 12. Install speedometer housing/handlebar clamp onto handlebar riser (3). Secure with four screws (4).
- 13. Adjust the handlebar to the desired position.
- 14. Tighten:
  - a. Front screws first, to 12-18 ft-lbs (16.3 -24.4 Nm).
  - b. Rear screws to 12-18 ft-lbs (16.3 -24.4 Nm).
- Install riser cover (2) behind handlebar riser. Secure with two screws (1). Verify that the handlebar control harnesses are not pinched between handlebar riser and riser cover. Tighten to 8-12 in-lbs (0.9-1.4 Nm).
- Proceed to <u>6.15 INDICATOR LAMP MODULE</u>, <u>Assembly</u>: <u>All Models</u>.

# REPLACEMENT: XL 883R/L/N, XL 1200X/V, XL 1200CP/CB WITH MINI-APE HANDLEBAR

FASTENER	TORQUE VALUE	
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm

- Cover headlamp bracket with a clean soft cloth to protect surface.
- See <u>Figure 6-42</u>. Holding speedometer housing/handlebar clamp (2), remove four screws securing housing/clamp assembly to handlebar risers.
- 3. Remove two screws (5) to separate indicator lamp module (3) from speedometer housing/handlebar clamp and the indicator lamp bezel.
- Remove speedometer. See <u>6.4 SPEEDOMETER: XL MODELS, Removal.</u>
- Remove instrument harness.
- 6. Place **new** instrument harness in position.
- 7. Install speedometer. See <u>6.4 SPEEDOMETER: XL MODELS, Installation.</u>
- 8. See <u>Figure 6-42</u>. Assemble the indicator lamp bezel (1) and the indicator lamp module (3) onto speedometer housing/handlebar clamp (2). Secure with two screws (5).
- Install housing/clamp assembly onto handlebar risers. Secure with screws:
- 10. Tighten:
  - a. Rear screws first, to 12-18 ft-lbs (16.3-24.4 Nm).
  - b. Front screws to 12-18 ft-lbs (16.3-24.4 Nm).
- 11. Proceed to <u>6.15 INDICATOR LAMP MODULE</u>, <u>Assembly:</u> <u>All Models</u>.

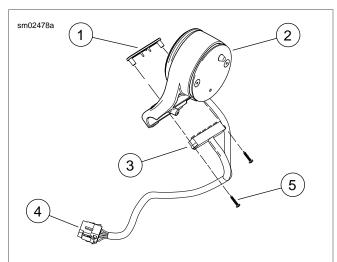


- 1. Indicator lamp bezel
- 2. Speedometer housing/handlebar clamp
- 3. Indicator lamp module
- 4. Instrument harness connector [20A]
- 5. Screw (2)

Figure 6-42. Indicator Lamps: XL 883R/L/N, XL 1200X/V, XL 1200CP/CB (w/mini-ape handlebar)

#### **REPLACEMENT: XR 1200X**

FASTENER	TORQUE VALUE	
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm

- Cover headlamp bracket with a clean soft cloth to protect surface.
- 2. See <u>Figure 6-43</u>. Holding instrument bracket (2), remove two screws with lockwashers securing instrument bracket to handlebar risers.
- 3. Remove two screws (5) to separate indicator lamp module (3) from instrument bracket and the indicator lamp bezel (1).

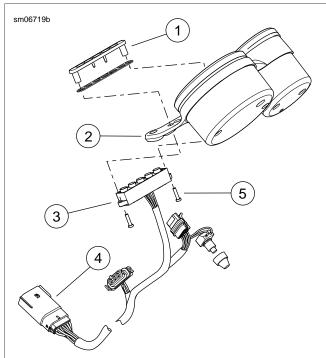

- 1. Indicator lamp bezel
- 2. Instrument bracket
- 3. Indicator lamp module
- 4. Instrument harness connector [20A]
- 5. Screw (2)

Figure 6-43. Indicator Lamps: XR 1200X

- Remove instrument harness. See <u>6.4 SPEEDOMETER</u>: XL MODELS or <u>6.5 SPEEDOMETER AND TACHO-METER</u>: XR 1200X.
- Install new instrument harness. See <u>6.4 SPEEDOMETER:</u> XL MODELS or <u>6.5 SPEEDOMETER AND TACHO-METER:</u> XR 1200X.

- 6. See <u>Figure 6-43</u>. Assemble the indicator lamp bezel and the indicator lamp module (3) onto instrument bracket (2). Secure with two screws (5).
- 7. Install instrument bracket onto handlebar risers. Tighten to 12-18 ft-lbs (16.3-24.4 Nm).
- Proceed to 6.15 INDICATOR LAMP MODULE, Assembly: All Models.

#### **ASSEMBLY: ALL MODELS**

- XL Models: See 6.28 ELECTRICAL CADDIES.
  - Feed instrument harness between coil bracket uprights, back to right wire harness caddy.
  - Plug instrument harness pin connector [20A] into socket connector [20B] in right wire harness caddy.
  - Mate right and left wire harness caddies. Secure with screw and tighten.
- 2. XR 1200X: See 6.28 ELECTRICAL CADDIES.
  - Feed instrument harness along left side of frame next to left and right hand control harnesses and inside of coil bracket upright.
  - Plug instrument harness pin connector [20A] into socket connector [20B] in right wire harness caddy.
- 3. Secure instrument harness to vehicle with cable straps in locations previously noted.
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or 4.5 FUEL TANK: XR 1200X.
- 5. Install main fuse.

#### **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

6. Install seat.

# TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V

6.16

# BULB REPLACEMENT EXCEPT XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE VALUE	
Tail lamp lens screw	20-24 in-lbs	2.3-2.7 Nm

#### NOTE

#### XL 883N/XL 1200X/V:

- The stop lamps are dual filament turn signal bulbs in housings with red lenses. Replace the turn signal bulbs.
- Certain markets require the XL 883R/L tail lamp.
- 1. Turn the ignition switch to OFF.
- 2. See Figure 6-44. Remove two screws and lens (4) from base (3).
- Press the locking tab. Remove 4-pin multilock connector from circuit board.
- Turn socket assembly (1) one-quarter turn counterclockwise to release assembly from lens. Remove (pull) assembly from lens. Remove bulb from socket.
- Coat base of new bulb with ELECTRICAL CONTACT LUBRICANT. Install new bulb into socket.
- Install bulb assembly into lens. Turn assembly one-quarter turn clockwise to lock in place.
- 7. Connect 4-pin multilock connector to circuit board.
- Install lens to base with two screws. Tighten to 20-24 in-lbs (2.3-2.7 Nm).

#### WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

9. Test tail lamp.

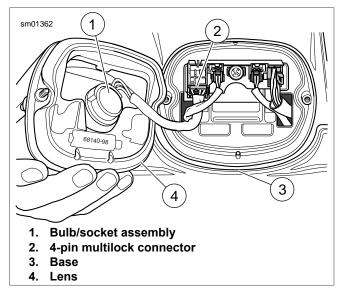


Figure 6-44. Tail Lamp

# BASE REPLACEMENT: XL 883R/L AND XR 1200X


FASTENER	TORQUE VALUE	
Tail lamp base mounting screw: XL Models	45-48 in-lbs	5.1-5.4 Nm
Tail lamp base mounting screw: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm
Tail lamp lens screw	20-24 in-lbs	2.3-2.7 Nm

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. See Figure 6-45 or Figure 6-46. Remove two screws (1) and lens (2) from base (9).
- 3. See Figure 6-47. Press locking tab and remove 4-Pin multilock connector [93] (1) from circuit board.
- Press locking tabs and remove right [18] (3) and left [19]
   two 2-Pin turn signal connectors and 6-Pin Power In connector [94] (4) from the circuit board.
- XL Models except 1200C/CP/CA/CB: See Figure 6-45.
   Remove base as follows:
  - a. Remove screw (6) from nut plate (7).
  - b. Remove circuit board (8) from base.
  - c. Remove base (9) from rear fender.

- XL Models except 1200C/CP/CA/CB: Install base as follows:
  - a. Install base on rear fender.
  - b. Install screw, pin housing and circuit board to base. Tighten to 45-48 **in-lbs** (5.1-5.4 Nm).

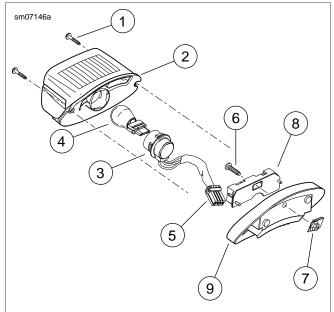

- 1. Screw
- 2. Lens
- 3. Socket
- 4. Bulb
- 5. Tail lamp connector [93]
- 6. Screw
- 7. Nut plate
- 8. Circuit board
- 9. Base

Figure 6-45. Tail Lamp Assembly: XL 883R/L

- 7. **XR 1200X:** See <u>Figure 6-49</u>. Remove base as follows:
  - a. Remove pin housing and circuit board from base.
  - b. Remove screws (1, 2) and remove base from frame.
  - c. If replacing base, remove turn signals from base. See <u>6.18 FRONT TURN SIGNALS</u>.

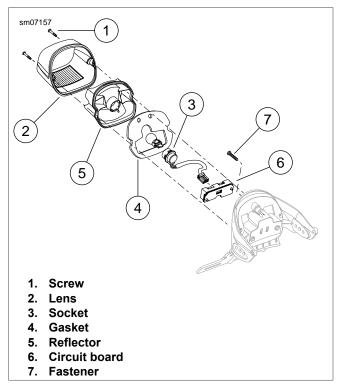


Figure 6-46. Tail Lamp Assembly: XR 1200X

- 8. XR 1200X: See Figure 6-49. Install base as follows:
  - Install base to frame with screws (1, 2). Tighten screw to 36-60 in-lbs (4.1-6.8 Nm).
  - b. Set pin housing and circuit board onto base.
- 9. Install connectors to circuit board.
- 10. Install lens to base with two screws. Tighten screws to 20-24 **in-lbs** (2.3-2.7 Nm).
- 11. Install main fuse.

#### **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

12. Verify operation of lighting system.

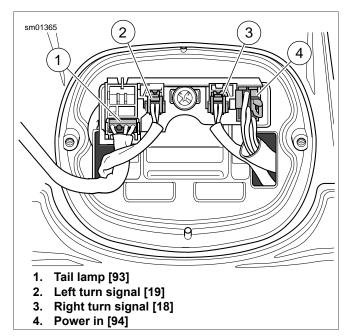


Figure 6-47. Tail Lamp Base Connectors

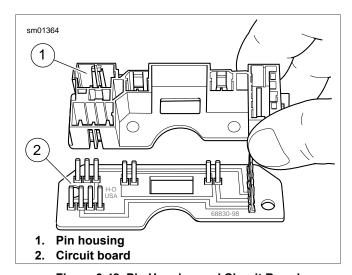


Figure 6-48. Pin Housing and Circuit Board

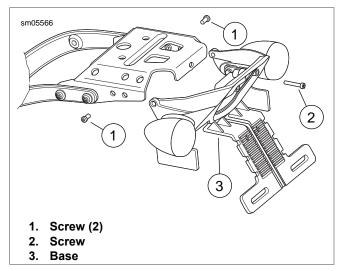


Figure 6-49. Tail Lamp Base: XR 1200X

### LED TAIL LAMP: XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE VALUE	
Tail lamp LED screws: XL 1200C/C ANV/CP/CA/CB	20-25 in-lbs	2.3-2.8 Nm
Tail lamp LED base fasteners: XL 1200C/C ANV/CP/CA/CB	40-50 <b>in-lbs</b>	4.5-5.6 Nm

#### Removal

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Remove the seat.
- 3. See Figure 6-50. Separate the tail lamp subharness connector [40] housings.
- Remove the lower rear shock bolts and raise the motorcycle to access the tail lamp. See <u>2.24 SHOCK</u> <u>ABSORBERS</u>.
- 5. See Figure 6-51. Remove the fasteners (3) and remove the wire harness from the inner fender rail.
- 6. Separate the tail lamp base (2) from the rubber gasket (5).
- 7. Remove the two screws (4) to remove the LED (1) from the tail lamp base.

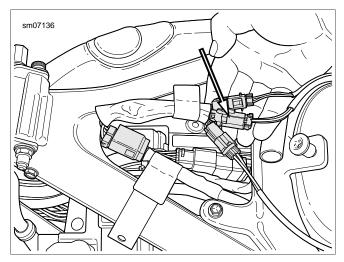


Figure 6-50. Tail Lamp Subharness Connector [40]

## Installation

- 1. Thread the LED wire harness through the tail lamp base and the rubber gasket.
- 2. Fasten the LED to the tail lamp base and tighten the screws to 20-25 **in-lbs** (2.3-2.8 Nm).
- Loosely install the rubber gasket and the tail lamp to the fender and thread the wire harness back through the inner rail
- 4. Tighten the fasteners to 40-50 in-lbs (4.5-5.6 Nm).
- Lower the rear wheel and install the shock bolts. See 2.24 SHOCK ABSORBERS.
- 6. Connect the subharness connector [7] housings.
- 7. Install main fuse.

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

8. Install the seat.

# **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

9. Verify operation of lighting system.

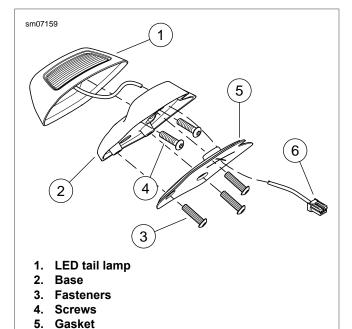


Figure 6-51. LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB

6. Subharness connector [40]

# LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V

6.17

# **GENERAL**

The XL 883N and XL 1200X/V models use a convertible sidemount license plate in some markets. This assembly requires a separate license plate lamp module.

### NOTES

- This part cannot be repaired. Replace upon failure.
- This feature may not be available in all markets.

# **REMOVAL: DOMESTIC ONLY**

PART NUMBER	TOOL NAME
HD-45968	FAT JACK

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- Position vehicle upright on a suitable lift. Use a FAT JACK (Part No. HD-45968) or similar lifting device underneath frame to raise rear end of motorcycle high enough to permit the removal of the lower shock absorber mounting screws.
- Remove lower shock absorber mounting screw and nut on each side of vehicle. See 2.24 SHOCK ABSORBERS.
- Continue to raise vehicle enough to access wiring on underside of rear fender.
- Remove seat.
- 6. See <u>Figure 6-52</u>. Unplug license plate lamp connector [40].
- 7. See Figure 6-53. Carefully pull license plate lamp harness (6) through feed-through hole (5) on left side of fender.
- 8. Remove license plate lamp harness from fender harness clip (1) on left side of fender.
- See <u>Figure 6-54</u>. Remove license plate lamp harness (3) from upper license plate bracket harness clips (1) and harness channel (2).
- 10. Remove two screws (4) and license plate lamp module (5) from license plate bracket.


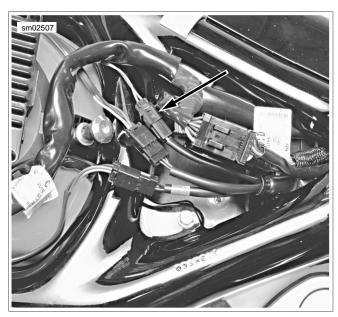



Figure 6-52. License Plate Lamp Connector [40]

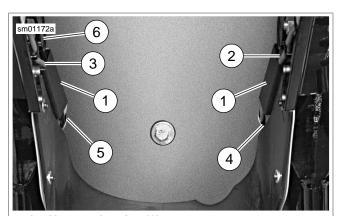

- 1. Harness bracket (2)
- 2. Right rear lighting harness
- 3. Left rear lighting harness
- 4. Right feed-through hole
- 5. Left feed-through hole
- 6. License plate lamp harness

Figure 6-53. Lighting Harnesses and Harness Brackets: XL 883N, XL 1200X/V

6-40 2013 Sportster Service: Electrical

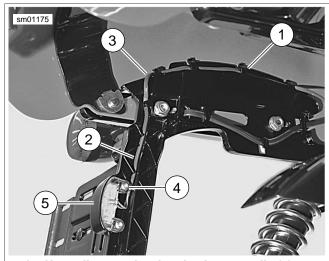

- 1. Upper license plate bracket harness clip (5)
- 2. Harness channel
- 3. License plate lamp harness
- 4. Screw (2)
- 5. License plate lamp module

Figure 6-54. Removing/Installing License Plate Lamp Module: XL 883N, XL 1200X

## INSTALLATION: DOMESTIC ONLY

FASTENER	TORQUE VALUE	
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm

- See <u>Figure 6-54</u>. Install **new** license plate lamp module (5) into convertible side mount license plate bracket. Secure with two screws (4).
- 2. Feed license plate lamp harness (3) up through harness channel (2). Insert harness into upper license plate bracket harness clips (1).
- 3. See <u>Figure 6-53</u>. Insert license plate lamp harness (6) into fender harness clip (1) on left side of fender.
- Feed harness through feed-through hole (5) on left side of rear fender.
- 5. See Figure 6-52. Plug in license plate lamp connector [40].

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- Install seat.
- Install lower shock absorber screw and nut on each side of vehicle. Tighten to 45-50 ft-lbs (61-68 Nm). See 2.24 SHOCK ABSORBERS.
- 8. Install main fuse.
- 9. Remove vehicle from lift.

# **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

10. Verify operation of lighting system.

## REMOVAL: NON-DOMESTIC

PART NUMBER	TOOL NAME
HD-45968	FAT JACK

See <u>Figure 6-55</u>. The XL 883N and XL 1200X/V models built for international markets incorporate a center-mounted license plate holder and lamp assembly.


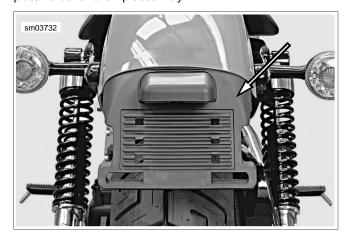



Figure 6-55. License Plate Holder and Lamp Assembly: XL 883N, XL 1200X/V (HDI)

- 1. Remove main fuse.
- 2. Remove seat.
- 3. Use a FAT JACK (Part No. HD-45968) or similar lifting device underneath frame to raise rear end of motorcycle high enough to permit the removal of the lower shock absorber mounting screws.
- 4. Remove lower shock absorber mounting screw and nut on each side of vehicle. See 2.24 SHOCK ABSORBERS.
- Continue to raise vehicle enough to access wiring on underside of rear fender.
- 6. See <u>Figure 6-56</u>. Unplug license plate lamp harness connector [40] (2).
- See <u>Figure 6-57</u>. Remove license plate lamp harness (3) from harness bracket (1) and three harness clips (2). Feed harness and connector in through hole in rear fender.
- 8. See Figure 6-58. Remove two fender support screws with washers (4). Remove screw with washer (5) securing rear fender to fender brace (2). Remove fender brace and license plate holder assembly (1).

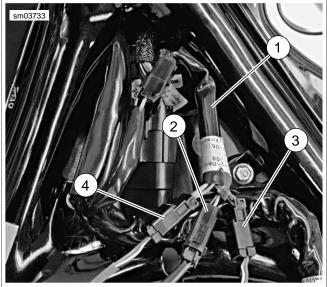


- Interconnect harness
- 2. License plate lamp harness connector [40]
- 3. Right turn signal/brake/tail lamp harness connector [18]
- 4. Left turn signal/brake/tail lamp harness connector [19]

Figure 6-56. Rear Lighting Interconnect Harness: XL 883N, XL 1200X (HDI)

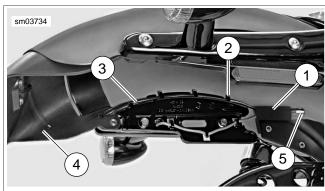

- 1. Harness bracket
- Harness clip (3)
- License plate lamp harness
- License plate holder
- 5. Feedthrough hole

Figure 6-57. License Plate Holder and Lamp Harness Mounting: XL 883N, XL 1200X (HDI)

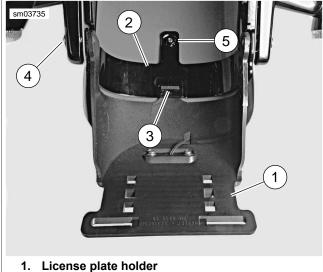

- 2. Rear fender brace
- 3. Tab
- 4. Fender support screw with washer (2)
- Screw with washer

Figure 6-58. License Plate Holder: XL 883N, XL 1200X (HDI)

See Figure 6-59. Remove two screws with washers (2) securing license plate lamp housing to license plate holder (1). See Figure 6-60. Separate lamp housing (3) and gasket (2) from license plate holder (1).


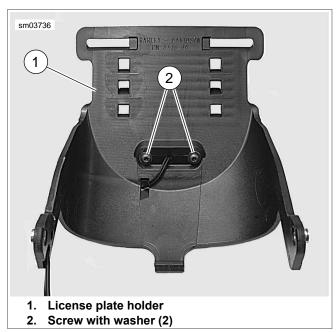



Figure 6-59. License Plate Holder and Lamp Mounting Screws: XL 883N, XL 1200X (HDI)

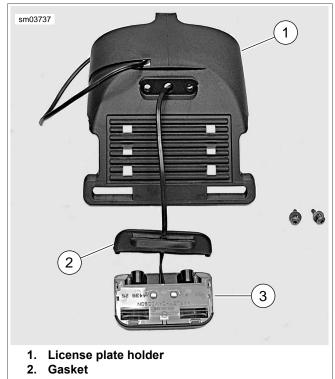

Lamp housing


Figure 6-60. Lamp Housing Separated from License Plate Holder: XL 883N, XL 1200X (HDI)

- 10. See Figure 6-61. Insert the tip of a small flat bladed screwdriver (3) into each slot (2) in lamp housing. Gently tilt screwdriver handle outward (away from lamp housing) just enough to disengage housing from cover. Separate housing from cover and slide housing away from tabs (4) in cover.
- 11. See Figure 6-62. If replacing a light bulb (2), gently pull bulb straight out of socket assembly (3). Push new light bulb into socket.

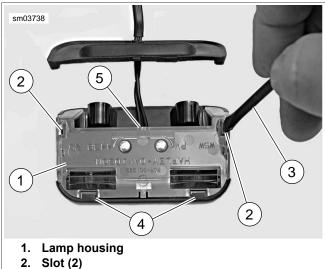

- 3. Screwdriver
- 4. Tab (2)
- 5. Feedthru slots for harness wires

Figure 6-61. Removing License Plate Lamp Housing Cover: XL 883N, XL 1200X (HDI)

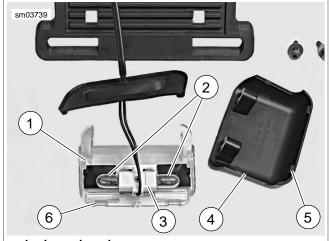

- 1. Lamp housing
- 2. Light bulb (2)
- 3. Socket assembly
- 4. Housing cover
- 5. Tab (2)
- 6. **Slot (2)**

Figure 6-62. Replacing License Plate Light Bulbs: XL 883N, XL 1200X (HDI)

# **INSTALLATION: HDI**

FASTENER	TORQUE VALUE	
License plate lamp housing screw: XL 883N	14-16 <b>in-lbs</b>	1.2-1.3 Nm
Fender support, rear, screw: XL 883N	132-216 <b>in-lbs</b>	14.9-24.4 Nm
Fender brace, rear, screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm

- If reusing license plate lamp housing, see <u>Figure 6-62</u>. Carefully fit housing cover (4) onto lamp housing (1), sliding tabs on cover (5) into slots (6) in housing. Make sure harness wires fit into feedthrough slots in housing. Gently snap cover onto housing, being careful not to pinch wires.
- 2. See Figure 6-60. Fit gasket (2) onto lamp housing (3).
- See <u>Figure 6-59</u>. Install lamp housing onto license plate holder (1) with lamp housing cover facing upward. Secure with two screws (2). Tighten to 14-16 in-lbs (1.2-1.3 Nm).
- 4. See Figure 6-58. Fit tab (3) on license plate holder (1) into slot in rear fender brace (2). Install assembly onto vehicle. Install screw with washer (5) through fender and into fender brace. Tighten only finger-tight at this time.
- Install two screws with washers (4) through fender struts, fender, fender brace and into threaded inserts in license plate holder.
- See <u>Figure 6-63</u>. Make sure license plate holder threaded inserts (3) fit into holes (4) in fender brace (2). Tighten to 132-216 in-lbs (14.9-24.4 Nm).
- Now tighten screw securing fender to center of fender brace to 20-25 in-lbs (2.3-2.8 Nm).
- 8. See Figure 6-57. Install license plate lamp harness (3) into three clips (2) in fender bracket. Feed harness and connector through feedthrough hole (5) in fender. Press harness into harness bracket (1).
- See <u>Figure 6-56</u>. Plug license plate lamp harness connector [40B] into interconnect harness connector [40B] (2).
- Install lower shock absorber screw and nut on each side of vehicle. Tighten to 45-50 ft-lbs (61-68 Nm). See 2.24 SHOCK ABSORBERS.

# **AWARNING**


After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 11. Install seat.
- 12. Install main fuse.

# **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

13. Verify operation of lighting system.

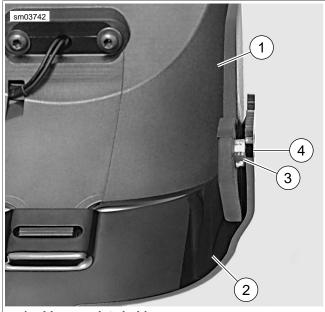

- 1. License plate holder
- 2. Rear fender brace
- 3. Threaded insert
- 4. Hole

Figure 6-63. License Plate Holder and Rear Fender Brace: XL 883N, XL 1200X (HDI)

# FRONT TURN SIGNALS

# **BULB REPLACEMENT**

- Insert coin in notch of front or rear turn signal lens cap. Carefully twist coin until lens cap pops out of turn signal housing.
- 2. Replace bulb.
  - a. Push bulb and turn counterclockwise.
  - Pull bulb from socket when tab on bulb clears opening on socket.
  - Coat base of **new** bulb with ELECTRICAL CONTACT LUBRICANT.
  - d. Push **new** bulb in and turn clockwise to lock in place.
- 3. Snap lens cap back into housing.

# **ALL EXCEPT XL 1200X**

FASTENER	TORQUE VALUE	
Turn signal, front, ball head studs	96-144 <b>in-lbs</b>	10.8-16.3 Nm
Turn signal clamp, front, screw	96-120 <b>in-lbs</b>	10.8-13.6 Nm

## Removal

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or 4.5 FUEL TANK: XR 1200X.
- Separate left and right wire harness caddies. See 6.27 MAIN WIRING HARNESS.
- 5. See <u>Figure 6-64</u>. Locate turn signal connector [31] (4) mounted on right wire harness caddy (2). Press latch (5) and separate connector halves.
- Remove the corresponding socket terminals from connector [31B].
- 7. See <u>Figure 6-65</u>. Loosen the hex screw holding turn signal housing ball end stud to front of hand lever bracket.
- Pull the wire conduit through the coil bracket, the fork clamp and handlebar clips.


## Installation

- See <u>Figure 6-66</u>. Inspect the ball head stud (1) and replace as required. Tighten **new** ball head studs to 96-144 **in-lbs** (10.8-16.3 Nm).
- Lay old turn signal housing and wires next to new and cut new wires to length.
- Trim sheath back approximately 2.5 in (63.5 mm) and crimp new socket terminals onto wires.
- Route wires through handlebar clips, between fork clamp and head lamp bracket and then through coil bracket.
- Install housing ball end stud into the lever bracket and aim to front. Tighten to 96-120 in-lbs (10.8-13.6 Nm).
- 6. Insert socket terminals into turn signal connector.
- Join the connector [31] halves. Reassemble left and right wire harness caddies. See 6.27 MAIN WIRING HARNESS.
- Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- 9. Install main fuse.

# **AWARNING**

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

10. Test the turn signals

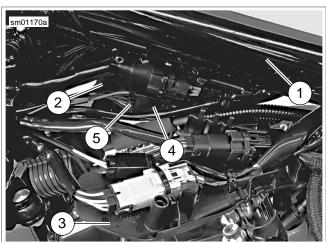

- 1. Frame backbone
- 2. Right wire harness caddy
- 3. Left wire harness caddy
- 4. Turn signal connector [31]
- 5. Connector latch

Figure 6-64. Turn Signal Connector [31]

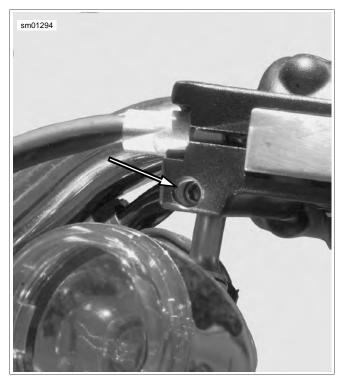


Figure 6-65. Turn Signal Ball Stud Screw

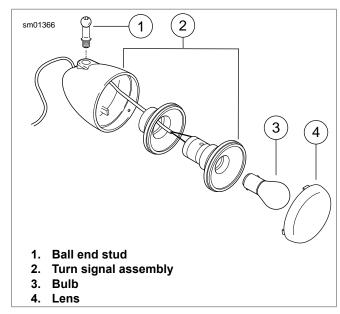


Figure 6-66. Front Turn Signal Components: All Except XL 1200X

# XL 1200X

FASTENER	TORQUE VALUE	
Turn signal housing to bracket: XL 1200X	12-16 ft-lbs	16.3-21.7 Nm
Fork bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm

## Removal

# **AWARNING**

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS.

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove fuel tank. See 4.4 FUEL TANK: XL MODELS.
- 4. Separate left and right wire harness caddies. See 6.27 MAIN WIRING HARNESS.
- Locate the turn signal connector [31] mounted on right wire harness caddy. Press latch and separate connector halves.
- Remove the corresponding socket terminals from connector [31B].
- 7. Remove the turn signal bracket fastener (front fork bracket pinch screw) and washer and the bracket.
- Remove the turn signal nut and lockwasher to remove the turn signal.

# Installation

- 1. See <u>Figure 6-67</u>. Thread the turn signal leads through the bracket (1).
- 2. Install the turn signal (2) with the lockwasher (3) and nut (4) and tighten to 12-16 ft-lbs (16.3-21.7 Nm).
- Fit the bracket to the upper fork clamp.
- Install and tighten the turn signal bracket fastener (6) and washer (5) (front fork bracket pinch screw) to 30-35 ft-lbs (40.7-47.5 Nm).
- 5. Insert socket terminals into turn signal connector.
- Join the connector [31] halves. Reassemble left and right wire harness caddies. See <u>6.27 MAIN WIRING HARNESS</u>.
- 7. Install the cable straps.
- 8. Install the fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u>.
- 9. Install main fuse.

# **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

10. Verify operation of lighting system.

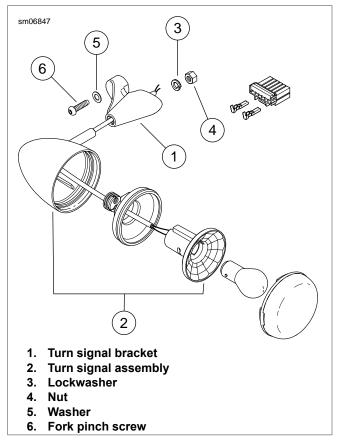


Figure 6-67. Front Turn Signal Components: XL 1200X

# **REAR TURN SIGNALS**

# **GENERAL**

# **Bulb Replacement**

See 6.18 FRONT TURN SIGNALS, Bulb Replacement.

# **Tail and Stop Lamps**

**XL 883N, XL 1200X/V:** The rear turn signals are the tail and stop lamps. This feature may not be available in all markets. The rear turn signal/stop lamp functions are provided by an electronic converter module. See <u>6.20 REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM)</u>.

#### NOTE

XL 883N and XL 1200X/V models in certain markets are equipped with LED rear turn signal/stop lamp/tail lamp assemblies. These models do not require an electronic converter module. The LED assemblies are sealed units and cannot be disassembled. The entire rear turn signal housing assembly must be replaced.

# XL 883R/L

FASTENER	TORQUE VALUE	
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm
Strut cover screw	132-216 <b>in-lbs</b>	14.9-24.4 Nm

# Removal

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Remove seat.
- 3. See Figure 6-68. Remove two screws (2) and tail lamp lens (3) from tail lamp base (4).
- 4. See <u>Figure 6-69</u>. Remove left and right turn signal connectors (1, 2). Pull turn signal wiring harnesses through harness access holes (3) in tail lamp base.
- Remove lower shock absorber mounting screws and nuts. See <u>2.24 SHOCK ABSORBERS</u>.
- 6. See <u>Figure 6-70</u>. Disengage turn signal wiring harnesses from wire retention brackets (1).
- 7. See Figure 6-71. Remove screws (3, 4), washers (5), nuts (7) and nut plate (8).
- 8. Remove rear fender strut covers (1) with attached turn signal assemblies (2) from rear fender struts. Carefully slide wiring through holes.

- Remove socket terminals from left and right turn signal connectors [18B], [19B].
- 10. Unscrew and remove turn signal stalk (6) and fender strut cover (1) from each turn signal assembly (2). Mount will separate from turn signal housing.

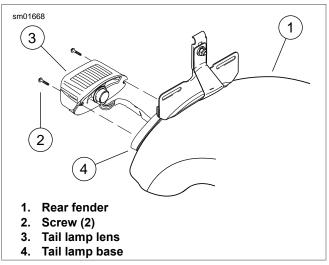


Figure 6-68. Tail Lamp Lens: All Models Except XL 883N, XL 1200X/V and XL 1200C/C ANV/CP/CA/CB



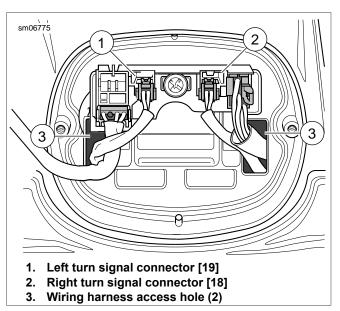


Figure 6-69. Turn Signal Connectors: All Models Except XL 883N, XL 1200X/V/C/CP/CA/CB

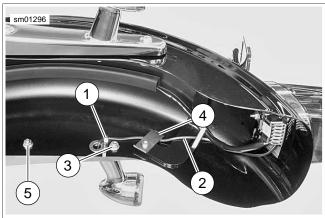

- 1. Wire retention bracket (2)
- 2. Turn signal wiring harness (2)
- 3. Rear turn signal stalk nut (2)
- 4. Nut plate (2)
- 5. Nut (2)

Figure 6-70. Turn Signal Wire Routing: XL 883R/L

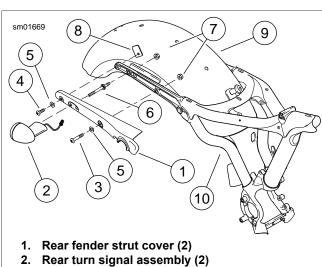

- 3. Screw (2)
- 4. Screw (2)
- 5. Washer (4)
- 6. Turn signal stalk (2)
- 7. Nut (4)
- 8. Nut plate (2)
- 9. Rear fender
- 10. Frame

Figure 6-71. Rear Fender Mounting Components (typical)

## Installation

- Lay old turn signal housing and wires next to new and cut new wires to length. Trim sheath back approximately 2.5 in (63.5 mm).
- 2. Crimp new terminals onto wires.
- See Figure 6-72. Install each turn signal housing (3) and mount (4) to rear fender strut cover with turn signal stalk (5). Tighten to 96-156 in-lbs (10.9-17.6 Nm).
- 4. Press wiring harness terminal sockets into left and right connector housings [19B], [18B].

- Install rear fender strut covers over fender struts. Push turn signal wiring harness through the hole in the strut and fender.
- Thread nut onto turn signal stalk from inside fender. Finger tighten.
- Secure fender to each fender strut with screw, washer and nut in forward mounting hole. Install screw, washer and nut plate in aft mounting hole. Finger tighten.
- 8. Tighten fasteners:
  - Tighten turn signal stalk nuts to 132-216 in-lbs (14.9-24.4 Nm).
  - Tighten strut cover screws to 132-216 in-lbs (14.9-24.4 Nm).
- Engage turn signal wiring harness in wire retention bracket on each side of rear fender.
- 10. Push left and right turn signal wiring harnesses through corresponding harness access holes in tail lamp base.
- 11. Attach left [18] and right [19] turn signal connectors.
- 12. Attach tail lamp lens to tail lamp base.
- 13. Install lower shock absorber mounting screws and nuts. See <u>2.24 SHOCK ABSORBERS</u>.
- 14. Install main fuse.

# **AWARNING**


After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

15. Install seat.

# **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

16. Verify operation of lighting system.

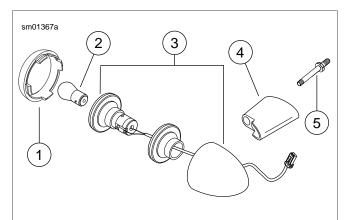

- 1. Lens
- 2. Bulb (element)
- 3. Rear turn signal housing
- 4. Mount
- 5. Turn signal stalk

Figure 6-72. Rear Turn Signal Components: XL 883R/L

# **XL 883N AND XL 1200X/V**

FASTENER	TORQUE	VALUE
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm
Strut cover screw	132-216 <b>in-lbs</b>	14.9-24.4 Nm


## Removal

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)


- Remove main fuse. 1.
- 2. Remove seat.
- 3. Raise the rear wheel.
- Remove lower shock absorber mounting screws and nuts. 4. See 2.24 SHOCK ABSORBERS.
- Raise motorcycle to access the underside of the rear fender.
- See Figure 6-73. Unplug rear lighting harness connectors [18], [19] (1, 2).
- See <u>Figure 6-74</u>. Remove left rear lighting harness (3) from RH and LH harness bracket (1).
- Remove lighting harness from RH and LH lower bracket harness clips (2).
- See Figure 6-75. Pull both rear lighting harnesses (2, 3) through feed-through holes (4, 5) in rear fender.
- 10. See Figure 6-76. Remove screws (3, 4), washers (5), nuts (7) and nut plate (8). Remove rear fender strut covers (1) with attached turn signal assemblies (2) from rear fender

- struts. Carefully feed turn signal harnesses through holes in fender and fender struts.
- 11. Remove socket terminals from left and right turn signal connectors [18B], [19B].
- 12. Remove turn signal stalk (6) (1) and fender strut cover from each turn signal assembly (2). Mount will separate from turn signal housing.

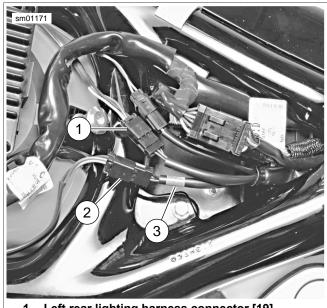


- Left rear lighting harness connector [19]
- Right rear lighting harness connector [18]
- Brown band

Figure 6-73. Rear Lighting Harness Connectors: XL 883N, XL 1200X/V

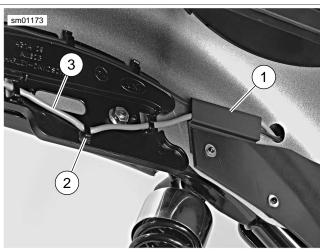


- 1. Harness bracket
- 2. Lower bracket harness clip (3)
- 3. Left rear lighting harness

Figure 6-74. Rear Lighting Harness Removal/Installation: XL 883N, XL 1200X/V

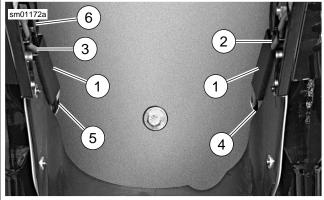

- 1. Harness bracket (2)
- 2. Right rear lighting harness
- 3. Left rear lighting harness
- 4. Right feed-through hole
- 5. Left feed-through hole
- 6. License plate lamp harness

Figure 6-75. Lighting Harnesses and Harness Brackets: XL 883N, XL 1200X/V

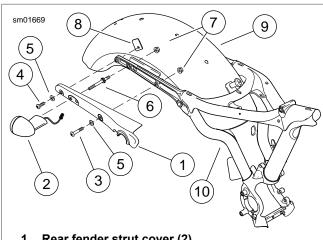

- 1. Rear fender strut cover (2)
- 2. Rear turn signal assembly (2)
- 3. Screw (2)
- 4. Screw (2)
- 5. Washer (4)
- 6. Turn signal stalk (2)
- 7. Nut (4)
- 8. Nut plate (2)
- 9. Rear fender
- 10. Frame

Figure 6-76. Rear Fender Mounting Components (typical)

## Installation

- 1. Lay old turn signal housing and wires next to **new** and cut new wires to length. Trim sheath back approximately 2.5 in (63.5 mm).
- 2. Crimp **new** terminals onto wires.
- 3. See Figure 6-77. Install each turn signal housing (3) and mount (4) to rear fender strut cover with turn signal stalk. Tighten to 96-156 in-lbs (10.9-17.6 Nm).

- Press wiring harness terminal sockets into left and right connector housings [19B], [18B].
- Install rear fender strut covers over fender struts. Push turn signal wiring harness through hole in strut and fender.
- 6. Finger tighten nut onto turn signal stalk from inside fender.
- 7. Secure fender to each fender strut with screw, washer and nut in forward mounting hole. Install screw, washer and nut plate in aft mounting hole. Finger tighten.

#### NOTE

See Figure 6-78. Make certain that tab (3) on nut plate (2) fits into slot (4) in fender brace (1) when securing nut plate with rearmost fender mounting screw (5).

- 8. Tighten mounting screws in the following sequence:
  - Tighten turn signal stalk nuts to 132-216 in-lbs (14.9-24.4 Nm).
  - Tighten strut cover screws to 132-216 in-lbs (14.9-24.4 Nm).
- 9. Install lower shock absorber mounting screws and nuts. See 2.24 SHOCK ABSORBERS.
- 10. Install main fuse.

# WARNING


After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

11. Install seat.

# **A**WARNING


Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

12. Verify operation of lighting system.

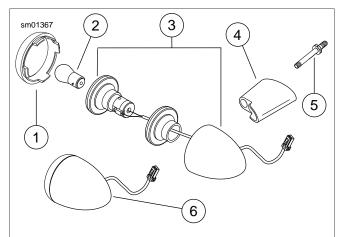

- 1. Lens
- 2. Bulb (element)
- 3. Rear turn signal housing
- 4. Mount
- 5. Turn signal stalk
- Rear turn signal housing (sealed unit: XL 883N, XL 1200X, XL 1200V)

Figure 6-77. Rear Turn Signal Components

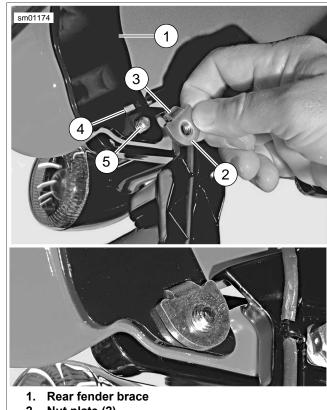

- 2. Nut plate (2)
- 3. Tab
- 4. Slot
- 5. Mounting screw (2)

Figure 6-78. Rear Fender Nut Plate: XL 883N, XL 1200X/V

# XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE VALUE	
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm

## Removal

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Remove seat.
- 3. Raise the rear wheel.
- Remove the lower shock absorber mounting screws and nuts. See <u>2.24 SHOCK ABSORBERS</u>.
- Raise the motorcycle to access the underside of the rear fender.
- 6. See Figure 6-79. Separate the RH [18] (3) and LH [19] (4) turn signal connector housings.
- Remove the turn signal wire harness from the RH and LH wire retention brackets.
- 8. Pull the harness connectors through the feed holes in the fender.
- 9. Remove screws, washers, nuts and nut plate.
- 10. Remove rear fender strut covers with attached turn signals.
- 11. Thread the wire harness through the holes in the fender and fender struts.
- 12. Unscrew and remove turn signal stalk and fender strut cover from each turn signal assembly.
- 13. Remove socket terminals from RH [18B] and LH [19B] turn signal connectors.

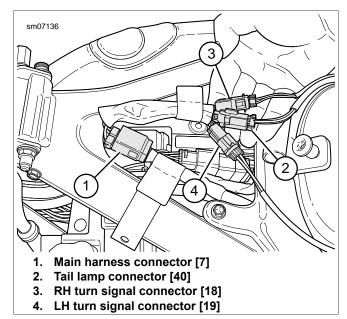


Figure 6-79. Turn Signal Wire Harness: XL 1200C/C ANV/CP/CA/CB

# Installation

- 1. Lay turn signal housing wires next to **new** and cut **new** to length. Trim sheath back 2.5 in (63.5).
- 2. Crimp **new** terminals onto leads.
- Assemble the turn signal housing to the mount and install the fastener. Tighten to 96-156 in-lbs (10.9-17.6 Nm).
- 4. Install wire harness terminals into RH and LH connector housings [18B], [19B].
- Thread turn sign wire harness through hole in strut and fender and install strut covers over fender struts.
- Thread nut onto turn signal stalk from inside the strut. Finger tighten.
- Secure fender to strut with screws, washers and nuts. Finger tighten.
- Tighten fasteners:
  - a. Turn signal stalks to strut cover to 132-216 **in-lbs** (14.9-24.4 Nm).
  - Fender strut cover to strut to 132-216 in-lbs (14.9-24.4 Nm).
- Thread turn signal wires through fender and behind the wire retention bracket.
- 10. Thread the turn signal wires through the fender openings and connect the housings [18] and [19].
- 11. Install shock absorber mounting screws and nuts and lower the motorcycle. See 2.24 SHOCK ABSORBERS.
- 12. Install main fuse.

# **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

13. Install seat.

# **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

14. Verify operation of lighting system.

## **XR 1200X**

FASTENER	TORQUE	VALUE
Turn signal housing, rear, screws: XR 1200X	30-40 in-lbs	3.4-4.5 Nm

#### Removal

- Remove seat.
- 2. Remove main fuse.
- 3. Remove two screws and tail lamp lens from tail lamp base.
- See <u>Figure 6-80</u>. Remove left and right turn signal connectors (1, 2). Pull turn signal wiring harnesses through harness access holes in tail lamp base (3).
- 5. Remove socket terminals from left and right turn signal connectors.
- 6. See <u>Figure 6-81</u>. Remove screws (6), plate (4), reflector (3) and turn signal housing (2).
- 7. Lay old turn signal housing and wires next to **new** and cut **new** wires to length. Trim sheath back approximately 2.5 in (63.5 mm).
- 8. Crimp **new** terminals onto wires.

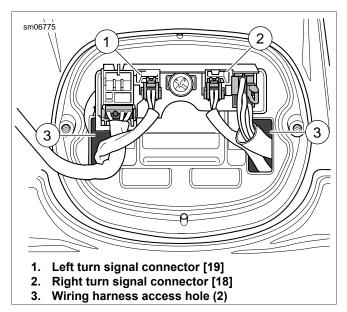


Figure 6-80. Turn Signal Connectors: All Models Except XL 883N, XL 1200X/V/C/CP/CA/CB

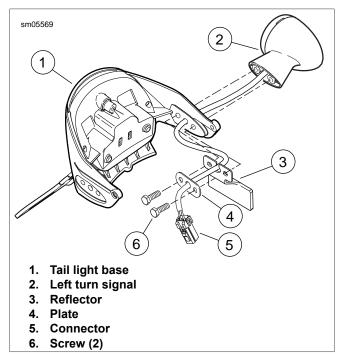


Figure 6-81. Turn Signal Housing Removal: XR 1200X

# Installation

- 1. See <u>Figure 6-81</u>. Install turn signal housing (2), reflector (3), and plate (4) with screws (6). Tighten screws to 30-40 **in-lbs** (3.4-4.5 Nm).
- 2. Press wiring harness terminal sockets into left [19B] and right [18B] connector housings.
- 3. Push left and right turn signal wiring harnesses through corresponding harness access holes in tail lamp base.
- Plug left turn signal connector [18] and right connector [19] into left and right sockets located on rear lighting circuit board in tail lamp base.
- 5. Attach tail lamp lens to tail lamp base.
- 6. Install main fuse.

# **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 7. Install seat.
- 8. Verify operation of lighting system.

# REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM)

6.20


# **GENERAL**

#### NOTE

HDI XL 883N and XL 1200X/V models have a sealed LED tail lamp, stop lamp and turn signal assembly in each rear turn signal housing.

The domestic XL 883N and XL 1200X/V rear turn signal lamps also serve as tail lamps and stop lamps. One filament provides the tail lamp function while the other filament provides the turn signal and stop lamp.

See <u>Figure 6-82</u>. In order for a single filament to function both as turn signal and stop lamp, a converter module is required. The converter module is located in front of the battery, under the frame "Y" section.

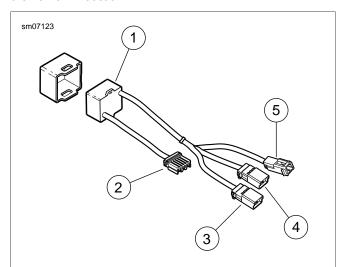

- 1. Converter module
- 2. Main harness connector [7]
- 3. License plate lamp connector [40]
- 4. Right turn signal connector [18]
- 5. Left turn signal connector [19]

Figure 6-82. Converter and Interconnect Harness

### REMOVAL


Remove seat.

# **A**WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

2. Remove battery. See <u>1.22 BATTERY MAINTENANCE</u>.

- 3. See Figure 6-83. Unplug the following harness connectors:
  - Antenna [209] (1) (H-DSSS equipped motorcycles only)
  - b. Right rear lighting harness [18] (2)
  - c. Left rear lighting harness [19] (3)
  - d. License plate lamp harness [40] (4)
  - e. Main wiring harness [7] (5)
  - f. Engine harness connector [145] (6)
- 4. See Figure 6-84. Remove ECM caddy fastener.
- 5. Remove right side cover.
- 6. Remove fastener securing bracket to oil tank.
- Remove barbed cable strap securing temperature sensor harness to bracket.
- 8. See Figure 6-85. Remove bracket fasteners (2).
- 9. Remove bracket (3) with converter module (7).
- Remove cable strap securing temperature sensor wire to oil tank mounting bracket.
- Remove rubber mounting tab (5) from mounting tab hole
   (4) to release module from bracket.

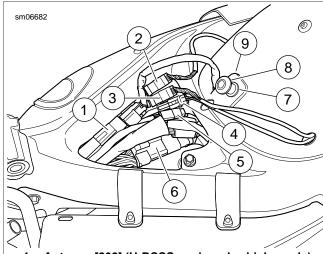


- 1. Antenna [209] (H-DSSS equipped vehicles only)
- 2. Right rear lighting harness connector [18]
- 3. Left rear lighting harness connector [19]
- 4. License plate lamp harness [40]
- 5. Main wiring harness connector [7]
- 6. Engine harness connector [145]
- 7. Flat washer
- 8. Seat post
- 9. Frame crossmember tab

Figure 6-83. Rear Lighting Harness Connectors: XL 883N, XL 1200X/V



Figure 6-84. ECM Caddy Fastener

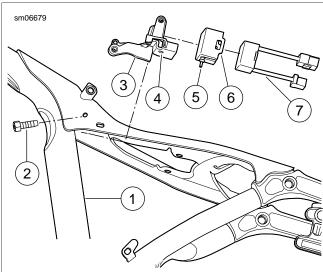

- 1. Frame
- 2. Bracket fastener (3)
- 3. Bracket
- 4. Mounting tab hole
- 5. Rubber mounting tab
- 6. Module holder
- 7. Module

Figure 6-85. Converter Module

## INSTALLATION

FASTENER	TORQUE VALUE	
ECM caddy fastener	72-96 <b>in-lbs</b>	8.1-10.8 Nm
Converter module bracket fasteners, rear lighting	36-60 in-lbs	4.1-6.8 Nm

- Feed converter module/interconnect harness connectors up through battery compartment, forward of battery strap bracket.
- 2. See <u>Figure 6-85</u>. Install module (7) and module holder (6) into bracket (3) by pulling rubber mounting tab (5) into mounting tab hole (4).
- 3. Position bracket up inside frame, under "Y" section.
- 4. Install but do not tighten bracket fasteners (2).
- 5. See Figure 6-84. Install ECM caddy fastener. Tighten to 72-96 in-lbs (8.1-10.8 Nm).
- 6. Tighten bracket fasteners to 36-60 in-lbs (4.1-6.8 Nm).
- Secure temperature sensor wire to oil tank mounting bracket with a cable strap.
- 8. Install right side cover.
- 9. See Figure 6-83. Plug in the following harness connectors:
  - a. Antenna [209] (1)
  - b. Right rear lighting harness [18] (2)
  - c. Left rear lighting harness [19] (3)
  - d. License plate lamp harness [40] (4)
  - e. Main wiring harness [7] (5)
  - f. Engine harness connector [145] (6)
- 10. Install battery. See 1.22 BATTERY MAINTENANCE.

# **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

11. Close left side cover. See 2.18 LEFT SIDE COVER.

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 12. Install seat.
- 13. Verify operation of lighting system.

# **REAR STOP LAMP SWITCH**

## **GENERAL**

**XL Models:** See <u>Figure 6-86</u>. The rear stop lamp switch (3) is located behind the rear brake master cylinder reservoir under the left side cover. The rear stop lamp switch is threaded into a tee nut in the rear brake line.

**XR 1200X:** The rear stop lamp switch is located underneath the motorcycle near the rear brake master cylinder reservoir. The rear stop lamp switch threads into a tee nut in the rear brake line.

The stop lamp switch is an open type switch which closes with hydraulic pressure. When the pressure in the line reaches a preset level, the rear stop lamp switch closes and the rear stop lamp illuminates.

#### NOTE

This part cannot be repaired. Replace upon failure.

## REPLACEMENT

FASTENER	TORQUE VALUE	
Stop lamp switch to tee nut	132-168 <b>in-lbs</b>	14.9-18.9 Nm
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm

- 1. Remove main fuse.
- XL Models: move rear brake master cylinder reservoir out of the way:
  - Remove the rear brake master cylinder reservoir cover. Grasp cover and pull straight away from reservoir
  - Remove reservoir mounting screw and secure reservoir upright out of the way. See <u>2.13 REAR BRAKE MASTER CYLINDER RESERVOIR</u>.
- 3. See <u>Figure 6-86</u> or <u>Figure 6-87</u>. Pull terminal sockets from spade connections (4) on stop lamp switch.
- 4. Remove stop lamp switch (3) from tee nut (2).
- Thread **new** stop lamp switch (3) to tee nut (2) on brake line. Tighten switch to 132-168 **in-lbs** (14.9-18.9 Nm).

#### NOTE

**XR 1200X:** Make sure that the brake switch wires do not contact the ground strap cable.

- 6. Install terminal sockets on switch spade connections (4).
- 7. XL Models: Install rear brake master cylinder reservoir:
  - a. Replace the reservoir mounting screw. Tighten to 20-25 **in-lbs** (2.3-2.8 Nm).
  - b. Replace the brake master cylinder reservoir cover.
- 8. Install main fuse.
- 9. Install left side cover.
- Refill master cylinder and bleed brakes. See
   2.17 BLEEDING BRAKES.

# **A**WARNING


After repairing the brake system, test brakes at low speed. If brakes are not operating properly, testing at high speeds can cause loss of control, which could result in death or serious injury. (00289a)

11. Test operation of rear brake.

# **AWARNING**

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)


12. Test operation of stop lamp with the rear brake applied and the ignition/light switch turned ON.

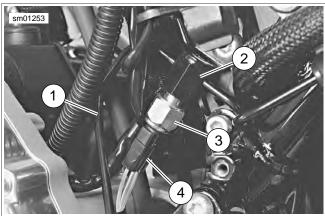

- 1. Rear brake line
- 2. Tee nut
- 3. Rear stop lamp switch
- 4. Spade connector terminal socket (2) [121]

Figure 6-86. Rear Stop Lamp Switch: XL Models Only

# **HOME**

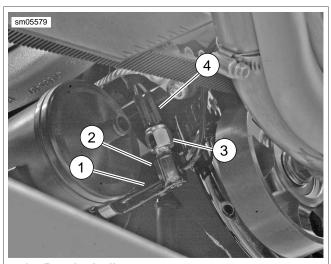

- 1. Rear brake line
- 2. Tee nut
- 3. Rear stop lamp switch
- 4. Spade connector terminal socket (2) [121]

Figure 6-87. Rear Stop Lamp Switch: XR 1200X

# **CRANK POSITION SENSOR (CKP)**

## **GENERAL**

The CKP sensor is a variable reluctance (VR) sensor. It generates an AC signal by sensing the passing of 30 teeth cast into the left side flywheel. Two consecutive teeth are missing in the flywheel to establish a reference point. The CKP sensor sends a signal to the ECM. This signal is used to reference engine position (TDC) and engine speed. The CKP sensor is located near the lower front left corner of the engine crankcase.

#### NOTE


This part cannot be repaired. Replace upon failure.

## **REMOVAL**

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. See <u>Figure 6-88</u>. Disconnect CKP sensor harness connector [79A] from wiring harness connector [79B] (4), located along left frame downtube.
- 3. Remove CKP wire harness from j-clip (3).
- 4. Remove screw (2). Carefully remove CKP sensor (1) and O-ring from engine crankcase.

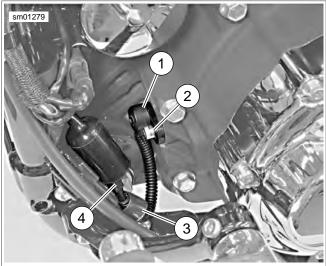

- 1. CKP sensor
- 2. Screw
- 3. Wire harness j-clip
- CKP sensor harness connector [79] (under protective rubber boot)

Figure 6-88. CKP Sensor (typical, XL model shown)

## INSTALLATION

FASTENER	TORQUE VALUE	
CKP screw	90-120 <b>in-lbs</b>	10.3-13.6 Nm

## NOTE

The CKP sensor O-ring has a blue teflon coating that provides lubrication during installation. No other lubrication is needed...

- See <u>Figure 6-88</u>. Carefully install CKP sensor (1) and Oring into engine crankcase with screw (2). Tighten to 90-120 in-lbs (10.3-13.6 Nm).
- 2. Route CKP sensor wiring harness through j-clip (3).
- 3. Attach CKP sensor harness connector [79A] to wiring harness connector [79B] (4).
- 4. Install main fuse.
- 5. Start engine and verify operation.

# 6.23


# **VOLTAGE REGULATOR**

# **GENERAL**

See Figure 6-89. The voltage regulator is located between the frame downtubes at the front of the motorcycle. Verify latch (5) connection to prevent connector separation.


### NOTE

This part cannot be repaired. Replace upon failure.

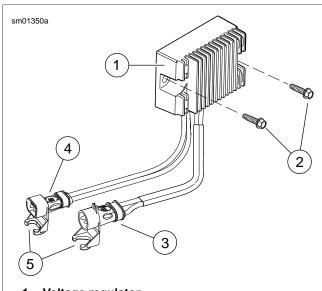

- 1. Voltage regulator
- 2. Screw (2)
- Stator pin connector [47A]
- 4. DC output pin connector [77A]
- 5. External latch

Figure 6-89. Voltage Regulator

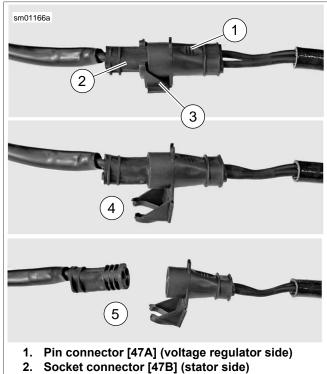

- 3. External latch
- 4. Open latch
- 5. Separate socket connector from pin connector

Figure 6-90. Separating Stator Connector Housings

# **REMOVAL: XL MODELS**

# **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

1. Remove main fuse.

## NOTE

Never pull on wiring when unplugging voltage connector.

- Unplug stator connector [47]. Lift external latch on pin housing and separate connector halves.
- Lift external latch on DC output connector [77] pin housing and separate connector halves.
- See Figure 6-91. Remove screws (2) from locations at top and bottom of voltage regulator. Remove regulator from vehicle, carefully threading harnesses through opening in regulator mounting bracket.

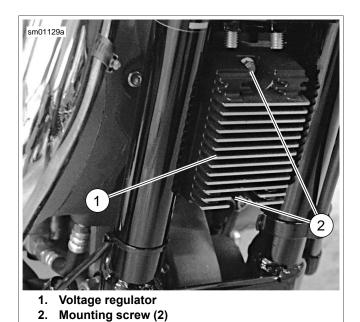


Figure 6-91. Voltage Regulator Location

# **INSTALLATION: XL MODELS**

FASTENER	TORQUE VALUE	
Voltage regulator mounting screw	36-60 in-lbs	4.1-6.8 Nm

- Position voltage regulator close to mounting bracket. Orient regulator so cooling fins face forward and wiring harnesses exit regulator body toward right side of vehicle.
- Route stator harness down along between right frame downtube and body of voltage regulator. Route stator harness connector [47A] toward right side of vehicle.
- 3. Mount voltage regulator on mounting bracket between frame downtubes and secure with mounting screws at two locations. Tighten to 36-60 **in-lbs** (4.1-6.8 Nm).
- 4. Plug stator connector [47A] into socket connector [47B]. Fold external locking latch over and lock in place.
- Plug voltage regulator DC output connector [77A] into socket [77B]. Fold external latch over and lock in place.
- 6. Install main fuse.
- Test charging system. See the electrical diagnostic manual.

# **REMOVAL: XR 1200X**

# **AWARNING**


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

1. Remove main fuse.

## NOTE


Never pull on wiring when unplugging voltage connector.

- 2. See <u>Figure 6-92</u>. Unplug stator connector (4). Carefully pull barbed cable strap (3) from frame.
- See <u>Figure 6-93</u>. Cut cable strap (1). Lift external latch on connector and separate connector halves.
- See <u>Figure 6-94</u>. Remove screws (1) from locations at top and bottom of voltage regulator (2). Remove regulator from vehicle, carefully threading harnesses through opening in regulator mounting bracket.

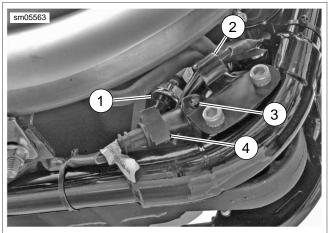


- 1. Oil pressure switch
- 2. J-clip
- 3. Barbed cable strap
- 4. Stator connector [47]

Figure 6-92. Oil Pressure Switch: XR 1200X

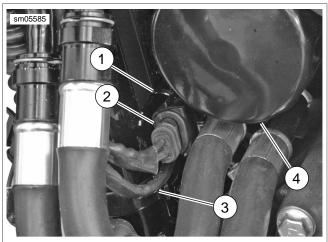

- 1. Cable strap
- 2. DC output conector
- 3. Oil pressure switch, neutral switch harness
- 4. Oil filter

Figure 6-93. DC Output Connector: XR 1200X

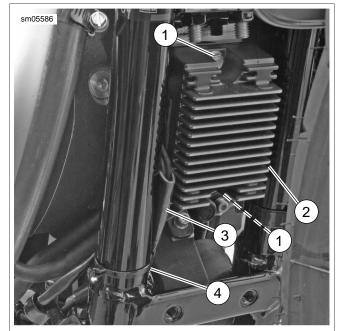

- 1. Screw (2)
- 2. Voltage regulator
- 3. Stator wiring
- 4. Cable strap

Figure 6-94. Stator Wire Routing: XR 1200X

# **INSTALLATION: XR 1200X**

FASTENER	TORQUE VALUE	
Voltage regulator mounting screw	36-60 in-lbs	4.1-6.8 Nm


- See <u>Figure 6-95</u>. Position voltage regulator close to mounting bracket (1). Orient regulator so cooling fins face forward and wiring harnesses exit regulator body toward right side of vehicle.
- 2. Thread DC output wires below mounting bracket. Route DC output connector (2) toward left side of vehicle.
- 3. Route stator wires (4) down along between right frame downtube and body of voltage regulator. Route stator harness connector [46A] toward right side of vehicle.

#### NOTE

Verify that the wires do not get pinched between bracket and regulator.


- Secure voltage regulator on mounting bracket with mounting screws. Tighten to 36-60 in-lbs (4.1-6.8 Nm).
- 5. See <u>Figure 6-96</u>. Connect stator connector (1) and fold external latch over and lock in place. Secure stator connector to bracket with barbed cable strap (3).
- Secure stator wires to right frame down tube with cable strap (2).
- 7. See Figure 6-97. Connect voltage regulator DC output connector. Fold external latch over and lock in place.
- Secure DC output connector (2) along with oil pressure switch, neutral switch harness (3) to voltage regulator bracket with cable strap (1).

- 9. Install main fuse.
- Test charging system. See the electrical diagnostic manual.

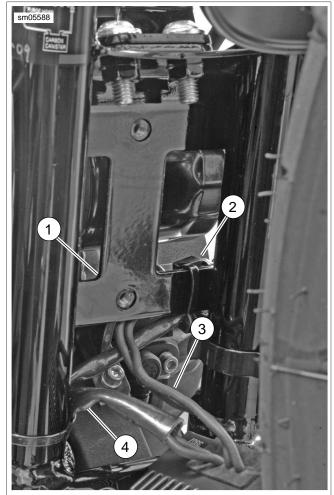


- 1. Voltage regulator mounting bracket
- 2. DC output connector
- 3. DC output wires
- 4. Stator wires

Figure 6-95. Voltage Regulator Wire Routing: XR 1200X

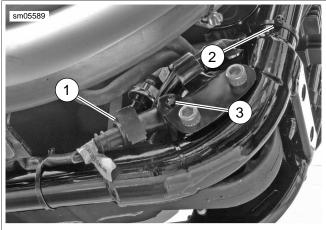

- 1. Stator connector
- 2. Cable strap
- 3. Barbed cable strap

Figure 6-96. Stator Connector: XR 1200X

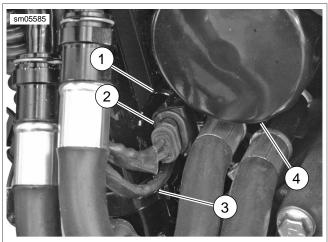

- 1. Cable strap
- 2. DC output conector
- 3. Oil pressure switch, neutral switch harness
- 4. Oil filter

Figure 6-97. DC Output Connector: XR 1200X

**ALTERNATOR** 6.24

# REMOVAL AND DISASSEMBLY

# WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- Disconnect battery. See 1.22 BATTERY MAINTENANCE. 1.
- 2. Remove primary cover. See <u>5.3 PRIMARY COVER</u>.
- Remove clutch assembly, primary chain and engine sprocket/rotor assembly as a unit. See <u>5.4 PRIMARY</u> DRIVE AND CLUTCH: XL MODELS or 5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X.
- Repair components as necessary.

# **Rotor: XL Models**

#### NOTE

XR 1200X: The XR 1200X engine sprocket and rotor are not available separately. If either the sprocket or rotor is damaged, the entire assembly must be replaced.


- 1. Remove bolts securing alternator rotor to engine sprocket.
- See Figure 6-98. Position blocking (2) under rotor (1). Press sprocket (3) free of rotor.

#### NOTE

Resistance to sprocket/rotor disassembly is due in part to the magnetic force of the permanent rotor magnets.


# Stator

- 1. See Figure 6-99. Open external latch (4) and unplug stator harness connector [46B] (2) from voltage regulator harness connector [46A] (3). See 6.23 VOLTAGE REGULATOR.
- Make note of cable strap positions and remove cable straps from stator harness.
- Withdraw stator harness from opening between right crankcase half and gear case cover.
- See Figure 6-100. Using a T-27 TORX driver, remove and discard screws (3) securing stator to left crankcase half.
- Remove two screws (9) and harness retainer (8). 5.
- Remove stator harness grommet (10) from left crankcase
- 7. Withdraw stator harness from grommet hole in left crankcase half. Remove stator.

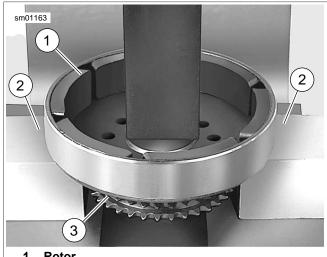


- 1. Rotor
- 2. Blocking
- 3. Sprocket

Figure 6-98. Removing Rotor from Sprocket (XL Models Only)

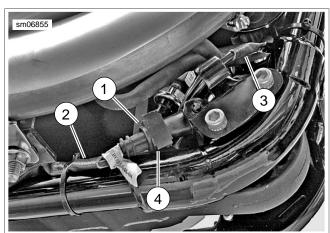

- Stator connector [46]
- Stator harness
- Voltage regulator harness
- **External latch**

Figure 6-99. Stator Connector Location

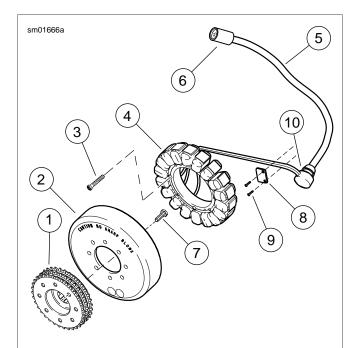

- 1. Motor sprocket
- 2. Rotor
- 3. Screw (4)
- 4. Stator
- 5. Stator wiring harness
- 6. Connector [46B]
- 7. Bolt (8)
- 8. Stator harness retainer
- 9. Screw (2)
- 10. Stator harness grommet

Figure 6-100. Alternator Components

# **CLEANING AND INSPECTION**

- Remove debris from rotor magnets. Clean rotor by wiping thoroughly with a clean cloth.
- 2. Check rotor for:
  - Loose or cracked magnets.
  - b. Stator bolt contact with rotor.
  - c. Spline damage to rotor center mounting bolt hole.
- Clean stator, stator leads and grommet thoroughly with a clean cloth.
- 4. Check stator for:
  - a. Contact with rotor.
  - b. Damaged or cracked insulation.
  - Electrical failures. See the electrical diagnostic manual.

#### NOTE

Replace parts as necessary.

# ASSEMBLY AND INSTALLATION

FASTENER	TORQUE VALUE	
Alternator stator mounting screw	30-40 <b>in-lbs</b>	3.4-4.5 Nm
Stator harness retainer screw	56 in-lbs	6.3 Nm
Alternator rotor to sprocket screw	120-140 <b>in-lbs</b>	13.6-15.8 Nm

### Stator

- See <u>Figure 6-100</u>. Feed stator wiring harness (5) with attached grommet (10) into open grommet hole in left crankcase half.
- Apply a light coating of clean engine oil to grommet. Press grommet into hole in left crankcase half.
- Position stator (4) on left crankcase half. Secure stator using new TORX screws. Use TORX driver to tighten screws to 30-40 in-lbs (3.4-4.5 Nm).
- Position stator harness retainer (8) over harness and onto engine crankcase with mounting holes facing aft. Secure with two screws (9). Verify that the harness is not pinched. Tighten to 56 in-lbs (6.3 Nm) (maximum). Do not exceed torque specification.
- Route stator wiring harness across top of crankcase halves to right side of engine. Route stator harness downward through opening between right crankcase half and gearcase cover.
- Route stator harness forward and then upward along inboard side of right frame downtube.
- Connect stator harness to voltage regulator harness at connector [46] and lock external latch in place. See 6.23 VOLTAGE REGULATOR for procedure.
- Secure stator harness and neutral switch with cable straps as noted from stator removal.

# **Rotor: XL Models**

#### NOTE

XR 1200X rotor assembly is not serviceable. If damaged, replace the entire engine sprocket/rotor assembly.


- 1. See Figure 6-101. Position rotor (1) on sprocket (2). Align holes in sprocket with holes in rotor.
- Apply a drop of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to each mounting bolt. Insert mounting bolts through rotor. Start bolts into tapped holes in sprocket.
- Position a section of pipe (3) with an inside diameter larger than the sprocket mounting hub over center of rotor.
- Press rotor onto sprocket. Tighten to 120-140 in-lbs (13.6-15.8 Nm).

# **Final Assembly**

 Install clutch assembly, primary chain and engine sprocket/rotor assembly as a unit. See <u>5.4 PRIMARY</u> <u>DRIVE AND CLUTCH: XL MODELS</u> or <u>5.5 PRIMARY</u> <u>DRIVE AND CLUTCH: XR 1200X</u>.

# <u>HOME</u>

- 2. Install primary cover, left footrest assembly and gear shift lever. See <u>5.3 PRIMARY COVER</u>.
- 3. Connect battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- 4. Test charging system. See electrical diagnostic manual.

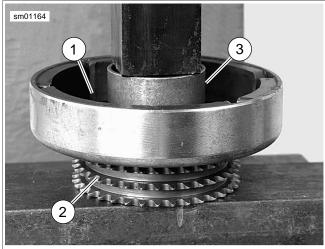

- 1. Rotor
- 2. Sprocket
- 3. Pipe section

Figure 6-101. Pressing Rotor onto Sprocket (XL Models Only)

# 6.25

# **VEHICLE SPEED SENSOR (VSS)**

# **GENERAL**

The VSS is powered and monitored by the ECM. The ECM processes the vehicle speed signal and transmits this signal to the TSM/TSSM and speedometer through serial data.

## NOTE

This part cannot be repaired. Replace upon failure.

# **REMOVAL**

# **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- See Figure 6-102. Disconnect VSS harness connector [65A] (1) from VSS (3) mounted on rear of engine case below starter motor assembly.
- Remove screw (2). Carefully remove VSS and O-ring from engine crankcase.



- VSS connector [65]
- 2. Screw
- **VSS**

Figure 6-102. VSS: All Models (XL shown)

# **INSTALLATION**

FASTENER	TORQUE VALUE	
VSS screw	90-120 <b>in-lbs</b>	10.2-13.6 Nm

# NOTE

The new VSS O-ring has a teflon coating that provides lubrication during installation. No other lubrication is needed.

- 1. See Figure 6-102. Carefully install VSS (3) and O-ring into engine crankcase with screw (2). Tighten to 90-120 in-lbs (10.2-13.6 Nm).
- 2. Attach VSS harness connector [65A] (1) to VSS.
- Install main fuse.
- Test ride the motorcycle.

# **NEUTRAL INDICATOR SWITCH**

# **GENERAL**

See Figure 6-103. The neutral indicator switch (1) is threaded into the right crankcase half (3) immediately forward of the main drive gear (4). A short jumper wire assembly (2) connects the switch to the harness connector [136] under the engine crankcase.


A pin on the shifter drum contacts the neutral indicator switch plunger, completing the neutral indicator circuit.

A motorcycle whose neutral indicator lamp does not light can be tested to determine if the problem can be found:

- In a burned out indicator lamp, the wire harness to the instruments or in the main wire harness.
- In the neutral indicator switch and its jumper wire.

#### NOTE

This part cannot be repaired. Replace upon failure.

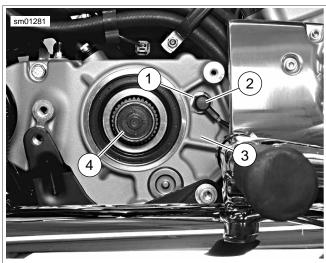

- 1. Neutral indicator switch
- 2. Jumper wire connector [136]
- 3. Right crankcase half
- 1. Main drive gear

Figure 6-103. Neutral Indicator Switch Location: All Models (XL Shown)

# REPLACEMENT

FASTENER	TORQUE VALUE	
Neutral indicator switch	120-180 <b>in-lbs</b>	13.6-20.3 Nm

# WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Remove exhaust components:
  - a. XL Models: Remove rear muffler and exhaust pipe.
     See <u>4.13 EXHAUST SYSTEM: XL MODELS</u>.
  - b. **XR 1200X:** Remove exhaust system. See 4.14 EXHAUST SYSTEM: XR 1200X.
- 3. Remove sprocket cover and rear drive belt from transmission sprocket. See <u>5.6 DRIVE BELT</u>.
- Remove transmission sprocket. See <u>5.15 TRANSMISSION</u> SPROCKET.
- Unplug jumper wire connector from neutral indicator switch. Remove switch with washer from right crankcase half.
- 6. Note routing of neutral switch jumper wire down between crankcase and rear of gearcase cover.
- 7. To unplug neutral switch jumper wire from neutral switch harness connector [136], cut cable strap securing neutral switch harness and stator harness to bottom right frame tube under oil pump.
- 8. Install **new** neutral indicator switch with washer. Tighten to 120-180 **in-lbs** (13.6-20.3 Nm).
- Plug **new** neutral switch jumper wire into neutral indicator switch [131]. Route jumper wire in same way that old jumper was routed.
- Plug jumper wire connector [136A] into harness socket connector [136B]. Secure neutral switch harness and stator harness with cable strap to bottom right frame tube under oil pump.
- Install transmission sprocket. See <u>5.15 TRANSMISSION</u> SPROCKET.
- Install secondary drive belt and sprocket cover. See 5.6 DRIVE BELT.
- 13. Adjust drive belt tension and rear wheel alignment. See 1.24 WHEEL ALIGNMENT.
- 14. Install exhaust components:
  - a. XL Models: install rear muffler and exhaust pipe. See
     4.13 EXHAUST SYSTEM: XL MODELS.
  - b. XR 1200X: install exhaust system. See 4.14 EXHAUST SYSTEM: XR 1200X.
- 15. Install main fuse.
- 16. Turn ignition switch on. Check the operation of the neutral indicator lamp.

# MAIN WIRING HARNESS

# **WIRE HARNESS CONNECTORS**

See <u>Figure 6-104</u>, <u>Figure 6-105</u> or <u>Figure 6-106</u>. The main wiring harness can be divided up into four bundles, originating at the ECM caddy (XL models) or H-bracket (XR 1200X) (1). These bundles are:

# Lower left bundle (2) including:

- Rear stop lamp switch wires [121B],
- Crankcase ground [GND1],
- · Fuel pump connector [141A],
- Siren connector [142B],
- TSM/TSSM/HFSM connector [30B],
- · Main fuse holder [5],
- Data link connector [91A],
- Rear oxygen (O2) sensor connector [137B].

## Lower right bundle (3) including:

- Vehicle speed sensor (VSS) connector [65B],
- · Green starter motor wire [128B],
- Engine Temperature (ET) sensor connector [90B].

## Upper rear bundle (4) including:

- ECM connector [78B],
- Engine sub-harness connector [145A],
- P&A battery connector [160B],
- Rear lighting sub-harness connector [7A],
- Fuel sender resistor assembly/connector [200].

## Upper front bundle (5) including:

- Hand control connectors [22B], [24B],
- Headlamp connector [38A],
- Front turn signal connector [31A],
- Instruments connector [20B],
- Horn wires [122B],
- Ignition switch [33],
- · Coil connector [83B],
- Neutral switch connector [136B],
- Oil pressure switch connector [120B],
- Crank position (CKP) sensor connector [79B],
- Front oxygen (O2) sensor connector [138B],
- Voltage regulator DC output connector [77B].

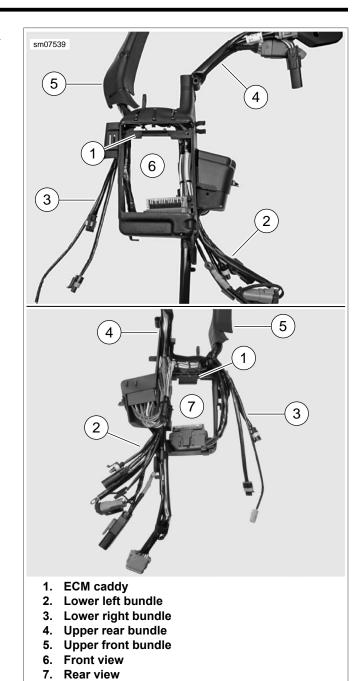


Figure 6-104. Main Wiring Harness: XL Models


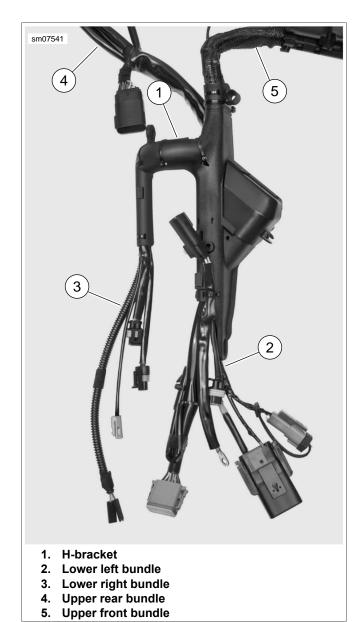


Figure 6-105. Main Wiring Harness, Front: XR 1200X

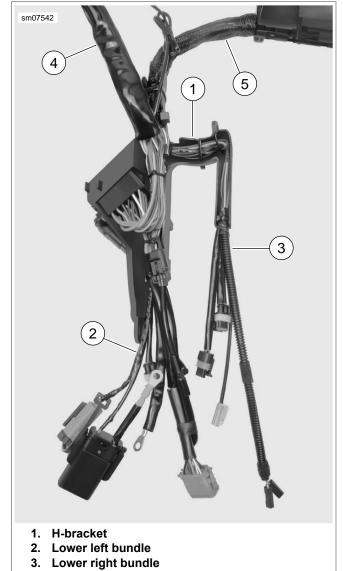

- 4. Upper rear bundle
- 5. Upper front bundle

Figure 6-106. Main Wiring Harness, Rear: XR 1200X

# **REMOVAL**

# **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

- Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.
- 2. Remove seat.

# **A**WARNING

Prevent accidental vehicle start-up, which could cause death or serious injury. First disconnect negative (-) battery cable at engine and then positive (+) cable from battery. (00280b)

- 3. Remove battery. See <u>1.22 BATTERY MAINTENANCE</u>.
- Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- XR 1200X: Remove air cleaner. See <u>1.7 AIR FILTER, XR</u> 1200X.
- Remove wire harness caddy. See <u>6.28 ELECTRICAL</u> CADDIES.
- See <u>Figure 6-107</u>. Cut cable strap (2) securing ET sensor to harness.

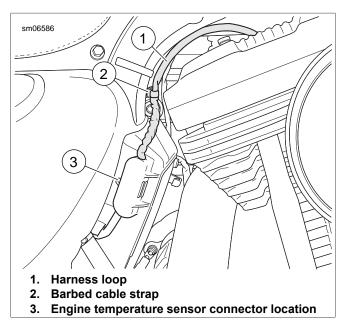


Figure 6-107. ET Sensor Harness: XL Models

- 8. Unplug the following harness connectors from the main harness:
  - a. Oil pressure switch [120B],
  - b. Voltage regulator DC output [77B],
  - c. Crank Position (CKP) sensor [79B],
  - d. Front oxygen (O2) sensor [138B],
  - e. Rear oxygen (O2) sensor [137B],
  - f. Neutral switch jumper [136B],
  - g. Engine temperature (ET) sensor [90B],
  - h. Ignition coil [83B],
  - i. Horn [122B],
  - j. Jlffy stand sensor [133] (if equipped),
  - k. ECM [78B],
  - I. Harness ground wire at engine crankcase [GND1],
  - m. Rear stop lamp switch [121B],
  - n. Vehicle speed sensor (VSS) [65B],
  - o. Green starter motor wire [128B].
  - Optional Security Siren: Unplug security siren connector [142B].
- Locate engine sub-harness connector [145A] and rear lighting sub-harness connector [7A] on top of oil tank. Unplug both sub-harnesses from main harness.
- Pull P&A battery harness/connector [160B] and fuel sender resistor assembly/connector [200] out from recess in top left rear corner of oil tank, under frame.
- Remove TSM/TSSM/HFSM. See <u>6.7 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)</u>.
  - Reach under battery tray. Push TSM/TSSM/HFSM up from cavity in bottom of tray.
  - b. Unplug harness connector [30B].
  - H-DSSS equipped models: unplug antenna connector [208B].
- Remove wiring harness from two frame clips on front left frame downtube.
- 13. Remove vapor valve hose from clip on wiring harness. See <u>4.20 EVAPORATIVE EMISSIONS CONTROL</u>.
- 14. Remove battery tray. See <u>6.9 BATTERY TRAY</u>.

#### NOTE

XL Models: Remove both fasteners securing the ECM caddy.

- 15. See Figure 6-108. Remove the ECM caddy.
- 16. Pull harness away from rear frame downtube.
- Remove main wiring harness from left side. Carefully slide wire harness caddies between rear cylinder and frame.

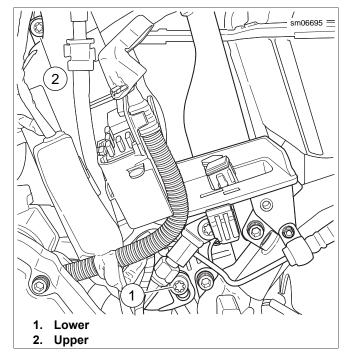


Figure 6-108. ECM Caddy Fasteners

# **INSTALLATION**

FASTENER	TORQUE VALUE	
ECM caddy fastener	72-96 in-lbs	8.1-10.8 Nm

- See Figure 6-104, Figure 6-105 or Figure 6-106. Loosely position new main wiring harness on vehicle. From left side, slide ECM caddy (XL models) or H-bracket (XR 1200X) (1) into position on rear frame downtube. Guide each wire bundle toward its respective area on the vehicle during installation. Verify lower right bundle (3) feeds out toward right side of vehicle.
- XL Models: Verify upper front bundle (5) with wire harness caddies feed out toward right side of vehicle. Install ECM caddy. Verify hook on ECM caddy engages tab on oil tank bracket. Tighten ECM caddy fasteners to 72-96 in-lbs (8.1-10.8 Nm). See 6.6 ELECTRONIC CONTROL MODULE (ECM).
- 3. **XR 1200X:** Press H-bracket onto rear frame downtube until it snaps in place.
- 4. Feed upper rear bundle (4) up over top of oil tank. Verify engine sub-harness also feeds up into that area.
- Feed upper front bundle along frame backbone toward front of vehicle.
- Feed TSM/TSSM/HFSM harness connector into position under battery tray location.

## NOTE

The TSM/TSSM/HFSM harness connector MUST be in position before installing battery tray. Verify the harness feeds over the top of the oil tank return hose.

Install battery tray. Verify battery tray interlocks with ECM caddy (XL models) or H-bracket (XR 1200X) on left side.

- Re-attach rear brake hose fasteners and rear brake master cylinder reservoir. See <u>6.9 BATTERY TRAY</u>.
- 8. Plug connector [30B] into TSM/TSSM/HFSM. **H-DSSS** equipped models: plug in antenna connector [208B].
- Lower TSM/TSSM/HFSM into place in bottom of battery tray.
- Snap vapor valve into clip on left side of ECM caddy (XL models) or H-bracket (XR 1200X). See <u>4.20 EVAPOR-ATIVE EMISSIONS CONTROL</u>.
- 11. Slide P&A battery harness and connector [160B] and fuel sender resistor assembly/connector [200] into recess in top left rear corner of oil tank, under frame.
- 12. Plug rear lighting connector [7B] into main harness connector [7A].
- 13. Plug engine sub-harness connector [145B] into main harness connector [145A].
- 14. Slide left wire harness caddy between front cylinder head and frame, from right side of vehicle toward left side.

#### NOTE


Group the neutral switch connector [136B], CKP sensor connector [79B], oil pressure switch connector [120B], front O2 sensor connector [138B] and voltage regulator DC output connector [77B] into the upper right bundle.

- Run the upper right bundle down the front left frame downtube.
- Install wire harness caddy. See <u>6.28 ELECTRICAL CAD-DIES</u>.
- 17. Plug in the following harness connectors:
  - a. Oil pressure switch [120B],
  - b. Voltage regulator DC output [77B],
  - c. Crank Position (CKP) sensor [79B],
  - d. Front oxygen (O2) sensor [138B],
  - e. Rear oxygen (O2) sensor [137B],
  - f. Neutral switch jumper [136B],
  - g. Engine temperature (ET) sensor [90B],
  - h. Fuel pump [141A],
  - i. Ignition coil [83B],
  - j. Horn [122B],
  - k. ECM [78B],
  - I. Harness ground wire at engine crankcase [GND1],
  - m. Rear stop lamp switch [121B],
  - n. Vehicle speed sensor (VSS) [65B],
  - o. Green starter motor wire [128B],
  - Optional Security Siren: Plug in security siren connector [142B],
  - q. Jiffy stand sensor (JSS) [133], if equipped.
- 18. **XL Models:** Secure clutch cable and wiring harness running down left frame downtube with two frame clips. Cap-

- ture front O2 sensor harness with lower frame clip. Position frame clip close to bottom of upper voltage regulator bracket.
- 19. **XR 1200X**: Secure wiring harness running down left frame downtube onto both oil cooler bracket clips.
- 20. Secure ET sensor harness to oil tank mounting bracket with a barbed cable strap. Verify there is a loop in the harness between the ET sensor and the rear cylinder head to avoid damaging harness during vehicle operation.

## NOTE

See <u>Figure 6-109</u>. Verify fuel pump harness rests in harness clip (5) on wire harness caddy latch clip (2).

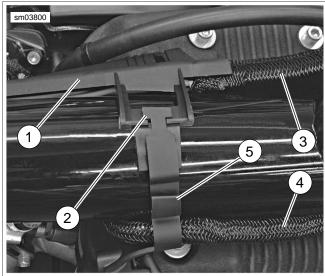

- 1. Right wire harness caddy
- 2. Wire harness caddy latch clip
- 3. Main harness
- 4. Engine sub-harness
- 5. Fuel pump harness clip

Figure 6-109. Right Wire Harness Caddy Latch Clip (typical)

21. Install fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.

# **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

- 22. Install battery. See 1.22 BATTERY MAINTENANCE.
- 23. Install left side cover. See 2.18 LEFT SIDE COVER.

# **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

24. Install seat. See 2.39 SEAT.

# **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

25. Verify the operation of the electrical system.

# **ELECTRICAL CADDIES**

# **WIRE HARNESS CADDY: XL MODELS**

FASTENER	TORQUE VALUE	
Ignition switch bracket screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

# General

See Figure 6-112. The left and right wire harness caddies are locked together with three tabs and secured with a screw.

See <u>Figure 6-111</u>. The wire harness caddy assembly (1, 2) is secured to the ignition switch bracket (3) with two push-in fasteners (6, 7), and to the frame with mounting tabs hooked onto a bracket under the frame backbone tube.



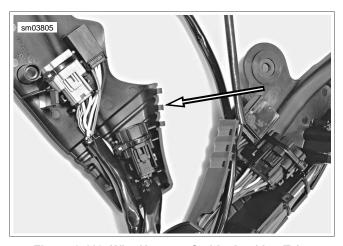


Figure 6-110. Wire Harness Caddy: Locking Tabs

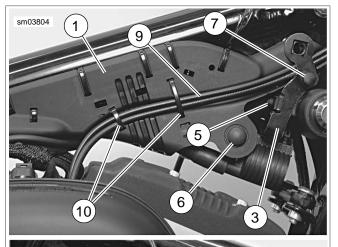

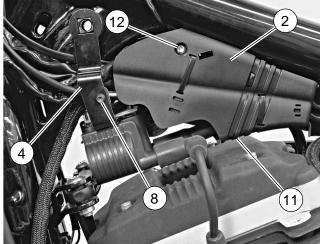

- 1. Right wire harness caddy
- 2. Left wire harness caddy
- 3. Ignition switch bracket
- 4. Coil bracket
- 5. Screw w/lockwasher (lockwasher between bracket and switch housing)
- 6. Push-in fastener, large
- 7. Push-in fastener, small
- 8. Screw
- 9. Throttle cable (2)
- 10. Cable strap (2)
- 11. Tab (3) (engage left and right caddies)
- 12. Screw

Figure 6-111. Wire Harness Caddy Assembly

# Removal

# WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)  Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS.

## **AWARNING**


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- Remove seat.
- 4. Remove fuel tank. See 4.4 FUEL TANK: XL MODELS.
- 5. Separate ignition coil connector [83B].
- See <u>Figure 6-111</u>. Remove screw (8) and disengage coil bracket (4) from mounting boss on frame.
- See <u>Figure 6-112</u>. Unhook caddy latch clip (2) from right wire harness caddy (1).

#### NOTE

It is not necessary to remove rear spark plug cable from wire harness caddy latch clip, unless latch clip is being replaced.


- If necessary, cut cable strap securing rear spark plug cable to caddy latch clip.
- 9. Remove engine sub-harness from loop in caddy latch clip.
- 10. See Figure 6-111. Remove screw (12) and carefully disengage left wire harness caddy (2) from right wire harness caddy (1).
- 11. Cut two cable straps (10) securing throttle cables (9) to right wire harness caddy.
- 12. Disengage rear spark plug cable from trough in right wire harness caddy. Cut barbed cable strap securing engine sub-harness to right wire harness caddy.
- CA Models: Cut barbed cable strap securing EVAP canister purge hose to rear of right wire harness caddy and cut the barbed cable strap through the bridge caddy.
- 14. See Figure 6-111. Remove and discard push-in fasteners (6, 7). Unhook right wire harness caddy from frame backbone bracket. Lower ignition switch bracket (3) from mounting bosses on frame to free right wire harness caddy.

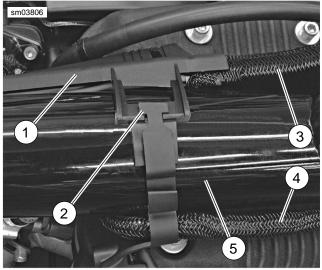

- 1. Right wire harness caddy
- 2. Caddy latch clip
- 3. Main harness
- 4. Engine sub-harness
- 5. Frame backbone

Figure 6-112. Right Wire Harness Caddy Latch Clip

- 15. See Figure 6-113. Unplug the following connectors:
  - a. Headlamp connector [38B] (4),
  - b. Left hand control connector (gray) [24B] (3),
  - c. Right hand control connector (black) [22B] (5),
  - d. Front turn signal connector [31B] (6),
  - e. Instruments connector [20A] (7).
- 16. Make a note of the location of all cable straps securing harnesses and harness connectors to left and right wire harness caddies. Cut cable straps and remove harnesses and connectors from caddies. Remove wire harness caddies from vehicle.

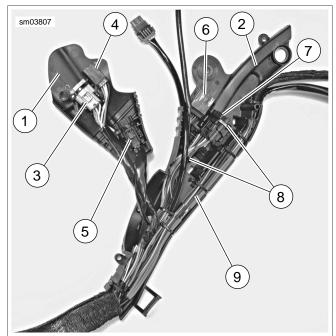

- 1. Left wire harness caddy
- 2. Right wire harness caddy
- 3. Left handlebar control connector [24A]
- 4. Headlamp connector [38A]
- 5. Right handlebar control connector [22A]
- 6. Front turn signals connector [31A]
- 7. Instruments connector [20B]
- 8. Two cable straps securing throttle cables
- 9. Portion of main wiring harness

Figure 6-113. Wire Harness Caddies

#### Installation

- See <u>Figure 6-113</u>. Fit portion of main wiring harness (9) and ignition switch harness along top of right wire harness caddy (2) and secure with cable straps, as shown in the figure.
- Mount front turn signals connector [31A] (6) onto mounting tab on right wire harness caddy.
- 3. See <u>Figure 6-111</u>. Place throttle cables (9) in groove in right wire harness caddy (1).
- 4. See <u>Figure 6-113</u>. Place instruments connector [20B] (7) into right wire harness caddy (2). Secure connector and throttle cables with a cable strap (8). Secure throttle cables and harnesses (as shown in the figure) with a second cable strap.
- Mount handlebar control connectors [22A], [24A] (5, 3) to left wire harness caddy (1) with cable straps. Mount headlamp connector [38A] (4) onto tab on left wire harness caddy.
- See <u>Figure 6-111</u>. Hook right wire harness caddy (1) into bracket on frame backbone. Secure front of caddy onto ignition switch bracket mounting boss on right side of frame. Raise ignition switch bracket (3) up into position and mount it onto boss on frame.


#### NOTE

Make sure ignition switch bracket upright is outboard of right wire harness caddy and throttle cables on right side of frame.

- 7. Secure right wire harness caddy to ignition switch bracket with **new** push-in fasteners (6, 7).
- See <u>Figure 6-112</u>. Install caddy latch clip (2) onto right wire harness caddy (1). Make sure engine sub-harness (4) is routed in loop in caddy latch clip.
- 9. See Figure 6-114. Raise coil bracket (5) up into position and mount it on boss on left side of frame. Secure coil bracket to ignition switch bracket with screw (6). Tighten to 35-45 in-lbs (4.0-5.1 Nm).
- 10. Plug in ignition coil connector [83B].

#### NOTE

Make sure coil bracket upright is outboard of all wire harnesses leading to front of vehicle on left side of frame.

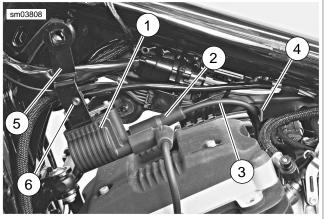

- 1. Ignition coil
- 2. Rear spark plug cable boot
- 3. Rear spark plug cable
- 4. Notch in right wire harness caddy
- 5. Coil bracket
- 6. Screw

Figure 6-114. Rear Spark Plug Cable Routing

- 11. Route rear spark plug cable (3) from ignition coil (1) tower down through notch (4) in right wire harness caddy.
- 12. Route rear spark plug cable in right wire harness caddy trough.
- Route engine sub-harness around trough in right wire harness caddy. Secure sub-harness to caddy trough with a cable strap. Run strap through hole in boss that originally secured engine sub-harness.
- California Models: Secure EVAP canister purge hose to rear of right wire harness caddy with two barbed cable straps.

- 15. Plug in the following connectors:
  - a. Instruments connector [20A] (7),
  - b. Front turn signal connector [31B] (6),
  - c. Right hand control connector (black) [22B] (5),
  - d. Left hand control connector (gray) [24B] (3),
  - e. Headlamp connector [38B] (4).
- See <u>Figure 6-111</u>. Mate left wire harness caddy (2) to right wire harness caddy (1). Secure with screw (12) and tighten.
- 17. See Figure 6-115. If barbed cable strap (3) securing rear spark plug cable (1) to caddy latch clip was cut, install **new** barbed cable strap 7.0-7.25 in (178-184 mm) from tip of spark plug cable boot (2).
- 18. Orient cable strap so that spark plug cable is above mounting boss on caddy latch clip when barbed prong on cable strap is inserted in hole in boss. Press cable strap barbed prong firmly into hole in caddy latch clip mounting boss.

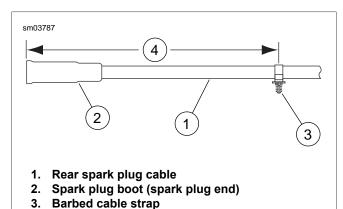


Figure 6-115. Rear Spark Plug Cable and Cable Strap: XL Models

4. 7.0-7.25 in (178-184 mm)

- 19. Make sure rear spark plug cable is plugged onto rear spark plug.
- 20. Install fuel tank. See 4.4 FUEL TANK: XL MODELS.

## **A**WARNING

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 21. Install seat.
- 22. Install main fuse.

## **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

23. Verify the operation of the electrical system.

#### **WIRE HARNESS CADDY: XR 1200X**

FASTENER	TORQUE	VALUE
Ignition switch mounting screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

#### Removal

## **A**WARNING


To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.5 FUEL TANK: XR 1200X.

## **AWARNING**


To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 2. Remove main fuse.
- 3. Remove seat.
- 4. Remove fuel tank. See 4.5 FUEL TANK: XR 1200X.
- Remove air box. See <u>4.3 AIR CLEANER ASSEMBLY, XR</u> 1200X.
- 6. See <u>Figure 6-116</u>. Remove screw (3), connector (1) and disengage coil bracket (2) from mounting boss on frame.
- 7. Remove rear spark plug wire (4) from caddy. Support coil away from engine and caddy.
- Separate push-in fastener (5) from caddy.
- See <u>Figure 6-117</u>. Unhook caddy latch clip (1) from right side of frame.
- See <u>Figure 6-118</u>. Detach connector (2) from right side of caddy.
- 11. Cut two cable straps (1) from right side of caddy.
- 12. See Figure 6-116. Remove cover (6) from caddy.
- 13. See <u>Figure 6-119</u>. Cut remaining five cable straps from left side of caddy.
- 14. Pull caddy away from frame and move ignition switch away from caddy. Support ignition switch away from engine.
- Pull connectors from left side of caddy and remove caddy from motorcycle.

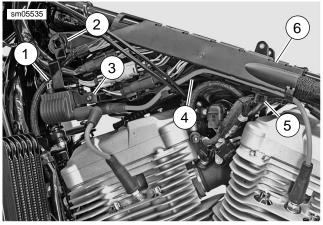


- Coil connector
- Coil bracket 2.
- Screw
- Rear spark plug wire
- 5. Push-in fastener
- 6. Cover

Figure 6-116. XR Caddy Removal

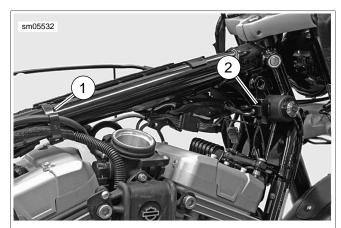

- Latch clip
- 2. Ignition switch bracket

Figure 6-117. Caddy Latch Clip

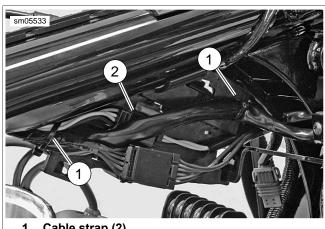

- Cable strap (2)
- Connector

Figure 6-118. Right Side Connectors

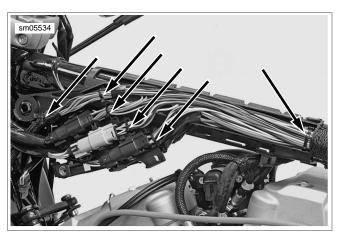


Figure 6-119. Cable Strap Locations

#### Installation

- See <u>Figure 6-119</u>. Place caddy in position next to motorcycle frame, Attach ignition switch bracket into position on caddy and place caddy on motorcycle frame.
- 2. Install connectors on left side of caddy.
- Install five cable straps to secure connector wires in position on left side of caddy.
- See Figure 6-118. Attach connector (2) to right side of
- Install two cable straps (1) as shown on right side of caddy. Make sure wires on left side of caddy are also secured with the rearward cable strap.
- See Figure 6-117. Make sure harness and purge hose (California models) are attached to caddy latch clip (1). Install latch clip on right side of frame.
- 7. See Figure 6-116. Install cover (6) on caddy.
- 8. Install push-in fastener (5).
- See Figure 6-116. Slip lower end of coil bracket (2) into caddy slot. make sure coil bracket is flush with end of ignition switch bracket and attach top end of coil bracket to mounting boss on frame.
- 10. Install connector (1) and then screw (3). Tighten screw (3) to 35-45 in-lbs (4.0-5.1 Nm).
- 11. Install rear spark plug wire (4) on caddy.
- 12. Install air box. See 4.3 AIR CLEANER ASSEMBLY, XR 1200X.
- 13. Install fuel tank. See 4.5 FUEL TANK: XR 1200X.

## **AWARNING**

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

- 14. Install seat.
- 15. Install main fuse.

## **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

## **A**WARNING

Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)

16. Verify the operation of the electrical system.


2013 Sportster Service: Electrical 6-79

# JIFFY STAND SENSOR (JSS): INTERNATIONAL MODELS

6.29

## **REMOVAL**

- 1. Position motorcycle upright on a suitable lift.
- See <u>Figure 6-120</u>. Unplug JSS harness connector [133] (1).
- 3. Cut cable strap securing JSS harness to frame.
- See <u>Figure 6-121</u>. Remove screw (1). Remove JSS (2) and harness.

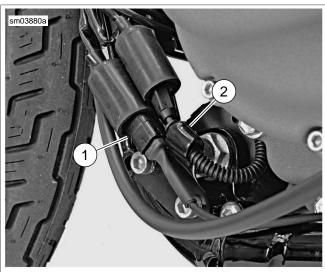

- 1. JSS connector [133]
- 2. J-clip

Figure 6-120. JSS Connector

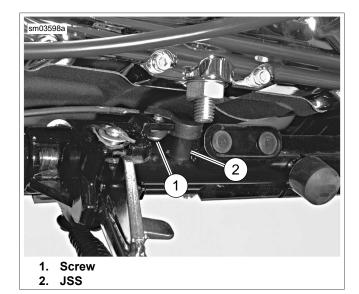


Figure 6-121. JSS

#### INSTALLATION

FASTENER	TORQUE	VALUE
JSS screw	96-120 <b>in-lbs</b>	10.9-13.6 Nm

Install JSS. Finger-tighten screw.

#### NOTE

See <u>Figure 6-122</u>. Align JSS (1) with mounting tab (2) on jiffy stand yoke (3). If sensor is not properly aligned with mounting tab when screw is tightened, sensor or mounting tab may be damaged.

 See <u>Figure 6-123</u>. With JSS (1) aligned with mounting tab on jiffy stand bracket, tighten screw (2) to 96-120 in-lbs (10.9-13.6 Nm).

#### NOTE

Do not route JSS harness through J-clip. Harness can chafe against J-clip.

- Route JSS harness forward along frame under left side of engine.
- Secure harness to outboard side of frame with new cable strap (3).
- If necessary, replace plug (4).
- Connect JSS harness connector housing [133A] to main harness connector housing [133B].

## **A**WARNING

The jiffy stand locks when placed in the full forward (down) position with vehicle weight on it. If the jiffy stand is not in the full forward (down) position with vehicle weight on it, the vehicle can fall over which could result in death or serious injury. (00006a)

## WARNING

Always park motorcycle on a level, firm surface. An unbalanced motorcycle can fall over, which could result in death or serious injury. (00039a)

#### **A**WARNING

Be sure jiffy stand is fully retracted before riding. If jiffy stand is not fully retracted, it can contact the road surface causing a loss of vehicle control, which could result in death or serious injury. (00007a)

- 7. Test JSS with jiffy stand down and up:
  - a. Turn ignition key to IGNITION.
  - b. Shift transmission into gear.
  - c. Switch OFF/RUN switch to RUN.
  - d. Disengage clutch.
  - e. Jiffy Stand Down: Press the START button.

Engine should not start. "SidE StAnd" should scroll across the odometer display.

. **Jiffy Stand Up:** Press the START button.

Engine should start and run. "SidE StAnd" should clear from the odometer display.

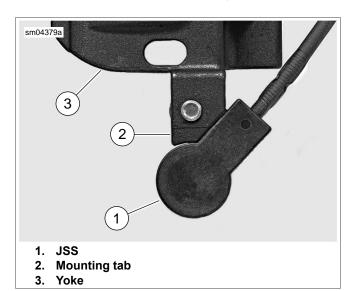


Figure 6-122. JSS Mounting (top view)

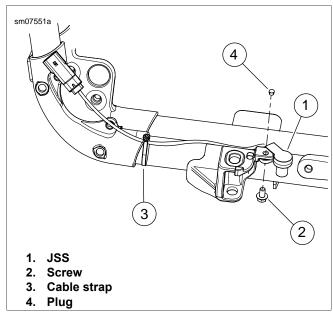


Figure 6-123. JSS Harness Routing

## **OPERATION**

## **Jiffy Stand Down: Engine Non-Start**

See Figure 6-124. The engine will not start if the rider presses the starter button with the transmission in gear and the jiffy stand down. The message "SidE StAnd" (1) will scroll across the odometer display.

Raising the jiffy stand (or putting the transmission in neutral) will permit the engine to run and clear the message.

## Jiffy Stand Down: Engine Starts and Stalls

When the jiffy stand is down, the engine starts and runs if the ECM receives a signal from the neutral switch indicating the transmission is in neutral or a signal from the clutch switch indicating the clutch is engaged. The engine will continue to run after disengaging the clutch and shifting into gear. However with the jiffy stand still down, the engine will stall as the clutch is engaged.

## **Jiffy Stand Drops**

If the jiffy stand drops out of the retracted position at speeds greater than 10 mph (15 km/h):

- The engine will continue to run.
- The warning indicators will flash twice.
- "SidE StAnd" will scroll across the odometer display.
- The message will remain until the jiffy stand is in the retracted position.

Press the reset switch (2) once while the engine is running to clear the "SidE StAnd" message.

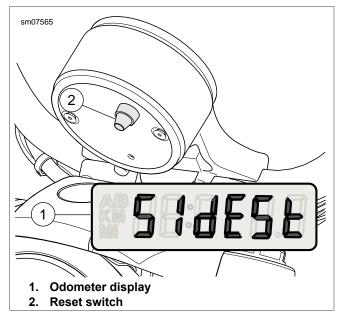


Figure 6-124. SidE StAnd Display

## SECURITY SYSTEM/OPTIONAL SIREN

#### **FOB BATTERY**

## **Battery Replacement Schedule**

Replace the fob battery every year.

## **Battery Replacement**

- 1. Open the fob case.
  - a. See Figure 6-125. Place a thin blade in the thumbnail slot (1) between the two halves of the case.
  - b. Slowly twist the blade.
- 2. Replace the battery.
  - a. Remove the original battery.
  - b. Install a **new** battery with the positive (+) side down. Use a Panasonic® 2032 or equivalent.
- 3. Close the case.
  - See <u>Figure 6-125</u>. With O-ring (3) in place, align case halves.
  - b. Snap case halves together.


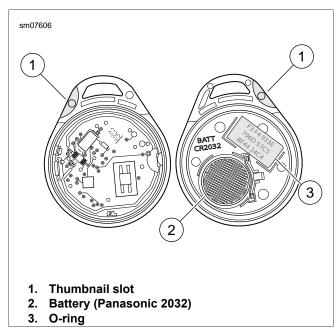


Figure 6-125. Open Fob: HFSM

## **OPTIONAL SIREN**


#### Removal

- See <u>Figure 6-126</u>. Disarm security system. While system is disarmed, unplug siren harness connector [142B] (2) from siren assembly (1).
- See <u>Figure 6-127</u>. Gently pry up on two tabs (2) while pulling siren housing (1) toward the left side of the motorcycle. Remove siren.

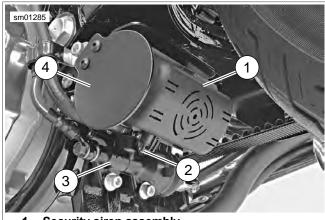

- 1. Security siren assembly
- 2. Siren harness connector [142B]
- 3. Rear brake master cylinder
- 4. Guard

Figure 6-126. Security Siren

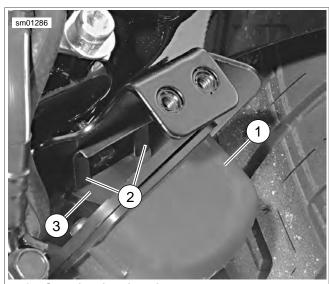


- 1. Security siren housing
- 2. Tab (2)
- 3. Siren housing mounting boss (2)

Figure 6-127. Security Siren Mount (guard removed for clarity)

#### Disassembly

- 1. See <u>Figure 6-128</u>. Remove three screws (4) and bottom cover (1) from top cover (2) of security siren assembly.
- 2. See <u>Figure 6-129</u>. Remove security siren (1) from top cover (3).

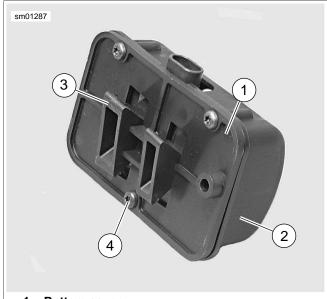

- 1. Bottom cover
- 2. Top cover
- 3. Mounting boss (2)
- 4. Screw (3)

Figure 6-128. Security Siren Housing

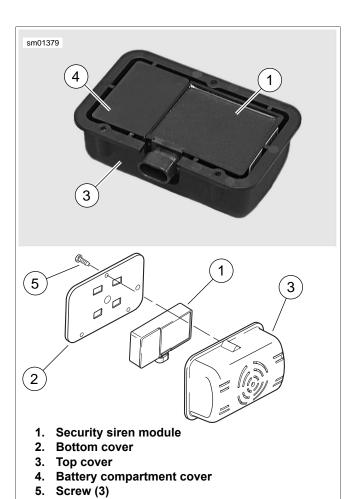


Figure 6-129. Security Siren Assembly

## **Assembly**

- See <u>Figure 6-129</u>. Place security siren module (1) inside top cover (3) with siren connector [142A] positioned in cutout in cover and siren battery compartment cover (4) visible.
- 2. See <u>Figure 6-128</u>. Place bottom cover (1) on top cover (2) and secure with three screws (4).

#### Installation

- See <u>Figure 6-127</u>. Position siren (1) in mounting bracket so that mounting bosses (3) align with mounting clips in bracket and connector socket [142A] faces rear master cylinder.
- 2. Slide siren housing to the right until tabs (2) lock siren in place.
- See <u>Figure 6-126</u>. Plug harness connector [142B] (2) into siren connector socket [142A].
- Check siren operation. If siren is working properly, it will respond with two chirps after receiving the arm command.

## **SIREN BATTERY**

## **Battery Replacement Schedule**

#### **NOTES**

- The internal siren battery may not charge if the vehicle's battery is less than 12.5 V.
- The siren's internal 9 V battery is rechargeable and does not need to be replaced on a regular basis. Battery life under normal conditions is approximately three to six years.

## **Battery Replacement**

- 1. Disarm system and remove siren.
- 2. See Figure 6-130. With a small screwdriver or pick, push the catches (1) in through the two slots (2) in the end of the siren to release the battery cover (3).

#### NOTES

- For protection against corrosion, battery terminals and battery clip are covered with a special grease. Do not wipe away this substance. Apply all available existing grease to terminals on new battery.
- Only a 9 V nickel metal hydride battery should be used in the siren.
- 3. Replace battery (4) by removing old battery from polarized battery clip.
- Recharge and install or install a new 9 V nickel metal hydride battery.
- 5. Install battery cover (3).
  - a. Carefully replace the rubber seal (5) on the cover.
  - Align battery cover with case placing round corners on cover away from connector [142A] (6).
  - c. Snap cover into place.

6. Install siren and check operation. If siren is working properly, it will respond with two chirps after receiving the arm command.



Figure 6-130. Siren Battery Compartment

## **OIL PRESSURE SWITCH**


#### **GENERAL**

The oil pressure signal lamp switch is a pressure-actuated diaphragm-type switch. When oil pressure is low, spring tension holds the switch contacts closed. This completes the signal lamp circuit causing the indicator lamp to illuminate.

See Figure 6-131. The oil pressure switch is located under the oil filter mount at the front of the engine crankcase.


#### NOTE

This part cannot be repaired. Replace upon failure.

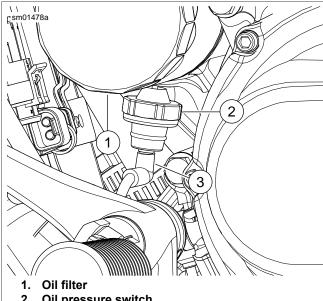

- Oil pressure switch
- Oil pressure switch connector [120]

Figure 6-131. Oil Pressure Indicator Lamp Switch: XL Models

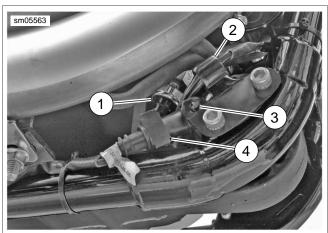

- Oil pressure switch
- 2. J-clip
- 3. Barbed cable strap
- Stator connector [47]

Figure 6-132. Oil Pressure Switch: XR 1200X

#### REMOVAL

PART NUMBER	TOOL NAME
HD-41675	OIL PRESSURE SENDING UNIT WRENCH

## **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- Remove main fuse.
- See Figure 6-131. Remove wiring harness connector [120] (3) by pulling elbow connector straight down from stud on oil pressure switch (2).
- 3. XR 1200X: See Figure 6-132. Disconnect voltage regulator stator connector (4). Reposition neutral switch wire and voltage regulator stator wire as needed.
- Place a container under the motorcycle to catch any oil that may leak out when oil pressure switch is removed.

#### NOTE

XR 1200X: Hold oil pressure switch adapter with a wrench to prevent the adapter from being removed while removing the oil pressure switch.

Using OIL PRESSURE SENDING UNIT WRENCH (Part No. HD-41675), remove oil pressure switch.

#### INSTALLATION

PART NUMBER	TOOL NAME
HD-41675	OIL PRESSURE SENDING UNIT WRENCH

FASTENER TORQUE VALUE		VALUE
Oil pressure switch adapter: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm
Oil pressure switch	50-70 <b>in-lbs</b>	5.6-7.9 Nm

- 1. XR 1200X: if the oil pressure switch adapter came out with the oil pressure switch, install the adapter:
  - Separate oil pressure switch from adapter.
  - Remove and discard old O-ring. Install **new** O-ring.
  - Install adapter and tighten to 13-17 ft-lbs (17.6-23.0 Nm).

#### NOTE

Perform following step only if original oil pressure switch is being re-installed. New switches have a sealant contact patch on the mounting threads.

Coat threads of oil pressure switch with LOCTITE 565 HIGH PERFORMANCE PIPE SEALANT with TEFLON.

- See <u>Figure 6-131</u>. Install oil pressure switch (2). Using OIL PRESSURE SENDING UNIT WRENCH (Part No. HD-41675), tighten switch to 50-70 in-lbs (5.6-7.9 Nm).
- 4. XR 1200X: See Figure 6-132.
  - a. Reposition neutral switch wire and stator wire.
  - Secure stator connector (4) to bracket with barbed cable strap (3) and make sure neutral switch wire and oil pressure switch wires are secured in J-clip (2).
  - c. Join halves of stator connector [47] and secure with lock.

#### NOTE

Oil pressure switch connector [120] must always face away from vehicle.

- 5. Attach wiring harness connector [120] to oil pressure switch. Make sure connector points away from motorcycle.
- 6. Install main fuse.

#### NOTE

Replace oil if significant loss.

- Check oil level in oil tank. See <u>1.6 ENGINE OIL AND FILTER</u>. Top off oil level if necessary.
- 8. Start engine and test oil pressure switch for proper operation. Check oil pressure switch for leaks.

6-86 2013 Sportster Service: Electrical

**HORN** 

6 32

## **TROUBLESHOOTING**

If the horn does not sound or sounds weak, check for the following:

- Discharged battery. To charge battery, see <u>1.22 BATTERY</u> MAINTENANCE.
- Loose, frayed or damaged wiring to horn terminal.

If battery is charged and wiring appears to be in good condition, perform a VOLTAGE TEST for the following:

- Inoperative horn switch.
- Open circuit to horn.
- · Open ground to frame.
- Inoperative horn.


## **VOLTAGE TEST**

- Remove terminal clips from horn spade connectors.
- Connect voltmeter leads, positive (+) to wire terminal and negative (-) to ground.
- 3. Turn ignition switch ON and press horn switch.
- 4. If battery voltage is not present, check for the following:
  - a. Horn switch is inoperative. Replace switch. See 6.35 LEFT HANDLEBAR SWITCHES.
  - b. Wiring to horn is open. Repair wiring.
- 5. If battery voltage is present, check for the following:
  - Ground is open between mounting hardware or ground wire. Repair wiring.
  - Horn is inoperative. Replace horn. See <u>6.32 HORN</u>, <u>Replacement: Front Mount</u>.

#### REPLACEMENT: FRONT MOUNT

FASTENER	TORQUE	VALUE
Horn mounting screw	36-48 <b>in-lbs</b>	4.1-5.4 Nm

- 1. See <u>Figure 6-133</u>. Remove terminal clips from horn spade connectors (1, 3).
- 2. Remove screws (4) and lockwashers (6) from horn bracket (2). Remove horn assembly (5).
- Install horn assembly with screws and washers into horn bracket. Tighten to 36-48 in-lbs (4.1-5.4 Nm).
- 4. Install the yellow wire with black tracer to the left spade connector (3) and the black wire to the right spade connector (1).

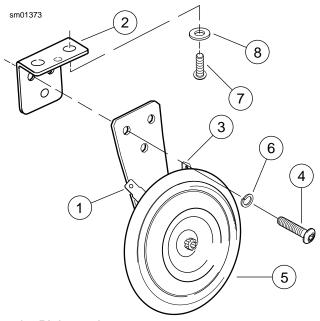

- 1. Right spade connector
- 2. Horn bracket
- 3. Left spade connector
- 4. Screw (3)
- 5. Horn assembly
- 6. Lockwasher (3)
- 7. Screw (2)
- 8. Washer (2)

Figure 6-133. Horn Components

#### REPLACEMENT: SIDE MOUNT

FASTENER	TORQUE	VALUE
Horn, side mounted, stud nut	80-100 <b>in-lbs</b>	9.0-11.3 Nm
Horn, side mounted, acorn nut	60-180 <b>in-lbs</b>	6.8-20.4 Nm

- See <u>Figure 6-134</u>. Remove terminal clips from horn spade connections on back of horn (12).
- 2. Remove acorn nut (3) and lockwasher (4) to free horn assembly from rubber mount (6) stud.
- 3. Remove wire conduit from clamp (9) at back of support bracket (5).
- Remove nut (10) from circular recess at back of chrome cover and bracket (2) and remove horn (12) from cover and bracket.
- Install horn (12) with chrome cover and bracket (2) through hole in horn support bracket (5). Apply two drops of LOC-TITE 262 HIGH STRENGTH THREADLOCKER AND SEALANT (red) to threads of nut (10) and install. Tighten to 80-100 in-lbs (9.0-11.3 Nm).
- 6. Attach the yellow wire with black tracer to front terminal and the black wire to rear terminal. Push wire conduit into clamp (9) at back of horn bracket (5).

7. Install support bracket (5) on rubber mount (6) stud with lockwasher (4) and acorn nut (3). Tighten to 60-180 **in-lbs** (6.8-20.4 Nm).

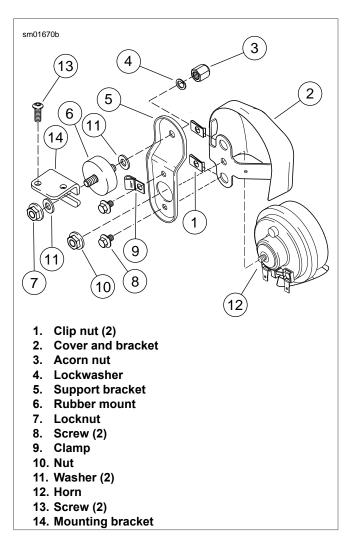


Figure 6-134. Side Mount Horn Components

## HANDLEBAR SWITCH ASSEMBLIES

#### REPAIR PROCEDURES

PART NUMBER	TOOL NAME
HD-25070	ROBINAIR HEAT GUN
HD-39969	ULTRA TORCH UT-100
HD-41183	HEAT SHIELD ATTACHMENT

- 1. Push conduit back to better access wires and avoid damaging conduit with radiant heating device. Secure conduit with extra 7.0 in (177.8 mm) cable strap in kit.
- Strip 0.5 in (12.7 mm) of insulation off switch wires. Twist stripped ends of switch wires until all strands are tightly coiled.
- Cut dual wall heat shrink tubing, supplied in repair kit into 1.0 in (25.4 mm) segments. Slide tubing over each wire of new switch assembly.
- Splice existing and **new** switch wires, matching wire colors.
   Solder the spliced connections. For best results, splice one wire at a time.
- 5. Center the heat shrink tubing over the soldered splices.

## WARNING

Be sure to follow manufacturer's instructions when using the UltraTorch UT-100 or any other radiant heating device. Failure to follow manufacturer's instructions can cause a fire, which could result in death or serious injury. (00335a)

- Avoid directing heat toward any fuel system component.
   Extreme heat can cause fuel ignition/explosion resulting in death or serious injury.
- Avoid directing heat toward any electrical system component other than the connectors on which heat shrink work is being performed.
- Always keep hands away from tool tip area and heat shrink attachment.
- 6. See Figure 6-135. Use ULTRA TORCH UT-100 (Part No. HD-39969) or ROBINAIR HEAT GUN (Part No. HD-25070) with HEAT SHIELD ATTACHMENT (Part No. HD-41183) or equivalent. Uniformly heat the heat shrink tubing to insulate and seal the soldered connections. Apply heat just until the meltable sealant exudes out both ends of tubing and assumes a smooth cylindrical appearance.
- 7. Inspect solder connection.
  - a. Inspect the melted sealant for solder beads.
  - b. Excess solder or heat may force some solder out with the melted sealant.
  - c. Remove any solder found.
  - d. Briefly heat the connection to reseal the tubing if solder beads were removed.
  - e. Use less solder or reduce heating time or intensity when doing subsequent splices.

## **AWARNING**

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

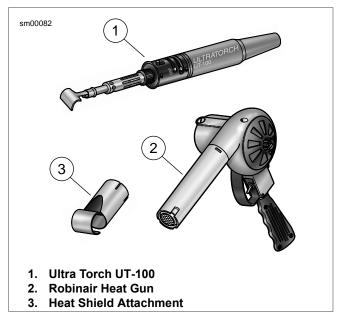


Figure 6-135. Radiant Heating Devices

#### **CONNECTORS**

## **A**WARNING

To prevent spray of fuel, purge system of high-pressure fuel before supply line is disconnected. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00275a)

 Purge the fuel supply hose of high pressure gasoline. Disconnect fuel supply hose from fuel pump module. See 4.4 FUEL TANK: XL MODELS or 4.5 FUEL TANK: XR 1200X.

## **A**WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)


- Remove main fuse.
- 3. Remove fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- 4. Separate left and right wire harness caddies. See <u>6.28 ELECTRICAL CADDIES</u>.
- 5. See Figure 6-136 or Figure 6-137. Locate right handlebar connector [22] (4, 5) mounted on left wire harness caddy (2). Press latch (3) and separate connector halves.

- 6. In the same manner, locate left handlebar connector [24] (6), press latch and separate connector halves.
- 7. See <u>A.19 MOLEX MX 150 SEALED CONNECTOR</u> to service connectors [22] and [24].
- 8. Mate right handlebar connector [22] halves. Mate left handlebar connector [24] halves.
- Reassemble left and right wire harness caddies. See 6.28 ELECTRICAL CADDIES.
- 10. Replace fuel tank. See <u>4.4 FUEL TANK: XL MODELS</u> or <u>4.5 FUEL TANK: XR 1200X</u>.
- 11. Install main fuse.

## **A**WARNING


Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

12. Verify operation of electrical system.

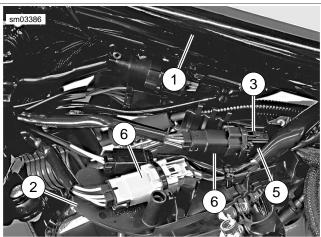

- 1. Frame backbone
- 2. Left wire harness caddy
- 3. Connector latch
- 4. Right handlebar pin connector [22A]
- 5. Right handlebar socket connector [22B]
- 6. Left handlebar control connector [24]

Figure 6-136. Handlebar Connectors: XL Models

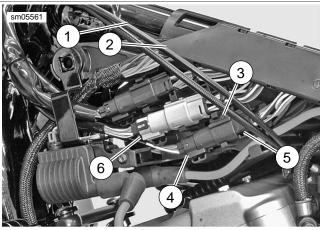

- 1. Frame backbone
- 2. Left wire harness caddy
- 3. Connector latch
- 4. Right handlebar pin connector [22A]
- 5. Right handlebar socket connector [22B]
- 6. Left handlebar control connector [24]

Figure 6-137. Handlebar Connectors: XR 1200X

## **RIGHT HANDLEBAR SWITCHES**

## **REMOVAL**

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

1. Remove main fuse.

#### NOTICE

Do not remove or install the master cylinder assembly without first positioning a 5/32-inch (4 mm) thick insert between the brake lever and lever bracket. Removing or installing the master cylinder assembly without the insert in place may result in damage to the rubber boot and plunger on the front stoplight switch. (00324a)

#### NOTE

Place a 5/32 in (4 mm) thick cardboard insert between the brake lever and lever bracket. Without the insert, the rubber boot and plunger of the front stop lamp switch can be damaged.

- See <u>Figure 6-138</u>. Place the cardboard insert between the brake lever and lever bracket.
- Using a T27 TORX drive head, remove the two screws with flat washers securing the handlebar clamp to the master cylinder housing. Remove the brake lever/master cylinder assembly and clamp from the handlebar.
- 4. Using a T25 TORX drive head, remove the upper and lower switch housing screws.
- Remove the friction shoe from the end of the tension adjuster screw.

#### NOTE

The friction screw is a loose fit. It may fall out or become dislodged if the lower switch housing is turned upside down or shaken.

- 6. Remove the brass ferrules from the notches on the inboard side of the throttle control grip. Remove the ferrules from the cable end fittings.
- Remove the throttle control grip from the end of the handlebar.
- 8. Pull the crimped inserts at the end of the throttle and idle control cable housings from the lower switch housing. For best results, use a rocking motion while pulling. Place a drop of light oil on the retaining rings, if necessary. Remove the cables from the switch housing.



Figure 6-138. Install Cardboard Insert

#### **DISASSEMBLY**

#### **NOTICE**

Do not remove or install the master cylinder assembly without first positioning a 5/32-inch (4 mm) thick insert between the brake lever and lever bracket. Removing or installing the master cylinder assembly without the insert in place may result in damage to the rubber boot and plunger on the front stoplight switch. (00324a)

- Place the cardboard insert between the brake lever and lever bracket.
- 2. Remove the upper and lower switch housing screws.
- If replacing lower housing switches, perform steps 4 through 7 before continuing to repair section. If replacing upper housing switches, proceed directly to repair section.
- See <u>Figure 6-147</u>. Loosen the upper screw (1) securing the handlebar switch clamp to the master cylinder housing. Remove the lower clamp screw with flat washer (2).
- Remove the brass ferrules from the notches on the inboard side of the throttle control grip. Remove the ferrules from the cable end fittings.
- Remove the friction shoe from the end of the tension adjuster screw.

#### NOTE

The friction shoe is a loose fit. It may fall out or become dislodged if the lower switch housing is turned upside down or shaken.

Remove the throttle control grip from the end of the handlebar.

#### SWITCH REPAIR/REPLACEMENT

## Switch and Lead Replacement


After cutting off the connector terminals, pull the leads of faulty switches through the conduit. Route replacement switch leads through the conduit. Terminate the leads at the connector. If necessary, replace the switches.

## **Switch Only Replacement: Upper Housing**

NOTE

If only one switch is faulty, replace the horn switch and high/low beam switch as a single assembly.

- See <u>Figure 6-139</u>. From inside the switch housing, remove the screw with lockwasher (4) to release the bracket (5). Remove the bracket and switch assembly from the housing.
- 2. Move cable conduit (3) from beneath wing of bracket. Cut wires 0.25 in (6.4 mm) from old switches (1, 2). Discard old switch and bracket assembly.
- Slide conduit forward over cut ends of switch wires and cut off 0.5 in (12.7 mm) of conduit (3) material. Push conduit back to access switch wires.
- 4. See Figure 6-140. Separate **new** engine stop switch (2) and engine start switch (1) wires into two bundles.
- See <u>6.33 HANDLEBAR SWITCH ASSEMBLIES</u> for information on splicing and general repair practices.
- 6. See Figure 6-140. Loop switch wires and bundle splices.
- 7. See <u>Figure 6-139</u>. Route wires downstream of splices beneath wing on engine stop switch side of bracket.
- 8. See <u>Figure 6-140</u>. Install a **new** 7.0 in (177.8 mm) cable strap (5) beneath wing on engine start switch side (1) of bracket and capture wire splices (4).
- 9. Place switch assembly into upper housing aligning hole in bracket with threaded hole in boss. Seat the bracket. The step at the edge of the boss captures the bottom edge of the bracket. Tabs on each side of the bracket fit in slots cast into the housing.
- See <u>Figure 6-139</u>. Install screw and lockwasher (4) to secure bracket (5) inside housing. Verify that wing on engine stop switch (2) side of bracket captures edge of conduit (3) as shown.
- 11. Securely tighten cable strap to draw splices to bracket. Trim cable straps.

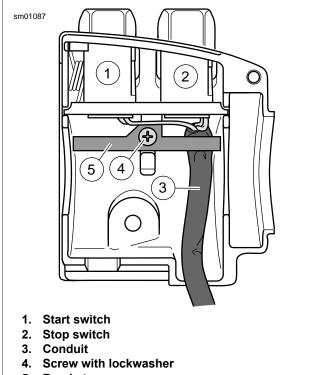

5. Bracket

Figure 6-139. Upper Housing Without Splices

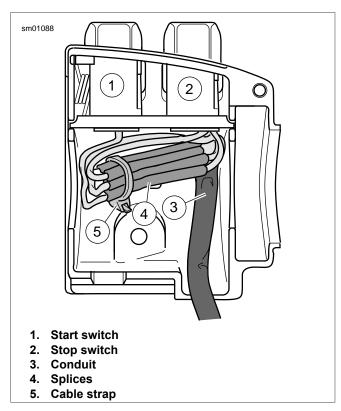


Figure 6-140. Upper Housing With Splices

## Switch Only Replacement: Lower Housing

1. From inside the switch housing, carefully cut cable strap to free conduit from the turn signal switch bracket.

Remove the screw with lockwasher to release the turn signal switch bracket. Remove the bracket and switch assembly from the housing.

## **Turn-Right Signal Switch Only**

- Cut wire 1.5 in (38.1 mm) from old switch. Discard old switch assembly.
- See <u>6.33 HANDLEBAR SWITCH ASSEMBLIES</u> for information on splicing and general repair practices.

## Front Stop Lamp Switch Only

- Carefully remove the wedge between the switch and switch housing, if present. To remove the switch from the housing, press the plunger and slowly rotate switch upward while rocking slightly.
- Cut wires 1.0 in (25.4 mm) from old switch. Discard old switch.
- See <u>6.33 HANDLEBAR SWITCH ASSEMBLIES</u> for information on splicing and general repair practices.
- 4. Carefully press plunger against inside wall of switch housing. With thumb over plunger bore, move switch into the installed position in the switch housing cavity. When plunger is positioned against thumb, slowly rotate switch downward while rocking slightly. Release the plunger only after switch is properly positioned in the cavity.
- Verify that the plunger is square in the bore and that the boot is not compressed, collapsed or torn. If necessary, gently work the plunger in and out until boot is fully extended.
- See <u>Figure 6-141</u>. Push down on switch (1) so that it bottoms against housing and wires (3) run in groove at base of cavity. With the concave side facing outward, insert wedge (2) between switch and outboard side of switch housing.
- Push wedge down until it also bottoms against housing. Verify that the plunger is still square in the bore. Place a drop of RTV SILICONE SEALANT on upper corner of wedge.

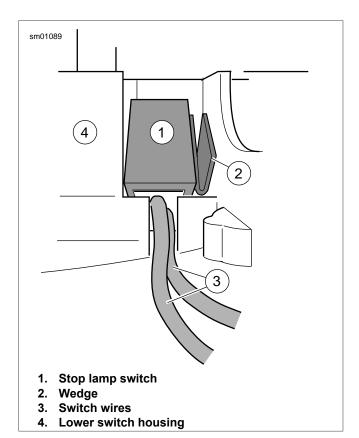


Figure 6-141. Install Stop Lamp Switch

#### **ASSEMBLY**

See <u>Figure 6-142</u>. Insert tapered end of **new** 7.0 in (177.8 mm) cable strap (1) into round hole in turn signal switch bracket (2) and then feed back through using the adjacent hole. Reserve the oblong hole for the bracket screw.

#### NOTE

Be sure that all splices are positioned above the turn signal switch bracket.


- Place the turn signal switch assembly into the housing, aligning the oblong hole in the bracket with the threaded hole in the boss. Be sure that the bracket is fully seated. Tabs on each side of bracket are captured in slots cast into switch housing.
- Start screw with lockwasher to secure bracket inside housing.

## NOTICE

If routed incorrectly, wires can be pinched by casting or handlebar resulting in switch failure. (00542b)

- Loop switch wires so that spliced lengths are positioned across bracket.
- Capturing conduit about 0.25 in (6.4 mm) from end, securely tighten cable strap to draw conduit to bracket. Trim cable straps.
- Install second 7.0 in (177.8 mm) cable strap capturing conduit and wire splices. Securely tighten cable strap to draw splices to conduit. Trim cable straps.

- 7. Tighten screw to secure bracket inside housing.
- Route wire bundle to upper switch housing by gently pressing conduit into channel next to angular arm of bracket
- Secure bundle to arm using third cable strap. Trim cable straps.
- 10. If necessary, bend angular arm of bracket downward to firmly secure front stop lamp switch in position.

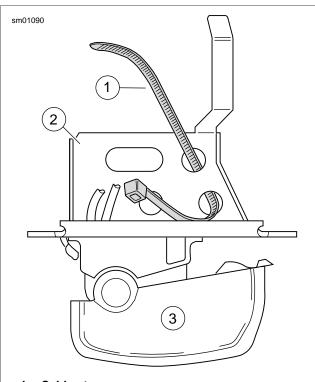

- 1. Cable strap
- 2. Bracket
- 3. Right turn signal switch

Figure 6-142. Insert Cable Strap in Switch Bracket

## INSTALLATION

FASTENER	TORQUE VALUE	
Handlebar control lever clamp screw	108-132 in-lbs	12.2-14.9 Nm
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

- See <u>Figure 6-143</u>. Push the throttle and idle control cables into the lower switch housing until they snap in place. Note the different diameter inserts crimped into the end of the throttle and idle cable housings.
  - a. Push the silver insert (2) of throttle cable housing into the hole in front of tension adjuster screw (3).
  - b. Push the gold insert (1) of idle cable housing into the hole at the rear of tension adjuster screw (3).

#### NOTE

To aid assembly, place a drop of light oil on the retaining rings of the crimped inserts. Always replace the retaining rings if damaged or distorted.

- 2. See Figure 6-144. Route the cable (2) to the upper switch housing as shown.
- 3. Slide the throttle control grip over the end of the right handlebar until it bottoms against the closed end. Rotate the grip so that the ferrule notches are at the top. To prevent binding, pull the grip back about 1/8 in (3.2 mm).
- With the concave side facing upward, install the friction shoe so that the pin hole is over the point of the adjuster screw.

#### NOTE

The friction shoe is a loose fit and may fall out or become dislodged if the lower switch housing is turned upside down or shaken.

- 5. See <u>Figure 6-145</u>. Position lower switch housing beneath the throttle control grip. Install the brass ferrules (4) onto the cable so that the end fittings seat in the ferrule recess. Seat the ferrules in their respective notches (3) on the throttle control grip. Verify that the cables are captured in the grooves (2) molded into the grip.
- 6. Position the upper switch housing over the handlebar and lower switch housing.
- Verify that the wire harness conduit runs in the depression at the bottom of the handlebar. Be sure that the upper switch housing harness will not be pinched under the handlebar when the switch housing screws are tightened.
- 8. Start the upper and lower switch housing screws, but do not tighten.

#### **NOTICE**

Do not remove or install the master cylinder assembly without first positioning a 5/32-inch (4 mm) thick insert between the brake lever and lever bracket. Removing or installing the master cylinder assembly without the insert in place may result in damage to the rubber boot and plunger on the front stoplight switch. (00324a)



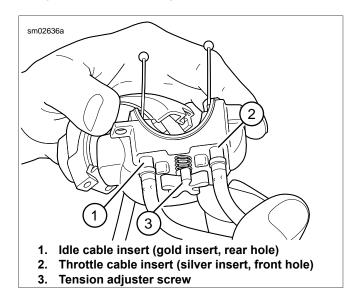


Figure 6-143. Right Lower Module Housing

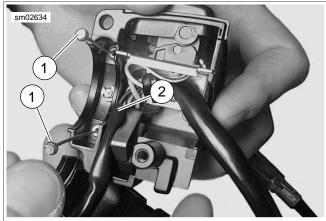

- 1. End fittings
- 2. Upper switch housing cable

Figure 6-144. Route Cable to Upper Switch Housing

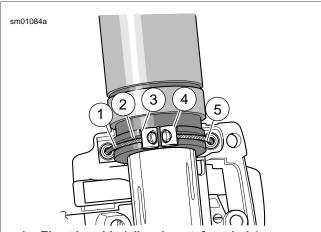

- 1. Throttle cable (silver insert, front hole)
- 2. Groove in throttle grip
- 3. Notch
- 4. Brass ferrule
- 5. Idle cable (gold insert, rear hole)

Figure 6-145. Throttle Cable Attachment

- 9. See Figure 6-146. Position the brake lever/master cylinder assembly inboard of the switch housing assembly, engaging the tab (2) on the lower switch housing in the groove (3) at the top of the brake lever bracket.
- Align the holes in the handlebar switch clamp with the master cylinder housing. Start the two screws (with flat washers). Position for rider comfort. Beginning with the top screw, tighten to specification using a T27 TORX drive head. Refer to <u>Table 6-9</u>.
- Using a T25 TORX drive head, tighten lower and upper switch housing screws to specification. Refer to <u>Table 6-9</u>.

#### NOTE

Always tighten the lower switch housing screw first so that any gap between the upper and lower housings is at the front of the switch.

Table 6-9. Handlebar Switch Assembly Fasteners


FASTENER	TORQUE
Handlebar clamp screw	108-132 <b>in-lbs</b> (12.2-14.9 Nm)
Switch housing screws	35-45 <b>in-lbs</b> (4.0-5.1 Nm)

- Remove the cardboard insert between the brake lever and lever bracket.
- 13. Adjust throttle cables. See <u>2.28 THROTTLE CABLES:</u> <u>ALL MODELS</u>
- 14. Install main fuse.

## **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

- 15. Test the switches for proper operation.
- 16. Secure wire harness to handlebar as necessary.

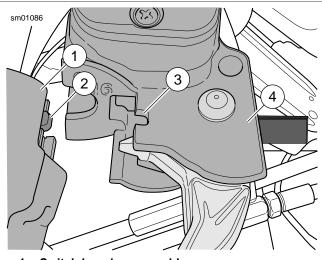

- 1. Switch housing assembly
- 2. Tab
- 3. Groove
- 4. Brake lever bracket

Figure 6-146. Switch Housing Alignment (typical)

## **HOME**

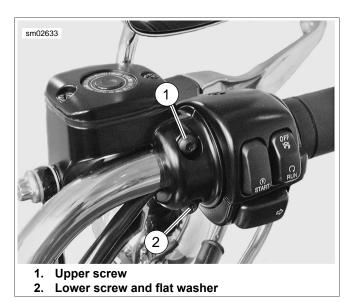


Figure 6-147. Handlebar Switch Clamp Screws

## LEFT HANDLEBAR SWITCHES

#### REMOVAL

#### NOTE

The removal and installation steps listed apply when replacing the entire switch assembly, a switch housing or the handlebar.

## **AWARNING**

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

- 1. Remove main fuse.
- 2. Using a T25 TORX drive head, loosen but do not remove the upper and lower switch housing screws.
- Using a T27 TORX drive head, remove the two screws with flat washers securing the handlebar clamp to the clutch lever bracket. Remove the clutch hand lever assembly and clamp from the handlebar.
- 4. Remove the upper and lower switch housing screws.
- 5. Remove the left hand grip from the end of the handlebar if damaged. See 2.30 HANDLEBAR, Left Hand Grip.

#### **DISASSEMBLY**

- 1. Remove the upper and lower switch housing screws.
- If replacing lower housing switches, perform next step before continuing to repair section. If replacing upper housing switches, proceed directly to repair section.
- Loosen the upper screw securing the handlebar clamp to the clutch lever bracket. Remove the lower clamp screw with flat washer.

## **SWITCH REPAIR AND REPLACEMENT**

#### Switch and Lead Replacement

After cutting off the connector terminals, pull the leads of faulty switches through the conduit. Route replacement switch leads through the conduit. Terminate the leads at the connector. If necessary, replace only the switches.


## Switch Only Replacement: Upper Housing

#### NOTE

If only one switch is faulty, replace the horn switch and high/low beam switch as a single assembly.

- See <u>Figure 6-148</u>. From inside the switch housing, remove the screw with lockwasher (4) to release the bracket (5). Remove bracket and switch assembly from the housing.
- Move cable conduit (3) from beneath wing of bracket. Cut wires 0.25 in (6.4 mm) from old switches (1, 2). Discard old switch and bracket assembly.
- Slide conduit forward over cut ends of switch wires and cut off 0.5 in (12.7 mm) of conduit (3) material. Push conduit back to access switch wires.
- 4. Separate the **new** horn switch (1) and high/low beam switch (2) wires into two bundles.

- See <u>6.33 HANDLEBAR SWITCH ASSEMBLIES</u> for information on splicing and general repair practices.
- 6. See Figure 6-149. Loop switch wires.
- See <u>Figure 6-148</u>. Route wires downstream of splices beneath wing on high/low beam switch side of bracket.
- 8. See Figure 6-149. Install a **new** 7.0 in (177.8 mm) cable strap (5) beneath wing on horn switch side (1) of bracket and capture wire splices (4).
- Place switch assembly into upper housing aligning hole in bracket with threaded hole in boss. Be sure that bracket is fully seated. The step at the edge of the boss captures the bottom edge of the bracket. Tabs on each side of the bracket fit in slots cast into the housing.
- See <u>Figure 6-148</u>. Install screw and lockwasher (4) to secure bracket (5) inside housing. Verify that wing on high/low switch (2) side of bracket captures edge of conduit (3) as shown.
- 11. Securely tighten cable strap to draw splices to bracket. Trim cable straps.

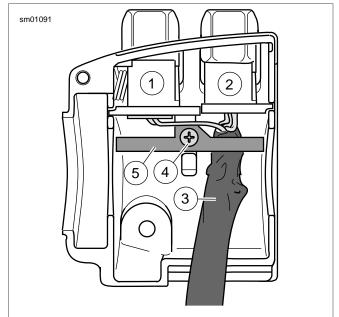

- 1. Horn switch
- 2. High/low beam switch
- 3. Conduit
- 4. Screw with lockwasher
- 5. Bracket

Figure 6-148. Upper Housing Without Splices

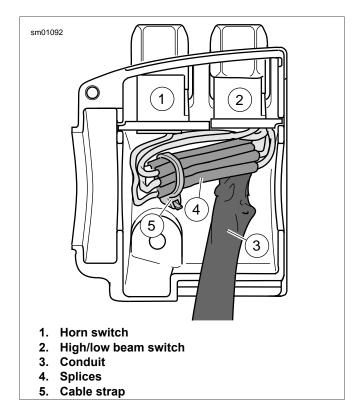


Figure 6-149. Upper Housing With Splices

## **Switch Only Replacement: Lower Housing**

- 1. From inside the switch housing, carefully cut cable strap to free conduit from the turn signal switch bracket.
- Remove screw with lockwasher to release the turn signal switch bracket. Remove the bracket and switch assembly from the housing.

## **Turn-Left Signal Switch Only**

- Cut wires 1.5 in (38.1 mm) from old turn signal switch. Discard switch assembly.
- 2. See <u>6.33 HANDLEBAR SWITCH ASSEMBLIES</u> for information on splicing and general repair practices.

## **Clutch Interlock Switch Only**

- See <u>Figure 6-150</u>. Cut wires 0.25 in (6.4 mm) from old switch. Discard switch assembly.
- See <u>6.33 HANDLEBAR SWITCH ASSEMBLIES</u> for information on splicing and general repair practices.

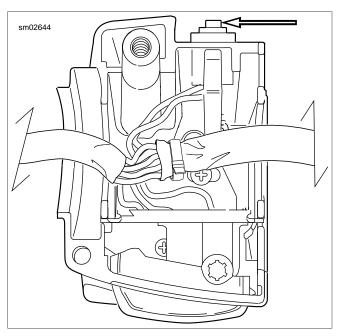


Figure 6-150. Clutch Interlock Switch

#### **ASSEMBLY**

See <u>Figure 6-151</u>. Insert tapered end of **new** 7.0 in (177.8 mm) cable strap (1) into round hole in turn signal switch bracket (2) and then feed back through using the adjacent hole. Reserve the oblong hole for the bracket screw.

#### NOTE

Be sure that all splices are positioned above the turn signal switch bracket.

- Aligning the oblong hole in the bracket with the threaded hole in the boss. Place the turn signal switch assembly (3) into the housing. Fully seat the bracket. Tabs on each side of bracket are captured in slots cast into switch housing.
- Start screw with lockwasher to secure bracket inside housing.

#### **NOTICE**

If routed incorrectly, wires can be pinched by casting or handlebar resulting in switch failure. (00542b)

- Loop switch wires so that spliced lengths are positioned across bracket.
- Capturing conduit about 0.25 in (6.4 mm) from end, securely tighten cable strap to draw conduit to bracket. Trim cable straps.
- 6. Tighten screw to secure bracket inside housing.
- 7. Route wire bundle to upper switch housing below and then forward of the main wire harness.
- 8. Position conduit in channel next to angular arm of bracket. Secure bundle to arm using **new** cable strap.
- 9. Trim cable strap.

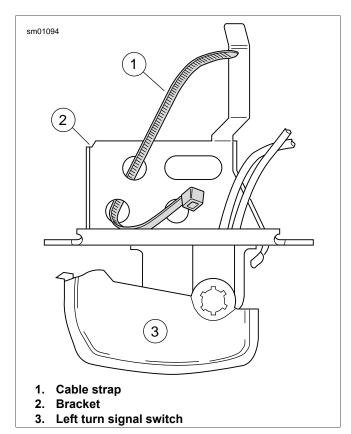


Figure 6-151. Insert Cable Strap in Switch Bracket

#### INSTALLATION

FASTENER	TORQUE VALUE	
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm

- 1. If the hand grip was removed, install a **new** hand grip. See 2.30 HANDLEBAR, Left Hand Grip.
- 2. See <u>Figure 6-152</u>. Install upper and lower switch housings on handlebar. Be sure that ribs (2) on outboard side of switch housings fit in grooves (3) molded into grip.
- 3. Verify that the wire harness conduit runs in the groove at the bottom of the handlebar. Do not pinch the upper switch housing harness under the handlebar when the switch housing screws are tightened.
- 4. Start the upper and lower switch housing screws, but do not tighten.
- 5. See Figure 6-153. Position the clutch hand lever assembly inboard of the switch housing assembly, engaging the tab (3) on the lower switch housing in the groove (2) at the bottom of the clutch lever bracket.
- Align the holes in the handlebar switch clamp with the clutch lever bracket. Start the two screws with flat washers. Position for rider comfort. Beginning with the top screw, tighten screws to specification with a T27 TORX drive head. Refer to Table 6-10.

 Using a T25 TORX drive head, tighten lower and upper switch housing screws to specification. Refer to Table 6-10.

#### NOTE

Tighten the lower switch housing screw first. The gap between the upper and lower housings is at the front of the switch.

**Table 6-10. Handlebar Switch Assembly Fasteners** 


FASTENER	TORQUE
Handlebar clamp screw	108-132 <b>in-lbs</b> (12.2-14.9 Nm)
Switch housing screws	35-45 <b>in-lbs</b> (4.0-5.1 Nm)

- 8. Install main fuse.
- Verify the operation of the clutch interlock switch. See the electrical diagnostic manual.

## **A**WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)


- 10. Test the switches for proper operation.
- 11. Secure wire harness to handlebar as necessary.

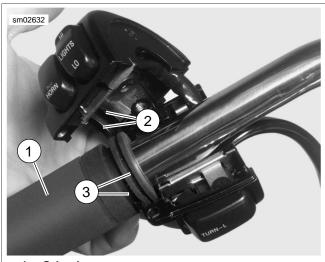

- 1. Grip sleeve
- 2. Ribs
- 3. Grooves

Figure 6-152. Left Handlebar Switch Housings

## **HOME**

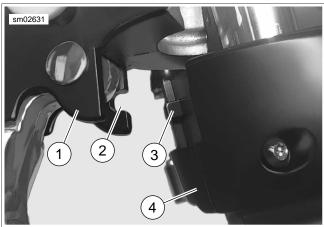

- 1. Clutch lever bracket
- 2. Groove
- 3. Tab
- 4. Switch housing assembly

Figure 6-153. Clutch Lever Bracket

6.36

## **GENERAL**

#### **INITIAL PIN ENTRY**

The PIN consists of five digits. Each digit can be any number from 1 through 9. There can be no zeros (0) in the PIN. Use the PIN to disarm the security system in case the fob becomes unavailable.

To enter a PIN on a motorcycle with no PIN previously installed during HFSM actuation, refer to <u>Table 6-11</u>.

Table 6-11. Entering an Initial PIN: HFSM, TSSM

STEP	ACTION	CONFIRMATION
1	Select a five-digit (1 through 9) initial PIN and record in the owner's manual and on the wallet card.	
2	With an assigned fob present, set engine stop switch to <b>OFF</b> .	
3	Cycle ignition switch IGNITION-OFF-IGNITION-OFF-IGNITION.	
4	Press left turn signal button twice.	Turn signals flash three times.
5	Press <b>right</b> turn signal button once.	Five dashes appear in the odometer window. The first dash flashes.
6	Enter first digit (a) of initial PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.	
7	Press <b>right</b> turn signal button once.	The digit (a) replaces the dash in the odometer. The second dash flashes.
8	Enter second digit (b) of initial PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.	
9	Press <b>right</b> turn signal button once.	The digit (b) replaces the dash in the odometer. The third dash flashes.
10	Enter third digit (c) of initial PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.	
11	Press <b>right</b> turn signal button once.	The digit (c) replaces the dash in the odometer. The fourth dash flashes.
12	Enter fourth digit (d) of initial PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.	
13	Press <b>right</b> turn signal button once.	The digit (d) replaces the dash in the odometer. The fifth dash flashes.
14	Enter fifth digit (e) of initial PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.	
15	Press <b>right</b> turn signal button once.	The digit (e) replaces the dash in the odometer. The first digit flashes.
16	Turn the ignition switch to <b>OFF</b> .	

## **CHANGING THE PIN**

The rider can change the PIN at any time. Refer to <u>Table 6-12</u>.

## Modifying an Existing PIN

If a PIN was previously entered, the odometer will display the equivalent digit. Each additional press of the left turn switch will increment the digit.

#### Examples:

- To advance from 5 to 6, press and release the left turn switch 1 time.
- To advance from 8 to 2, press and release the left turn switch 3 times (9-1-2).

2013 Sportster Service: Electrical 6-101

Table 6-12. Changing the PIN: HFSM

STEP	ACTION	CONFIRMATION	NOTES
1	Select a five-digit (1 through 9) PIN and record in the owner's manual and on the wallet card.		
2	With fobs present, cycle ignition switch IGNITION-OFF-IGNITION-OFF-IGNITION.		
3	Press <b>left</b> turn signal button twice.	Turn signals flash 3 times.	
4	Press <b>right</b> turn signal button once.	Current PIN will appear in odometer. The first digit will flash.	
5	Enter first digit (a) of new PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.		
6	Press <b>right</b> turn signal button once.	The new digit replaces the current in the odometer. The second digit flashes.	
7	Enter second digit (b) of new PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.		
8	Press <b>right</b> turn signal button once.	The new digit replaces the current in the odometer. The third digit flashes.	
9	Enter third digit (c) of new PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.		
10	Press <b>right</b> turn signal button once.	The new digit replaces the dash in the odometer. The fourth digit flashes.	
11	Enter fourth digit (d) of new PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.		
12	Press <b>right</b> turn signal button once.	The new digit replaces the current in the odometer. The fifth digit flashes.	
13	Enter fifth digit (e) of new PIN by pressing <b>left</b> turn signal button until desired digit is displayed in odometer.		
14	Press <b>right</b> turn signal button once.	The new digit replaces the current in the odometer. The first digit flashes.	
15	Turn the ignition switch to <b>OFF.</b>		Turning ignition switch to OFF stores PIN.

## 6.37

## **H-DSSS ACTUATION**

#### **GENERAL**

Setting up a vehicle TSM/HFSM depends on whether the vehicle has a TSM or the optional HFSM security system installed.

#### SIDECAR CONFIGURATION

## **A**WARNING

Only Touring Harley-Davidson Motorcycles are suitable for sidecar use. Consult a Harley-Davidson dealer. Use of motorcycles other than Touring models with sidecars could result in death or serious injury. (00040a)

All motorcycles ship with the H-DSSS set for use **without** a sidecar installed. If a motorcycle is equipped with a TSM, no further actuation is required.

## **ACTUATION**

Actuation consists of assigning two fobs to the system, and entering an initial PIN. The PIN can be changed by the rider at any time.

- 1. Configure vehicles by assigning **both** fobs to the vehicle.
- Configure vehicles by entering a PIN picked by the owner.
  The personal code allows the owner to operate the system
  if the fob is lost or inoperable. Record the PIN in the
  owner's manual. Instruct the customer to carry a copy (use
  the wallet card found in the owner's manual). See
  6.36 PERSONAL IDENTIFICATION NUMBER (PIN).

Once the system has been activated, it will always "arm" within 5 seconds of turning the ignition switch to **OFF** or **ACC** and no motorcycle motion.

#### FOB ASSIGNMENT

PART NUMBER	TOOL NAME
HD-48650	DIGITAL TECHNICIAN II

Use DIGITAL TECHNICIAN II (Part No. HD-48650) to assign both fobs to the H-DSSS. Follow the menu prompts to scan

the fob serial number with the bar code reader. Alternatively, enter the number using the keyboard. The initial PIN entry should be performed using DIGITAL TECHNICIAN II (Part No. HD-48650) in conjunction with fob assignment.

#### NOTE

Each fob has a unique serial number. Attach fob label to a blank NOTES page in the owner's manual for reference.

## POWER DISRUPTION AND CONFIGURING

The following actions may result in a removal of battery voltage from the TSM/HFSM:

- · Battery disconnect
- Power drain
- Battery fuse removal
- Connecting a breakout box to the TSM/HFSM connector

After battery voltage has been removed from terminal 1 of the TSM/HFSM, the module will not enter the PIN entry mode on the first attempt. Initialize the PIN entry configuration sequence twice before entering the PIN:

- 1. Set engine OFF/RUN switch to OFF.
- Cycle the ignition switch:
  - a. IGNITION
  - b. OFF
  - c. IGNITION
  - d. OFF
  - e. IGNITION
- 3. Press the left turn signal switch twice.
- 4. Repeat the previous steps.
- 5. Continue with the PIN entry sequence.

2013 Sportster Service: Electrical 6-103

## TSM/HFSM: PASSWORD LEARN

6.38

#### **GENERAL**

If the ECM or TSM/HFSM is faulty, replace the unit. See 6.6 ELECTRONIC CONTROL MODULE (ECM) or 6.7 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM). Then, to determine if password learn is necessary, refer to Table 6-13.

Table 6-13. Password Learn

DEVICE REPLACED	IS PASSWORD LEARN NECESSARY?
ECM	Yes
TSM	No *
TSM/HFSM	Yes

<sup>\*</sup> If a TSM has been replaced by a HFSM, or a HFSM has been replaced by a TSM, password learn is necessary.

#### PASSWORD LEARN

PART NUMBER	TOOL NAME
HD-48650	DIGITAL TECHNICIAN II

To perform the password learn procedure, refer to <u>Table 6-14</u>. When finished, continue with all instructions under 6.37 H-DSSS ACTUATION.

TSM/HFSM: Always perform all appropriate instructions under 6.37 H-DSSS ACTUATION after TSM/HFSM replacement or removal.

TSM/TSSM (Japan/Korea markets): Always perform all appropriate instructions under VEHICLE DELIVERY in the electrical diagnostic manual after TSM/TSSM replacement or removal.

#### NOTES

- HFSM: Fob assignment must be performed at an authorized Harley-Davidson dealer using DIGITAL TECHNICIAN II (Part No. HD-48650).
- TSSM: Do not forget to enter a Personal Identification Number (PIN) for TSSM vehicles. If a code is not assigned and the key fob is lost or damaged while the vehicle is armed, the TSSM must be replaced.

Table 6-14. Setting TSM/TSSM/HFSM and ECM Password

NO.	ACTION	CONFIRMATION	NOTES
	Ignition must be turned off for at least 15 seconds.	With Ignition Switch turned off, Check Engine lamp and Security lamp will be off.	
1	Install <b>new</b> TSM/TSSM/HFSM or ECM.		
2	Set Engine Stop Switch to RUN.		
3	Turn Ignition Switch ON.	Verify Check Engine lamp and Security lamp illuminate and then turn off.	TSM/HFSM enables start relay.
4	Attempt normal start one time.	Engine starts and stalls. Check Engine lamp illuminates and stays on.	Password has not been learned. ECM sets DTC P1009.
5	Wait ten seconds. Security lamp will illuminate and stay on.	Security lamp illuminates.	ECM enters Password Learning mode for ten minutes. Do not cycle Ignition Switch or interrupt vehicle power or Password Learn will be unsuccessful.
6	Wait until Security lamp turns off.		This takes ten minutes.
7	Quickly (within two seconds) turn Ignition Switch OFF- <b>ON</b> .		ECM must not be allowed to shutdown.
8	Wait until Security lamp turns off.		This takes ten minutes.
9	Quickly (within two seconds) turn Ignition Switch OFF- <b>ON</b> .		ECM must not be allowed to shutdown.
10	Wait until Security lamp turns off.		This takes ten minutes.
11	Quickly (within two seconds) turn Ignition Switch OFF- <b>ON</b> .		ECM must not be allowed to shutdown.

6-104 2013 Sportster Service: Electrical

Table 6-14. Setting TSM/TSSM/HFSM and ECM Password

NO.	ACTION	CONFIRMATION	NOTES
12	Turn Ignition Switch <b>OFF</b> . Wait 15 seconds before turning Ignition Switch on. Turn Ignition Switch <b>ON</b> and start engine to confirm successful Password Learn procedure. Clear DTCs.		
13	TSM/HFSM: Perform all steps under 6.37 H-DSSS ACTUATION. TSM/TSSM (Japan/Korea markets): Perform all steps under VEHICLE DELIVERY in electrical diagnostic manual.		

2013 Sportster Service: Electrical 6-105

## **NOTES**

## TABLE OF CONTENTS

SUBJECT	PAGE NO.
A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTOR	A-1
A.2 BOSCH COMPACT 1.1M CONNECTOR	
A.3 DELPHI 100W MICRO-PACK SEALED CONNECTOR	A-3
A.4 DELPHI 150 METRI-PACK SEALED CONNECTOR	A-5
A.5 DELPHI 280 METRI-PACK UNSEALED CONNECTOR	A-7
A.6 DELPHI 480 METRI-PACK UNSEALED CONNECTORS	A-8
A.7 DELPHI 630 METRI-PACK UNSEALED CONNECTOR	A-9
A.8 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING	A-10
A.9 DELPHI METRI-PACK TERMINAL REPAIR	A-11
A.10 DELPHI MICRO 64 SEALED CONNECTOR	A-13
A.11 DELPHI GT 150 SEALED CONNECTOR	A-16
A.12 DELPHI GT 280 SEALED 73-TERMINAL ECM CONNECTOR	A-18
A.13 DEUTSCH DT SEALED CONNECTOR	
A.14 DEUTSCH DT SEALED TERMINAL REPAIR	
A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR	A-25
A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR	A-26
A.17 JAE MX19 SEALED CONNECTOR	A-28
A.18 MOLEX CMC SEALED CONNECTOR	
A.19 MOLEX MX 150 SEALED CONNECTOR	A-31
A.20 TYCO 070 MULTILOCK UNSEALED CONNECTOR	A-35
A.21 TYCO GET 64 SEALED CONNECTOR	A-39
A.22 TYCO MCP SEALED CONNECTOR	
A.23 SEALED SPLICE CONNECTOR	A-43

# AUTOFUSE UNSEALED ELECTRICAL CONNECTOR

**A.1** 

## AUTOFUSE UNSEALED CONNECTOR REPAIR

PART NUMBER	TOOL NAME
GA500A	SNAP-ON TERMINAL PICK

#### General

Autofuse Unsealed connector terminals are found in ignition switches and some fuse blocks.

## **Disassembly**

- See <u>Figure A-1</u> or <u>Figure A-2</u>. Insert smallest pair of pins on the SNAP-ON TERMINAL PICK (Part No. GA500A) into chamber on mating end of socket housing to press tangs on each side of terminal simultaneously.
- Gently pull on wire to remove terminal from wire end of socket housing.
- 3. If necessary, crimp **new** terminals on wires.

## **Assembly**

- Carefully bend tang on each side of terminal outward away from terminal body. Use the thin flat blade from a hobby knife
- 2. With the open side of the terminal facing rib on wire end of socket housing, insert terminal into chamber until it locks in place.

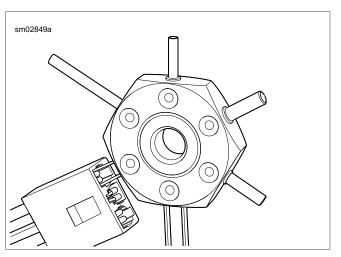


Figure A-1. Removing Autofuse Unsealed Terminal from Ignition Switch

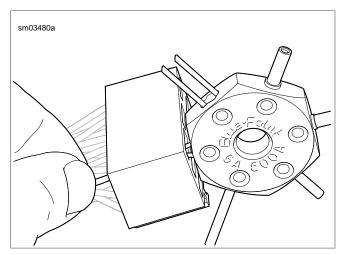


Figure A-2. Removing Autofuse Unsealed Terminal from Fuse Block

## **BOSCH COMPACT 1.1M CONNECTOR**

#### **BOSCH COMPACT 1.1M CONNECTOR**

PART NUMBER	TOOL NAME
GA500A	SNAP-ON TERMINAL PICK

#### General

See Figure A-3. The Bosch Compact 1.1M connector is found on MAP and TMAP sensors on all models.

## Housings

**Separate:** Snap back the secondary lock. Press on the latch while pulling the socket connector from the sensor.

**Join:** Align the sockets and press the housings together until the latch snaps. Snap in the secondary lock.

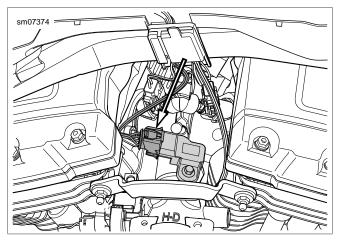


Figure A-3. Bosch Compact 1.1M Connector

## **Removing Socket Terminal**

- 1. See <u>Figure A-4</u>. Slide the locking bar off the terminal housing.
- Insert the smallest pins of the SNAP-ON TERMINAL PICK (Part No. GA500A) into the gaps on each side of the socket to compress the tangs on each side of the terminal.
- 3. Gently pull on the wire to remove the terminal.

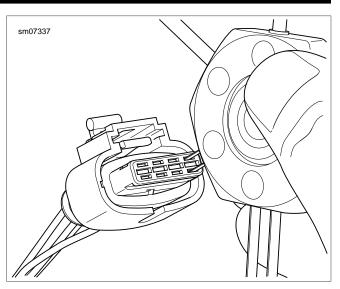


Figure A-4. Terminal Removal: Bosch Compact 1.1M Connector

## **Installing Socket Terminal**

- 1. See <u>Figure A-5</u>. Use a hobby knife to bend the tangs on each side of the terminal outward.
- 2. Align terminal to socket housing. Press terminal into housing until it snaps.

#### NOTE

The teeth on the locking bar face down.

3. Slide the locking bar onto the connector.

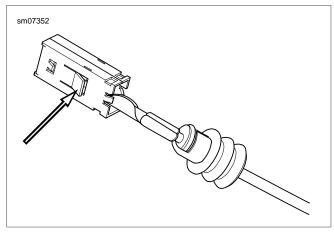


Figure A-5. Tangs: Bosch Compact 1.1M Socket Terminal

# DELPHI 100W MICRO-PACK SEALED CONNECTOR

**A.3** 

## DELPHI 100W MICRO-PACK SEALED CONNECTOR REPAIR

#### General

A Delphi 100W Micro-Pack Sealed connector connects the electronic control module (ECM) to the main harness.

## Separating Socket Housing From ECM

See <u>Figure A-6</u>. While pressing the connector into the ECM, press the thumb lever (1) against the connector until the latch (2) pops out of the catch (3) on the ECM.

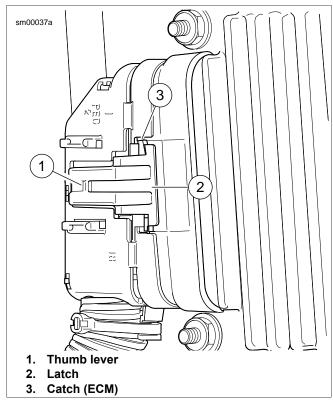


Figure A-6. Delphi 100W Micro-Pack Sealed Connector to

## Mating Socket Housing To ECM

Push the connector into the ECM until the latch is captured by the catch on the ECM.

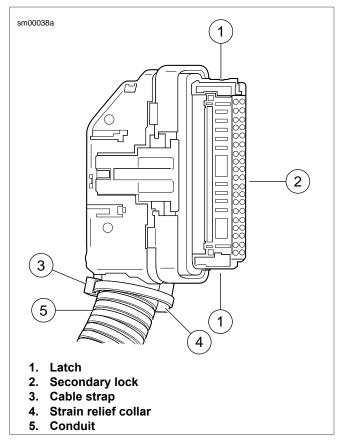


Figure A-7. Delphi 100W Micro-Pack Sealed Connector

## **Removing Socket Terminal**

- See <u>Figure A-7</u>. To remove, gently press latch (1) on each side of the clear plastic secondary lock (2). For best results, release one side at a time.
- 2. Carefully cut cable strap (3) to free strain relief collar (4) from conduit (5).
- See <u>Figure A-8</u>. Using a thin blade, gently pry at seam at back of socket housing to release three plastic pins (1) from slots in housing. Separate and spread halves of socket housing.
- 4. Push on wire lead to free terminal from chamber.

## **Installing Socket Terminal**

- From inside socket housing, gently pull on wire to draw terminal into chamber.
- Exercising caution to avoid pinching wires, press halves of socket housing together until three plastic pins fully engage slots in housing.
- 3. Install **new** cable strap in groove of strain relief collar capturing cable conduit.
- 4. With the two ribs on the secondary lock on the same side as the external latch, install over terminals until latches lock in place.

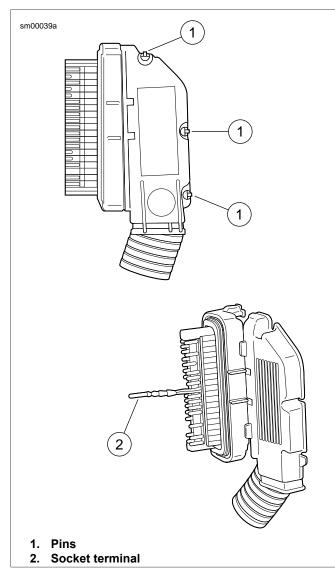


Figure A-8. Delphi 100W Micro-Pack Sealed Connector: Separate Halves of Socket Housing

## **CRIMPING TERMINALS**

PART NUMBER	TOOL NAME
HD-50120	UNIVERSAL CRIMPER SET
HD-50120-2	HAND CRIMP FRAME
HD-50120-7	DELPHI 100W MICRO-PACK SEALED DIE

- 1. Strip the wire insulation to specification. Refer to <a href="Table A-1">Table A-1</a>.
- 2. Install the DELPHI 100W MICRO-PACK SEALED DIE (Part No. HD-50120-7) in the handle of the HAND CRIMP FRAME (Part No. HD-50120-2) of the UNIVERSAL CRIMPER SET (Part No. HD-50120).
- 3. Place the **new** terminal in the specified nest.
- 4. Insert the wire to the wire stop. Crimp the terminal.
- 5. Inspect the crimped terminal.

Table A-1. Delphi 100W Micro-Pack Crimper Die (Part No. HD-50120-7)

TERMINAL	PART NO.	STRIP LENGTH		PART NO. STRIP LENGTH NE		NEST
		in	mm			
Socket: 18 AWG	72076-00	0.200	5.1	В		
Socket: 20-22 AWG	72568-08	0.200	5.1	С		

## DELPHI 150 METRI-PACK SEALED CONNECTOR REPAIR

#### General

Delphi 150 Metri-Pack Sealed connectors are embossed with the initials (P.E.D.).

There are two types of connectors in this series:

- Pull-to-Seat
- Push-to-Seat

## **Separating Pin and Socket Housings**

Bend back the external latch slightly and separate the pin and socket halves of the connector.

## **Mating Pin and Socket Housings**

Align the wire colors. Push the pin and socket halves of the connector together.

## **Removing Socket Terminal**

See <u>Figure A-9</u> for pull-to-seat connector or <u>Figure A-10</u> for push to seat connector. Remove wire lock (1) from wire end of socket housing on push-to-seat type connectors.

#### NOTE

For best results, free one side of wire lock first and then release the other side.

2. Find the locking tang in the mating end of the connector.

#### NOTE

The tangs are always positioned in the middle of the chamber. The tangs are on the same side as the external latch.

- 3. Gently insert a small diameter straight pin into the chamber about 1/8 in (3.2 mm).
  - For pull-to-seat: Stay between the terminal and the chamber wall and pivot the end of the pin toward the terminal body.
  - For push-to-seat: There is a small opening for the pin.
- 4. When a click is heard, remove the pin and repeat the procedure.

#### NOTE

The click is the sound of the tang returning to the locked position as it slips from the point of the pin.

5. Pick at the tang until the clicking stops and the pin seems to slide in deeper. This indicates the tang is pressed in.

#### NOTE

After repeated terminal extractions, the click may not be heard, but pivot the pin as if the click was heard at least three times.

- 6. Remove the pin.
  - a. **For pull-to-seat:** Push on the lead to extract the terminal from the mating end of the connector.
  - For push-to-seat: Pull on the lead to draw the terminal out the wire end.

## **Inserting Socket Terminal**

#### NOTE

For wire location purposes, alpha characters are stamped into the socket housings.

- See <u>Figure A-9</u> for pull-to-seat connector or <u>Figure A-10</u> for push to seat connector. Carefully bend tang on each side of terminal outward away from terminal body. Use the thin flat blade from a hobby knife.
- Gently pull or push on the lead to install the terminal back into the chamber. A click is heard when the terminal is properly seated.
- Gently pull or push on the lead to verify that the terminal is locked in place.

For push-to-seat: See Figure A-10. Seat wires in separate channels of wire lock and then push channels **inside** chambers at wire end of socket housing. Fully installed, slot on each side of wire lock engages ear on socket housing.

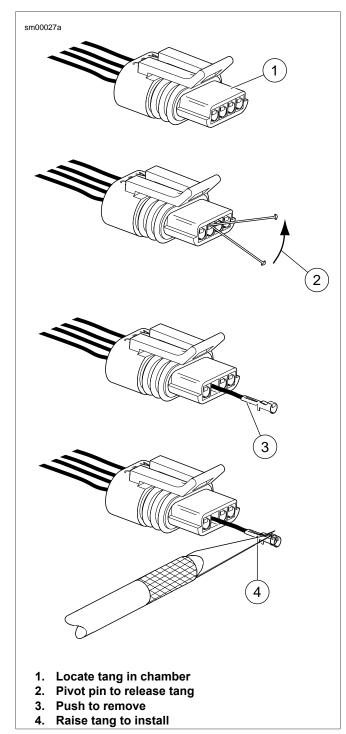


Figure A-9. Delphi 150 Metri-Pack Sealed Connector: Pull-to-Seat

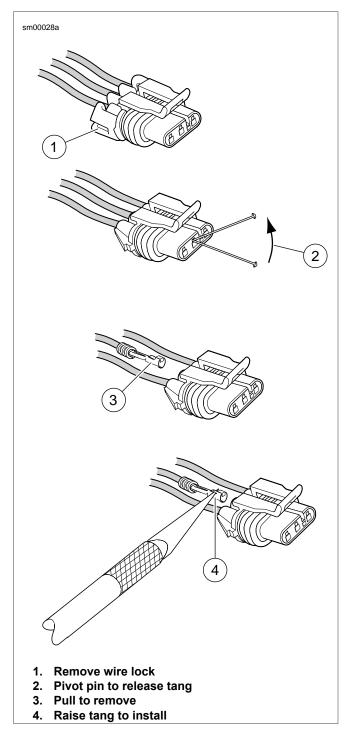


Figure A-10. Delphi 150 Metri-Pack Sealed Connector: Push-to-Seat

# DELPHI 280 METRI-PACK UNSEALED CONNECTOR

 $\Delta$  5

## **FUSE BLOCK REPAIR**

## **Removing Socket Terminals**

 See <u>Figure A-11</u>. To remove secondary locks, insert end of small flat blade screwdriver (1) under lip of locking wedge (2) and gently pry up secondary lock.

#### NOTE

For best results, start with locking wedge on outboard side of secondary lock.

- 2. Looking into chamber at top of fuse block, note the tang next to each socket terminal.
- Use the thin flat blade from a hobby knife. Gently push tang away from terminal and tug on wire to back terminal out.

## **Installing Socket Terminals**

Match the wire lead color to the fuse block terminal cavity.

#### NOTES

- Refer to the main harness wiring diagram for wire lead color codes.
- See <u>Figure A-12</u>. Alpha (1) and numeric (2) coordinates identify the main fuse block terminal cavity. Refer to the main harness wiring diagram.
- 2. With the open side of the socket terminal facing the tang, push lead into chamber at the wire end of the fuse block. A click is heard when the terminal is properly engaged.
- 3. Gently tug on the wire to verify that the terminal is locked in place.
- Install the secondary locks. With the locking wedges positioned above the tangs in each chamber, slide flat side of secondary lock into slot between rows. Push down until it bottoms.

## **Crimping Terminals**

Terminals are crimped twice: once over the wire core and a second time over the insulation/seal.

A correctly crimped terminal may require different crimping dies found on separate crimpers.

#### NOTE

The wiring diagram indicates when one socket terminal is be crimped to two wire leads.

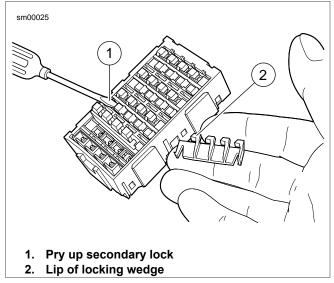


Figure A-11. Fuse Block: Remove Secondary Locks

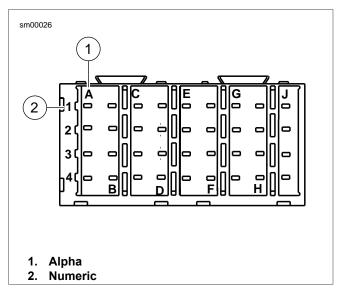


Figure A-12. Fuse Block: Coordinates (typical)

# DELPHI 480 METRI-PACK UNSEALED CONNECTORS

**A.6** 

## DELPHI 480 METRI-PACK UNSEALED CONNECTOR REPAIR

#### General

A 480 Metri-Pack connector is frequently used for the B+ (battery voltage) connector to power P&A accessories.

See Figure A-13. An AFL housing (5) is used on many ignition/light switches. The secondary lock (4) must be opened before removing the terminal from the housing.

## **Separating Pin and Socket Housings**

#### NOTES

- Record position of cable straps anchoring wire conduits of the pin and socket housing before removing them.
- Cut any cable strap anchoring the wire conduits of the pin (accessory connector housing) and the socket (B+) housing.

See <u>Figure A-13</u>. Using small flat blade screwdriver, press button (1) on pin housing (red wire) side of the connector and pull apart the pin and socket housings.

## **Mating Pin and Socket Housings**

Orient the latch on the socket housing to the button catch on the pin housing and press the housings together.

## **Removing Socket Terminals**

- See <u>Figure A-13</u>. Bend back the latch (2) slightly and free one side of secondary lock, then repeat to release the opposite side. Rotate the secondary lock outward on hinge to access terminal in chamber of connector housing.
- On the mating end of the connector, note the tang in the square shaped opening centered next to the terminal. Gently insert the point of a stick pin or large safety pin into the opening (3) between the tang and the chamber wall until it stops.
- 3. Pivot the end of the pin toward the terminal body to press the tang.
- Remove the pin and then pull terminal out of the wire end of connector housing.
- If necessary, crimp **new** terminals on wires. See <u>A.9 DELPHI METRI-PACK TERMINAL REPAIR</u>.


## **Installing Socket Terminals**

- 1. Carefully bend the tang outward away from the terminal body.
- With the tang on the same side as the square shaped opening in the mating end of the connector housing, feed terminal into wire end of connector housing until it clicks in place.

- Verify that terminal will not back out of the chamber. A slight tug on the cable will confirm that it is locked.
- Rotate the hinged secondary lock inward until latches fully engage tabs on both sides of connector housing.

#### NOTE

If removed, install **new** anchored cable strap in original equipment location. Tighten cable strap to capture conduit of both accessory connector and B+ connector approximately 1.0 in (25.4 mm) from housings.

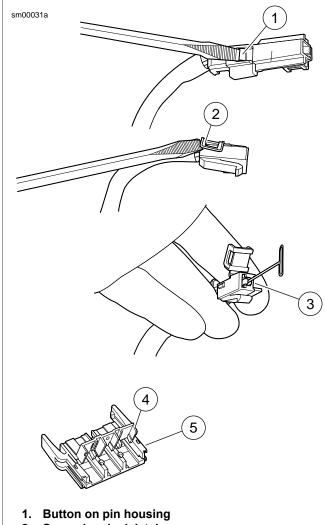

- 2. Secondary lock latch
- 3. Opening between tang and chamber wall
- 4. Secondary lock (shown open)
- 5. AFL housing

Figure A-13. Delphi 480 Metri-Pack Unsealed Connector: Remove Socket Terminal

# DELPHI 630 METRI-PACK UNSEALED CONNECTOR

**A.7** 

## DELPHI 630 METRI-PACK UNSEALED CONNECTOR REPAIR

PART NUMBER	TOOL NAME
SNAP-ON TT600-3	SNAP-ON PICK

## **Separating Pin and Socket Housings**

NOTE

If necessary, remove connector from barbed anchor or other retaining device.

Bend back the external latch slightly and separate pin and socket halves of the connector.

## **Mating Pin and Socket Housings**

Orient the latch to the catch. Push the pin and socket halves of the connector together until the latch "clicks".

NOTE

If removed, install connector on barbed anchor or other OE retaining device.

### **Removing Socket Terminal**

- Bend back the latch slightly and free one side of the secondary lock. Repeat the step to unlatch the other side.
- Rotate the secondary lock outward on hinge to view the terminals in the chambers of the connector housing. The locking tang is on the side opposite the crimp tails and engages a rib in the chamber wall to lock the terminal in place.

- Moving to the mating end of the connector, find the small opening on the chamber wall side of each terminal.
- Insert SNAP-ON PICK (Part No. SNAP-ON TT600-3) into opening until it stops. Pivot the end of the pick toward the terminal to press the locking tang.
- Remove the pick and gently tug on the wire to pull the terminal from the wire end of the connector. Repeat steps if the terminal is still locked in place.
- If necessary, crimp **new** terminals on wires. Refer to A.9 DELPHI METRI-PACK TERMINAL REPAIR.

## **Installing Socket Terminal**

NOTE

Refer to the wiring diagrams to match wire lead colors to alpha characters molded into the secondary locks of each connector housing.

- Carefully bend tang on each side of terminal outward away from terminal body. Use the thin flat blade from a hobby knife.
- With the tang facing the chamber wall, push the lead into the chamber at the wire end of the connector. A click is heard when the terminal is properly seated.
- Gently tug on the wire end to verify that the terminal is locked in place and will not back out of the chamber.
- Rotate the hinged secondary lock inward until tabs fully engage latches on both sides of connector.

# DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING

**A.8** 

## DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING REPAIR

## **Removing Socket Terminals**

## WARNING

Disconnect negative (-) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00049a)

- Disconnect battery.
- See <u>Figure A-14</u>. Disengage slots (1) on secondary lock (2) from tabs (3) and remove secondary lock.
- Insert flat blade of pick or small screwdriver into opening
   until it stops.
- Tug on cable to pull socket from connector housing. Pivot the pick toward the terminal body to release the latch if necessary.
- 5. Repeat to remove remaining socket terminal.

#### NOTE

The battery positive cable and power wire for the main fuse are crimped together at the starter ring terminal. Replace both as an assembly if either requires replacement.

## **Installing Socket Terminals**

- See <u>Figure A-15</u>. Carefully bend tang outward away from the terminal body.
- Properly orient terminal to the cavity in the housing. Push terminal into connector housing until it clicks in place. Verify that socket will not back out of chamber.
- 3. Push rubber seal into connector housing.
- 4. Repeat to install remaining socket terminal.
- Install secondary lock onto connector housing. Verify slots engage tabs on sides of connector housing.

## **A**WARNING

Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)

6. Connect battery cables.

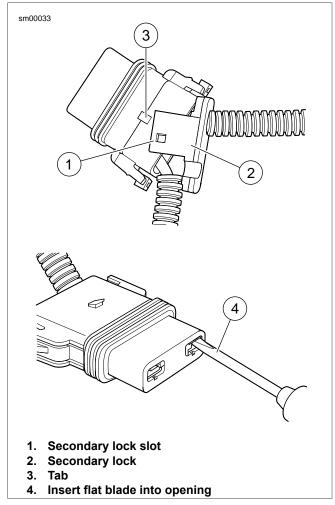


Figure A-14. Delphi 800 Metri-Pack Sealed Main Fuse Housing: Remove Socket Terminals

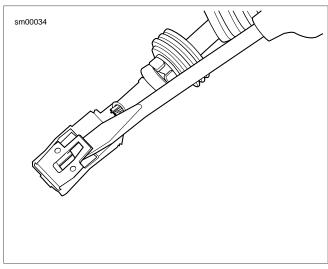


Figure A-15. Delphi 800 Metri-Pack Sealed Main Fuse Housing: Bend Tang

## **DELPHI METRI-PACK TERMINAL REPAIR**

## **METRI-PACK TERMINAL CRIMPS**

PART NUMBER	TOOL NAME
HD-38125-6	PACKARD TERMINAL CRIMP TOOL
HD-38125-7	PACKARD TERMINAL CRIMPER
HD-38125-8	PACKARD CRIMPING TOOL

## **Matching Terminal To Crimper**

Metri-Pack connectors embossed with the initials P.E.D. require Packard crimp tools to crimp terminals to wire leads.

Terminals are crimped twice to a wire lead, once over the wire core and a second time over the insulation/seal.

See Figure A-16. A crimp can require two crimping dies. The dies are found on the PACKARD TERMINAL CRIMP TOOL (Part No. HD-38125-6) and the PACKARD TERMINAL CRIMPER (Part No. HD-38125-7). The terminal and the wire gauge determine the core crimp die and the insulator/seal die.

#### NOTE

The PACKARD CRIMPING TOOL (Part No. HD-38125-8) will also crimp sealed splice connectors in wire gauge sizes 18-20, 14-16 and 10-12.

### **Preparing Wire Lead**

Strip 5/32 in (4.0 mm) of insulation from the wire lead.

## **Crimping Wire Core**

#### NOTE

Metri-Pack terminal crimps require two steps. Always perform Crimping Wire Core before Crimping Insulation/Seal.

- Squeeze and release handles until ratchet automatically opens.
- 2. Identify the corresponding sized nest for the core crimp.
- 3. Position the core crimp in the die. Be Sure the core crimp tails are facing the forming jaws.
- 4. Gently squeeze the handles until crimpers just secure the core crimp tails.
- 5. Insert stripped wire between crimp tails. Verify that wire is positioned so that short pair of crimp tails squeeze core wire strands, while long pair is positioned over the insulation or seal material.
- 6. Squeeze handles tightly closed. Release grip and the tool will automatically open.

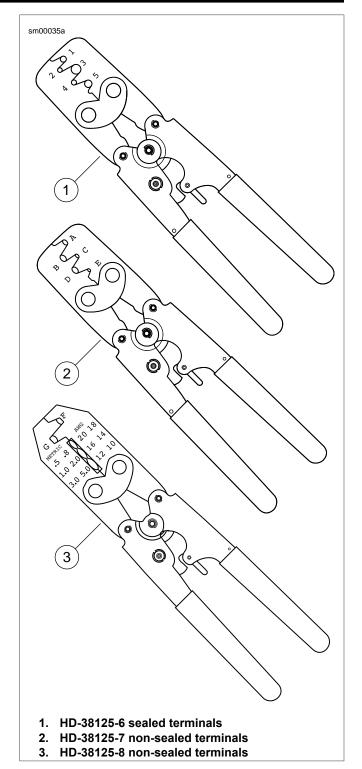


Figure A-16. Metri-Pack Terminal Crimp Tools

## **Crimping Insulation/Seal**

NOTE

Always perform **Crimping Wire Core** before **Crimping Insulation/Seal**.

- 1. See <u>Figure A-17</u>. Identify the correct die for the insulation/seal crimp (2).
- 2. Position the insulation/seal crimp in the nest. Be sure the insulation/seal crimp tails are facing the forming jaws.
- 3. Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimp is complete.

## **Inspecting Crimps**

- 1. See <u>Figure A-17</u>. Inspect the wire core crimp (1). The tails should be folded in on the wire core without any distortion or excess wire strands.
- 2. Inspect the insulation (2) or seal (3) crimp. The tails of the terminal should be wrapped around the insulation without distortion

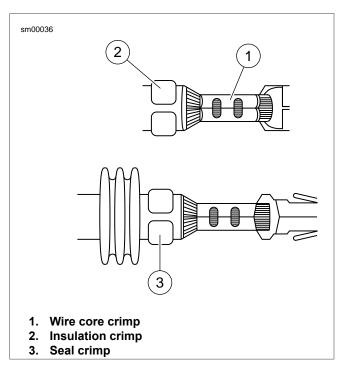


Figure A-17. Metri-Pack Connector: Inspect Core and Insulation/Seal Crimps

## **DELPHI MICRO 64 SEALED CONNECTOR**

## DELPHI MICRO 64 SEALED CONNECTOR REPAIR

PART NUMBER	TOOL NAME
HD-45928	TERMINAL REMOVER
HD-45929	TERMINAL CRIMPER

#### General

Delphi Micro 64 Sealed connectors are frequently found on speedometers, tachometers and the ECM of Touring Models.

## Separating Pin and Socket Housings

Bend back the external latches slightly and separate the pin and socket housings.

## **Mating Pin and Socket Housings**

Orient the wire lead colors. Align pin and socket housings. Push the pin and socket housings of the connector together until the latches click.

## **Removing Terminal**

- See <u>Figure A-18</u>. Locate the head of the secondary lock (1) on one side of the connector housing.
- Insert the blade of a small screwdriver between the center ear of the lock and the connector housing and gently pry out lock. When partially removed, pull lock from connector housing.
- Locate pin hole (2) between terminals on mating end of connector.

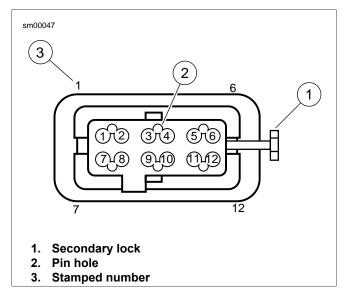


Figure A-18. Delphi Micro-64 Sealed Connector: Housing

- 4. See Figure A-19. Obtain the TERMINAL REMOVER (Part No. HD-45928).
- 5. See <u>Figure A-20</u>. Push the adjacent terminals all the way into the connector housing and then insert tool into hole until it bottoms.

 Leaving the tool installed, gently tug on wires to pull either one or both terminals from wire end of connector. Remove tool



Figure A-19. Terminal Remover (HD-45928)

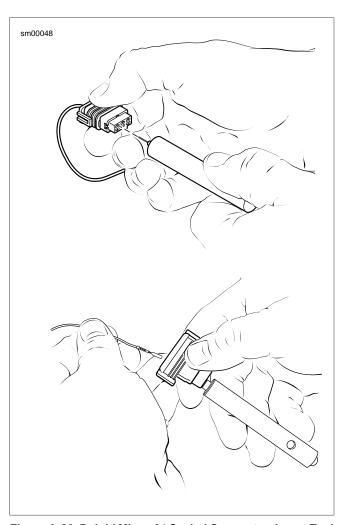


Figure A-20. Delphi Micro-64 Sealed Connector: Insert Tool and Remove Terminal

## **Installing Terminal**

 Insert terminal into its respective numbered chamber on wire end of connector. No special orientation of the terminal is necessary.

#### NOTE

See <u>Figure A-18</u>. For wire location purposes, the corners of the socket housing are stamped (3) with the numbers 1, 6, 7 and 12, representing terminals 1-6 on one side, and 7-12 on the other.

Bottom the terminal in the chamber and then gently tug on the wire to verify that it is locked in place.

#### NOTE

Once removed, the terminal may not lock in place when first installed. Until the lock engages, move the terminal back and forth slightly while wiggling the lead.

- Since the terminal remover tool releases two terminals simultaneously, repeat step 2 on the adjacent terminal even if it was not pulled from the connector housing.
- With the center ear on the head of the secondary lockpin facing the mating end of the connector, push secondary lock in until head is flush with the connector housing.

## **Preparing Wire Leads for Crimping**

Strip 1/8 in (3.0 mm) of insulation from the wire lead.

## **Crimping Terminals**

- 1. Inspect **new** socket terminal for bent or deformed contact and crimp tails. Replace as necessary.
- See <u>Figure A-22</u>. Squeeze the handles of the TERMINAL CRIMPER (Part No. HD-45929) to cycle the tool to the fully open position (1).
- 3. Raise locking bar and barrel holder by pushing up on bottom tab with index finger (2).
- 4. With the crimp tails facing upward, insert terminal through locking bar into front hole in barrel holder (20-22 gauge wire) (3).
- Release locking bar to lock position of contact. When correctly positioned, the locking bar fits snugly in the space at the front of the core crimp tails and the closed side of the terminal rests on the outer nest of the crimp tool.
- Insert wires between crimp tails until ends make contact with locking bar. Position wire that the wide pair of crimp tails squeeze bare wire strands, while the narrow pair folds over the insulation material.
- Squeeze handle of crimp tool until tightly closed (4). Tool automatically opens when the crimping sequence is complete.
- 8. Raise locking bar and barrel holder to remove contact.

#### **Inspecting Crimps**

Inspect the quality of the core and insulation crimps. Distortion should be minimal.

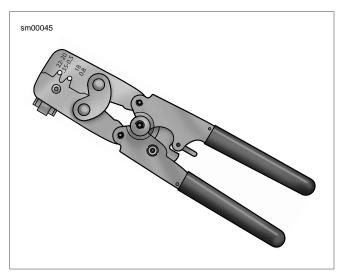


Figure A-21. Terminal Crimper (HD-45929)

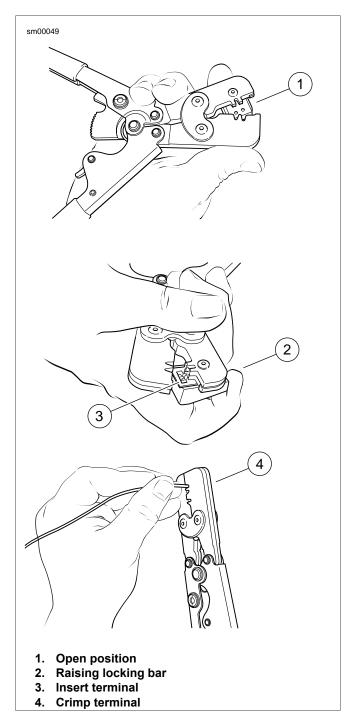


Figure A-22. Delphi Micro-64 Sealed Connector: Terminal in Crimper

## DELPHI GT 150 SEALED CONNECTOR REPAIR

#### General

Delphi connectors are embossed with the brand name, Delphi, on the housing latch or terminal block.

## **Separating Pin and Socket Housings**

See Figure A-23. Bend back the external latch(es) slightly and separate pin and socket halves of connector.

## **Mating Pin and Socket Housings**

Push pin and socket halves of connector together until external latch(es) engage.

## **Removing Socket Terminals**

NOTE

Although the parts of the different Delphi connectors vary in appearance, the instructions which follow will work for all.

- See <u>Figure A-24</u>. If present, free one side of wire lock (1) from ear on wire end of socket housing. Release the other side if necessary. Release wires from channels in wire lock. Remove from socket housing.
- 2. Use a fingernail to pry colored terminal lock (2) loose. Remove from mating end of socket housing.
- Use the thin flat blade from a hobby knife. Gently pry tang
   (3) outward away from terminal. Tug on wire to back terminal out wire end of chamber. Do not pull on wire until tang is released or terminal will be difficult to remove.

## **Installing Socket Terminals**

NOTE

For wire location purposes, alpha or numeric characters are stamped into the wire end of each socket housing.

- Gently push tang on socket housing inward toward chamber. With the open side of the terminal facing the tang, push terminal into chamber at wire end of socket housing.
- 2. Gently tug on wire to verify that terminal is locked, preventing it from backing out of chamber. If necessary, use fingernail to push tang into engagement with terminal.
- Install colored terminal lock onto mating end of socket housing.
- 4. If present, seat wires in separate channels of wire lock and then push channels **inside** chambers at wire end of socket housing. Fully installed, slot on each side of wire lock engages ear on socket housing.

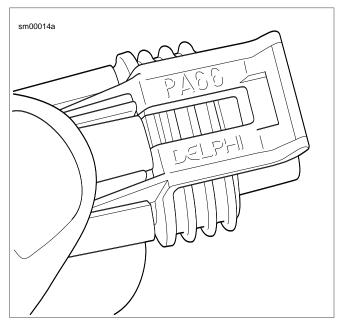


Figure A-23. Delphi GT 150 Sealed Connector: Socket Housing Latch

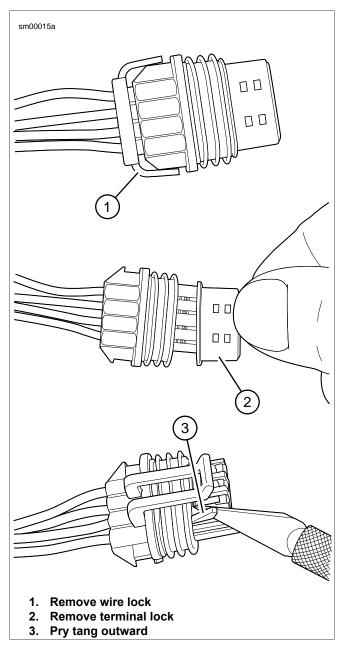


Figure A-24. Delphi GT 150 Sealed Connector: Removing Socket Terminals

# DELPHI GT 280 SEALED 73-TERMINAL ECM CONNECTOR

**A.12** 

## DELPHI GT 280 SEALED 73-TERMINAL ECM CONNECTOR

#### NOTE

Do not operate latch lever when connector is not mated to ECU. Damage will occur.

## **Separating Socket Housing From ECM**

See <u>Figure A-25</u>. Remove strap (1). Press the latch (2). Rotate lock lever to the released position (3).

## **Mating Socket Housing To ECM**

Push the connector into the ECM. Rotate the lock lever to the locked position.

## **Socket Terminal**

- Cut cable strap to release harness from strain relief collar of connector housing.
- See <u>Figure A-26</u>. Release latches (4) that retain cover (3) to housing (2) and remove cover.
- 3. Remove and service the Micro-64 terminals. See A.10 DELPHI MICRO 64 SEALED CONNECTOR.
- Install connector housing cover. Verify all wires are within the confines of the cover and that the cover latches are engaged.
- Install new cable strap cable to the strain relief of the connector.

#### **ECM Ground Terminal**

- See <u>Figure A-26</u>. Remove secondary lock (1).
- 2. See <u>Figure A-27</u>. Using a thin blade screwdriver, gently pry ground terminal retainer from connector housing.
- See <u>Figure A-28</u>. Using a thin blade screwdriver, release latch and pull ground wire, wire seal and terminal from cover side of housing.
- 4. Follow instructions in <u>A.9 DELPHI METRI-PACK TER-MINAL REPAIR</u> to replace the terminal or wire seal.
- Push the terminal into place from the cover side of the connector housing until the latch engages. Pull on wire to verify terminal is secure.

#### NOTE

See <u>Figure A-26</u>. Secondary lock has one short leg and one long leg. Install as shown.

 See <u>Figure A-26</u>. Install ground secondary lock (5) and install secondary lock (1) as shown.

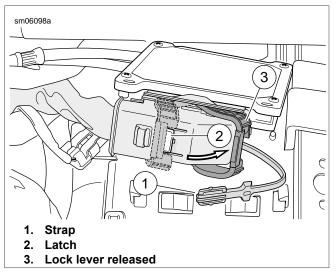


Figure A-25. Unlatch ECM Connector

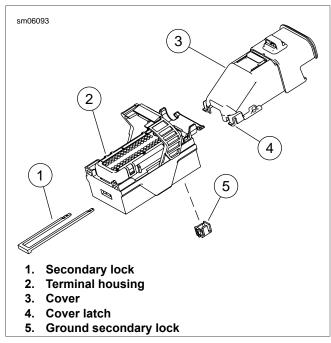


Figure A-26. Delphi 73-Terminal ECM Connector

## <u>HOME</u>

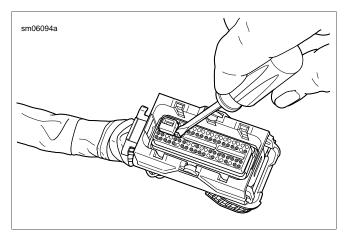


Figure A-27. Remove Ground Secondary Lock

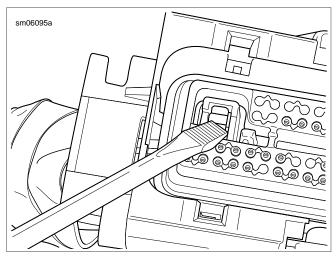


Figure A-28. Remove ECM Ground Terminal

## DEUTSCH DT SEALED CONNECTOR

## DEUTSCH DT SEALED CONNECTOR REPAIR

PART NUMBER	TOOL NAME
HD-41475	DEUTSCH TERMINAL REPAIR KIT
HD-41475-100	FLAT BLADE L-HOOK

#### General

Deutsch DT sealed connectors are colored coded for location purposes. DT connectors associated with **left** side accessories, such as the front and rear **left** turn signals, are **gray**. All other DT connectors are **black**.

#### NOTE

A DEUTSCH TERMINAL REPAIR KIT (Part No. HD-41475) contains a selection of seals and seal plugs, locking wedges, attachment clips and terminals.

Also included is a FLAT BLADE L-HOOK (Part No. HD-41475-100) used to remove locking wedges, compartmented storage box and carrying case.

## **Separating Pin and Socket Housings**

See <u>Figure A-29</u>. To separate the connector halves, Press the external latch(es) (1) on the socket housing (2) while rocking the pin (3) and socket housings.

#### NOTES

- Generally, the socket housing is found on the accessory side, while the pin housing is attached to the wiring harness
- Six-place and smaller Deutsch connectors have one latch on the connector.
- Eight- and twelve-place connectors have a latch on each side. Simultaneously press both latches to separate the connector.

## Mating Pin and Socket Housings

- 1. Align the connectors to match the wire lead colors.
  - a. For One External Latch: Six-place and smaller Deutsch connectors have one external latch on the socket housing. To join the housings, align the latch on the socket side with the latch cover on the pin side.
  - For Two External Latches: Align the tabs on the socket housing with the grooves on the pin housing.
- Insert socket housing into pin housing until it snaps or clicks into place.

#### NOTE

**For Two External Latches:** If latches do not click (latch), press on one side of the connector until that latch engages then press on the opposite side to engage the other latch.

- 3. If necessary, fit the attachment clip to the pin housing.
- Place large end of slot on attachment clip over T-stud on frame. Push assembly forward to engage small end of slot.

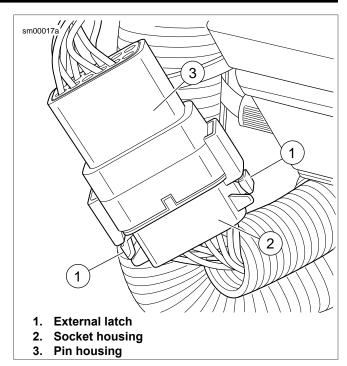


Figure A-29. Deutsch DT Sealed Connector

## **Removing Socket Terminals**

- See <u>Figure A-30</u>. Insert a small screwdriver between the socket housing and locking wedge in-line with the groove (in-line with the pin holes if the groove is absent). Turn the screwdriver 90 degrees to pop the wedge up and remove the secondary locking wedge.
- 2. See <u>Figure A-33</u>. Use a pick or small screwdriver to press terminal latches inside socket housing and back out sockets through holes in rear wire seal.

#### NOTE

If wire leads require **new** terminals, see the instructions for crimping terminals.

#### Installing Socket Terminals

- 1. Match wire lead color to connector cavity.
- 2. See Figure A-32. Fit rear wire seal (1) into back of socket housing (2), if removed.
- 3. Grasp wire lead (3) approximately 1.0 in (25.4 mm) behind the socket terminal. Gently push socket through hole in wire seal into its chambers until it clicks in place.
- 4. A tug on the wire will confirm that it is properly locked in place.

#### NOTE

Install seal plugs (6) into unused chambers. If removed, seal plugs must be replaced to seal the connector.

- 5. Install internal seal (4) on lip of socket housing, if removed.
- 6. Insert tapered end of secondary locking wedge (5) into socket housing and press down until it snaps in place. The

wedge fits into the center groove within the socket housing and holds the terminal latches tightly closed.

#### **NOTES**

- See <u>Figure A-31</u>. While rectangular wedges do not require a special orientation, align arrow (1) on conical secondary locking wedge towards external latch for three-place connectors.
- If the secondary locking wedge does not slide into position easily, check the installation of all the terminals. Unseated terminals prevent the locking wedge from proper installation.



Figure A-30. Deutsch DT Sealed Connector: Remove Secondary Locking Wedge


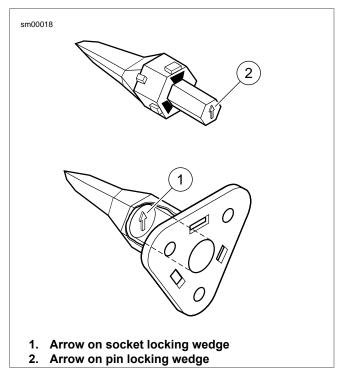


Figure A-31. Deutsch DT Sealed Connector: 3-Place Locking Wedges

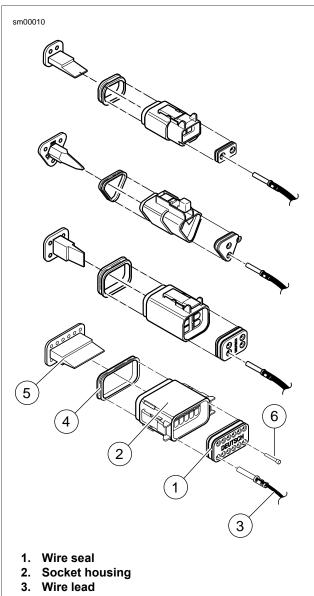

- 4. Internal seal
- 5. Secondary locking wedge
- 6. Seal plug

Figure A-32. Deutsch DT Sealed Connector: 2, 3, 4 and 12-Place Socket Housings

## **Removing Pin Terminals**

- Use the hooked end of a stiff piece of mechanics wire, a needle nose pliers or the FLAT BLADE L-HOOK (Part No. HD-41475-100) to remove the secondary locking wedge.
- 2. Gently press terminal latches inside pin housing and back out pins through holes in wire seal.

#### **NOTES**

- If wire leads require **new** terminals, see the instructions for crimping terminals.
- The 8-place and 12-place gray and black connectors are not interchangeable. If replacing both the socket and pin housings, the black may be substituted for the gray.
- The socket and pin housings of all other connectors are interchangeable. Black may be mated with the gray since the alignment tabs are absent and the orientation of the external latch is the same.

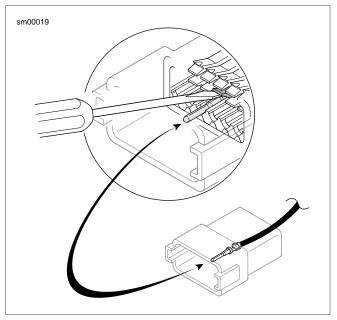


Figure A-33. Deutsch DT Sealed Connector: Press Terminal Latch and Back Out Pin

### **Installing Pin Terminals**

- See <u>Figure A-34</u>. Fit wire seal (1) into back of pin housing (2).
- 2. Grasp wire lead approximately 1.0 in (25.4 mm) behind the pin terminal (3). Gently push pin through holes in wire seal into its respective numbered chamber until it "clicks" in place.

#### NOTE

A tug on the wire lead will confirm that a pin is locked in place.

3. Insert tapered end of secondary locking wedge (4) into pin housing. Press down until it snaps in place.

#### **NOTES**

- The wedge fits in the center groove of the pin housing and holds the terminal latches tightly closed.
- See <u>Figure A-31</u>. While rectangular wedges do not require a special orientation, align arrow (1) on conical secondary locking wedge towards external latch for three-place connectors.
- If the secondary locking wedge does not slide into position easily, check the installation of all the terminals. Unseated terminals prevent the locking wedge from proper installation.

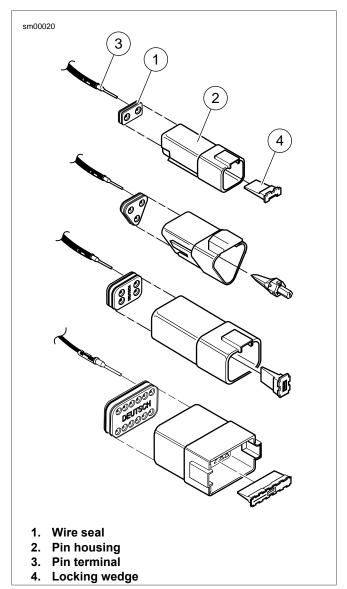


Figure A-34. Deutsch DT Sealed Connector: 2, 3, 4 and 12-Place Pin Housings

## **Crimping Terminals**

Identify which of the types of Deutsch terminals are used with the connector. Follow the corresponding crimping instructions. Refer to Table A-2.

Table A-2. Deutsch Connector: Terminal Crimping Instructions

TYPE	CRIMPING INSTRUCTIONS
DT Sealed (with crimp tails)	A.14 DEUTSCH DT SEALED TERMINAL REPAIR
DTM Mini Sealed Terminal (solid barrel)	A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR
DTM Mini Sealed Terminal (with crimp tails)	A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR

### **DEUTSCH DT SEALED TERMINAL CRIMPS**

PART NUMBER	TOOL NAME
HD-39965-A	DEUTSCH TERMINAL CRIMP TOOL

## **Preparing Wire Leads for Crimping**

- 1. Use a shop gauge to determine gauge of wire lead.
- 2. Strip 5/32 in (4.0 mm) of insulation from the wire lead.

## **Crimping Terminal to Lead**

- See <u>Figure A-35</u>. Squeeze the handles of the DEUTSCH TERMINAL CRIMP TOOL (Part No. HD-39965-A) to open the jaws. Push the locking bar (1) up.
- Match the wire gauge to the crimp tool die. Refer to Table A-3.

#### NOTE

Rest the rounded side of the contact barrel in the nest (concave split level area) with the crimp tails facing up.

- Insert (2) terminal (socket/pin) through hole of the locking bar.
- 4. Release locking bar to lock terminal in die.

#### NOTE

If the crimp tails are slightly out of alignment, the crimp tool rotates the terminal to face the tails upward. When positioned, the locking bar fits snugly in the space between the contact band and the core crimp tails.

- Insert stripped wire core between crimp tails until ends make contact with locking bar. Position wire that the wide pair of crimp tails squeeze bare wire strands, while the narrow pair folds over the insulation material.
- Squeeze handle of crimp tool until tightly closed. Tool automatically opens after the terminal is crimped.
- 7. Raise locking bar up to remove wire lead and terminal.

## Inspecting Crimps

Inspect the wire core and insulation crimps. Distortion should be minimal.

Table A-3. Deutsch DT Sealed Terminal Crimp: Wire Gauge To Die

WIRE GAUGE (AWG)	CRIMP TOOL DIE
20	Front
16-18	Middle

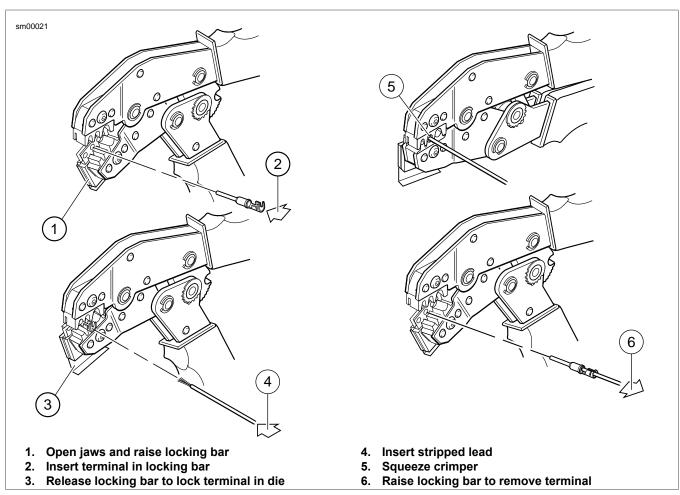


Figure A-35. Crimping a Deutsch DT Sealed Terminal

# DEUTSCH DTM SEALED MINI TERMINAL REPAIR

A.15

## DEUTSCH DTM SEALED MINI TERMINAL CRIMPS

PART NUMBER	TOOL NAME
HD-38125-7	PACKARD TERMINAL CRIMPER

## **Preparing Wire Leads for Crimping**

Strip 5/32 in (4.0 mm) of insulation from the wire lead.

## **Crimping a Mini Terminal to Wire Lead**

 See <u>Figure A-36</u>. Compress the handles of PACKARD TERMINAL CRIMPER (Part No. HD-38125-7) until the ratchet (2) automatically opens.

#### NOTE

Always perform core crimp before insulation crimp.

- 2. Position the core crimp on die E (1) of the crimper. Verify the core crimp tails are facing the forming jaws.
- 3. Gently apply pressure to handles of tool until crimpers just secure the core crimp tails.
- 4. Insert stripped wire core stands between crimp tails. Position wire that the short pair of crimp tails squeeze bare wire strands, while long pair squeeze over the insulation.
- 5. Squeeze handle of crimper until tightly closed. Tool automatically opens when the crimping sequence is complete.

#### NOTE

If the crimper does not open, squeeze the ratchet trigger (2).

- 6. Position the insulation crimp on nest C of the crimper. Verify the insulation crimp tails are facing the forming jaws.
- Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete.

## **Inspecting Crimps**

Inspect the core and insulation crimps. Distortion should be minimal.

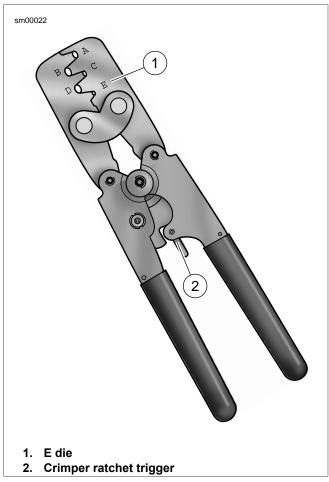


Figure A-36. Packard Terminal Crimper (HD-38125-7)

## DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR

**A.16** 

## DEUTSCH DTM SEALED SOLID BARREL TERMINAL CRIMPS

PART NUMBER	TOOL NAME
HD-42879	ELECTRICAL CRIMPER TOOL

## **Preparing Wire Leads For Crimping**

For size 20, 16 and 12 contacts, wire ranges 26-12 AWG. Strip 1/4 in (6.4 mm) of insulation from the wire lead.

## **Adjusting Crimper Tool**

- See <u>Figure A-37</u>. Squeeze the ELECTRICAL CRIMPER TOOL (Part No. HD-42879) handles to cycle the crimp tool to open.
- 2. Remove locking pin (1) from selector knob (2).
- 3. Raise selector knob. Roate knob until selected wire size stamped on wheel is aligned with "SEL. NO." arrow (3).
- 4. Loosen knurled locknut (4) and turn adjusting screw (5) clockwise (in) until it stops.

### Crimping a Barrel Contact To Wire Lead

- 1. See <u>Figure A-38</u>. Turn tool over and drop contact barrel (1) into indentor cover (2) hole with the wire end out.
- Turn adjusting screw counterclockwise (out) until contact is flush with bottom of recess in indentor cover. Tighten knurled locknut.
- 3. Slowly squeeze handles of crimp tool until contact centers between the four indentor points (3).
- Insert bare wire core strands of stripped wire lead (4) into contact barrel. Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete.
- 5. Remove wire lead with crimped contact from indentor.

#### NOTE

Adjust the crimper tool for each contact/wire size.

6. Install pin to lock selector knob.

## **Inspecting Crimps**

Inspect the crimp. All core wire strands are to be crimped in the barrel.

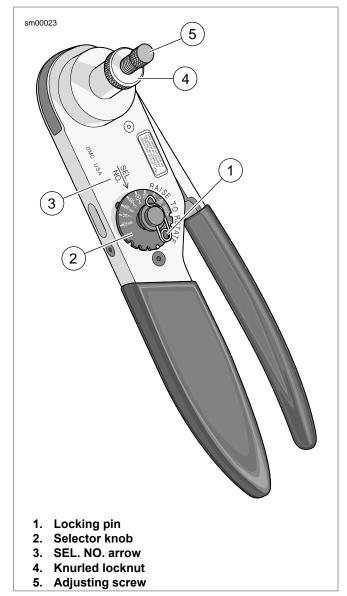


Figure A-37. Electrical Crimper Tool (HD-42879)

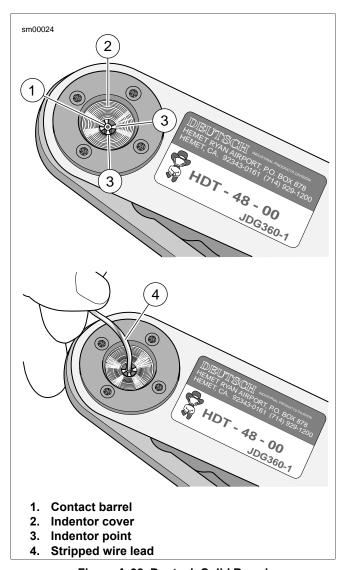


Figure A-38. Deutsch Solid Barrel

## JAE MX19 SEALED CONNECTOR

### **JAE MX19 SEALED CONNECTORS**

PART NUMBER	TOOL NAME
B-50085	TERMINAL EXTRACTOR

### **Connector Housings**

**Separate Housings:** See <u>Figure A-39</u>. Press the two release buttons on each side of the housing to separate the connector.

**Connect Housings:** Align housings. Press together until the locking tabs click.

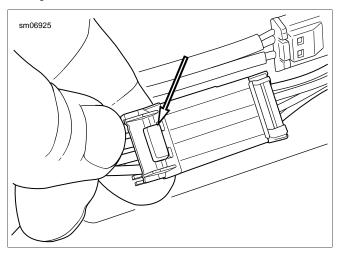


Figure A-39. Release Buttons: JAE MX19 Sealed Connector

#### **Removing Terminals**

- 1. Modify a TERMINAL EXTRACTOR (Part No. B-50085) by filing the front edge to 45 degrees.
- See <u>Figure A-40</u>. Insert the extractor (1) into the opening above the terminal and press the plastic molding (2) up and out of the way.
- Pull the wire lead and terminal out of the back of the housing.

## **Installing Terminals**

- 1. Inspect the plastic molding and replace the connector housing if necessary.
- 2. Orient the terminal to the housing. Push terminal into housing until it clicks into place.

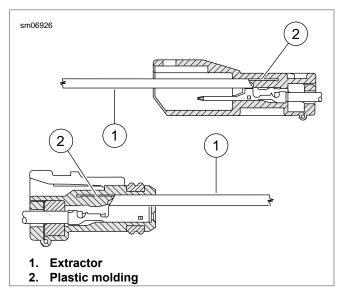


Figure A-40. JAE MX19 Terminal Removal

#### **CRIMPING TERMINALS**

PART NUMBER	TOOL NAME
HD-50120	UNIVERSAL CRIMPER SET
HD-50120-2	HAND CRIMP FRAME
HD-50120-6	JAE DIE

- 1. Strip the wire insulation to specification. Refer to <u>Table A-4</u>.
- Install the JAE DIE (Part No. HD-50120-6) in the handle of the HAND CRIMP FRAME (Part No. HD-50120-2) of the UNIVERSAL CRIMPER SET (Part No. HD-50120).
- 3. Place the **new** terminal in the specified nest.
- 4. Insert the wire to the wire stop. Crimp the terminal.
- 5. Inspect the crimped terminal.

Table A-4. JAE MX19 Crimper Die (Part No. HD-50120-6)

TERMINAL	PART NO.	STRIP LENGTH		NEST
		in	mm	
Socket	72910-11	0.051-0.098	2.0-2.5	В
Pin	72909-11	0.051-0.098	2.0-2.5	Α

## MOLEX CMC SEALED CONNECTOR

#### MOLEX CMC SEALED CONNECTORS

PART NUMBER	TOOL NAME
HD-50423	0.6 MM TERMINAL EXTRACTOR TOOL
HD-50424	1.5 MM TERMINAL EXTRACTOR TOOL

## **Separating the Connector**

**Release:** See <u>Figure A-41</u>. Press the catch and rotate the lever arm down.

**Connect:** Press on the front guard to release the latch and rotate the lever arm up until the catch clicks in place.

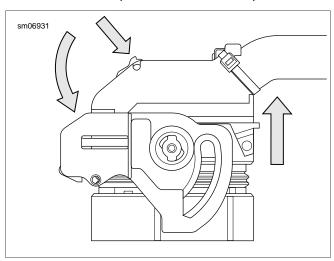


Figure A-41. Release

## **Removing Terminals**

- With the lever arm open, cut the cable strap around the wire bundle.
- See <u>Figure A-42</u>. Open a wire cap latch (1) with a small screwdriver.
- 3. Maintain pressure on the cap and open the opposite latch (2) with the screwdriver.
- 4. Slide the cap off (3).
- 5. See <u>Figure A-43</u>. Use the screwdriver to open the secondary lock. Pull the locking bar all the way out.
- See <u>Figure A-44</u>. Locate the wire lead cavity by the alphanumeric coordinates.
- Identify the size of the terminal and select either the CMC extractor 0.6 MM TERMINAL EXTRACTOR TOOL (Part No. HD-50423) or the 1.5 MM TERMINAL EXTRACTOR TOOL (Part No. HD-50424).
- 8. See Figure A-45. Insert the pins of the CMC extractor tool (1) into the access slots (2) of the terminal cavity and retract the lead and terminal.

## **Installing Terminals**

- Orient the terminal to the housing cavity. Snap the terminal in place.
- 2. Slide the cap over the lead bundle. Snap the cap in place.
- Install a cable strap through the guide and around the lead bundle.

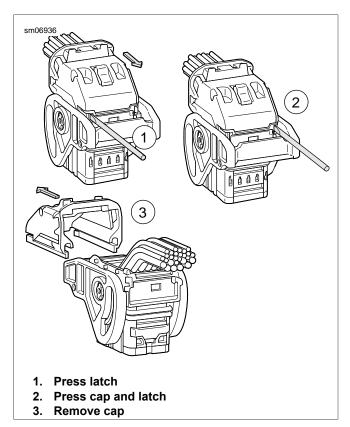


Figure A-42. Remove the Wire Lead Cap

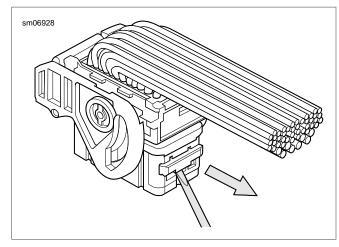


Figure A-43. Molex CMC Sealed Connector Secondary Lock

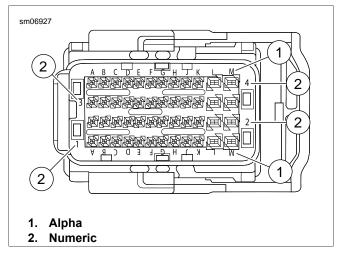


Figure A-44. Alpha-Numeric Coordinates

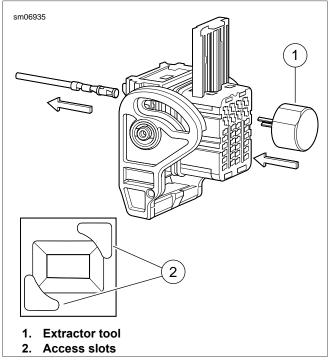


Figure A-45. Terminal Removal

## **CRIMPING TERMINALS**

PART NUMBER	TOOL NAME	
HD-50120	UNIVERSAL CRIMPER SET	
HD-50120-2	HAND CRIMP FRAME	
HD-50120-3	JAE DIE	
HD-50120-4	JAE DIE	

- Select the crimper die according to the terminal part number from the UNIVERSAL CRIMPER SET (Part No. HD-50120).
- 2. Strip the wire insulation to specification. Refer to <u>Table A-5</u> or <u>Table A-6</u>.
- 3. Install the JAE DIE (Part No. HD-50120-3) or JAE DIE (Part No. HD-50120-4) in the handle of the HAND CRIMP FRAME (Part No. HD-50120-2).
- 4. Place the **new** terminal in the specified nest.
- 5. Insert the wire to the wire stop. Crimp the terminal.
- 6. Inspect the crimped terminal.

Table A-5. Molex CMC Sealed Crimper Die (Part No. HD-50120-3)

PART TERMINAL:		STRIP LENGTH		NEST
NO.	WIRE GAUGE	in	mm	
72226-11	Socket: 16 AWG	0.177	4.5	В
72227-11	Socket: 18 AWG	0.177	4.5	Α

Table A-6. Molex CMC Sealed Crimper Die (Part No. HD-50120-4)

PART NO	. TERMINAL:	STRIP LENGTH		NEST
	WIRE GAUGE	in	mm	
72222-11	Socket: 18 AWG	0.138	3.5	В
72222-11	Socket: 20 AWG	0.138	3.5	Α

## **MOLEX MX 150 SEALED CONNECTOR**

## MOLEX MX 150 SEALED CONNECTOR REPAIR

PART NUMBER	TOOL NAME
HD-48114	TERMINAL REMOVER

## Separating Pin and Socket Housings

See <u>Figure A-46</u>. Press the latch while pulling the pin and socket housings apart.

## **Mating Pin and Socket Housings**

- Orient the latch on the pin housing to the latch pocket on the socket housing so the rails on the outside of the pin housings lines up with the tunnels on the socket housing.
- 2. Press the housings together until the latch clicks.

## **Removing Terminals**

- Pull the secondary lock up, approximately 3/16 in (4.8 mm), until it stops.
  - Socket Housing: See <u>Figure A-47</u>. Use a small screwdriver in the pry slot. The slot next to the external latch provides a pivot point.
  - Pin Housing: See <u>Figure A-48</u>. Use needle nose pliers to engage the D-holes in the center of the secondary lock.

#### NOTE

Do not remove the secondary lock from the connector housing.

- See <u>Figure A-49</u>. Insert TERMINAL REMOVER (Part No. HD-48114) into the pin hole next to the terminal until the tool bottoms.
  - Socket Housing: The pin holes are inside the terminal openings.
  - b. **Pin Housing:** The pin holes are outside the pins.
- 3. Pressing the terminal remover to the bottom of the pin hole, gently pull on the wire to remove wire terminal from its cavity.

#### **Installing Terminals**

 See <u>Figure A-50</u>. From the wiring diagram, match the wire color to its numbered terminal cavity.

#### NOTE

Cavity numbers (1) are stamped on the housing at the ends of the cavity rows. Determine the cavity number by counting the cavities up or down along the row from each stamped number.

- 2. Orient the terminal that the tang (2) opposite the open crimp engages the slot (3) in the cavity.
- 3. Push the terminal into the cavity.
- 4. Gently tug on wire to verify that the terminal is captured by the secondary lock.

With all terminals installed, push the secondary lock into the socket housing to lock the wire terminals into the housing.

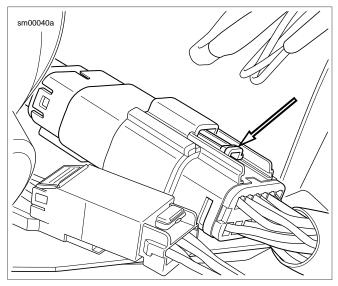


Figure A-46. Molex MX 150 Sealed Connector: Latch

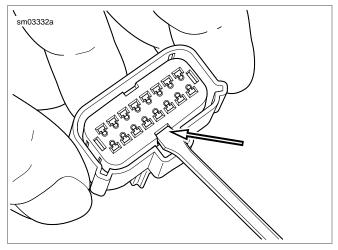


Figure A-47. Secondary Lock Pry Slot (Socket Housing)

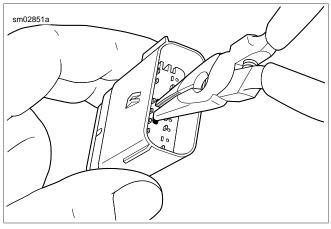


Figure A-48. Pull Up Secondary Lock

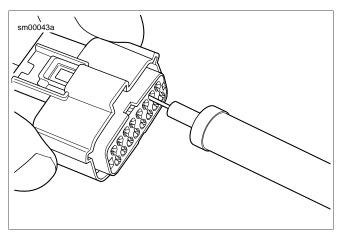


Figure A-49. Molex MX 150 Sealed Connector: Terminal Remover (HD-48114)

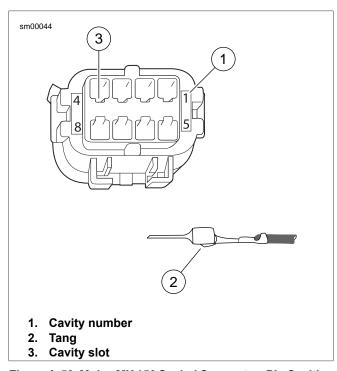


Figure A-50. Molex MX 150 Sealed Connector: Pin Cavities and Wire Terminal

## **CRIMP TERMINAL TO LEAD**

PART NUMBER	TOOL NAME
HD-48119	TERMINAL CRIMPER

## **Prepare Lead**

- 1. Cut the damaged terminal close to the back of the terminal to leave as much wire length as possible.
- 2. Strip wire lead removing 3/16 in (4.70-5.60 mm) of insulation.

#### NOTE

The strip length is the same for both pin and socket terminals and for wire gauges from 22 to 14.

## **Prepare Tool**

- Identify the punch/die in the jaws of the TERMINAL CRIMPER (Part No. HD-48119) for the wire gauge. Refer to <u>Table A-7</u>.
- 2. Squeeze and release the handles to open the tool.

#### NOTE

The crimp tool automatically opens when the handles are released.

 See <u>Figure A-51</u>. Hold fully open tool at approximately 45 degrees.

#### NOTE

Do NOT tighten the locknut holding the locator bars. The bars must float to accommodate the different terminal gauges.

Table A-7. Crimp Tool Wire Gauge Punch/Die

AWG (WIRE GAUGE)	PUNCH/DIE	
22	Left	
18-20	Middle	
14-16* Right		
* Crimp 16 AWG <b>pin</b> terminals in the 18-20 middle die.		

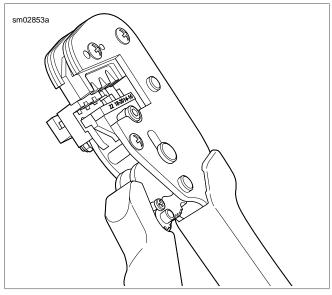


Figure A-51. Open Terminal Crimper (HD-48119) at 45 Degrees

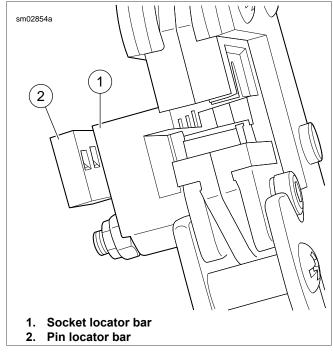


Figure A-52. Terminal Locator Bars

#### Position Terminal in the Punch/Die

- See <u>Figure A-53</u>. With the crimp tails up, place the terminal through the punch/die into the square opening in the socket locator bar.
  - a. Socket Terminal: See <u>Figure A-52</u>. A socket terminal stops against the back face of the socket locator bar (1).
  - b. **Pin Terminal:** See <u>Figure A-54</u>. The tip of a pin terminal passes through the socket locator bar and stops in the notch in the face of the pin locator bar.

2. See <u>Figure A-55</u>. Ratchet the handles together until the crimp tails are held in vertical alignment between the punch and the die.

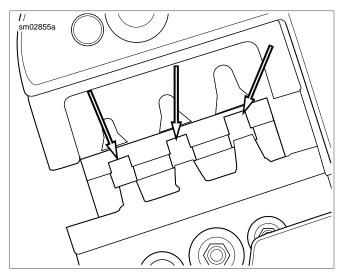


Figure A-53. Square Openings in Socket Locator Bar

## **Insert Stripped Lead**

See <u>Figure A-56</u>. Insert the stripped end (wire core) between the crimp tails at an up angle until the wire core touches the face of the socket locator bar above the square opening.

#### **NOTES**

- The insulation must extend through the insulation crimp tails.
- Insert the wire with little or no pressure. Pressing on the lead will bend the wire core.

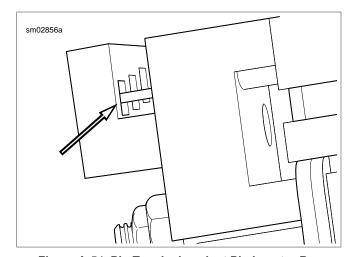


Figure A-54. Pin Terminal against Pin Locator Bar

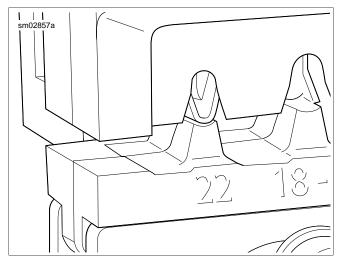


Figure A-55. Crimp Tails in Vertical Alignment between Punch and Die

## **Crimp Terminal to Lead**

- Holding the wire lead in position touching the locator face at an angle, quickly and smoothly squeeze the crimp tool closed.
- 2. Final squeeze the handles to open the tool and release the terminal.

#### NOTE

Open a stuck or jammed tool by pressing the ratchet release lever found between the handles. Do **not** force the handles open or closed.



Figure A-56. Stripped Lead at Up Angle

## **Inspect Crimp**

- 1. **Inspect Crimp:** Inspect the core and insulation crimp.
  - a. See <u>Figure A-57</u>. The core tails should be creased into the wire strands at the core crimp (1).
  - b. Strands (2) of wire should be visible beyond the core crimp but not forward into the terminal shell.
  - c. The insulation tails should be folded into the insulation(3) without piercing or cutting the insulation.
  - d. Distortion should be minimal.
- 2. **Test Crimp:** Hold the terminal. Pull the lead.

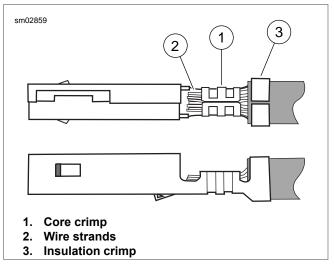


Figure A-57. Terminal Crimp

## TYCO 070 MULTILOCK UNSEALED CONNECTOR

## TYCO 070 MULTILOCK UNSEALED CONNECTOR REPAIR

PART NUMBER	TOOL NAME	
HD-41609	AMP MULTI-LOCK CRIMPER	
SNAP-ON TT600-3	SNAP-ON PICK	

#### General

Tyco 070 Multilock Unsealed connectors are found between wire harnesses and component wiring and may be either floating or anchored to the frame with attachment clips.

See <u>Figure A-58</u>. Attachment clips (1) on the pin housings are fitted to T-studs on the motorcycle frame. The T-studs identify OE connector locations. To maintain serviceability, always return connectors to OE locations after service.

Obtain the necessary tools to repair the connector and terminals.

#### NOTE

For terminal crimping use the AMP MULTI-LOCK CRIMPER (Part No. HD-41609).

## **Separating Pin and Socket Housings**

- If necessary, slide connector attachment clip T-stud to the large end of the opening.
- 2. See <u>Figure A-58</u>. Press the release button (2) on the socket terminal side of the connector and pull the socket housing (3) out of the pin housing (4).

#### Mating Pin and Socket Housings

- 1. Hold the housings to match wire color to wire color.
- 2. Insert the socket housing into the pin housing until it clicks in place.
- If OE location is a T-stud, fit large opening end of attachment clip over T-stud and slide connector to engage T-stud to small end of opening.

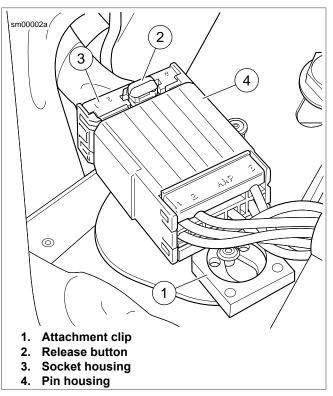


Figure A-58. Tyco 070 Multilock Unsealed Connector

## **Removing Terminals from Housing**

- See <u>Figure A-59</u>. Bend back the latch (1) to free one end of secondary lock (2) then repeat on the opposite end. Hinge the secondary lock outward.
- Look in the terminal side of the connector (opposite the secondary lock) and note the cavity next to each terminal.
- 3. Insert a pick or pin into the terminal cavity until it stops.

#### NOTE

If socket/pin terminal tool is not available, use a push pin/safety pin or a SNAP-ON PICK (Part No. SNAP-ON TT600-3).

- 4. Press the tang in the housing to release the terminal.
  - a. Socket: Lift the socket tang (8) up.
  - b. **Pin:** Press the pin tang (7) down.

#### NOTE

A click is heard if the tang is released.

5. Gently tug on wire to pull wire and terminal from cavity.

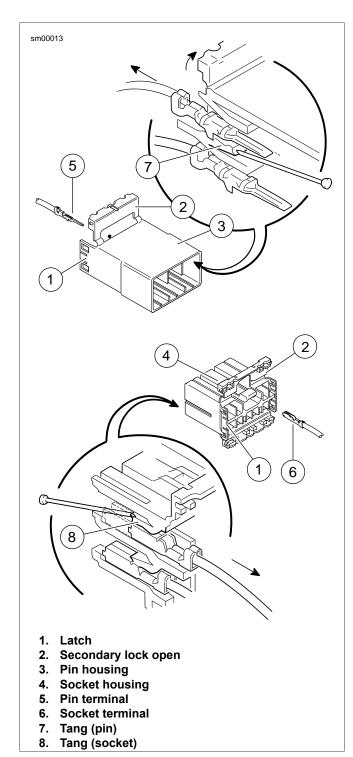


Figure A-59. Tyco 070 Multilock Unsealed Connector: Socket and Pin Housings

## **Inserting Terminals into Housing**

## NOTE

See <u>Figure A-60</u>. Cavity numbers are stamped into the secondary locks of both the socket and pin housings. Match the wire color to the cavity number found on the wiring diagram.

 Hold the terminal so the catch faces the tang in the chamber. Insert the terminal into its numbered cavity until it snaps in place.

#### **NOTES**

- The release button is always on the top of the connector.
- On the pin side of the connector, tangs are positioned at the bottom of each cavity, so the slot in the pin terminal (on the side opposite the crimp tails) must face downward.
- On the socket side, tangs are at the top of each cavity, so the socket terminal slot (on the same side as the crimp tails) must face upward.
- Gently tug on wire end to verify that the terminal is locked in place.
- Rotate the hinged secondary lock inward until tabs fully engage latches on both sides of connector.

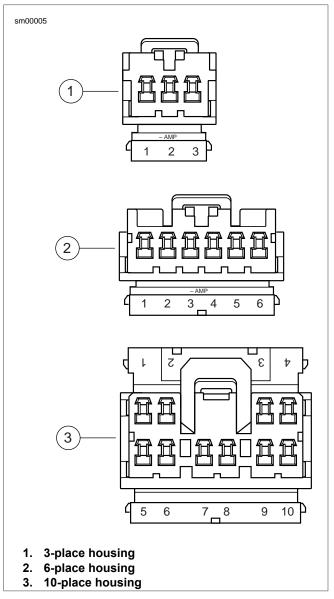


Figure A-60. Tyco 070 Multilock Unsealed Connector: Cavity Numbers on Secondary Locks (socket housings shown)

## **Preparing Wire Leads for Crimping**

1. Strip wire lead removing 5/32 in (4.0 mm) of insulation.

- 2. See Figure A-61 and Figure A-62. Select the pin/socket terminals from the parts catalog and identify the insulation crimp tails (1) and the wire crimp tails (2) and the groove for the crimp tool locking bar (3).
- Identify the wire lead gauge and the corresponding crimper tool and nesting die. Refer to <u>Table A-8</u>.

Table A-8. AMP Multilock Connector: Crimp Tool Wire Gauge/Nest

WIRE GAUGE	NEST
20	Front
16	Middle
18	Rear

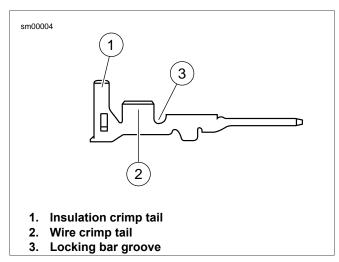


Figure A-61. Tyco 070 Multilock Unsealed Connector: Pin Terminal

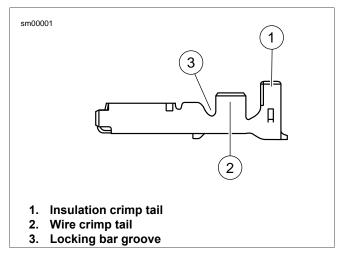


Figure A-62. Tyco 070 Multilock Unsealed Connector: Socket Terminal

## **Crimping Terminals to Leads**

#### NOTE

Crimping with the AMP Multi-lock Crimper is a one step operation. One squeeze crimps both the wire core and the insulation tails.

- See <u>Figure A-63</u>. Squeeze the handles to cycle the AMP MULTI-LOCK CRIMPER (Part No. HD-41609) to the fully open position (1).
- 2. Raise locking bar by pushing up on bottom flange (2).

#### NOTE

See <u>Figure A-61</u> and <u>Figure A-62</u>. Hold the terminal with the insulation crimp tail (1) facing up. The tool will hold the terminal by the locking bar groove (3) and simultaneously crimp around the stripped lead and the insulation.

- See <u>Figure A-63</u>. With the insulation crimp tail facing upward, insert terminal (pin or socket) (3) through the locking bar, so that the closed side of the terminal rests on the nest of the crimp tool.
- Release locking bar to lock position of contact (4). When correctly positioned, the locking bar fits snugly in the space at the front of the core crimp tails.
- Insert stripped end of lead (5) until ends make contact with locking bar.
- Position wire that the wide pair of crimp tails squeeze bare wire strands, while the narrow pair folds over the insulation material.
- Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete.
- 8. Raise up locking bar (7) to remove crimped terminal.

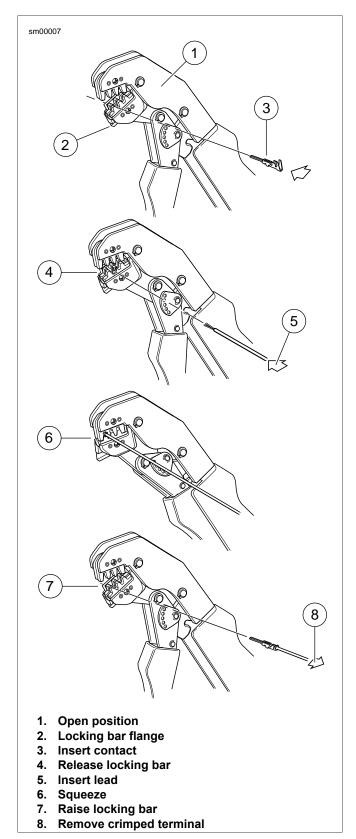


Figure A-63. Tyco 070 Multilock Unsealed Connector: Terminal Crimping Procedure

## **Inspecting Crimped Terminals**

See <u>Figure A-64</u>. Inspect the wire core crimp (2) and insulation crimp (1). Distortion should be minimal.

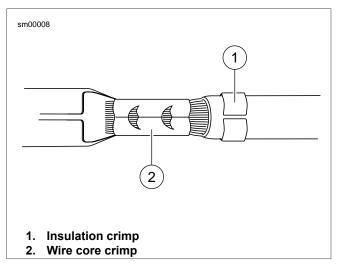


Figure A-64. Tydo 070 Multilock Unsealed Connector: Terminal Crimp

# **TYCO GET 64 SEALED CONNECTOR**

## **TYCO GET 64 SEALED CONNECTOR**

PART NUMBER	TOOL NAME
B-50085	TERMINAL EXTRACTOR

### General

See <u>Figure A-65</u>. The Tyco GET 64 Sealed connector is found on the ECM of Dyna and Softail Models.

## **Housings**

**Separate:** Press on the latch. Pull the socket housings off of the ECM.

**Join:** Align the socket housing latch with the catch on the ECM. Press housing onto ECM.

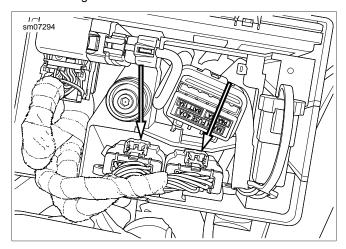


Figure A-65. Tyco GET 64 Sealed Connector Latch

## **Removing Socket Terminals**

- Remove the black wrap to access the back of the connector.
- 2. See <u>Figure A-66</u>. Use needle nose pliers to pull the secondary lock out of the housing.
- 3. See Figure A-67. Orient the bevel of the TERMINAL EXTRACTOR (Part No. B-50085) (1) to the upper or lower terminal row. Insert the extractor into the slot adjacent to the terminal.
- 4. Rotate the extractor to release the retention beam and simultaneously pull on the wire lead to remove the terminal.

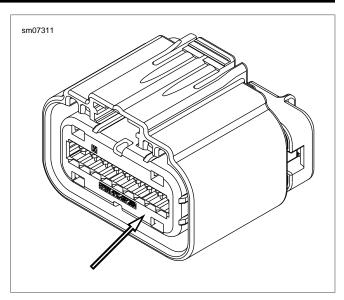


Figure A-66. Tyco GET 64 Secondary Lock

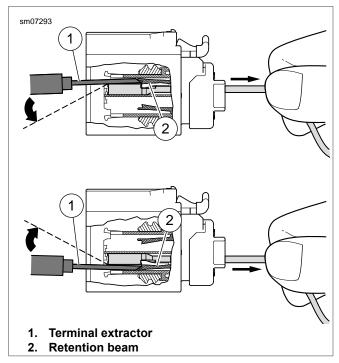


Figure A-67. Removing Terminals: Tyco GET 64 Sealed Connector

## **Installing Socket Terminals**

- 1. See Figure A-68. Locate the wire lead cavity by number.
- 2. See <u>Figure A-69</u>. Orient the open side of the crimp to the lower or the upper terminal row.
- 3. Press the terminal in through the rear cover and the seal until it clicks.
- 4. Press the secondary lock into the locked position.
- 5. Black wrap the wire lead bundle.

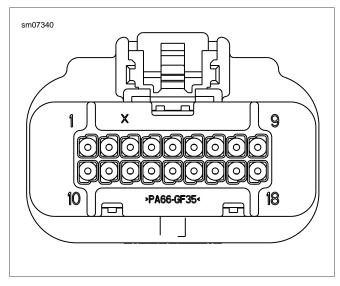


Figure A-68. Cavity Numbers

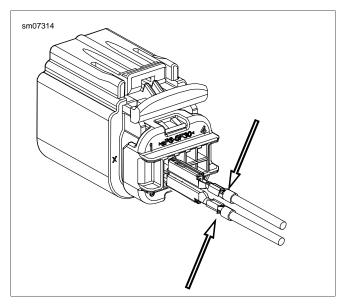


Figure A-69. Socket Terminal Orientation: Crimp Open Side

## **CRIMPING TERMINALS**

PART NUMBER	TOOL NAME
HD-50120	UNIVERSAL CRIMPER SET
HD-50120-2	HAND CRIMP FRAME
HD-50120-7	TYCO GET 64 DIE

- 1. Strip the wire insulation. Refer to <u>Table A-9</u>.
- 2. Install the TYCO GET 64 DIE (Part No. HD-50120-7) in the HAND CRIMP FRAME (Part No. HD-50120-2) of the UNIVERSAL CRIMPER SET (Part No. HD-50120).
- 3. Place the **new** terminal in the specified nest. Refer to Table A-9.
- 4. Insert the wire to the wire stop. Crimp the terminal.
- 5. Inspect the crimped terminal and wire lead.

Table A-9. Tyco GET 64 Sealed Crimper Die (Part No. HD-50120-7)

TERMINAL	PART NO.	STRIP L	NEST	
		in	mm	
Socket: 18-20 AWG	72666-12	0.170	4.4	Α

# TYCO MCP SEALED CONNECTOR

### TYCO MCP SEALED CONNECTOR

PART NUMBER	TOOL NAME		
B-0085	TERMINAL EXTRACTOR		
GA500A	SNAP-ON TERMINAL PICK		

#### General

The Tyco MCP sealed connector is used on certain ABS modules.

## Housing

**Separate:** See Figure A-70. Press and hold the lock tab. Pulling on both ends of the lever, open the lever.

**Join:** Gently mate the pins to the socket. Press and hold the lock tab. Pressing on both ends of the lever, close the lever.

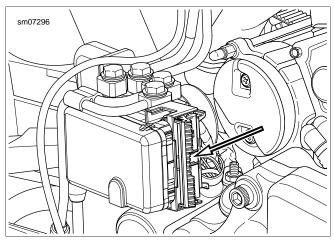


Figure A-70. Tyco MCP Connector Release Bar

## **Removing the Large Terminals**

 Snap the wire harness cover off of the back of the connector

#### NOTE

Insert a thin flat bladed screwdriver all the way to the bottom behind the tab of the secondary lock.

- 2. See Figure A-71. Gently slide the secondary lock out of the connector with a screw driver.
- See <u>Figure A-72</u>. Insert the smallest pins of the SNAP-ON TERMINAL PICK (Part No. GA500A) into the gaps on each side of the socket to compress the tangs on each side of the terminal.
- 4. Gently pull on the wire to remove the terminal.

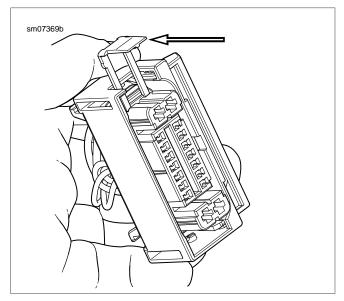


Figure A-71. Tyco MCP Connector Secondary Lock

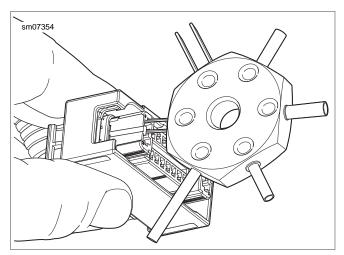


Figure A-72. Removing Large Socket Terminals: Tyco MCP Connector

## Removing the Small Terminals

 Snap the wire harness cover off of the back of the connector

#### NOTE

Insert a thin flat bladed screwdriver all the way to the bottom behind the tab of the secondary lock.

- See <u>Figure A-71</u>. Gently slide the secondary lock out of the connector with a screw driver.
- See <u>Figure A-73</u>. Insert the TERMINAL EXTRACTOR (Part No. B-0085) into the cavity on the outside of the terminal.
- Tilt the extractor to lift the molding latch and release the terminal.
- 5. Gently pull on the wire to remove the terminal.

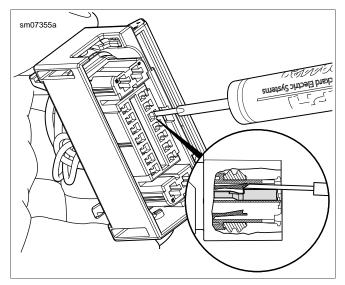


Figure A-73. Removing Small Socket Terminal: Tyco MCP
Connector

## **Installing Terminals**

- 1. See Figure A-74. Locate the wire lead cavity by number.
- 2. Use a hobby knife to bend the tangs on each side of the terminal outward.
- 3. Align the socket.
- 4. Push the socket in until it clicks.
- 5. Press the secondary lock back into the connector.
- 6. Snap the wire cover in place.

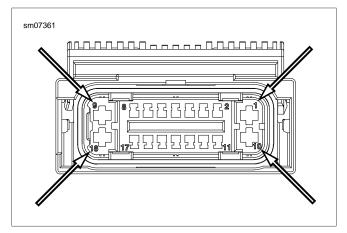


Figure A-74. Tyco MCP Sealed Connector Cavity Numbers

## **CRIMPING TERMINALS**

PART NUMBER	TOOL NAME
HD-50120	UNIVERSAL CRIMPER SET
HD-50120-8	TYCO MCP DIE

1. Strip the wire insulation to specification. Refer to Table A-10.

- 2. Install the TYCO MCP DIE (Part No. HD-50120-8) in the handle of the UNIVERSAL CRIMPER SET (Part No. HD-50120).
- 3. Place the **new** terminal in the specified nest.
- 4. Insert the wire to the wire stop.
- 5. Crimp the terminal.
- 6. Inspect the crimped terminal.

Table A-10. Tyco MCP Crimper Die (Part No. HD-50120-8)

TERMINAL	PART NO.	STRIP LENGTH		NEST
		in	mm	
Large socket: 14 AWG	72579-12	0.165-0.189	4.2-4.8	Α
Large socket: 16 AWG	72579-12	0.165-0.189	4.2-4.8	В
Small socket: 20 AWG	72580-12	0.130-0.153	3.3-3.9	С

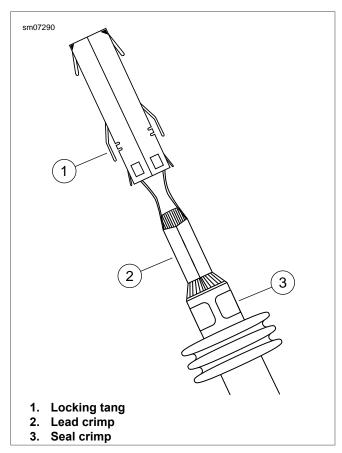


Figure A-75. Tyco MCP Socket Terminal Crimp

## SEALED SPLICE CONNECTOR

#### SEALED SPLICE CONNECTOR REPAIR

PART NUMBER	TOOL NAME
HD-25070	HEAT GUN
HD-38125-8	PACKARD CRIMPING TOOL
HD-39969	ULTRA TORCH
HD-41183	HEAT SHIELD ATTACHMENT

### General

Splice connectors and several OE ring terminal connectors use heat shrink covering to seal the connection.

## **Preparing Wire Leads**

#### NOTE

When splicing adjacent wires, stagger the splices that the sealed splice connectors will not touch each other.

- 1. Using a shop gauge, identify the gauge of the wire.
- Match the wire gauge to a sealed splice connector by color and part number. Refer to <u>Table A-11</u>.
- 3. Strip insulation off the the wire lead. Refer to Table A-11.

**Table A-11. Sealed Splice Connectors** 

WIRE GAUGE	COLOR	PART NO.	STRIP LENGTH	
			in	mm
18-20 (0.5-0.8 mm)	Red	70585-93	3/8	9.5
14-16 (1.0-2.0 mm)	Blue	70586-93	3/8	9.5
10-12 (3.0-5.0 mm)	Yellow	70587-93	3/8	9.5

#### NOTE

If any copper wire strands are cut off of the wire core, trim the end and strip the wire again in a larger gauge stripper.

## Splicing Wire Leads

#### NOTE

See <u>Figure A-77</u>. The connector is crimped on one side and then the other.

- See <u>Figure A-76</u>. Open the PACKARD CRIMPING TOOL (Part No. HD-38125-8) ratchet by squeezing the handles closed.
- 2. Match the connector color to the wire gauge crimp die in the jaws. Insert one end of the sealed connector.
- Gently squeeze the handles until the connector is held in the jaws.
- 4. See <u>Figure A-77</u>. Feed the stripped end of a wire into the connector until the wire stops inside the metal insert (1).
- Squeeze the handles tightly closed to crimp the lead in the insert (2). The tool automatically opens when the crimping is complete.

6. Slide the connector to the other half of the metal insert. Insert the stripped wire lead (1) until it stops. Crimp the lead in the insert (2).

## **AWARNING**

Be sure to follow manufacturer's instructions when using the UltraTorch UT-100 or any other radiant heating device. Failure to follow manufacturer's instructions can cause a fire, which could result in death or serious injury. (00335a)

- Avoid directing heat toward any electrical system component that is not being serviced.
- Always keep hands away from tool tip area and heat shrink attachment.
- Use an ULTRA TORCH (Part No. HD-39969), or a HEAT GUN (Part No. HD-25070) with a HEAT SHIELD ATTACHMENT (Part No. HD-41183), to heat the connector from the center of the crimp (3) out to each end.

#### NOTE

It is acceptable for the splice to rest against the heat shrink tool attachment.

## **Inspecting Seals**

See <u>Figure A-77</u>. Allow the splice to cool and inspect the seal. The insulation should appear smooth and cylindrical. Melted sealant will have extruded out the ends (4) of the insulation.

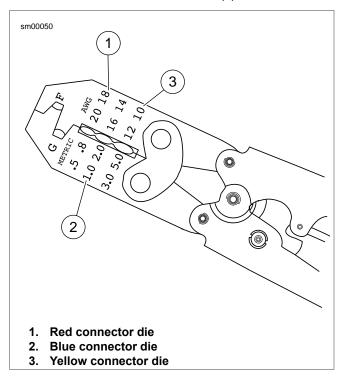


Figure A-76. Packard Crimping Tool (HD-38125-8)

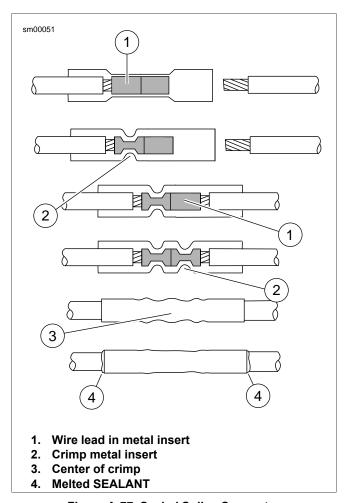


Figure A-77. Sealed Splice Connector

## TABLE OF CONTENTS

SUBJECT	PAGE NO.
B.1 CONNECTORS	B-1
B 2 WIRING DIAGRAMS	B-4

CONNECTORS B.1

## **CONNECTOR LOCATIONS**

### **Function/Location**

All vehicle connectors are identified by their function and location. Refer to  $\underline{\text{Table B-1}}$ .

## **Place and Color**

The place (number of wire cavities of a connector housing) and color of the connector can also aid identification.

### **Connector Number**

On wiring diagrams and in service/repair instructions, connectors are identified by a number in brackets.

## **Repair Instructions**

The repair instructions in Appendix A are by connector type. Refer to <u>Table B-1</u>.

**Table B-1. Sportster Connector Locations** 

NO.	DESCRIPTION	TYPE	TERMINAL PROBE COLOR	LOCATION
[5]	Main fuse	2-place Delphi 800 Metripack Sealed (BK)	Red	Behind left side cover
[7]	Tail lamp harness to main harness	6-place Tyco 070 Multilock Unsealed (BK)	Gray	Below seat
[18]	Right rear turn signal	2-place Tyco 070 Multilock Unsealed (single stop lamp) 2-place Tyco 070 Multilock Unsealed (W) (LED) 4-place Tyco 070 Multilock Unsealed (BK) (dual stop lamp)	Gray	Inside tail lamp lens (single stop lamp) Under the seat (LED and dual stop lamp)
[19]	Left rear turn signal	2-place Tyco 070 Multilock Unsealed (BK) (single stop lamp) 2-place Tyco 070 Multilock Unsealed (BK) (LED) 4-place Tyco 070 Multilock Unsealed (BK) (dual stop lamp)	Gray	Inside tail lamp lens (single stop lamp) Under the seat (LED and dual stop lamp)
[20]	Instruments	12-place Molex MX 150 Sealed (BK)	Gray	Under fuel tank
[22]	Right hand controls	6-place Molex MX 150 Sealed (BK)	Gray	Under fuel tank
[24]	Left hand controls	8-place Molex MX 150 Sealed (GY)	Gray	Under fuel tank
[30]	TSM, TSSM or HFSM	12-place Deutsch DT Sealed (GY)	Breakout Box	Under battery
[31]	Front turn signals	6-place Tyco 070 Multilock Unsealed (BK)	Gray	Under fuel tank
[38]	Headlamp	4-place Tyco 070 Multilock Unsealed (BK)	Gray	Under fuel tank
[39]	Speedometer (XL)	12 Delphi Micro 64 Sealed (BK)	Breakout Box	Back of speedometer
[39]	Speedometer (XR)	5-place Delphi 150.2 Sealed (BK)	Gray	Back of speedometer
[40]	License plate lamp	2-place Tyco 070 Multilock Unsealed (BK) 3-place Tyco 070 Multilock Unsealed (BK)	Gray	Under seat
[47]	Voltage regulator to stator	3-place Dekko (BK)	Green	Right side, under gear case cover
[61]	Fuse block	Tyco JR Power Timer Unsealed (BK)	Gray	Behind left side cover

**Table B-1. Sportster Connector Locations** 

NO.	DESCRIPTION	ТҮРЕ	TERMINAL PROBE COLOR	LOCATION
[65]	VSS	3-place Delphi 150.2 Sealed (BK)	Gray	Behind starter
[77]	Voltage regulator	2-place Dekko (BK)	Green	Left side frame, in front of oil filter
[78]	ECM (XL)	36-place Delphi 100W Sealed (GY)	Breakout Box	Behind rear cylinder
[78]	ECM (XR)	36-place Delphi 100W Sealed (GY)	Breakout Box	Under seat
[79]	CKP sensor	2-place Deutsch DTM Sealed (BK)	Brown	Left side frame under oil filter
[80]	TMAP sensor	4-place Bosch 1.1M sealed (BK)	Purple	Top of intake manifold
[83]	Ignition coil	4-place Delphi GT 150 Sealed (BK)	Gray	Under fuel tank
[84]	Front fuel injector	2-place Molex BPT Sealed (BK)	Purple	Top of induction manifold
[85]	Rear fuel injector	2-place Molex BPT Sealed (BK)	Purple	Top of induction manifold
[87]	IAC	4-place Delphi 150.2 sealed (BK)	Gray	Top of induction manifold
[88]	TPS	3-place Delphi 150.2 Sealed (BK)	Gray	Behind air cleaner mounting plate
[90]	ET sensor	2-place Tyco Superseal 1.5 Sealed (BK)	Gray	On right side ECM caddy: XL models On right side H-bracket: XR 1200X
[91]	DLC	4-place Deutsch DT Sealed (GY)	Black	Under left side cover
[93]	Tail/stop lamp	4-place Tyco 070 Multilock Unsealed (BK)	Gray	Inside tail lamp lens
[94]	Rear turn signal lamp	6-place Tyco 070 Multilock Unsealed (BK)	Gray	Inside tail lamp lens
[108]	Tachometer (XR)	12-place Delphi Micro 64 Sealed (GY)	Breakout Box	Back of tachometer
[120]	Oil pressure switch	Right Angle Push On terminal (BK)		Under oil filter mount
[121]	Rear stop lamp switch	Tyco Insulated Spade terminals (BK)	Red	Left side under battery (XL) Under rear fork (XR)
[122]	Horn	Flag terminals (BK)	Red	Between front frame tubes or on the left side of engine
[128]	Starter solenoid	1-place Delphi 56 Spade ter- minal (W)	Gray	Right side bottom of starter
[131]	Neutral switch	Right Angle Push On Molded terminals (BK)	Black	Right side under sprocket cover behind transmission sprocket
[133]	JSS (HDI)	3-place Molex MX 150 Sealed (BK)	Gray	Left side frame down tube
[136]	Neutral switch jumper	1-place bullet (BK)		Right side frame, beneath gearcase cover
[137]	Rear O2 sensor	2-place Tyco 070 Multilock Unsealed (BK)	Gray	On left side ECM caddy: XL models On left side H-bracket: XR 1200X
[138]	Front O2 sensor	2-place Tyco 070 Multilock Unsealed (BK)	Gray	Left side frame in front of oil filter

**Table B-1. Sportster Connector Locations** 

NO.	DESCRIPTION	TYPE	TERMINAL PROBE COLOR	LOCATION
[141]	Fuel pump and low fuel switch	4-place Molex MX 150 Sealed (BK)	Gray	On left side of ECM caddy: XL models On left side of H-bracket: XR 1200X
[142]	Security siren	3-place Delphi 150.2 Sealed (BK)	Gray	Under frame
[145]	Engine sensor harness	16-place Molex MX 150 Sealed (BK)	Gray	Under seat
[160]	P&A battery	1-place Delphi 800 Metripack Sealed (GY)	Purple	Under seat
[178]	Active intake solenoid	2-place Tyco Superseal 1.5 Sealed (BK)	Gray	Right side behind air box: XR 1200X
[200]	Fuel sender resistor assembly	3-place Molex MX 150 Sealed (BK)	Gray	Under seat
[208]	HFSM antenna harness	4-place Deutsch DT Sealed (GY)	Black	Under battery
[209]	HFSM antenna	2-place Molex MX 64 Unsealed (BK)	Gray	Under seat
[210]	Fuel Tank Ground (XR)	1-place molded (BK)		Under fuel tank cover
[266]	Anti-theft tracking module	4-place Delphi GT 150 Sealed (BK)	Gray	Under frame
[267]	Anti-theft harness to main harness	3-place Deutsch DT Sealed (BK)	Black	Under battery
[Battery ground]	Battery ground	Ring terminal (BK)		Top of transmission case
[GND 1]	Harness ground	Ring terminal (BK)		Left side behind starter

## WIRING DIAGRAMS

#### WIRING DIAGRAM INFORMATION

### **Wire Color Codes**

Wire traces on wiring diagrams are labeled with alpha codes. Refer to Table B-2.

**For Solid Color Wires:** See <u>Figure B-1</u>. The alpha code identifies wire color.

For Striped Wires: The code is written with a slash (/) between the solid color code and the stripe code. For example, a trace labeled GN/Y is a green wire with a yellow stripe.

## Wiring Diagram Symbols

See <u>Figure B-1</u>. On wiring diagrams and in service/repair instructions, connectors are identified by a number in brackets []. The letter inside the brackets identifies whether the housing is a socket or pin housing.

**A=Pin:** The letter A and the pin symbol after a connector number identifies the pin side of the terminal connectors.

**B=Socket:** The letter B and the socket symbol after a connector number identifies the socket side of the terminal connectors. Other symbols found on the wiring diagrams include the following:

**Diode:** The diode allows current flow in one direction only in a circuit.

**Wire break:** The wire breaks are used to show option variances or page breaks.

**No Connection:** Two wires crossing over each other in a wiring diagram that are shown with no splice indicating they are not connected together.

**Circuit to/from:** This symbol indicates a more complete circuit diagram on another page. The symbol is also identifying the direction of current flow.

**Splice:** Splices are where two or more wires are connected together along a wiring diagram. The indication of a splice only indicates that wires are spliced to that circuit. It is not the true location of the splice in the wiring harness.


**Ground:** Grounds can be classified as either clean or dirty grounds. Clean grounds are identified by a (BK/GN) wire and are normally used for sensors or modules.

### NOTE

Clean grounds usually do not have electric motors, coils or anything that may cause electrical interference on the ground circuit.

Dirty grounds are identified by a (BK) wire and are used for components that are not as sensitive to electrical interference.

**Twisted pair:** This symbol indicates the two wires are twisted together in the harness. This minimizes the circuit's electromagnetic interference from external sources. If repairs are necessary to these wires they should remain as twisted wires.

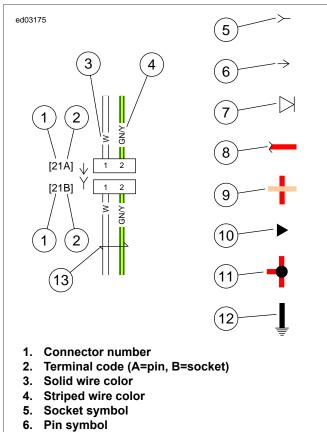

7. Diode

8. Wire break

9. No connection

10. Circuit to/from

11. Splice

12. Ground

13. Twisted pair

Figure B-1. Connector/Wiring Diagram Symbols

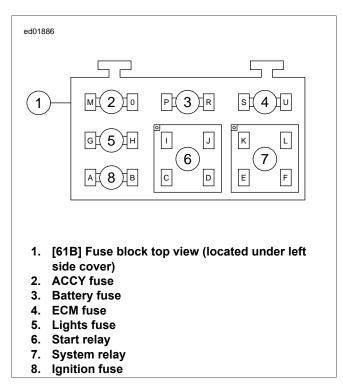


Figure B-2. Fuse Block and Socket Terminals

Table B-2. Wire Color Codes

ALPHA CODE	WIRE COLOR
BE	Blue
BK	Black
BN	Brown
GN	Green
GY	Gray
LGN	Light Green
0	Orange
PK	Pink
R	Red
TN	Tan
V	Violet
W	White
Y	Yellow

# **Wiring Diagram List**

DIAGRAM	LOCATION
Battery Power	Figure B-3
Ignition Power	Figure B-4
Accessory Power	Figure B-5
Chassis Grounds	Figure B-6
Main Harness: 2013 Sportster	Figure B-7
Engine Management: 2013 Sportster	Figure B-8
Starting and Charging Circuit: 2013 Sportster	Figure B-9
Lighting (1 of 2): 2013 Sportster	Figure B-10
Lighting (2 of 2): 2013 Sportster	Figure B-11
Instrument, Indicators, and Hand Controls: 2013 Sportster	Figure B-12
Security Circuit: 2013 Sportster	Figure B-13
Security Circuit with Anti-Theft Tracking Module: 2013 Sportster	Figure B-14

B-6 2013 Sportster Service: Appendix B Wiring

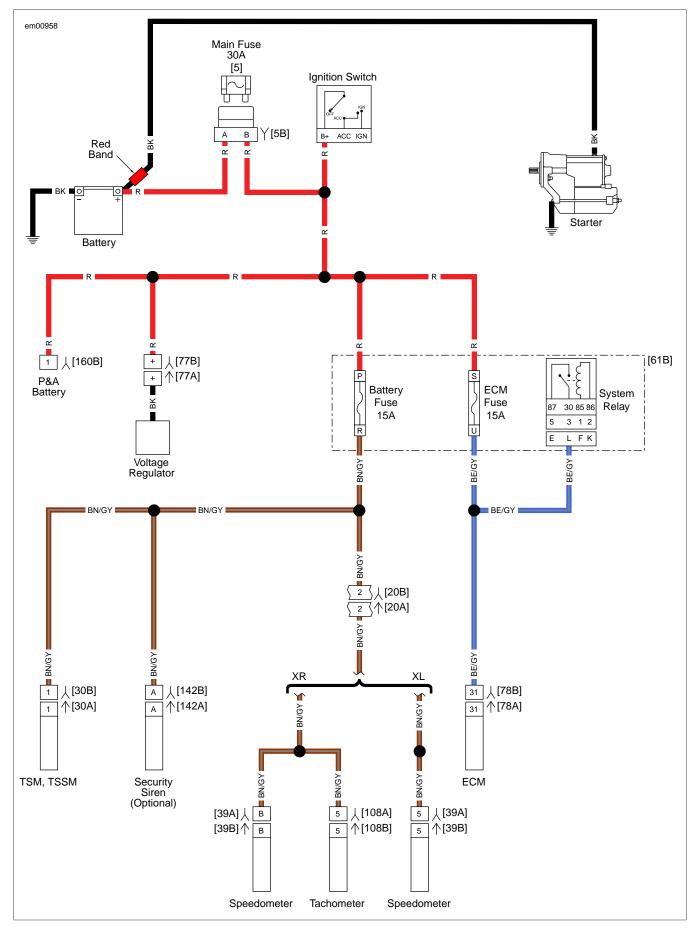


Figure B-3. Battery Power

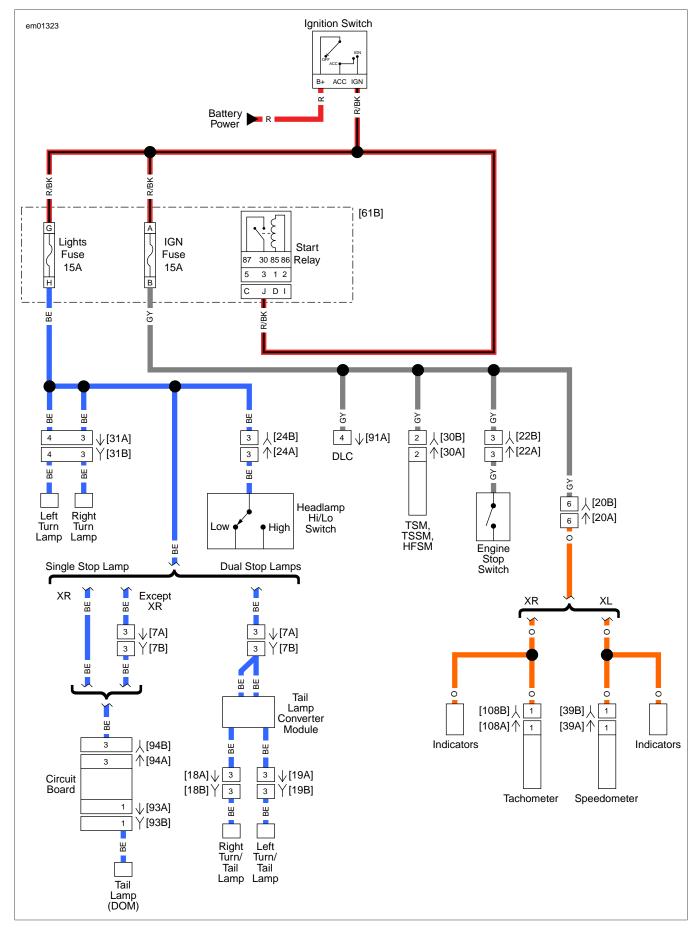


Figure B-4. Ignition Power

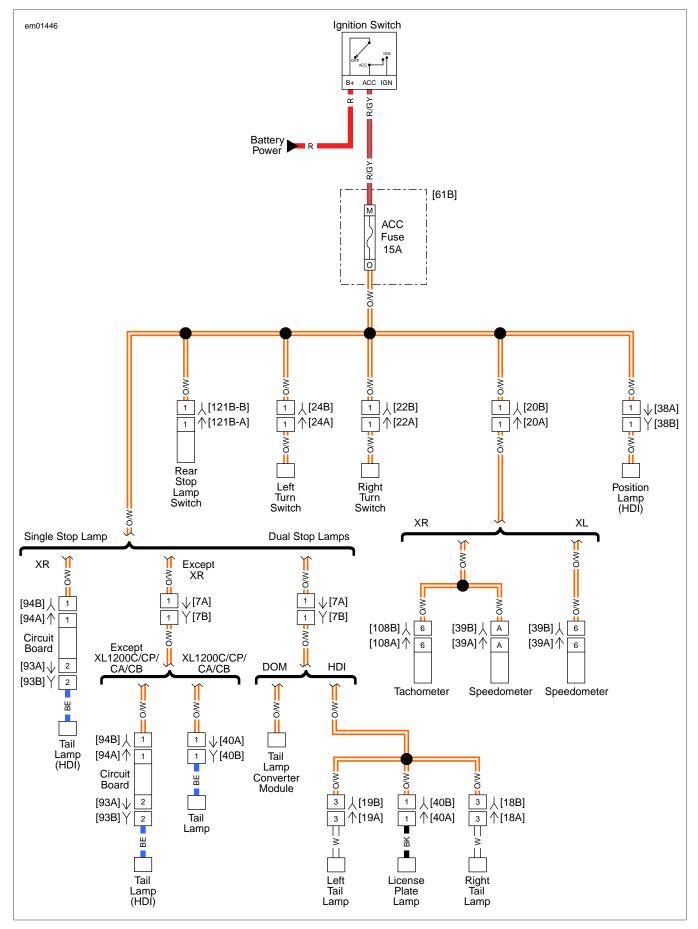


Figure B-5. Accessory Power

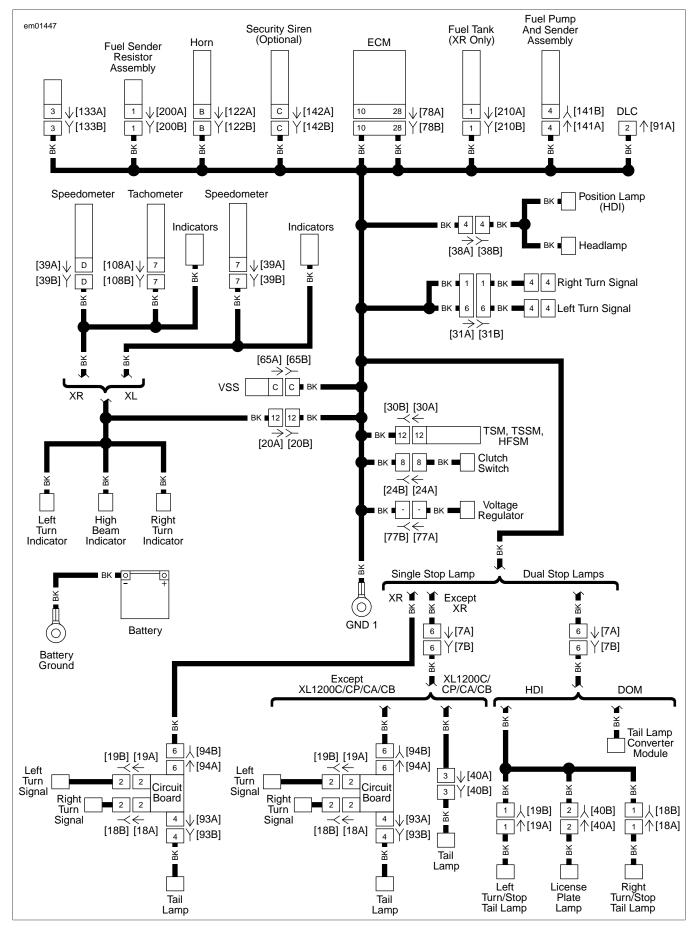


Figure B-6. Chassis Grounds

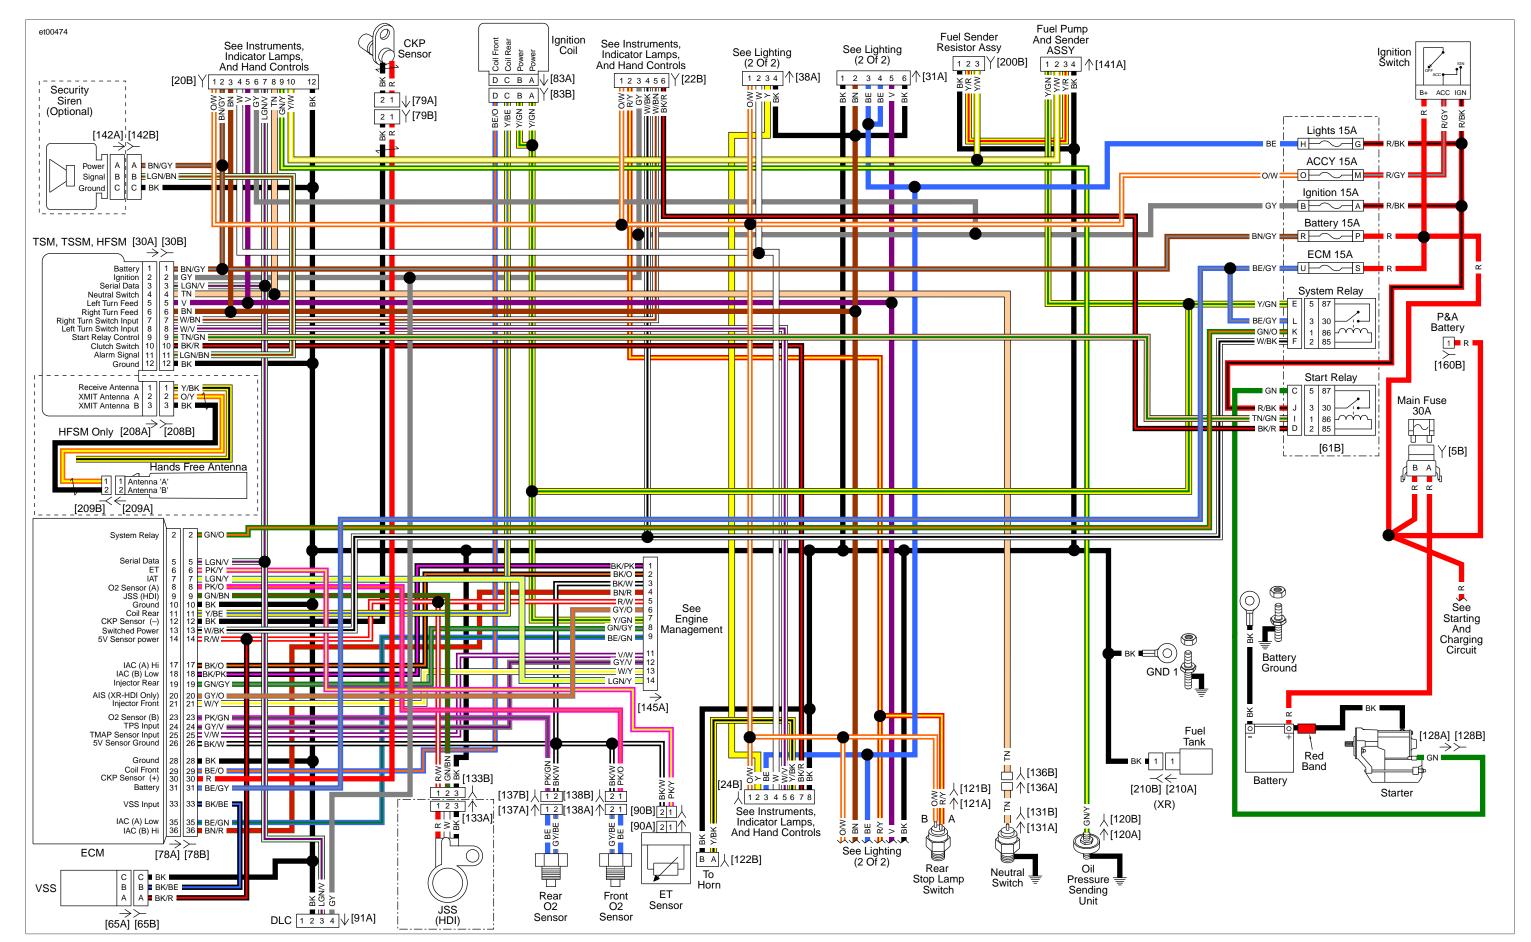


Figure B-7. Main Harness: 2013 Sportster

Figure B-7.
Main Harness: 2013 Sportster

Figure B-7.
Main Harness: 2013 Sportster

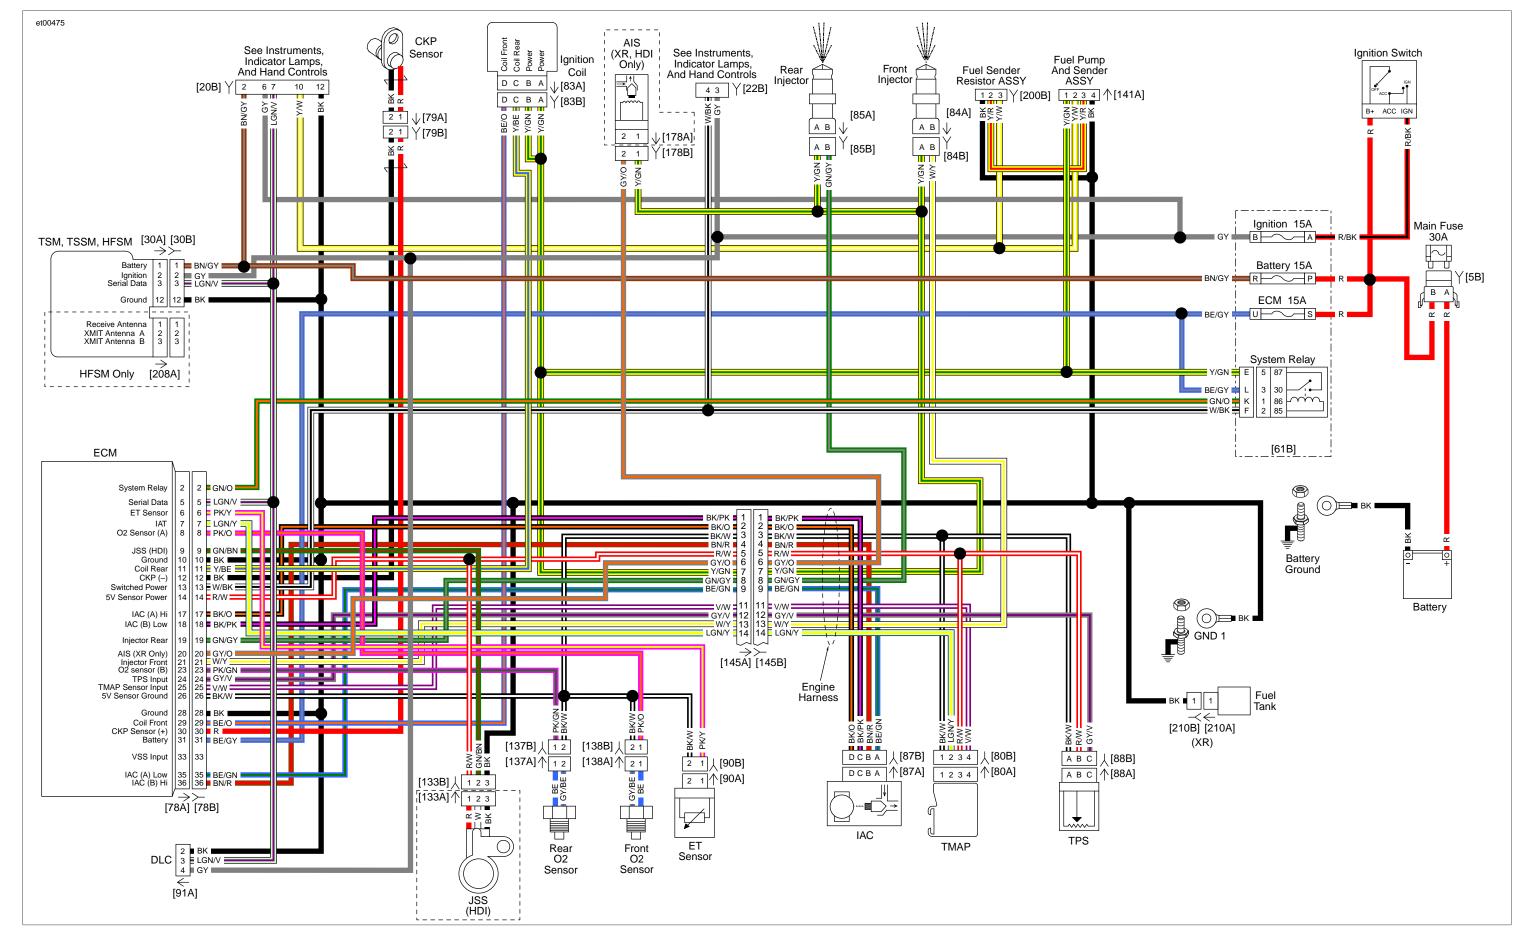


Figure B-8. Engine Management: 2013 Sportster

Figure B-8.
Engine Management: 2013 Sportster

Figure B-8.
Engine Management: 2013 Sportster

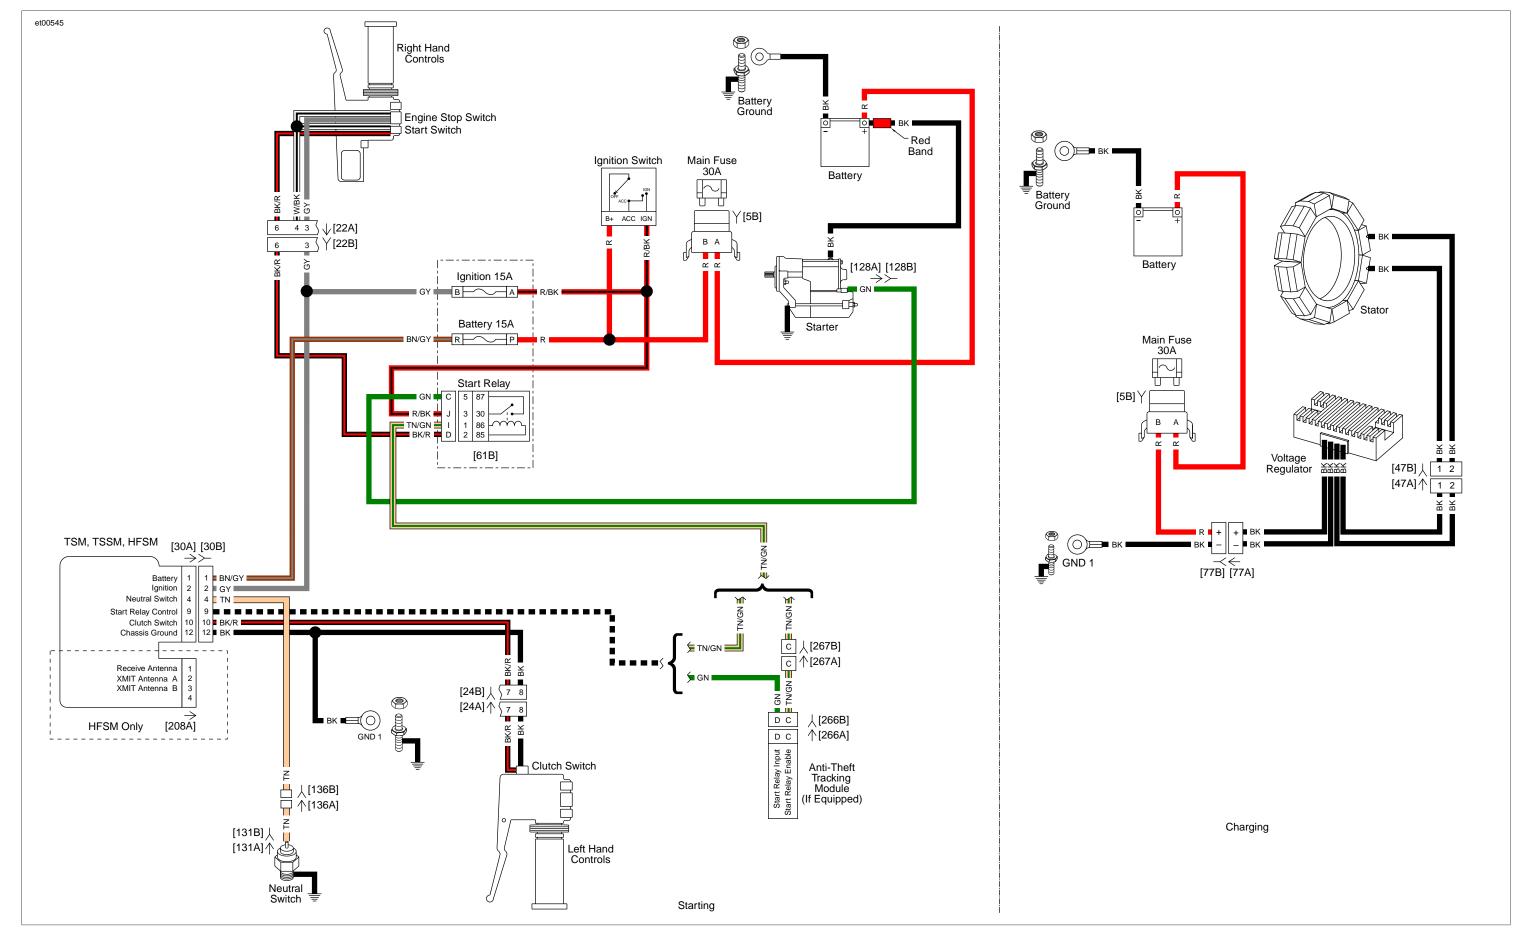


Figure B-9. Starting and Charging Circuit: 2013 Sportster

Figure B-9.
Starting and Charging Circuit: 2013 Sportster

Figure B-9.
Starting and Charging Circuit: 2013 Sportster

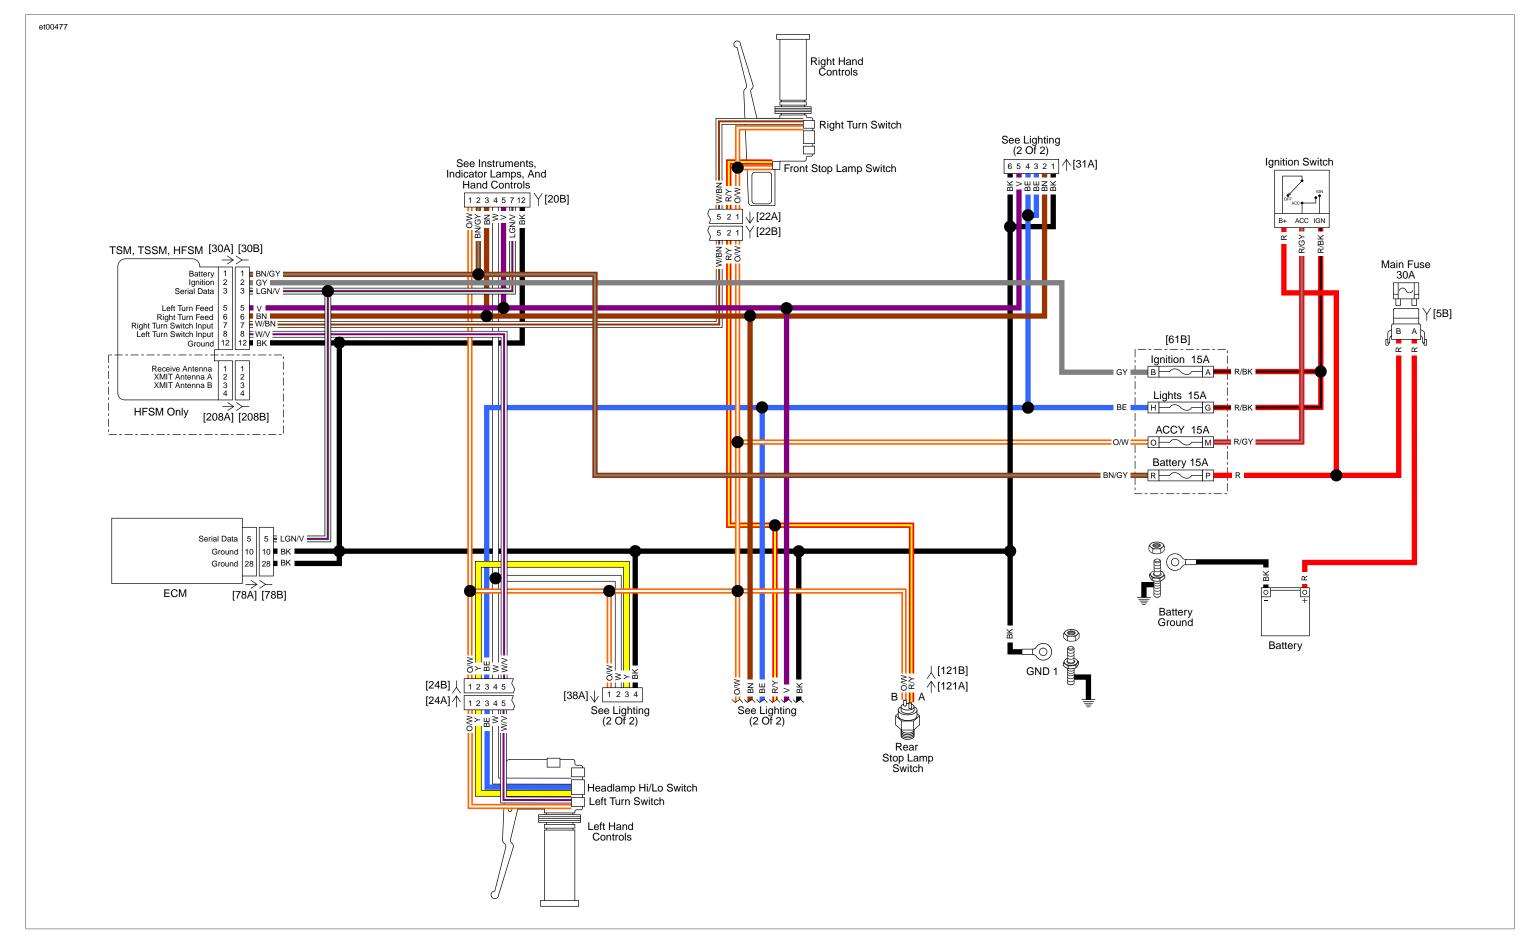


Figure B-10. Lighting (1 of 2): 2013 Sportster

Figure B-10. Lighting (1 of 2): 2013 Sportster Figure B-10. Lighting (1 of 2): 2013 Sportster

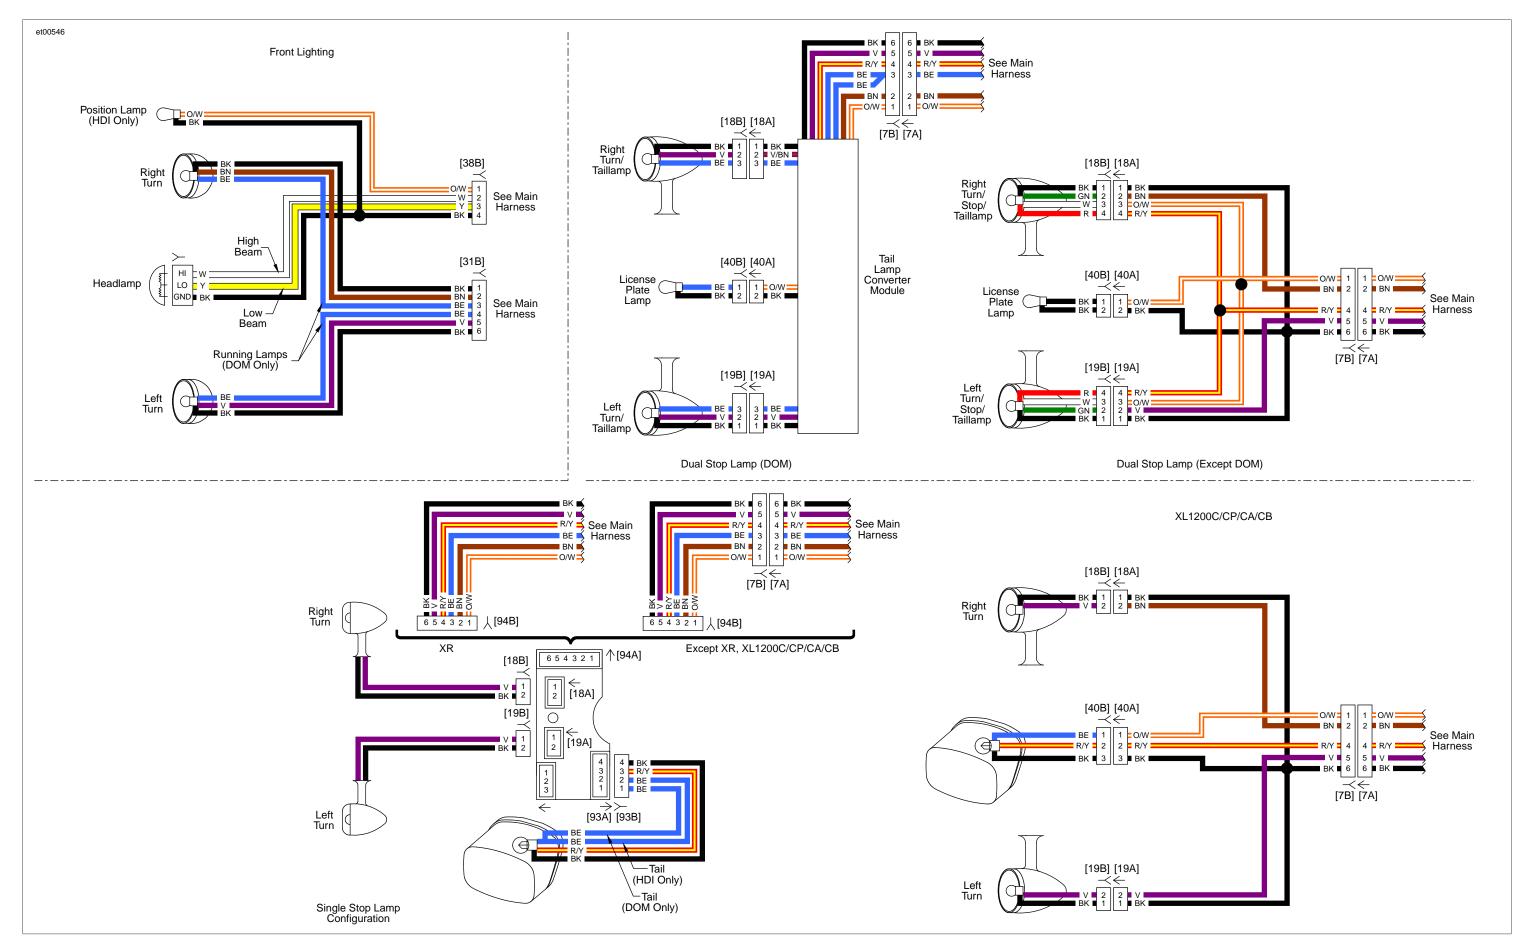


Figure B-11. Lighting (2 of 2): 2013 Sportster

Figure B-11. Lighting (2 of 2): 2013 Sportster Figure B-11. Lighting (2 of 2): 2013 Sportster

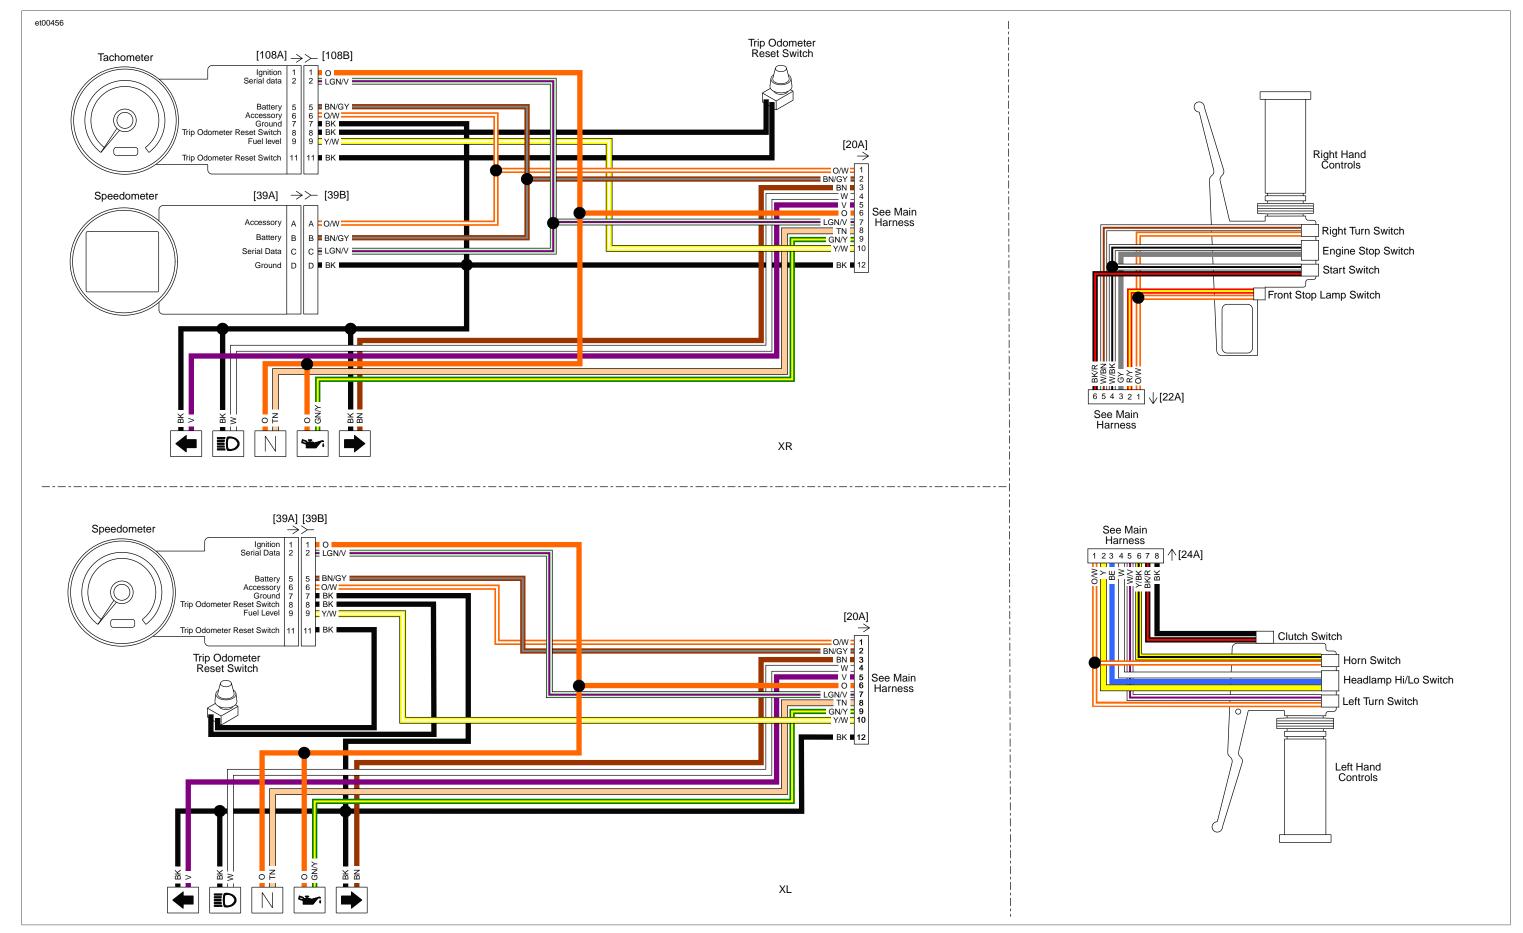


Figure B-12. Instrument, Indicators, and Hand Controls: 2013 Sportster

Figure B-12.
Instrument, Indicators, and Hand Controls: 2013 Sportster

Figure B-12.
Instrument, Indicators, and Hand Controls: 2013 Sportster

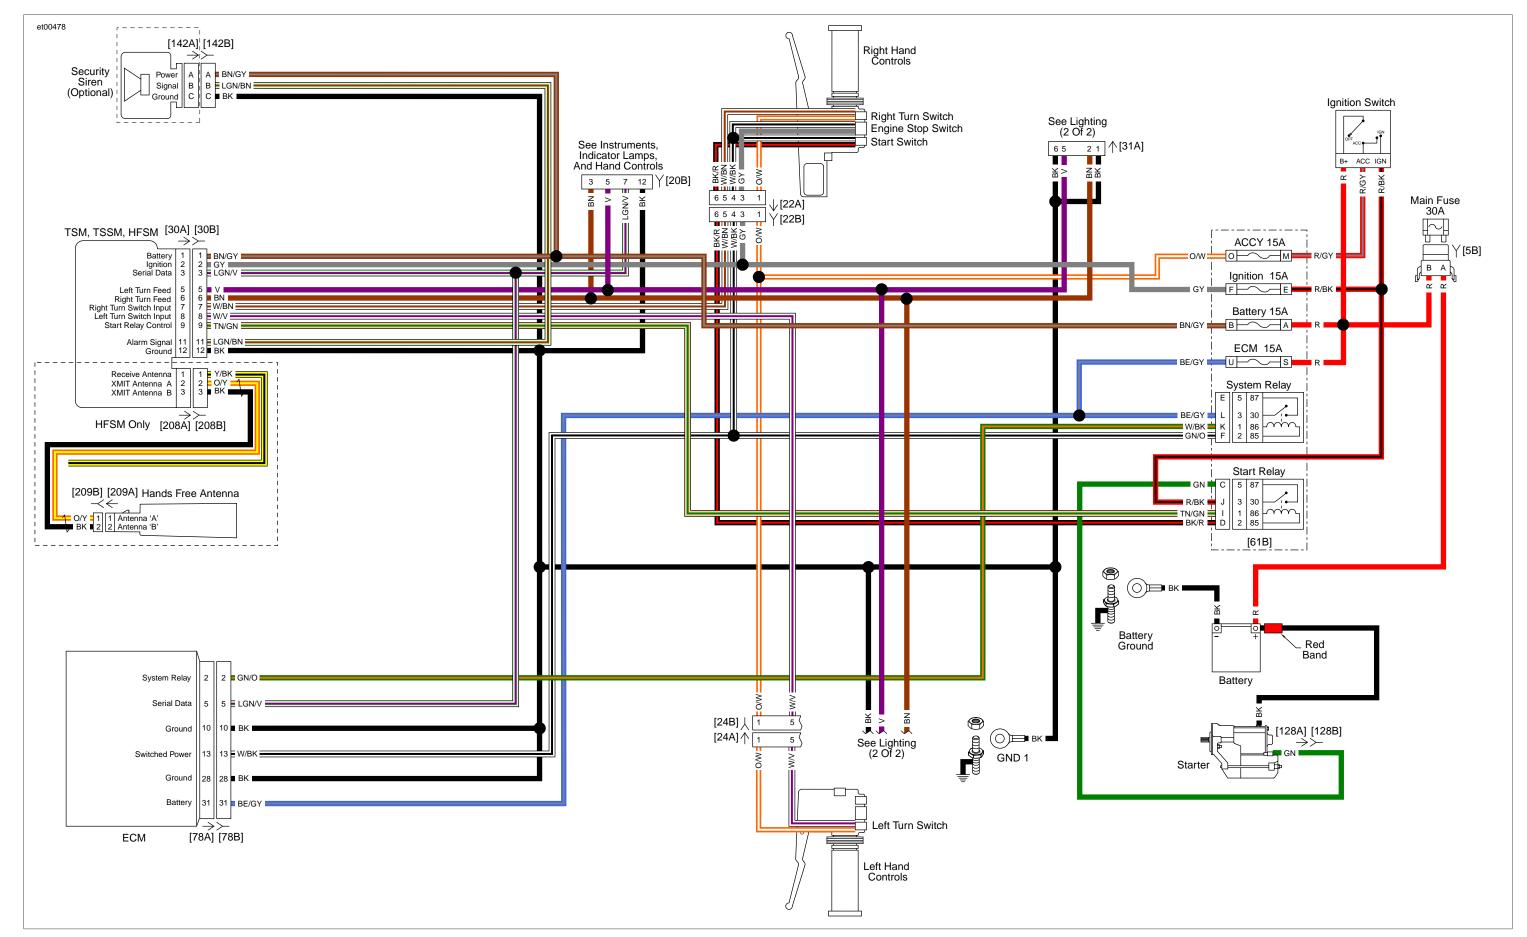


Figure B-13. Security Circuit: 2013 Sportster

Figure B-13.
Security Circuit: 2013 Sportster

Figure B-13.
Security Circuit: 2013 Sportster

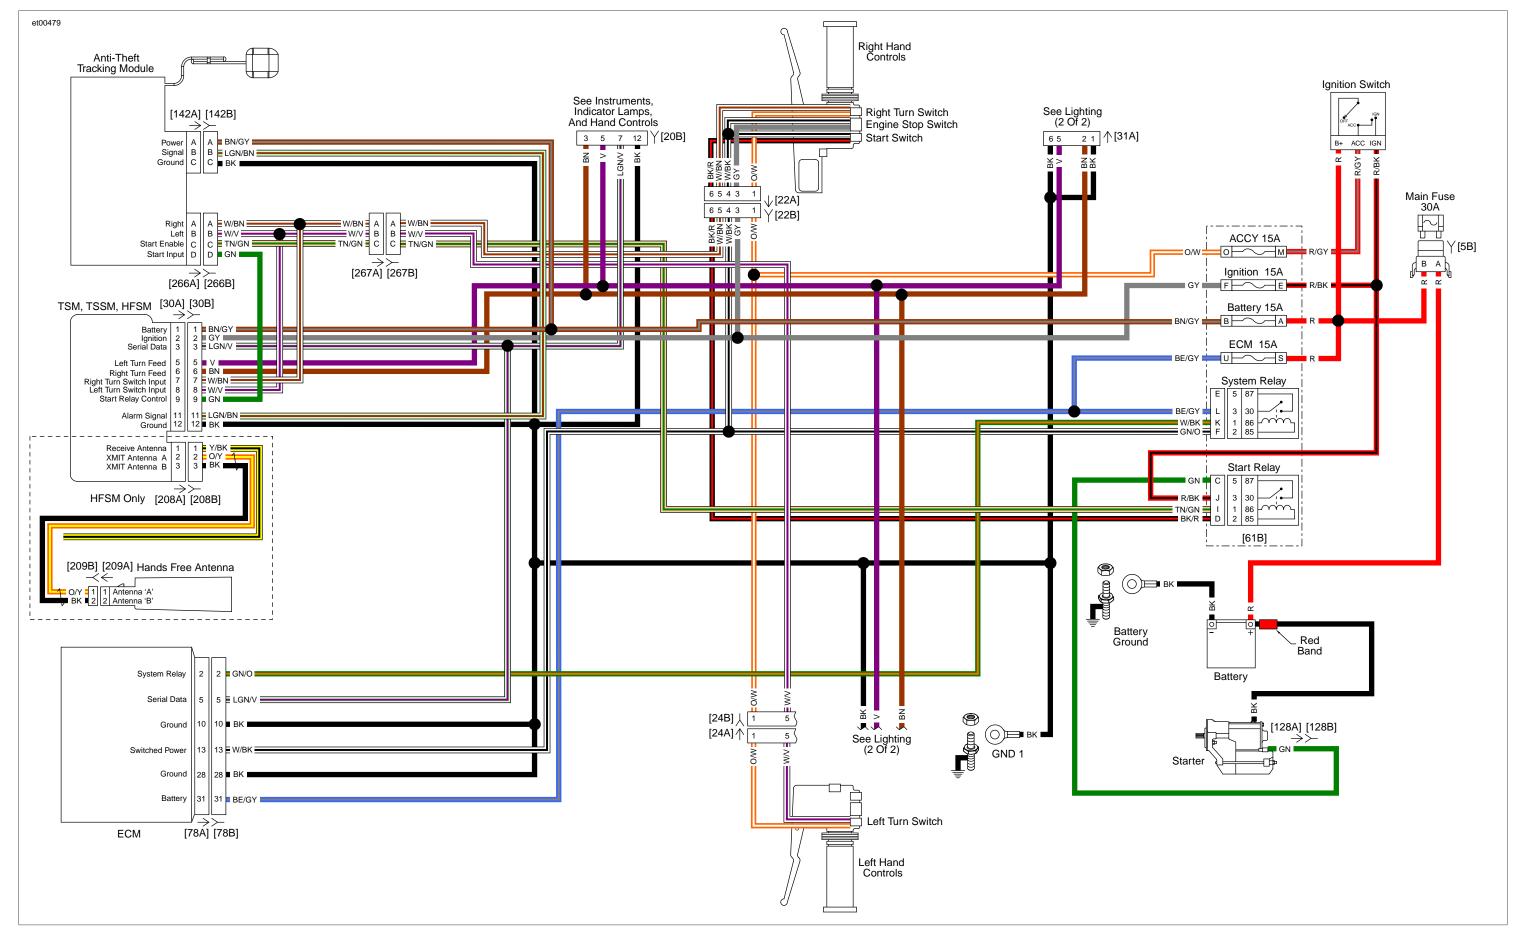


Figure B-14. Security Circuit with Anti-Theft Tracking Module: 2013 Sportster

Figure B-14.
Security Circuit with Anti-Theft Tracking Module: 2013
Sportster

Figure B-14.
Security Circuit with Anti-Theft Tracking Module: 2013
Sportster

## TABLE OF CONTENTS

SUBJECT	PAGE NO.
C.1 COMPENSATING SPROCKET	

### **COMPENSATING SPROCKET**

#### **GENERAL**

Sportster models sold in certain markets are equipped with a rear wheel compensating sprocket.

Periodic inspection of the compensator components is recommended. This should be done any time the rear wheel is removed.


### **REMOVAL AND DISASSEMBLY**

- 1. Remove rear wheel. See 2.5 WHEELS.
- See <u>Figure C-1</u>. Remove final drive sprocket assembly (2) and spacer (6).
- 3. Pull sprocket isolators (5) from compensator bowl (7).

#### NOTE

Only remove compensator bowl (7) from rear wheel (8) if necessary. Bolts (3) are one-time usage only. If removed, they must be discarded and replaced with **new** bolts.

4. If necessary, remove bolts with captive washers (3) and compensator bowl from rear wheel (8). Discard bolts.

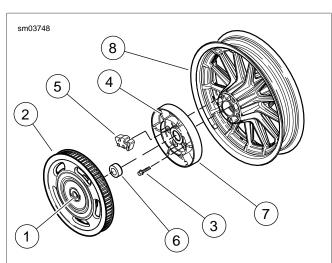

- Sprocket bearing (part of final drive sprocket assembly)
- 2. Final drive sprocket assembly
- 3. Bolt with captive washer (5)
- 4. Compensator bowl casting lip
- 5. Sprocket isolator (5)
- 6. Spacer
- 7. Compensator bowl
- 8. Rear wheel

Figure C-1. Compensating Sprocket

### **CLEANING, INSPECTION AND REPAIR**

- 1. See <u>Figure C-1</u>. Wipe inside of compensator bowl (7) and final drive sprocket (2) with a clean, damp cloth.
- Inspect sprocket bearing (1). If bearing surface is rough or if bearing was leaking grease, replace bearing. See C.1 COMPENSATING SPROCKET, Sprocket Bearing.

 Inspect sprocket isolators (5) for damage, deterioration, missing chunks or excessive debris beyond normal wear marks. Replace if necessary.

#### SPROCKET BEARING

PART NUMBER	TOOL NAME
HD-48921	REAR WHEEL COMPENSATOR SPROCKET BEARING REMOVER/INSTALLER

#### Removal

- 1. Pull sprocket from bowl.
- See <u>Figure C-2</u>. Obtain the REAR WHEEL COM-PENSATOR SPROCKET BEARING REMOVER/INSTALLER (Part No. HD-48921).

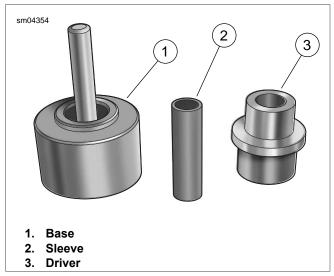


Figure C-2. Rear Wheel Compensator Sprocket Bearing Remover/Installer (Part No. HD-48921)

- See <u>Figure C-3</u>. Place parallel press blocks on deck of arbor press. Leave gap between press blocks to accommodate base pin in next step.
- Position base (1) on press blocks with the large OD topside
- Slide sleeve (2) over base pin.
- See <u>Figure C-4</u>. With the inboard side facing up, slide sprocket (1) over sleeve until it rests on base.
- 7. Slide small OD of driver (2) over sleeve until contact is made with inner race of bearing.
- Center driver under ram and apply pressure until bearing drops into base. Disassemble tool and discard bearing.

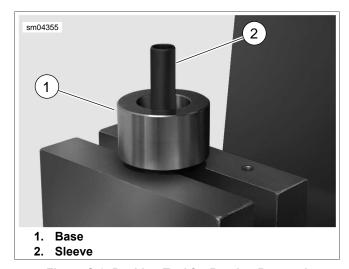


Figure C-3. Position Tool for Bearing Removal

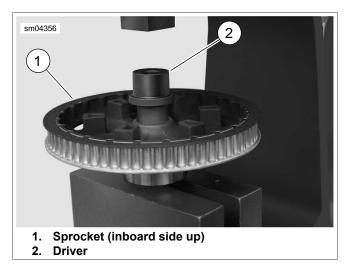


Figure C-4. Remove Compensator Sprocket Bearing

### Installation

- 1. See Figure C-2. Obtain the REAR WHEEL COM-PENSATOR **SPROCKET** BEARING REMOVER/INSTALLER (Part No. HD-48921).
- See Figure C-5. Position base (1) on deck of arbor press with the small OD topside.
- Slide sleeve (2) over base pin. 3.
- Verify that sprocket bearing bore is clean and dry.
- See Figure C-6. With the outboard side facing up, slide sprocket (1) over sleeve until it rests on base.
- 6. Slide bearing (2) over sleeve.
- Slide large OD of driver (3) over sleeve until contact is made with outer race of bearing.
- Center driver under ram and apply pressure until bearing makes firm contact with counterbore in sprocket.
- Turn sprocket over and verify that bearing is fully seated.


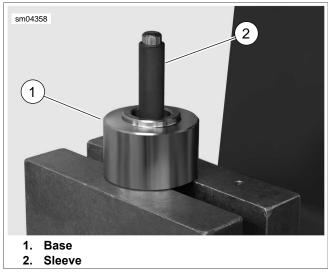


Figure C-5. Position Tool for Bearing Installation

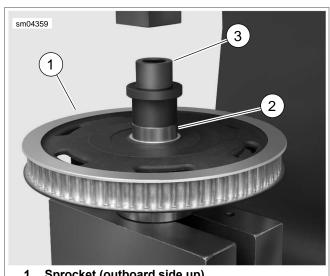

- 1. Sprocket (outboard side up)
- 2. Bearing outer race
- Driver

Figure C-6. Install Compensator Sprocket Bearing

### ASSEMBLY AND INSTALLATION

FASTENER	TORQUE	VALUE
Sprocket compensator bowl bolt, 1st torque	60 ft-lbs	81.3 Nm
Sprocket compensator bowl bolt, final torque	80 ft-lbs	108.5 Nm

#### NOTES

- See Figure C-1. Only remove compensator bowl (7) from rear wheel (8) if necessary. Bolts (3) are one-time usage only. If removed, they must be discarded and replaced with new bolts.
- New compensator bowl bolts are equipped with a LOC-TITE patch on the threads. Do not apply any additional LOCTITE.

- 1. See <u>Figure C-1</u>. If compensator bowl (7) was removed, install bowl onto rear wheel with **new** bolts with captive washers (3). Tighten bolts as follows:
  - Tighten bolts in a star pattern (every other bolt) to 60 ft-lbs (81.3 Nm).
  - b. Loosen screws 1/2 turn.
  - Retighten all five screws in the same star pattern to 80 ft-lbs (108.5 Nm).

#### NOTE

Do not lubricate inside of compensator bowl (7), sprocket (2) or sprocket isolators (5) with any type of oil based lubricant. Use ONLY soapy water or window cleaner on isolators to facilitate their installation. Do not install isolators dry.

2. See Figure C-7. Lubricate isolators (1) with soapy water or window cleaner. Install isolators (1) into compensator bowl (2).

#### NOTE

Inner spacer can be identified by a radial groove machined into its surface. Inner spacer is also thicker than outer spacer. Make sure to install the correct spacer between compensator bowl and sprocket.

3. See <u>Figure C-1</u>. Install spacer (6) by placing on bowl casting lip (4).

#### NOTE

Use extreme caution to make sure that spacer does not fall out when assembling sprocket onto compensator bowl. If spacer is not present when rear axle is tightened, compensator sprocket and bearing will be damaged.

- 4. Install sprocket (2) onto compensator bowl (7).
- 5. Install rear wheel. See 2.5 WHEELS.

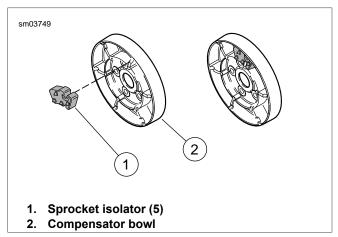


Figure C-7. Installing Sprocket Isolators

## **NOTES**

### TABLE OF CONTENTS

SUBJECT	PAGE NO.
D.1 METRIC CONVERSION	D-1
D.2 FLUID CONVERSIONS	D-2
D 3 TOROUE CONVERSIONS	D-3

# **METRIC CONVERSION**

### **CONVERSION TABLE**

**Table D-1. Metric Conversions** 

	MILLIMETERS to INCHES (MM x 0.03937 = IN)							INC		IILLIMETE 40 = MM)	RS				
mm	in	mm	in	mm	in	mm	in	in	mm	in	mm	in	mm	in	mm
.1	.0039	25	.9842	58	2.283	91	3.582	.001	.025	.6	15.240	1-15/16	49.21	3-5/16	84.14
.2	.0078	26	1.024	59	2.323	92	3.622	.002	.051	5/8	15.875	2	50.80	3-3/8	85.72
.3	.0118	27	1.063	60	2.362	93	3.661	.003	.076	11/16	17.462	2-1/16	52.39	3.4	86.36
.4	.0157	28	1.102	61	2.401	94	3.701	.004	.102	.7	17.780	2.1	53.34	3-7/16	87.31
.5	.0197	29	1.142	62	2.441	95	3.740	.005	.127	3/4	19.050	2-1/8	53.97	3-1/2	88.90
.6	.0236	30	1.181	63	2.480	96	3.779	.006	.152	.8	20.320	2-3/16	55.56	3-9/16	90.49
.7	.0275	31	1.220	64	2.519	97	3.819	.007	.178	13/16	20.638	2.2	55.88	3.6	91.44
.8	.0315	32	1.260	65	2.559	98	3.858	.008	.203	7/8	22.225	2-1/4	57.15	3-5/8	92.07
.9	.0354	33	1.299	66	2.598	99	3.897	.009	.229	.9	22.860	2.3	58.42	3-11/16	93.66
1	.0394	34	1.338	67	2.638	100	3.937	.010	.254	15/16	23.812	2-5/16	58.74	3.7	93.98
2	.0787	35	1.378	68	2.677	101	3.976	1/64	.397	1	25.40	2-3/8	60.32	3-3/4	95.25
3	.1181	36	1.417	69	2.716	102	4.016	.020	.508	1-1/16	26.99	2.4	60.96	3.8	96.52
4	.1575	37	1.456	70	2.756	103	4.055	.030	.762	1.1	27.94	2-7/16	61.91	3-13/16	96.84
5	.1968	38	1.496	71	2.795	104	4.094	1/32	.794	1-1/8	28.57	2-1/2	63.50	3-7/8	98.42
6	.2362	39	1.535	72	2.834	105	4.134	.040	1.016	1-3/16	30.16	2-9/16	65.09	3.9	99.06
7	.2756	40	1.575	73	2.874	106	4.173	.050	1.270	1.2	30.48	2.6	66.04	3-15/16	100.01
8	.3149	41	1.614	74	2.913	107	4.212	.060	1.524	1-1/4	31.75	2-5/8	66.67	4	101.6
9	.3543	42	1.653	75	2.953	108	4.252	1/16	1.588	1.3	33.02	2-11/16	68.26	4-1/16	102.19
10	.3937	43	1.693	76	2.992	109	4.291	.070	1.778	1-5/16	33.34	2.7	68.58	4.1	104.14
11	.4331	44	1.732	77	3.031	110	4.331	.080	2.032	1-3/8	34.92	2-3/4	69.85	4-1/8	104.77
12	.4724	45	1.772	78	3.071	111	4.370	.090	2.286	1.4	35.56	2.8	71.12	4-3/16	106.36
13	.5118	46	1.811	79	3.110	112	4.409	.1	2.540	1-7/16	36.51	2-13/16	71.44	4.2	106.68
14	.5512	47	1.850	80	3.149	113	4.449	1/8	3.175	1-1/2	38.10	2-7/8	73.02	4-1/4	107.95
15	.5905	48	1.890	81	3.189	114	4.488	3/16	4.762	1-9/16	39.69	2.9	73.66	4.3	109.22
16	.6299	49	1.929	82	3.228	115	4.527	.2	5.080	1.6	40.64	2-15/16	74.61	4-5/16	109.54
17	.6693	50	1.968	83	3.268	116	4.567	1/4	6.350	1-5/8	41.27	3	76.20	4-3/8	111.12
18	.7086	51	2.008	84	3.307	117	4.606	.3	7.620	1-11/16	42.86	3-1/16	77.79	4.4	111.76
19	.7480	52	2.047	85	3.346	118	4.645	5/16	7.938	1.7	43.18	3.1	78.74	4-7/16	112.71
20	.7874	53	2.086	86	3.386	119	4.685	3/8	9.525	1-3/4	44.45	3-1/8	79.37	4-1/2	114.30
21	.8268	54	2.126	87	3.425	120	4.724	.4	10.160	1.8	45.72	3-3/16	80.96	4-9/16	115.89
22	.8661	55	2.165	88	3.464	121	4.764	7/16	11.112	1-13/16	46.04	3.2	81.28	4.6	116.84
23	.9055	56	2.205	89	3.504	122	4.803	1/2	12.700	1-7/8	47.62	3-1/4	82.55	4-5/8	117.47
24	.9449	57	2.244	90	3.543	123	4.842	9/16	14.288	1.9	48.26	3.3	83.82	4-11/16	119.06

## **FLUID CONVERSIONS**

**D.2** 

#### UNITED STATES SYSTEM

Unless otherwise specified, all fluid volume measurements in this service manual are expressed in United States (U.S.) units-of-measure. See below:

- 1 pint (U.S.) = 16 fluid ounces (U.S.)
- 1 quart (U.S.) = 2 pints (U.S.) = 32 fl. oz. (U.S.)
- 1 gallon (U.S.) = 4 quarts (U.S.) = 128 fl. oz. (U.S.)

#### **METRIC SYSTEM**

Fluid volume measurements in this service manual include the metric system equivalents. In the metric system, 1 liter (L) = 1,000 milliliters (mL). To convert between U.S. units-of-measure and metric units-of-measure, refer to the following:

- fluid ounces (U.S.) x 29.574 = milliliters
- pints (U.S.) x 0.473 = liters
- quarts (U.S.) x 0.946 = liters
- gallons (U.S.) x 3.785 = liters
- milliliters x 0.0338 = fluid ounces (U.S.)
- liters x 2.114 = pints (U.S.)
- liters x 1.057 = quarts (U.S.)
- liters x 0.264 = gallons (U.S.)

#### **BRITISH IMPERIAL SYSTEM**

Fluid volume measurements in this service manual do not include the British Imperial (Imp.) system equivalents. The following conversions exist in the British Imperial system:

- 1 pint (Imp.) = 20 fluid ounces (Imp.)
- 1 quart (Imp.) = 2 pints (Imp.)
- 1 gallon (Imp.) = 4 quarts (Imp.)

Although the same unit-of-measure terminology as the U.S. system is used in the British Imperial (Imp.) system, the actual volume of each British Imperial unit-of-measure differs from its U.S. counterpart. The U.S. fluid ounce is larger than the British Imperial fluid ounce. However, the U.S. pint, quart, and gallon are smaller than the British Imperial pint, quart, and gallon, respectively. To convert between U.S. units and British Imperial units, refer to the following:

- fluid ounces (U.S.) x 1.042 = fluid ounces (Imp.)
- pints (U.S.) x 0.833 = pints (Imp.)
- quarts (U.S.) x 0.833 = quarts (Imp.)
- gallons (U.S.) x 0.833 = gallons (Imp.)
- fluid ounces (Imp.) x 0.960 = fluid ounces (U.S.)
- pints (Imp.) x 1.201 = pints (U.S.)
- quarts (Imp.) x 1.201 = quarts (U.S.)
- gallons (Imp.) x 1.201 = gallons (U.S.)

### **D.3**

## **TORQUE CONVERSIONS**

#### **UNITED STATES SYSTEM**

The U.S. units of torque, foot pounds and inch pounds, are used in this service manual. To convert units, use the following equations:

- foot pounds (ft-lbs) X 12.00000 = inch pounds (in-lbs).
- inch pounds (in-lbs) X 0.08333 = foot pounds (ft-lbs).

#### **METRIC SYSTEM**

All metric torque specifications are written in Newton-meters (Nm). To convert metric to United States units and United States to metric, use the following equations:

- Newton meters (Nm) X 0.737563 = foot pounds (ft-lbs).
- Newton meters (Nm) X 8.85085 = inch pounds (in-lbs).
- foot pounds (ft-lbs) X 1.35582 = Newton meters (Nm).
- inch pounds (in-lbs) X 0.112985 = Newton meters (Nm).

## **NOTES**

### TABLE OF CONTENTS

SUBJECT	PAGE NO.
E.1 GLOSSARY	E-1

GLOSSARY E.1

### **ACRONYMS AND ABBREVIATIONS**

Table E-1. Acronyms and Abbreviations

ACRONYM OR ABBREVIATION	DESCRIPTION	
A	Amperes	
AAT	Ambient air temperature	
ABS	Anti-lock braking system	
AC	Alternating current	
ACC	Accessory position on ignition switch	
ACR	Automatic compression release	
AGM	Absorbed glass mat (battery)	
Ah	Ampere-hour	
AIS	Active Intake Solenoid	
AWG	American wire gauge	
B+	Battery voltage	
bar	Bar	
BAS	Bank angle sensor	
ВСМ	Body control module	
вов	Breakout box	
BTDC	Before top dead center	
°C	Celsius (Centigrade)	
CA	California	
CAL	Calibration	
CAN	Controller area network	
сс	Cubic centimeters	
CCA	Cold cranking amps	
CCW	Counterclockwise	
CKP	Crankshaft position	
cm	Centimeters	
cm <sup>3</sup>	Cubic centimeters	
CW	Clockwise	
DC	Direct current	
DLC	Data link connector	
DOM	Domestic	
DOT	Department of Transportation	
DTC	Diagnostic trouble code	
DVOM	Digital volt ohm meter	
ECM	Electronic control module	
ECT	Engine coolant temperature	
ECU	Electronic Control Unit	
EEPROM	Electrically erasable programmable read only memory	
EFI	Electronic fuel injection	
EHCU	Electro Hydraulic Control Unit	
ET	Engine temperature	

Table E-1. Acronyms and Abbreviations

ACRONYM OR ABBREVIATION	DESCRIPTION	
EVAP	Evaporative emissions control system	
°F	Fahrenheit	
FPS	Fuel pressure sensor	
ft	Feet	
ft-lbs	Foot pounds	
fl oz	Fluid ounce	
g	Gram	
gal	Gallon	
GAWR	Gross axle weight rating	
GND	Ground (electrical)	
GPS	Global positioning system	
GVWR	Gross vehicle weight rating	
HCU	Hydraulic control unit	
HDI	Harley-Davidson International	
H-DSSS	Harley-Davidson smart security system	
HFSM	Hands-free security module	
Hg	Mercury	
H02S	Heated oxygen sensor	
hp	Horsepower	
hr	Hour	
IAC	Idle air control	
IAT	Intake air temperature	
IC	Instrument cluster	
ID	Inside diameter	
IGN	Ignition light/key switch position	
in	inch	
in <sup>3</sup>	Cubic inch	
INJ PW	Injector pulse width	
in-lbs	Inch pounds	
JSS	Jiffy stand sensor	
kg	Kilogram	
km	Kilometer	
km/h	Kilometers per hour	
kPa	Kilopascal	
kW	Kilowatt	
L	Liter	
Ib	Pounds	
LCD	Liquid crystal display	
LED	Light emitting diode	
LH	Left hand	
LHCM	Left hand control module	
LP	License plate	
LT	Left	

Table E-1. Acronyms and Abbreviations

ACRONYM OR ABBREVIATION	DESCRIPTION	
mA	Milliampere	
MAP	Manifold absolute pressure	
max	Maximum	
mi	Mile	
min	Minimum	
mL	Milliliter	
mm	Millimeter	
mph	Miles per hour	
ms	Millisecond	
Nm	Newton-meter	
NIM	Navigation interface module	
NiMH	Nickel metal hydride	
N/A	Not applicable	
O2	Oxygen	
OD	Outside diameter	
OEM	Original equipment manufacturer	
oz	Ounce	
P&A	Parts and Accessories	
Part No.	Part number	
PIN	Personal identification number	
psi	Pounds per square inch	
PWM signal	Pulse width modulated signal	
qt	Quart	
RCM	Reverse control module	
RES	Reserve mark on fuel supply valve	
RH	Right hand	
RHCM	Right hand control module	
rpm	Revolutions per minute	
RT	Right	
S	Seconds	
SCFH	Cubic feet per hour at standard conditions	
SDARS	Satellite digital audio radio service	
SPDO	Speedometer	
SPKR	Speaker	
STT	Stop/tail/turn	
TCA	Throttle control actuator	
TDC	Top dead center	
TGS	Twist grip sensor	
TPS	Throttle position sensor	
TSM	Turn signal module	
TSSM	Turn signal/security module	
V	Volt	
VAC	Volts of alternating current	

Table E-1. Acronyms and Abbreviations

ACRONYM OR ABBREVIATION	DESCRIPTION
VDC	Volts of direct current
VIN	Vehicle identification number
VR	Voice recognition
VSS	Vehicle speed sensor
W	Watt
WSS	Wheel speed sensor

PART NUMBER	TOOL NAME	NOTES
94448-82B	SHOCK ADJUSTMENT SPANNER	1.25 SUSPENSION ADJUSTMENTS, Shock Absorber Preload: All Models
98716-87A	STORAGE COVER	1.27 STORAGE, Placing in Storage
99863-01A	GLOBAL BATTERY CHARGER	1.22 BATTERY MAINTENANCE, Storage
A-157C	SNAP-ON BUSHING DRIVER SET	5.12 TRANSMISSION RIGHT CASE BEARINGS, Installation
B-0085	TERMINAL EXTRACTOR	A.22 TYCO MCP SEALED CONNECTOR, Tyco MCP Sealed Connector
B-35758-52A	CUTTER PILOT	3.14 CYLINDER HEAD, Refacing Valve Seats
B-42571	FORK SEAL DRIVER AND DUST BOOT INSTALLER	2.20 FRONT FORK: XR 1200X, Assembly
B-43895-1	REMOVER	5.9 TRANSMISSION REMOVAL AND DISAS- SEMBLY, Transmission Removal From Left Crankcase
B-43985	TRANSMISSION REMOVAL AND INSTALLATION TOOL	5.9 TRANSMISSION REMOVAL AND DISAS- SEMBLY, Transmission Removal From Left Crankcase
B-43985	TRANSMISSION REMOVAL AND INSTALLATION TOOL	5.14 TRANSMISSION INSTALLATION, Installation
B-43985-3	INSTALLER	5.14 TRANSMISSION INSTALLATION, Installation
B-43985-4	GUIDE	5.14 TRANSMISSION INSTALLATION, Installation
B-45520	GEAR DETENT ASSEMBLY AID	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
B-45520	GEAR DETENT ASSEMBLY AID	5.14 TRANSMISSION INSTALLATION, Assembling Crankcases
B-45523	VALVE GUIDE REAMER	3.14 CYLINDER HEAD, Replacing Valve Guides
B-45524	VALVE GUIDE REMOVER/INSTALLER	3.14 CYLINDER HEAD, Replacing Valve Guides
B-45525	VALVE GUIDE HONE	3.14 CYLINDER HEAD, Cleaning and Inspection
B-45525	VALVE GUIDE HONE	3.14 CYLINDER HEAD, Replacing Valve Guides
B-45655	CRANKCASE BEARING REMOVER/INSTALLER	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
B-45655, HD-42720-2, HD-46663	CRANKCASE BEARING REMOVER/INSTALLER WITH ADAPTER	3.19 CRANKCASE, Disassembly
B-45676-A	SPROCKET SHAFT SEAL/SPACER INSTALLER	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
B-45847	CROSS PLATE	5.11 MAIN DRIVE GEAR AND BEARING, Removal
B-45847	CROSS PLATE	5.11 MAIN DRIVE GEAR AND BEARING, Installation
B-45926	CLUTCH SHELL BEARING REMOVER/INSTALLER	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Clutch Shell Bearing Replacement
B-50085	TERMINAL EXTRACTOR	A.17 JAE MX19 SEALED CONNECTOR, JAE MX19 Sealed Connectors
B-50085	TERMINAL EXTRACTOR	A.21 TYCO GET 64 SEALED CONNECTOR, Tyco GET 64 Sealed Connector
B-59000B	OIL LEVEL GAUGE	2.20 FRONT FORK: XR 1200X, Assembly
CJ 114	SNAP-ON BODY DENT PULLER	3.19 CRANKCASE, Disassembly
GA500A	SNAP-ON TERMINAL PICK	A.1 AUTOFUSE UNSEALED ELECTRICAL CON- NECTOR, Autofuse Unsealed Connector Repair
GA500A	SNAP-ON TERMINAL PICK	A.22 TYCO MCP SEALED CONNECTOR, Tyco MCP Sealed Connector
HD-25070	HEAT GUN	4.8 INDUCTION MODULE: XL MODELS, Disassembly
HD-25070	ROBINAIR HEAT GUN	6.33 HANDLEBAR SWITCH ASSEMBLIES, Repair Procedures

PART NUMBER	TOOL NAME	NOTES
HD-25070	HEAT GUN	A.23 SEALED SPLICE CONNECTOR, Sealed Splice Connector Repair
HD-33223-1	CYLINDER COMPRESSION GAUGE	3.5 TROUBLESHOOTING, Compression Test
HD-33416	UNIVERSAL DRIVER HANDLE	2.21 FORK STEM AND BRACKET ASSEMBLY, Cleaning, Inspection and Repair
HD-33446-86	TORQUE PLATE BOLTS	3.15 CYLINDER AND PISTON, Cleaning, Inspection and Repair
HD-33446-B	CYLINDER TORQUE PLATES	3.15 CYLINDER AND PISTON, Cleaning, Inspection and Repair
HD-34623-C	PISTON PIN LOCK RING REMOVER/INSTALLER	3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder and Piston
HD-34623-C	PISTON PIN LOCK RING REMOVER/INSTALLER	3.16 TOP END OVERHAUL: ASSEMBLY, Piston and Cylinder
HD-34736-B	VALVE SPRING COMPRESSOR	3.14 CYLINDER HEAD, Disassembly
HD-34736-B	VALVE SPRING COMPRESSOR	3.14 CYLINDER HEAD, Assembly
HD-34751	VALVE GUIDE CLEANING BRUSH	3.14 CYLINDER HEAD, Cleaning and Inspection
HD-34751	VALVE GUIDE CLEANING BRUSH	3.14 CYLINDER HEAD, Replacing Valve Guides
HD-34751	VALVE GUIDE CLEANING BRUSH	3.14 CYLINDER HEAD, Refacing Valve Seats
HD-34902-7	END CAP	3.19 CRANKCASE, Fitting Pinion Bearings
HD-34902-7	END CAP	3.19 CRANKCASE, Fitting Pinion Bearings
HD-35102	WRIST PIN BUSHING HONE	3.15 CYLINDER AND PISTON, Connecting Rod Bushings
HD-35316-11	RECEIVER CUP	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35316-12	INSTALLER CUP	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-13	BEARING DRIVER	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35316-13	BEARING DRIVER	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-4A	8 INCH BOLT	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35316-4A	8 INCH BOLT	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35316-4A	8 INCH BOLT	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-4A	8 INCH BOLT	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-7	WASHER	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35316-7	WASHER	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-8	BEARING DRIVER	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-9	BEARING DRIVER	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35316-C	MAIN DRIVE GEAR REMOVER AND INSTALLER SET	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-35316-D	MAIN DRIVE GEAR REMOVER AND INSTALLER SET	5.11 MAIN DRIVE GEAR AND BEARING, Removal
HD-35381A	BELT TENSION GAUGE	1.12 DRIVE BELT AND SPROCKETS, Drive Belt Deflection
HD-35457	BLACK LIGHT LEAK DETECTOR	1.28 TROUBLESHOOTING, Lubrication System
HD-35667-A	CYLINDER LEAKDOWN TESTER	3.5 TROUBLESHOOTING, Cylinder Leakage Test
HD-35758-C	NEWAY VALVE SEAT CUTTER SET	3.14 CYLINDER HEAD, Refacing Valve Seats
HD-36583	FORK SEAL AND BUSHING INSTALLATION TOOL	2.19 FRONT FORK: XL MODELS, Assembly

PART NUMBER	TOOL NAME	NOTES
HD-38125-6	PACKARD TERMINAL CRIMP TOOL	A.9 DELPHI METRI-PACK TERMINAL REPAIR, Metri- Pack Terminal Crimps
HD-38125-7	PACKARD TERMINAL CRIMPER	A.9 DELPHI METRI-PACK TERMINAL REPAIR, Metri- Pack Terminal Crimps
HD-38125-7	PACKARD TERMINAL CRIMPER	A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR, Deutsch DTM Sealed Mini Terminal Crimps
HD-38125-8	PACKARD CRIMPING TOOL	A.9 DELPHI METRI-PACK TERMINAL REPAIR, Metri- Pack Terminal Crimps
HD-38125-8	PACKARD CRIMPING TOOL	A.23 SEALED SPLICE CONNECTOR, Sealed Splice Connector Repair
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Removal
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Installation
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Removal
HD-38362	SPORTSTER 5-SPEED SPROCKET LOCKING LINK	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation
HD-38515-91	CLUTCH SPRING FORCING SCREW	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Disassembly
HD-38515-91	CLUTCH SPRING FORCING SCREW	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Assembly
HD-38515-91	CLUTCH SPRING FORCING SCREW	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Disassembly
HD-38515-A	SPRING COMPRESSING TOOL	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Disassembly
HD-38515-A	SPRING COMPRESSING TOOL	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Assembly
HD-38515-A	SPRING COMPRESSING TOOL	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Disassembly
HD-38515-A	SPRING COMPRESSING TOOL	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Assembly
HD-38871	CRANKSHAFT BUSHING PLATE PILOT	3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only
HD-39301-A	STEERING HEAD BEARING RACE REMOVAL TOOL	2.21 FORK STEM AND BRACKET ASSEMBLY, Cleaning, Inspection and Repair
HD-39302	STEERING HEAD BEARING RACE INSTALLATION TOOL	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
HD-39782-A	CYLINDER HEAD SUPPORT STAND	3.14 CYLINDER HEAD, Replacing Valve Guides
HD-39786	CYLINDER HEAD HOLDING FIXTURE	3.14 CYLINDER HEAD, Replacing Valve Guides
HD-39786	CYLINDER HEAD HOLDING FIXTURE	3.14 CYLINDER HEAD, Refacing Valve Seats
HD-39847	REAMER T-HANDLE	3.14 CYLINDER HEAD, Replacing Valve Guides
HD-39964	REAMER LUBRICANT	3.14 CYLINDER HEAD, Replacing Valve Guides
HD-39964	REAMER LUBRICANT	3.15 CYLINDER AND PISTON, Connecting Rod Bushings
HD-39965-A	DEUTSCH TERMINAL CRIMP TOOL	A.14 DEUTSCH DT SEALED TERMINAL REPAIR, Deutsch DT Sealed Terminal Crimps
HD-39969	ULTRA TORCH UT-100	6.11 IGNITION SWITCH, Installation

PART NUMBER	TOOL NAME	NOTES	
HD-39969	ULTRA TORCH UT-100	6.33 HANDLEBAR SWITCH ASSEMBLIES, Repair Procedures	
HD-39969	ULTRA TORCH	A.23 SEALED SPLICE CONNECTOR, Sealed Splice Connector Repair	
HD-41142	FUEL PRESSURE GAUGE	4.18 FUEL PRESSURE TEST, Testing	
HD-41177	FORK HOLDING TOOL	2.20 FRONT FORK: XR 1200X, Disassembly	
HD-41177	FORK HOLDING TOOL	2.20 FRONT FORK: XR 1200X, Assembly	
HD-41183	HEAT SHIELD ATTACHMENT	6.33 HANDLEBAR SWITCH ASSEMBLIES, Repair Procedures	
HD-41183	HEAT SHIELD ATTACHMENT	A.23 SEALED SPLICE CONNECTOR, Sealed Splice Connector Repair	
HD-41417	PROPANE ENRICHMENT KIT	4.19 INTAKE LEAK TEST, Leak Tester	
HD-41475	DEUTSCH TERMINAL REPAIR KIT	A.13 DEUTSCH DT SEALED CONNECTOR, Deutsch DT Sealed Connector Repair	
HD-41475-100	FLAT BLADE L-HOOK	A.13 DEUTSCH DT SEALED CONNECTOR, Deutsch DT Sealed Connector Repair	
HD-41609	AMP MULTI-LOCK CRIMPER	A.20 TYCO 070 MULTILOCK UNSEALED CON- NECTOR, Tyco 070 Multilock Unsealed Connector Repair	
HD-41609	AMP MULTI-LOCK CRIMPER	A.20 TYCO 070 MULTILOCK UNSEALED CON- NECTOR, Tyco 070 Multilock Unsealed Connector Repair	
HD-41675	OIL PRESSURE SENDING UNIT WRENCH	3.3 OIL PRESSURE, Checking Oil Pressure	
HD-41675	OIL PRESSURE SENDING UNIT WRENCH	6.31 OIL PRESSURE SWITCH, Removal	
HD-42310-45	ENGINE SUPPORT CRADLE	5.8 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL, Engine Removal and Disassembly	
HD-42310-45	ENGINE CRADLE	5.15 TRANSMISSION SPROCKET, Removal	
HD-42311	HARLEY-DAVIDSON OIL FILTER WRENCH	1.6 ENGINE OIL AND FILTER, Changing Oil and Filter	
HD-42320-A	PISTON PIN REMOVER	3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder and Piston	
HD-42322	PISTON SUPPORT PLATE	3.13 TOP END OVERHAUL: DISASSEMBLY, Cylinder and Piston	
HD-42322	PISTON SUPPORT PLATE	3.16 TOP END OVERHAUL: ASSEMBLY, Piston and Cylinder	
HD-42326-A	CRANKSHAFT GUIDE TOOL	5.14 TRANSMISSION INSTALLATION, Assembling Crankcases	
HD-42326-B	CRANKSHAFT GUIDE TOOL	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
HD-42579-6	SPROCKET SHAFT ADAPTER	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
HD-42579-A	SPROCKET SHAFT BEARING/SEAL INSTALLATION TOOL	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
HD-42720-2	CRANKCASE BEARING REMOVER/INSTALLER BASE	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase	
HD-42879	ELECTRICAL CRIMPER TOOL	A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR, Deutsch DTM Sealed Solid Barrel Terminal Crimps	
HD-43984	CRANKSHAFT LOCKING TOOL	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XL Models	
HD-44060-C	WHEEL BEARING INSTALLER/REMOVER	2.5 WHEELS, Sealed Wheel Bearings	

PART NUMBER	TOOL NAME	NOTES	
HD-44061	FUEL PRESSURE GAUGE ADAPTER	4.18 FUEL PRESSURE TEST, Testing	
HD-44067-A	HARLEY-DAVIDSON OIL FILTER WRENCH	1.6 ENGINE OIL AND FILTER, Changing Oil and Filte	
HD-45928	TERMINAL REMOVER	A.10 DELPHI MICRO 64 SEALED CONNECTOR, Delphi Micro 64 Sealed Connector Repair	
HD-45929	CRIMPING TOOL	6.4 SPEEDOMETER: XL MODELS, Installation	
HD-45929	TERMINAL CRIMPER	A.10 DELPHI MICRO 64 SEALED CONNECTOR, Delphi Micro 64 Sealed Connector Repair	
HD-45967	SHOP DOLLY	2.27 REAR ENGINE MOUNT/ISOLATOR, Removal	
HD-45967	SHOP DOLLY	3.10 REMOVING ENGINE FROM CHASSIS, Procedure: XL Models	
HD-45967	SHOP DOLLY	3.10 REMOVING ENGINE FROM CHASSIS, Procedure: XR 1200X	
HD-45967	SHOP DOLLY	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
HD-45967	SHOP DOLLY	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
HD-45968	FAT JACK	2.26 FRONT ENGINE MOUNT/ISOLATOR, Removal	
HD-45968	FAT JACK	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation	
HD-45968	FAT JACK	3.10 REMOVING ENGINE FROM CHASSIS, Procedure: XL Models	
HD-45968	FAT JACK	3.10 REMOVING ENGINE FROM CHASSIS, Procedure: XR 1200X	
HD-45968	FAT JACK	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
HD-45968	FAT JACK	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
HD-45968	FAT JACK	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Removal: Domestic Only	
HD-46281	BEARING REMOVER/INSTALLER TOOL	2.23 REAR FORK, Disassembly	
HD-46282	TRANSMISSION SPROCKET HOLDING TOOL	5.15 TRANSMISSION SPROCKET, Installation	
HD-46282-1A	FINAL DRIVE SPROCKET HOLDING TOOL REACTION ADAPTER	5.15 TRANSMISSION SPROCKET, Removal	
HD-46282-1A	SPROCKET HOLDING TOOL ADAPTER	5.15 TRANSMISSION SPROCKET, Installation	
HD-46282-1A	SPROCKET HOLDING TOOL ADAPTER	5.15 TRANSMISSION SPROCKET, Installation	
HD-46282-A	FINAL DRIVE SPROCKET HOLDING TOOL	5.15 TRANSMISSION SPROCKET, Removal	
HD-46283	PRIMARY DRIVE LOCKING TOOL	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Removal	
HD-46283	PRIMARY DRIVE LOCKING TOOL	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Installation	
HD-46283	PRIMARY DRIVE LOCKING TOOL	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation	
HD-46284	ENGINE HOOK	3.10 REMOVING ENGINE FROM CHASSIS, Procedure: XL Models	
HD-46284	ENGINE HOOK	3.10 REMOVING ENGINE FROM CHASSIS, Procedure: XR 1200X	

PART NUMBER	TOOL NAME	NOTES
HD-46284	ENGINE HOOK	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
HD-46285-2	CASE HOLDING FIXTURE	5.14 TRANSMISSION INSTALLATION, Installation
HD-46287	LAPPING TOOL ADAPTER	3.19 CRANKCASE, Lapping Engine Main Bearing Races
HD-46288	MAINSHAFT LOCKNUT WRENCH	5.15 TRANSMISSION SPROCKET, Removal
HD-46288	MAINSHAFT LOCKNUT WRENCH	5.15 TRANSMISSION SPROCKET, Installation
HD-46503	OIL LINE REMOVER, 1/2 INCH	3.12 PRECISION COOLING SYSTEM: XR 1200X, General
HD-46503	OIL LINE REMOVER, 1/2 INCH	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines
HD-47855	INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL: XL MODELS	5.11 MAIN DRIVE GEAR AND BEARING, Assembly
HD-47856	MAIN DRIVE GEAR SEAL INSTALLER KIT	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-47856-1	INSTALLER	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-47856-2	PILOT	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-47856-4	ADAPTER	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-47856-5	LARGE NUT	5.11 MAIN DRIVE GEAR AND BEARING, Installation
HD-48114	TERMINAL REMOVER	A.19 MOLEX MX 150 SEALED CONNECTOR, Molex MX 150 Sealed Connector Repair
HD-48116-A	TEMPERATURE SENSOR SOCKET	4.7 ENGINE TEMPERATURE (ET) SENSOR, Removal
HD-48119	TERMINAL CRIMPER	A.19 MOLEX MX 150 SEALED CONNECTOR, Crimp Terminal to Lead
HD-48262	OXYGEN SENSOR SOCKET	4.12 OXYGEN (O2) SENSOR, Removal
HD-48262	OXYGEN SENSOR SOCKET	4.12 OXYGEN (O2) SENSOR, Installation
HD-48287	TRIPLE TREE WEDGE TOOL	2.20 FRONT FORK: XR 1200X, Removal
HD-48287	TRIPLE TREE WEDGE TOOL	2.20 FRONT FORK: XR 1200X, Installation
HD-48643	INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL: XR 1200X	5.11 MAIN DRIVE GEAR AND BEARING, Assembly
HD-48647	OXYGEN SENSOR SOCKET	4.12 OXYGEN (O2) SENSOR, Removal
HD-48647	OXYGEN SENSOR SOCKET	4.12 OXYGEN (O2) SENSOR, Installation
HD-48650	DIGITAL TECHNICIAN II	4.18 FUEL PRESSURE TEST, General
HD-48650	DIGITAL TECHNICIAN II	6.37 H-DSSS ACTUATION, Fob Assignment
HD-48856-A	AXLE ALIGNMENT PLUGS	1.24 WHEEL ALIGNMENT, Wheel Alignment
HD-48921	REAR WHEEL COMPENSATOR SPROCKET BEARING REMOVER/INSTALLER	C.1 COMPENSATING SPROCKET, Sprocket Bearing
HD-48985	SPOKE TORQUE WRENCH	1.8 TIRES AND WHEELS, Wheel Spokes
HD-48985	SPOKE TORQUE WRENCH	2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels
HD-49096	OIL LINE REMOVER, 3/8 INCH	3.12 PRECISION COOLING SYSTEM: XR 1200X, General
HD-50083	ROD CASE GUIDE SOCKET	2.20 FRONT FORK: XR 1200X, Disassembly
HD-50083	ROD CASE GUIDE SOCKET	2.20 FRONT FORK: XR 1200X, Assembly
HD-50084	FORK CAP WRENCH	2.20 FRONT FORK: XR 1200X, Disassembly
-	· · · · · · · · · · · · · · · · · · ·	

PART NUMBER	TOOL NAME	NOTES	
HD-50084	FORK CAP WRENCH	2.20 FRONT FORK: XR 1200X, Assembly	
HD-50120	UNIVERSAL CRIMPER SET	A.3 DELPHI 100W MICRO-PACK SEALED CON- NECTOR, Crimping Terminals	
HD-50120	UNIVERSAL CRIMPER SET	A.17 JAE MX19 SEALED CONNECTOR, Crimping Terminals	
HD-50120	UNIVERSAL CRIMPER SET	A.18 MOLEX CMC SEALED CONNECTOR, Crimping Terminals	
HD-50120	UNIVERSAL CRIMPER SET	A.21 TYCO GET 64 SEALED CONNECTOR, Crimping Terminals	
HD-50120	UNIVERSAL CRIMPER SET	A.22 TYCO MCP SEALED CONNECTOR, Crimping Terminals	
HD-50120-2	HAND CRIMP FRAME	A.3 DELPHI 100W MICRO-PACK SEALED CON- NECTOR, Crimping Terminals	
HD-50120-2	HAND CRIMP FRAME	A.17 JAE MX19 SEALED CONNECTOR, Crimping Terminals	
HD-50120-2	HAND CRIMP FRAME	A.18 MOLEX CMC SEALED CONNECTOR, Crimping Terminals	
HD-50120-2	HAND CRIMP FRAME	A.21 TYCO GET 64 SEALED CONNECTOR, Crimping Terminals	
HD-50120-3	JAE DIE	A.18 MOLEX CMC SEALED CONNECTOR, Crimping Terminals	
HD-50120-4	JAE DIE	A.18 MOLEX CMC SEALED CONNECTOR, Crimping Terminals	
HD-50120-6	JAE DIE	A.17 JAE MX19 SEALED CONNECTOR, Crimping Terminals	
HD-50120-7	DELPHI 100W MICRO-PACK SEALED DIE	A.3 DELPHI 100W MICRO-PACK SEALED CON- NECTOR, Crimping Terminals	
HD-50120-7	TYCO GET 64 DIE	A.21 TYCO GET 64 SEALED CONNECTOR, Crimping Terminals	
HD-50120-8	TYCO MCP DIE	A.22 TYCO MCP SEALED CONNECTOR, Crimping Terminals	
HD-50423	0.6 MM TERMINAL EXTRACTOR TOOL	A.18 MOLEX CMC SEALED CONNECTOR, Molex CMC Sealed Connectors	
HD-50424	1.5 MM TERMINAL EXTRACTOR TOOL	A.18 MOLEX CMC SEALED CONNECTOR, Molex CMC Sealed Connectors	
HD-59000-B	OIL LEVEL GAUGE	2.19 FRONT FORK: XL MODELS, Fill with Fork Oil	
HD-94681-80	SPOKE NIPPLE WRENCH	1.8 TIRES AND WHEELS, Wheel Spokes	
HD-94681-80	SPOKE NIPPLE WRENCH	1.8 TIRES AND WHEELS, Wheel Spokes	
HD-94681-80	SPOKE NIPPLE WRENCH	2.7 CHECKING AND TRUING WHEELS, Laced Wheel Rim Offset	
HD-94681-80	SPOKE NIPPLE WRENCH	2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels	
HD-94800-26A	CONNECTING ROD BUSHING REAMER	3.15 CYLINDER AND PISTON, Connecting Rod Bushings	
HD-94803-67	REAR INTAKE CAM GEAR BUSHING REAMER	3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only	
HD-94804-57	ROCKER ARM BUSHING REAMER	3.14 CYLINDER HEAD, Replacing Rocker Arm Bushings	
	ı	I .	

PART NUMBER	TOOL NAME	NOTES
HD-94812-1	REAMER	3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only
HD-94812-87	PILOT	3.18 GEARCASE: XL MODELS, Bushing Reaming: XL Only
HD-95637-46B	BEARING RACE PULLER	5.11 MAIN DRIVE GEAR AND BEARING, Disassembly
HD-95760-69A	BUSHING AND BEARING PULLER	3.18 GEARCASE: XL MODELS, Bushing Inspection and Removal: XL Only
HD-95760-69A	BUSHING AND BEARING PULLER	5.12 TRANSMISSION RIGHT CASE BEAR-INGS, Removal
HD-95765-69A	1/2 INCH COLLET	5.12 TRANSMISSION RIGHT CASE BEAR-INGS, Removal
HD-95952-33C	CONNECTING ROD CLAMPING TOOL	3.15 CYLINDER AND PISTON, Connecting Rod Bushings
HD-95970-32D	CONNECTING ROD BUSHING REMOVER/INSTALLER	3.15 CYLINDER AND PISTON, Connecting Rod Bushings
HD-96333-51E	PISTON RING COMPRESSOR	3.16 TOP END OVERHAUL: ASSEMBLY, Piston and Cylinder
HD-96710-40C	CRANKCASE MAIN BEARING LAPPING TOOL	3.19 CRANKCASE, Lapping Engine Main Bearing Races
HD-96718-87	CRANKCASE MAIN BEARING LAP	3.19 CRANKCASE, Lapping Engine Main Bearing Races
HD-96796-47	VALVE SPRING TESTER	3.14 CYLINDER HEAD, Cleaning and Inspection
HD-96921-125	OIL PRESSURE GAUGE ADAPTER	3.3 OIL PRESSURE, Checking Oil Pressure
HD-96921-52D	OIL PRESSURE TEST GAUGE KIT	3.3 OIL PRESSURE, Checking Oil Pressure
HD-96925-58	OIL PRESSURE GAUGE ADAPTER	3.3 OIL PRESSURE, Checking Oil Pressure
HD-99500-80	WHEEL TRUING AND BALANCING STAND	2.7 CHECKING AND TRUING WHEELS, Cast Wheel Runout
HD-99500-80	WHEEL TRUING STAND	2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels
HD-99500-80	WHEEL TRUING STAND	2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels
J-21686-12	FORCING SCREW	3.19 CRANKCASE, Fitting Pinion Bearings
J-21686-12	FORCING SCREW	3.19 CRANKCASE, Fitting Pinion Bearings
J-5586-A	TRANSMISSION SHAFT RETAINING RING PLIERS	3.19 CRANKCASE, Disassembly
J-5586-A	TRANSMISSION SHAFT RETAINING RING PLIERS	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
J-5586-A	TRANSMISSION SHAFT RETAINING RING PLIERS	5.9 TRANSMISSION REMOVAL AND DISAS- SEMBLY, Mainshaft Disassembly
J-7830-5	BRIDGE	3.19 CRANKCASE, Fitting Pinion Bearings
J-7830-5	BRIDGE	3.19 CRANKCASE, Fitting Pinion Bearings
PFSX916	SNAP-ON WRENCH	4.13 EXHAUST SYSTEM: XL MODELS, General
PR-36	SNAP-ON SNAP RING PLIERS	5.13 TRANSMISSION LEFT CASE BEARINGS, Removal
SNAP-ON BB200A	BASIC VACUUM BRAKE BLEEDER	2.17 BLEEDING BRAKES, Procedure
SNAP-ON TOOLS STOCK NO. CJ950	BEARING SEPARATOR	3.19 CRANKCASE, Fitting Pinion Bearings
SNAP-ON TOOLS STOCK NO. CJ950	BEARING SEPARATOR	3.19 CRANKCASE, Fitting Pinion Bearings

PART NUMBER	TOOL NAME	NOTES
SNAP-ON TT600-3	SNAP-ON PICK	A.7 DELPHI 630 METRI-PACK UNSEALED CON- NECTOR, Delphi 630 Metri-Pack Unsealed Connector Repair
SNAP-ON TT600-3	SNAP-ON PICK	A.20 TYCO 070 MULTILOCK UNSEALED CON- NECTOR, Tyco 070 Multilock Unsealed Connector Repair

Mana				
FASTENER	TORQUE		NOTES	
Air box to bracket fasteners: XR 1200X	36-60 in-lbs	4.1-6.7 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank	
Air cleaner breather screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm	4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V	
Air cleaner breather screw	84-120 <b>in-lbs</b>	9.5-13.6 Nm	4.3 AIR CLEANER ASSEMBLY, XL 1200V	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	1.5 MAINTENANCE SCHEDULE, General	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	1.7 AIR FILTER, XL Models except XL 1200V	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	1.7 AIR FILTER, XL 1200V	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V	
Air cleaner cover screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL 1200V	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	1.5 MAINTENANCE SCHEDULE, General	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	1.7 AIR FILTER, XL Models except XL 1200V	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	1.7 AIR FILTER, XL 1200V	
Air filter screw	40-60 <b>in-lbs</b>	4.5-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL Models except XL 1200V	
Air filter screw	40-60 in-lbs	4.5-6.8 Nm	4.3 AIR CLEANER ASSEMBLY, XL 1200V	
Alternator rotor to sprocket screw	120-140 <b>in-lbs</b>	13.6-15.8 Nm	6.24 ALTERNATOR, Assembly and Installation	
Alternator stator mounting screw	30-40 in-lbs	3.4-4.5 Nm	6.24 ALTERNATOR, Assembly and Installation	
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.5 WHEELS, General	
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.5 WHEELS, Front Wheel	
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation	
Axle, front, nut	60-65 ft-lbs	81-88 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation	
Axle, front, pinch screw: XL Models	21-27 ft-lbs	28.5-36.6 Nm	2.5 WHEELS, Front Wheel	
Axle, front, pinch screw: XL Models	21-27 ft-lbs	28.5-36.6 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation	
Axle, front, pinch screw: XR 1200X	41-48 ft-lbs	55.6-65.1 Nm	2.5 WHEELS, Front Wheel	
Axle, front, pinch screw: XR 1200X	41-48 ft-lbs	55.6-65.1 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	1.12 DRIVE BELT AND SPROCKETS, Drive Belt Deflection	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	1.24 WHEEL ALIGNMENT, Wheel Alignment	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	2.5 WHEELS, General	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	2.5 WHEELS, Rear Wheel	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	5.6 DRIVE BELT, Drive Belt: XL Models	
Axle, rear, nut	95-105 ft-lbs	129-142 Nm	5.6 DRIVE BELT, Drive Belt: XR 1200X	
Battery cable connector nut	55-75 in-lbs	6.2-8.5 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection	
Battery negative cable to crankcase nut	55-75 <b>in-lbs</b>	6.2-8.5 Nm	6.8 BATTERY CABLES, Installation	
Battery negative terminal screw	60-70 in-lbs	6.8-7.9 Nm	1.5 MAINTENANCE SCHEDULE, General	
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection	
Battery negative terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	6.8 BATTERY CABLES, Installation	

FASTENER	TORQUE VALUE		NOTES
Battery positive cable to starter post locknut	60-85 <b>in-lbs</b>	6.8-9.6 Nm	6.8 BATTERY CABLES, Installation
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection
Battery positive terminal screw	60-70 <b>in-lbs</b>	6.8-7.9 Nm	6.8 BATTERY CABLES, Installation
Battery strap screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	1.22 BATTERY MAINTENANCE, Battery Installation and Connection
Battery strap screw	36-60 in-lbs	4.1-6.8 Nm	6.8 BATTERY CABLES, Installation
Battery tray mounting fasteners	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.9 BATTERY TRAY, Installation
Belt guard screw: XL Models	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Belt Guard: XL Models
Belt guard screw: XR 1200X	72-96 <b>in-lbs</b>	8.1-10.8 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Belt Guard: XR 1200X
Brake caliper, front, bridge bolt	12-18 ft-lbs	16.9-24.5 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Assembly
Brake caliper, front, mounting bolt	28-38 ft-lbs	38.0-51.6 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Brake caliper, front, mounting bolt	28-38 ft-lbs	38.0-51.6 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Assembly
Brake caliper bleeder valve	35-61 <b>in-lbs</b>	4.0-6.9 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Assembly
Brake caliper bleeder valve	35-61 in-lbs	4.0-6.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake caliper bleeder valve	35-61 in-lbs	4.0-6.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Brake caliper bleeder valve	35-61 in-lbs	4.0-6.9 Nm	2.17 BLEEDING BRAKES, Procedure
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel/Cast front wheel
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel
Brake disc, front, screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel/Laced front wheel
Brake disc, rear, screw	30-45 ft-lbs	40.7-61.1 Nm	2.5 WHEELS, Rear Wheel
Brake hose clamp to battery tray screw	30-40 in-lbs	3.4-4.5 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake hose clamp to battery tray screw	30-40 in-lbs	3.4-4.5 Nm	6.9 BATTERY TRAY, Installation
Brake hose clamp to frame, rear, screw	30-40 in-lbs	3.4-4.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Brake hose clamp to rear fork screw	30-40 <b>in-lbs</b>	3.4-4.5 Nm	1.12 DRIVE BELT AND SPROCKETS, Drive Belt Deflection
Brake hose clamp to rear fork screw	30-40 in-lbs	3.4-4.5 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake line/switch, rear, tee bracket screw: XL Models	72-120 <b>in-lbs</b>	8.14-13.6 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake line/switch, rear, tee bracket screw: XR 1200X	17-22 <b>in-lbs</b>	1.9-2.5 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation

FASTENER	NOTES		
	TORQUE		
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.12 REAR BRAKE MASTER CYLINDER: XR 1200X, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Brake line banjo bolt	20-25 ft-lbs	27.1-33.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Brake line clamp screw, fork bracket	45-65 <b>in-lbs</b>	5.1-7.4 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line clamp screw, steering stem, XL Models	120-168 <b>in-lbs</b>	13.6-19.0 Nm	2.16 BRAKE LINES, Front Brake Line
Brake line clamp screw, steering stem, XR 1200X	96-144 in-lbs	11-16 Nm	2.16 BRAKE LINES, Front Brake Line
Brake master cylinder, front, reservoir cover screw	9-17 <b>in-lbs</b>	1.0-2.0 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installation
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front
Brake master cylinder, front, reservoir cover screws	9-17 in-lbs	1.0-2.0 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Front
Brake master cylinder, front, reservoir cover screws	9-17 in-lbs	1.0-2.0 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Installation
Brake master cylinder, front, reservoir cover screws	9-17 in-lbs	1.0-2.0 Nm	2.17 BLEEDING BRAKES, Procedure
Brake master cylinder, front, reservoir cover screws	9-17 <b>in-lbs</b>	1.0-2.0 Nm	1.5 MAINTENANCE SCHEDULE, General
Brake master cylinder, rear, mounting screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake master cylinder, rear, mounting screw: XR 1200X	72-96 in-lbs	8.1-10.9 Nm	2.12 REAR BRAKE MASTER CYLINDER: XR 1200X, Installation
Brake master cylinder, rear, pushrod nut: XR 1200X	130-173 <b>in-lbs</b>	14.7-19.6 Nm	2.12 REAR BRAKE MASTER CYLINDER: XR 1200X, Assembly
Brake master cylinder, rear, pushrod shoulder nut	130-173 <b>in-lbs</b>	14.7-19.6 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Assembly
Brake master cylinder clamp, front, screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Brake master cylinder mounting bracket, rear, screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation
Brake master cylinder mounting bracket, rear, screw: XL Models	17-22 ft-lbs	23.1-29.9 Nm	2.11 REAR BRAKE MASTER CYLINDER: XL MODELS, Installation

FASTENER	TORQUE	VALUE	NOTES
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.13 REAR BRAKE MASTER CYLINDER RESERVOIR, Installation: XL Models
Brake master cylinder reservoir, rear, mounting screw	36-60 in-lbs	4.1-6.8 Nm	2.13 REAR BRAKE MASTER CYLINDER RESERVOIR, Installation: XR 1200X
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.23 REAR FORK, Installation
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Brake master cylinder reservoir, rear, mounting screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	6.21 REAR STOP LAMP SWITCH, Replacement
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Front
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installing Brake Pads in Caliper
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	2.10 FRONT BRAKE CALIPER: XR 1200X, Assembly
Brake pad pin	131-173 in-lbs	14.8-19.6 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Front
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	1.16 BRAKE PADS AND DISCS: XL MODELS, Brake Pad Replacement: Rear
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	1.17 BRAKE PADS AND DISCS: XR 1200X, Brake Pad Replacement: Rear
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	2.9 FRONT BRAKE CALIPER: XL MODELS, Installing Brake Pads in Caliper
Brake pad pin plug	18-25 <b>in-lbs</b>	2.0-2.9 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Brake pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to bell crank screw	120-180 in-lbs	13.6-20.4 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to bell crank screw	120-180 in-lbs	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to bell crank screw	120-180 in-lbs	13.6-20.4 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation

FASTENER	TORQUE	VALUE	NOTES
Brake rod to brake pedal screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Brake rod to brake pedal screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Breather screw: XL Models	35-55 <b>in-lbs</b>	4.0-6.2 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers
Caliper bolt pin: XL Models	15-18 ft-lbs	19.6-24.5 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Caliper to mouting bracket: XL Models	87-130 <b>in-lbs</b>	9.8-14.7 Nm	2.14 REAR BRAKE CALIPER: XL MODELS, Installation
Chain tensioner nut	20-25 ft-lbs	27.1-33.9 Nm	1.5 MAINTENANCE SCHEDULE, General
Check valve housing fastener: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly
Check valve housing fastener: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X
Check valve plug fitting: XR 1200X	15-21 ft-lbs	20.3-28.5 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly
CKP screw	90-120 <b>in-lbs</b>	10.3-13.6 Nm	6.22 CRANK POSITION SENSOR (CKP), Installation
Clutch cable adjuster jamnut	120 <b>in-lbs</b>	13.6 Nm	1.11 CLUTCH, Adjustment
Clutch cable fitting	36-108 <b>in-lbs</b>	4.1-12.2 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Clutch cable fitting	36-108 in-lbs	4.1-12.2 Nm	5.3 PRIMARY COVER, Installation
Clutch cable guide: XL 1200C/C ANV/CP/CA/CB	45-65 <b>in-lbs</b>	4.0-7.3 Nm	6.14 HEADLAMP, Headlamp Mounts
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.5 MAINTENANCE SCHEDULE, General
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.10 TRANSMISSION LUBRICANT, Transmission Lubrication
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.3-13.6 Nm	1.10 TRANSMISSION LUBRICANT, Transmission Lubrication
Clutch inspection cover screws	90-120 in-lbs	10.3-13.6 Nm	1.11 CLUTCH, Adjustment
Clutch inspection cover screws	90-120 <b>in-lbs</b>	10.2-13.6 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Clutch inspection cover screws	90-120 in-lbs	10.3-13.6 Nm	5.3 PRIMARY COVER, Installation
Clutch lever anti-rattle spring screw	8-13 <b>in-lbs</b>	0.9-1.5 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Coil mounting bracket screw	35-45 in-lbs	4.0-5.1 Nm	6.13 IGNITION COIL, Installation
Coil mounting screw	24-72 in-lbs	2.7-8.1 Nm	6.13 IGNITION COIL, Installation
Coil mounting screw	24-72 in-lbs	2.7-8.1 Nm	6.13 IGNITION COIL, Installation
Converter module bracket fasteners, rear lighting	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.20 REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM), Installation
Countershaft retaining screw	33-37 ft-lbs	44.8-50.2 Nm	5.14 TRANSMISSION INSTALLATION, Shifter Shaft Installation

FASTENER	TORQUI	E VALUE	NOTES
Crankcase fastener	15-19 ft-lbs	20.3-25.8 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
Crankcase fastener	15-19 ft-lbs	20.3-25.8 Nm	5.14 TRANSMISSION INSTALLATION, Assembling Crankcases
Cylinder headbolts, 1st torque	96-120 <b>in-lbs</b>	11-14 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/See procedure
Cylinder headbolts, 1st torque	96-120 <b>in-lbs</b>	11-14 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/See procedure
Cylinder headbolts, final torque	13-15 ft-lbs	18-20 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/Plus 90 degrees. See procedure
Cylinder headbolts, final torque	13-15 ft-lbs	18-20 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Cylinder Head/Plus 90 degrees. See procedure
Cylinder head exhaust port nut	96-120 <b>in-lbs</b>	10.9-13.6 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Cylinder head exhaust port nut	96-120 <b>in-lbs</b>	10.9-13.6 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Cylinder head oil feed flare fitting: XR 1200X	22-26 ft-lbs	29.8-35.3 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly/Apply LOCTITE 243 MEDIUM STRENGTH THREAD- LOCKER AND SEALANT (blue)
Cylinder head oil feed flare fitting: XR 1200X	22-26 ft-lbs	29.8-35.3 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Cylinder head oil feed line flare nut: XR 1200X	13-17 ft-lbs	18-23 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Feed Assembly
Cylinder head oil feed line flare nut: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Cylinder stud	120-240 <b>in-lbs</b>	13.6-27.1 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
Debris deflector screw: XL Models	36-60 <b>in-lbs</b>	4.1-6.8 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Debris Deflector: XL Models
Debris deflector screw: XR 1200X	72-96 <b>in-lbs</b>	8.1-10.8 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Debris Deflector: XR 1200X
ECM caddy fastener	72-96 <b>in-lbs</b>	8.1-10.8 Nm	6.9 BATTERY TRAY, Installation
ECM caddy fastener	72-96 <b>in-lbs</b>	8.1-10.8 Nm	6.20 REAR LIGHTING CONVERTER MODULE: XL 883N, XL 1200X/V (DOM), Installation
ECM caddy fastener	72-96 <b>in-lbs</b>	8.1-10.8 Nm	6.27 MAIN WIRING HARNESS, Installation
ECM cover fastener: XL Models	30-60 <b>in-lbs</b>	3.4-6.8 Nm	6.6 ELECTRONIC CONTROL MODULE (ECM), Installation
ECM fasteners: XR 1200X	18-22 <b>in-lbs</b>	2.0-2.5 Nm	6.6 ELECTRONIC CONTROL MODULE (ECM), Installation
Engine mount, front, bolt	95-105 ft-lbs	129-142 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Engine mount, front, bolt	95-105 ft-lbs	129-142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Engine mount, front, bolt	95-105 ft-lbs	129 -142 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Engine sprocket bolt: XR 1200X	155-165 ft-lbs	210.0-224.0 Nm	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation

FASTENER	TORQUE	VALUE	NOTES
Engine sprocket nut: XL Models	240-260 ft-lbs	326-353 Nm	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Installation
ET sensor	120-168 <b>in-lbs</b>	13.6-19.0 Nm	4.7 ENGINE TEMPERATURE (ET) SENSOR, Installation
EVAP canister clip mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
EVAP canister guard screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
EVAP canister mounting bracket screw	17-22 ft-lbs	23.1-29.9 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
EVAP canister mounting bracket screw	17-22 ft-lbs	23.1-29.9 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
Exhaust clamp, lower nut: XR 1200X	30-33 ft-lbs	40.7-44.7 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Exhaust flange nut: XR 1200X	96-120 <b>in-lbs</b>	10.8-13.6 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation/SPECIAL SEQUENCE TO TIGHTEN
Exhaust heat shield clamps	20-40 in-lbs	2.3-4.5 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Exhaust heat shield clamps	20-40 in-lbs	2.3-4.5 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Exhaust pipe clamp bracket fastener: XL Models	30-33 ft-lbs	40.7-44.8 Nm	5.6 DRIVE BELT, Drive Belt: XL Models
Exhaust pipe clamp bracket fastener: XR 1200X	30-33 ft-lbs	40.7-44.8 Nm	5.15 TRANSMISSION SPROCKET, Installation
Exhaust pipe clamp bracket screw	30-33 ft-lbs	40.7-44.7 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Exhaust pipe clamp bracket screw	30-33 ft-lbs	40.7-44.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Exhaust pipe clamp bracket screw: XL Models	30-33 ft-lbs	40.7-44.8 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Exhaust pipe clamp nut: XL Models	20-30 ft-lbs	27.1-40.7 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Fender, inner screw: XR 1200X	72-120 <b>in-lbs</b>	8.1-13.6 Nm	2.35 REAR FENDER: XR 1200X, Installation
Fender, rear, mounting fastener	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L
Fender, rear, mounting fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 1200C/C ANV/CP/CA/CB
Fender brace, rear, screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Fender brace, rear, screw	20-25 <b>in-lbs</b>	2.3-2.8 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Fender bracket to forks, front: XR 1200X	15-19 ft-lbs	21-25 Nm	2.31 FRONT FENDER, All Models
Fender support, rear, screw	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Fender support, rear, screw: XL 883N	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Fender to bracket, front: XR 1200X	30-60 in-lbs	4.1-6.8 Nm	2.31 FRONT FENDER, All Models

FASTENER	TORQUI	E VALUE	NOTES
Fender to fork brace, front: XL 1200X	30-42 in-lbs	3.4-4.7 Nm	2.31 FRONT FENDER, All Models/Tighten in cross pattern.
Fender to forks, front: XL except XL 1200X	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.31 FRONT FENDER, All Models
Filler housing screws	40-45 in-lbs	4.5-5.1 Nm	4.5 FUEL TANK: XR 1200X, Assemble Fuel Tank
Footrest bracket fastener: XR 1200X	45-50 ft-lbs	61-68 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Footrest clevis fastener: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Right Footrest and Rear Brake Pedal Assembly
Footrest clevis fastener: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.23 REAR FORK, Installation
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Footrest mount fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Footrest mount fastener	45-50 ft-lbs	61-68 Nm	5.15 TRANSMISSION SPROCKET, Installation
Footrest wear peg	72-108 in-lbs	8.1- 12.2 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest wear peg	72-108 in-lbs	8.1- 12.2 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Footrest wear peg	72-108 in-lbs	8.1-12.2 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Right Footrest and Rear Brake Pedal Assembly
Footrest wear peg	72-108 in-lbs	8.1-12.2 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Right Footrest and Rear Brake Pedal Assembly
Footrest wear peg	72-108 <b>in-lbs</b>	8.1-12.2 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	2.19 FRONT FORK: XL MODELS, Installation
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	2.19 FRONT FORK: XL MODELS, Installation

FASTENER	TORQUE VALUE		NOTES
Fork, front, bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	2.20 FRONT FORK: XR 1200X, Installation
Fork, front, oil drain screw: XL 883N/R	13-17 <b>in-lbs</b>	1.5-2.0 Nm	2.19 FRONT FORK: XL MODELS, Changing Fork Oil: XL Models
Fork, front, stem bolt, 1st torque	23-27 ft-lbs	31.2-36.6 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Fork, front, stem bolt, final torque	72-96 <b>in-lbs</b>	8.1-10.9 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Fork, lower front, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	2.23 REAR FORK, Installation
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Fork, rear, pivot/engine mount bolt	60-70 ft-lbs	81.4-95.0 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Fork brace to forks: XL 1200X	18-22 ft-lbs	25-30 Nm	2.31 FRONT FENDER, All Models
Fork bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	1.19 STEERING HEAD BEARINGS, Fall-Away
Fork bracket pinch screw	30-35 ft-lbs	40.7-47.5 Nm	6.18 FRONT TURN SIGNALS, XL 1200X
Fork cap to outer tube: XR 1200X	21-29 ft-lbs	29-39 Nm	2.20 FRONT FORK: XR 1200X, Assembly
Fork piston rod hex nut: XR 1200X	19-22 ft-lbs	26-30 Nm	2.20 FRONT FORK: XR 1200X, Assembly
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm	2.19 FRONT FORK: XL MODELS, Changing Fork Oil: XL Models
Fork slider tube cap	22-58 ft-lbs	29.9-78.7 Nm	2.19 FRONT FORK: XL MODELS, Installation
Fork slider tube fastener: XL Models	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.19 FRONT FORK: XL MODELS, Assembly
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	1.19 STEERING HEAD BEARINGS, Fall-Away
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Fork stem pinch bolt	30-35 ft-lbs	40.7-47.5 Nm	2.21 FORK STEM AND BRACKET ASSEMBLY, Assembly and Installation
Fuel hose retaining bracket screw	60 <b>in-lbs</b>	6.8 Nm	4.15 FUEL INJECTORS, Installation
Fuel pump bracket mounting screw	19-36 in-lbs	2.1-4.1 Nm	4.16 FUEL PUMP, Assembly
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm	1.5 MAINTENANCE SCHEDULE, General
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm	4.16 FUEL PUMP, Installation
Fuel pump module mounting screw	40-45 in-lbs	4.5-5.1 Nm	4.17 FUEL FILTER ELEMENT, Installation
Fuel tank cover screw: XR 1200X	24-30 <b>in-lbs</b>	2.7-3.4 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank
Fuel tank fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank
Fuel tank fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm	4.5 FUEL TANK: XR 1200X, Installing Fuel Tank
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm	4.4 FUEL TANK: XL MODELS, Installing Fuel Tank
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm	4.8 INDUCTION MODULE: XL MODELS, Installation
Fuel tank fasteners: XL Models	15-20 ft-lbs	20.3-27.1 Nm	4.15 FUEL INJECTORS, Installation
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X

FASTENER	TORQUE VALUE		NOTES
Fuel tank mounting screw	15-20 ft-lbs	20.4-27.1 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair
Gearcase cover fastener	90-120 in-lbs	10.2-13.6 Nm	3.21 OIL PUMP: XR 1200X, Assembly
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XL Models
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X
Gearcase cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X
Gearcase housing plug	108-156 in-lbs	12.2-17.6 Nm	3.21 OIL PUMP: XR 1200X, Assembly
Gear detent assembly screw	90-110 <b>in-lbs</b>	10.2-12.4 Nm	5.14 TRANSMISSION INSTALLATION, Installation
Gear shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Gear shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm	5.3 PRIMARY COVER, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	1.5 MAINTENANCE SCHEDULE, General
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	2.30 HANDLEBAR, Installation
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 883R/L/N, XL 1200X/V, XL 1200CP/CB with Mini-Ape Handlebar/XL883N - Tighten rear first, front second.
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 883R/L/N, XL 1200X/V, XL 1200CP/CB with Mini-Ape Handlebar/Tighten rear first, front second: XL883N.
Handlebar clamp screw	12-18 ft-lbs	16.3-24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XR 1200X
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Handlebar control lever clamp screw	108-132 in-lbs	12.2-14.9 Nm	2.30 HANDLEBAR, Installation
Handlebar control lever clamp screw	108-132 <b>in-lbs</b>	12.2-14.9 Nm	6.34 RIGHT HANDLEBAR SWITCHES, Installation
Handlebar control lever clamp screw	108-132 in-lbs	12.2-14.9 Nm	6.35 LEFT HANDLEBAR SWITCHES, Installation
Handlebar riser bolt, lower	30-40 ft-lbs	40.7-54.3 Nm	2.30 HANDLEBAR, Installation
Handlebar riser bolt, lower	30-40 ft-lbs	40.7-54.3 Nm	2.30 HANDLEBAR, Installation
Handlebar riser clamp screw	12-18 ft-lbs	16.3 -24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 1200C/C ANV/CP/CA except with Mini-Ape Handlebar/XL1200C

FASTENER	TORQUE	EVALUE	NOTES
Handlebar riser clamp screw	12-18 ft-lbs	16.3 -24.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 1200C/C ANV/CP/CA except with Mini-Ape Handlebar/XL1200C
Handlebar riser cover screw	8-12 <b>in-lbs</b>	0.9-1.4 Nm	2.30 HANDLEBAR, Installation
Handlebar riser cover screw	8-12 <b>in-lbs</b>	0.9-1.4 Nm	6.15 INDICATOR LAMP MODULE, Replacement: XL 1200C/C ANV/CP/CA except with Mini-Ape Handlebar/XL1200C
Headlamp assembly: XL 1200X	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp assembly: XL 1200X	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp clamp nut: XL 883L/N/R, XR 1200X	120-240 <b>in-lbs</b>	14-27 Nm	1.26 HEADLAMP ALIGNMENT, Headlamp: Adjustment
Headlamp clamp nut: XL 883L/N/R, XR 1200X	120-240 <b>in-lbs</b>	14-27 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp horizontal adjustment: XL 1200X/C/C ANV/CP/CA/CB/V	30-35 ft-lbs	40.7-47.5 Nm	1.26 HEADLAMP ALIGNMENT, Headlamp: Adjustment
Headlamp mount: XL 1200V/C/CP/CA/CB	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp mount: XL 1200X	30-35 ft-lbs	41-47 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp upper bracket fasteners: XL 883L/R/N, XR 1200X	120-192 <b>in-lbs</b>	14-22 Nm	6.14 HEADLAMP, Headlamp Mounts
Headlamp vertical adjustment: XL 1200X/C/C ANV/CP/CA/CB/V	30-35 ft-lbs	40.7-47.5 Nm	1.26 HEADLAMP ALIGNMENT, Headlamp: Adjustment
Headlamp visor: XL 1200C/C ANV/CP/CA/CB	120-192 <b>in-lbs</b>	14-22 Nm	6.14 HEADLAMP, Headlamp Mounts
Horn, side mounted, acorn nut	60-180 <b>in-lbs</b>	6.8-20.4 Nm	6.32 HORN, Replacement: Side Mount
Horn, side mounted, stud nut	80-100 <b>in-lbs</b>	9.0-11.3 Nm	6.32 HORN, Replacement: Side Mount
Horn mounting screw	36-48 in-lbs	4.1-5.4 Nm	6.32 HORN, Replacement: Front Mount
Hub plate mounting screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Front Wheel/XL 883N
IAC mounting screw: XL models	60 in-lbs	6.8 Nm	4.10 IDLE AIR CONTROL (IAC), Installation: XL Models
IAC mounting screw: XL Models	60 in-lbs	6.8 Nm	4.8 INDUCTION MODULE: XL MODELS, Assembly
IAC mounting screw: XR 1200X	60 in-lbs	6.8 Nm	4.9 INDUCTION MODULE: XR 1200X, Assembly
IAC mounting screw: XR 1200X	60 in-lbs	6.8 Nm	4.10 IDLE AIR CONTROL (IAC), Installation: XR 1200X
Idler pulley bracket flanged nut: XR 1200X	33-35 ft-lbs	44.7-47.5 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Idler pulley fastener: XR 1200X	70-80 ft-lbs	95-109 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Ignition switch bracket screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.28 ELECTRICAL CADDIES, Wire Harness Caddy: XL Models
Ignition switch mounting screw	34-45 in-lbs	4.0-5.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Ignition switch mounting screw	34-45 <b>in-lbs</b>	4.0-5.1 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Ignition switch mounting screw	35-45 in-lbs	4.0-5.1 Nm	6.11 IGNITION SWITCH, Installation
Ignition switch mounting screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.28 ELECTRICAL CADDIES, Wire Harness Caddy: XR 1200X

FASTENER	TORQUI	E VALUE	NOTES
Induction module cable bracket screw: XL Models	60 <b>in-lbs</b>	6.8 Nm	4.8 INDUCTION MODULE: XL MODELS, Assembly
Induction module cover to cylinder head fastener: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Induction module cover to cylinder head fastener: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X
Induction module cover to cylinder head sockethead bolts: XR 1200X	20-24 ft-lbs	27.1-32.5 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Induction module cover to induction module fastener: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Induction module cover to induction module fastener: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Induction module cover to induction module fastener: XR 1200X	84-108 in-lbs	9.5-12.2 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X
Induction module cover to wire form fastener: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Induction module cover to wire form fastener: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Induction module mounting bracket screw: XL models	90-120 <b>in-lbs</b>	10.2-13.6 Nm	4.8 INDUCTION MODULE: XL MODELS, Installation
Induction module screw: XL models	35 <b>in-lbs</b>	4.0 Nm	4.8 INDUCTION MODULE: XL MODELS, Assembly
Induction module screw: XL Models	35 <b>in-lbs</b>	4.0 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XL Models
Intake manifold mounting screw: XL models	96-120 <b>in-lbs</b>	10.9-13.6 Nm	4.8 INDUCTION MODULE: XL MODELS, Installation
Intake manifold mounting screw: XR 1200X	90-120 <b>in-lbs</b>	10.3-13.6 Nm	4.9 INDUCTION MODULE: XR 1200X, Installation
Interconnect bracket to frame fastener: XR 1200X	30-33 ft-lbs	40.7-44.7 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Isolator, front, mounting bracket screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Isolator, front, mounting bracket screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Isolator mount, front, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Isolator mount, front, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Isolator mount, rear, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Isolator mount, rear, screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
JSS screw	96-120 <b>in-lbs</b>	10.9-13.6 Nm	6.29 JIFFY STAND SENSOR (JSS): INTERNA- TIONAL MODELS, Installation

FASTENER	TORQUE	VALUE	NOTES
License plate, rear, keps nut, XL 1200C/C ANV/CP/CA/CB	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 1200C/C ANV/CP/CA/CB
License plate bolt	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 883R/L
License plate bracket, rear, fasteners: XL 1200C/C ANV/CP/CA/CB	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 1200C/C ANV/CP/CA/CB
License plate fasteners, front: XL 1200X/C/C ANV (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.32 FRONT LICENSE PLATE: INDIA MODELS, Front License Plate: XL Models (India)
License plate fasteners, front: XL 883L/N/R (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.32 FRONT LICENSE PLATE: INDIA MODELS, Front License Plate: XL Models (India)
License plate lamp housing screw: XL 883N	14-16 <b>in-lbs</b>	1.2-1.3 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
License plate screw: XL 883L/R (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.37 REAR LICENSE PLATE: INDIA MODELS, Rear License Plate: XL Models (India)
License plate screw: XL 883N, XL 1200X (India)	10-15 <b>in-lbs</b>	1.1-1.7 Nm	2.37 REAR LICENSE PLATE: INDIA MODELS, Rear License Plate: XL Models (India)
License plate support bracket screws	20-25 <b>in-lbs</b>	2.3-2.8 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, License Plate Bracket: XL 883R/L
Master cylinder mounting bracket, rear, screw: XL models	17-22 ft-lbs	23.0-29.8 Nm	4.20 EVAPORATIVE EMISSIONS CONTROL, Charcoal Canister
Mirror stem locknut	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.8 FRONT BRAKE MASTER CYLINDER, Installation
Mirror stem locknut	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Muffler bracket to footrest bracket screw: XR 1200X	15-19 ft-lbs	20.4-25.8 Nm	2.43 PASSENGER FOOTRESTS, XR 1200X
Muffler interconnect bracket mounting screw: XL Models	30-33 ft-lbs	40.7-44.7 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Muffler interconnect bracket mounting screw: XR 1200X	30-33 ft-lbs	40.7-44.8 Nm	5.15 TRANSMISSION SPROCKET, Installation
Muffler mount to frame, front fastener: XR 1200X	45-50 ft-lbs	61.0-67.8 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler mount to frame, rear fastener: XR 1200X	15-20 ft-lbs	20.3-27.1 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler to front muffler mount fastener: XR 1200X	120-180 <b>in-lbs</b>	13.6-20.3 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler to interconnect bracket screw: XL Models	15-19 ft-lbs	20.4-25.8 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Muffler to muffler bolt: XR 1200X	120-180 in-lbs	13.6-20.3 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Muffler torca clamp nut	38-43 ft-lbs	51.6-58.4 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Muffler to rear muffler mount fastener: XR 1200X	120-180 <b>in-lbs</b>	13.6-20.3 Nm	4.14 EXHAUST SYSTEM: XR 1200X, Installation
Neutral indicator switch	120-180 <b>in-lbs</b>	13.6-20.3 Nm	5.14 TRANSMISSION INSTALLATION, Assembling Crankcases

FASTENER	TORQUE	VALUE	NOTES
Neutral indicator switch	120-180 <b>in-lbs</b>	13.6-20.3 Nm	6.26 NEUTRAL INDICATOR SWITCH, Replacement
O2 sensor	29-44 ft-lbs	39.3-59.7 Nm	4.12 OXYGEN (O2) SENSOR, Installation
O2 sensor	29-44 ft-lbs	39.3-59.7 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Oil cooler fastener: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X/Apply LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue)
Oil cooler fastener: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Cooler/Apply LOCTITE 243 MEDIUM STRENGHT THREADLOCKER AND SEALANT (blue)
Oil deflector plate screw: XR 1200X	38-48 <b>in-lbs</b>	4.3-5.4 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
Oil drain hose worm clamp	6-10 <b>in-lbs</b>	0.7-1.1 Nm	1.6 ENGINE OIL AND FILTER, Changing Oil and Filter
Oil filter adapter	18-22 ft-lbs	24.4-29.8 Nm	3.23 OIL FILTER MOUNT, Assembly
Oil line quick connect fitting, cylinder head return: XR 1200X	108-156 <b>in-lbs</b>	12.2-17.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines
Oil line retainer, front, nut: XR 1200X	84-108 in <b>-lbs</b>	9.5-12.2 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines
Oil pressure switch	50-70 in-lbs	5.6-7.9 Nm	6.31 OIL PRESSURE SWITCH, Installation
Oil pressure switch adapter: XR 1200X	13-17 ft-lbs	17.6-23.0 Nm	6.31 OIL PRESSURE SWITCH, Installation
Oil pump cover screws	70-80 in-lbs	7.9-9.0 Nm	3.20 OIL PUMP: XL MODELS, Assembly
Oil pump feed fitting	100-120 <b>in-lbs</b>	11.3-13.6 Nm	3.20 OIL PUMP: XL MODELS, Installation
Oil pump high pressure feed hose fitting nut	85-105 <b>in-lbs</b>	9.6-11.8 Nm	3.20 OIL PUMP: XL MODELS, Installation
Oil pump high pressure feed hose to crankcase fitting	60-90 <b>in-lbs</b>	6.8-10.2 Nm	3.20 OIL PUMP: XL MODELS, Installation
Oil pump quick connect fitting: XR 1200X	108-156 <b>in-lbs</b>	12.2-17.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines
Oil pump rotor cover screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.21 OIL PUMP: XR 1200X, Assembly
Oil pump rotor cover screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X
Oil pump to crankcase screw	125-150 in-lbs	14.1-16.9 Nm	3.20 OIL PUMP: XL MODELS, Installation
Oil rigid line retainer, rear, screw: XR 1200X	84-108 in <b>-lbs</b>	9.5-12.2 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Cylinder Head Oil Return Lines
Oil rigid line retainer, rear, screw: XR 1200X	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Oil Pump Lines
Oil tank mounting screw	36-60 in-lbs	4.1-6.8 Nm	3.24 OIL TANK, Installation
Passenger footrest support bracket fastener: XL Models	45-50 ft-lbs	61-68 Nm	2.43 PASSENGER FOOTRESTS, XL Models
Passenger footrest support bracket fastener: XR 1200X	45-50 ft-lbs	61-68 Nm	2.43 PASSENGER FOOTRESTS, XR 1200X
Passenger pillion retainer post screw: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	2.35 REAR FENDER: XR 1200X, Installation

FASTENER	TORQUE	VALUE	NOTES
Pinion shaft locking nut: XR 1200X	19-21 ft-lbs	26-29 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XL Models/ plus an additional 15-19 degrees of rota- tion
Pinion shaft locking nut: XR 1200X	19-21 ft-lbs	26-29 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Cam Gears and Gearcase Cover: XR 1200X/ plus 15-19 degrees of rotation
Piston oil jet screw	38-48 <b>in-lbs</b>	4.3-5.4 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Crankcase
Primary chain adjuster locknut	20-25 ft-lbs	27.1-33.9 Nm	1.9 PRIMARY CHAIN, Free Play Adjustment
Primary chain adjuster locknut	20-25 ft-lbs	27.1-33.9 Nm	5.3 PRIMARY COVER, Installation
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	1.5 MAINTENANCE SCHEDULE, General
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	1.10 TRANSMISSION LUBRICANT, Transmission Lubrication/Apply LOCTITE 565 THREAD SEALANT
Primary chaincase drain plug	14-30 ft-lbs	19.0-40.7 Nm	5.3 PRIMARY COVER, Installation
Primary chain cover screw	100-120 in-lbs	11.3-13.6 Nm	5.3 PRIMARY COVER, Installation
Primary chain inspection cover	90-120 <b>in-lbs</b>	10.2-13.6 Nm	1.5 MAINTENANCE SCHEDULE, General
Primary chain inspection cover	90-120 <b>in-lbs</b>	10.2-13.6 Nm	1.9 PRIMARY CHAIN, Free Play Adjustment
Rear caliper mounting bolt	14-18 ft-lbs	19.6-24.5 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Rear caliper pin bolt	14-18 ft-lbs	19.6-24.5 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Retainer plate, lower front, fastener	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Return oil manifold screw: XR 1200X	84-108 in <b>-lbs</b>	9.5-12.2 Nm	3.12 PRECISION COOLING SYSTEM: XR 1200X, Return Oil Manifold
Rider footrest support bracket mounting screw	45-50 ft-lbs	61-68 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Rocker cover, inner, large bolt	18-22 ft-lbs	24.4-29.8 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers
Rocker cover, inner, screw	135-155 <b>in-lbs</b>	15.3-17.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers
Rocker cover, inner, small bolt	135-155 <b>in-lbs</b>	15.3-17.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers
Rocker cover, outer, screw	120-168 <b>in-lbs</b>	13.5-19.0 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Rocker Covers
Rod guide case to inner tube: XR 1200X	66 ft-lbs	90 Nm	2.20 FRONT FORK: XR 1200X, Assembly
Saree guard, left-front, passenger footrest support bracket fastener	16-20 ft-lbs	21.7-27.1 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Seat mounting screw: XL Models	20-40 in-lbs	2.3-4.5 Nm	2.39 SEAT, Seat: XL Models
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 1200C/C ANV/CP/CA/CB

FASTENER	TORQUE	VALUE	NOTES
Seat post bolt	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.40 RIDER FOOT CONTROLS: XL MID-MOUNT CONTROLS, Left Footrest and Shift Lever Assembly
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shifter peg screw	96-144 <b>in-lbs</b>	10.9-16.3 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Shifter rod to shift lever screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shifter rod to shift lever screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shift lever pinch screw	16-20 ft-lbs	21.7-27.1 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shift linkage fastener	120-180 in-lbs	13.6-20.3 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Left Footrest and Shift Lever Assembly
Shift linkage pivot bolt	120-180 <b>in-lbs</b>	13.6-20.3 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Shift pedal clevis screw	13-17 ft-lbs	17.6-23.0 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Left Footrest and Shift Lever Assembly
Shift rod jamnuts	84-132 in-lbs	9.5-14.9 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Adjusting Shift Pedal: Forward Controls Models
Shift rod jamnuts	84-132 <b>in-lbs</b>	9.5-14.9 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Adjusting Shift Lever
Shift rod screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.41 RIDER FOOT CONTROLS: XL FORWARD CONTROLS, Adjusting Shift Pedal: Forward Controls Models
Shift rod screw	120-180 <b>in-lbs</b>	13.6-20.4 Nm	2.42 RIDER FOOT CONTROLS: XR 1200X, Adjusting Shift Lever
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.5 WHEELS, Rear Wheel
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.15 REAR BRAKE CALIPER: XR 1200X, Installation
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.22 BELT GUARD AND DEBRIS DEFLECTOR, Belt Guard: XL Models
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.24 SHOCK ABSORBERS, Installation/Apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue) to the threads.
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.24 SHOCK ABSORBERS, Installation

FASTENER	TORQUI	E VALUE	NOTES
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)/Saree Guards: Apply 2-3 drops of LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT to the threads.
Shock absorber mounting bolt	45-50 ft-lbs	61.0-67.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: Domestic Only
Shock absorber mounting bolt	45-50 ft-lbs	61-68 Nm	6.17 LICENSE PLATE LAMP MODULE: XL 883N, XL 1200X/V, Installation: HDI
Single caliper cast front wheel hub plate screw	16-24 ft-lbs	21.7-32.6 Nm	2.5 WHEELS, Sealed Wheel Bearings
Siren/canister bracket rear brake line fastener	17-22 ft-lbs	23.0-29.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Solenoid contact post jamnut	65-80 <b>in-lbs</b>	7.3-9.0 Nm	6.10 STARTER, Solenoid
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.5 MAINTENANCE SCHEDULE, General
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.5 MAINTENANCE SCHEDULE, General
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.18 SPARK PLUGS, Installation
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm	6.5 SPEEDOMETER AND TACHOMETER: XR 1200X, Speedometer Installation
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm	6.5 SPEEDOMETER AND TACHOMETER: XR 1200X, Trip Odometer Reset Switch Replace- ment/XL 1200X
Speedometer and tachometer mounting screw: XR 1200X	12-18 <b>in-lbs</b>	1.4-2.0 Nm	6.5 SPEEDOMETER AND TACHOMETER: XR 1200X, Tachometer Installation/XL 1200X
Speedometer backplate fasteners: XL models	8-12 <b>in-lbs</b>	0.9-1.4 Nm	6.4 SPEEDOMETER: XL MODELS, Installation
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm	1.5 MAINTENANCE SCHEDULE, General
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm	1.8 TIRES AND WHEELS, Wheel Spokes
Spoke nipple	55 <b>in-lbs</b>	6.2 Nm	2.7 CHECKING AND TRUING WHEELS, Truing Laced Wheels
Sprocket compensator bowl bolt, 1st torque	60 ft-lbs	81.3 Nm	C.1 COMPENSATING SPROCKET, Assembly and Installation/Tighten in a star pattern
Sprocket compensator bowl bolt, final torque	80 ft-lbs	108.5 Nm	C.1 COMPENSATING SPROCKET, Assembly and Installation/Tighten in a star pattern
Sprocket cover, forward and lower screw	80-120 <b>in-lbs</b>	9.0-13.6 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X

FASTENER	TORQUE	EVALUE	NOTES
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	4.13 EXHAUST SYSTEM: XL MODELS, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.6 DRIVE BELT, Drive Belt: XL Models
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.6 DRIVE BELT, Drive Belt: XR 1200X
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.15 TRANSMISSION SPROCKET, Installation
Sprocket cover, forward and lower screws	80-120 <b>in-lbs</b>	9.0-13.6 Nm	5.15 TRANSMISSION SPROCKET, Installation
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.7 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	5.6 DRIVE BELT, Idler Pulley: XR 1200X
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	5.6 DRIVE BELT, Drive Belt: XR 1200X
Sprocket cover, rear screw	30-33 ft-lbs	40.7-44.8 Nm	5.15 TRANSMISSION SPROCKET, Installation
Sprocket mounting screw, 1st torque	60 ft-lbs	81.3 Nm	2.5 WHEELS, Rear Wheel
Sprocket mounting screw, final torque	80 ft-lbs	108.0 Nm	2.5 WHEELS, Rear Wheel
Stabilizer link, lower, frame bracket, front, mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link, lower, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Lower Front Stabilizer Link
Stabilizer link, lower front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair
Stabilizer link, upper front, engine bracket mounting screw	55-65 ft-lbs	74.6-88.2 Nm	2.25 STABILIZER LINKS, Upper Front Stabilizer Link
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Upper Front Stabilizer Link
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link, upper front, frame bracket mounting screw	25-35 ft-lbs	33.9-47.5 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Assembling Motorcycle After Top End Repair
Stabilizer link cylinder head bracket	55-65 ft-lbs	74.6-88.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models

FASTENER		E VALUE	NOTES
Stabilizer link cylinder head bracket	55-65 ft-lbs	74.6-88.2 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Upper Front Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Lower Front Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.25 STABILIZER LINKS, Rear Stabilizer Link
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.26 FRONT ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	2.27 REAR ENGINE MOUNT/ISOLATOR, Installation
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Stabilizer link screw	25-35 ft-lbs	33.9-47.5 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XR 1200X
Starter motor oil line clamp fastener	16-21 <b>in-lbs</b>	1.8-2.4 Nm	6.10 STARTER, Installation
Starter mounting bolt	13-20 ft-lbs	17.6-27.1 Nm	6.10 STARTER, Installation
Starter positive terminal nut	60-85 <b>in-lbs</b>	6.8-9.6 Nm	6.10 STARTER, Installation
Starter ring terminal hex nut	60-80 <b>in-lbs</b>	6.8-9.0 Nm	6.10 STARTER, Solenoid
Stator harness retainer screw	56 in-lbs	6.3 Nm	6.24 ALTERNATOR, Assembly and Installation/Screw must be flush with plate. Do not exceed torque specification.
Stop lamp, rear, switch: XL Models	132-168 in-lbs	14.9-18.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XL Models
Stop lamp, rear, switch: XR 1200X	132-168 <b>in-lbs</b>	14.9-18.9 Nm	2.16 BRAKE LINES, Rear Brake Line: XR 1200X
Stop lamp switch bracket screw	72-120 in-lbs	8.1-13.6 Nm	3.11 INSTALLING ENGINE IN CHASSIS, Procedure: XL Models
Stop lamp switch bracket screw	72-120 in-lbs	8.1-13.6 Nm	6.9 BATTERY TRAY, Installation
Stop lamp switch to tee nut	132-168 <b>in-lbs</b>	14.9-18.9 Nm	6.21 REAR STOP LAMP SWITCH, Replacement
Strut cover fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Strut cover fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Strut cover screw	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883R/L
		1	1

FASTENER	TORQUE	EVALUE	NOTES
Strut cover screw	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883N and XL 1200X/V
Switch housing screw	35-45 in-lbs	4.0-5.1 Nm	1.5 MAINTENANCE SCHEDULE, General
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	1.13 THROTTLE CONTROL, Cable Inspection and Lubrication
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	2.28 THROTTLE CABLES: ALL MODELS, Assembly and Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	2.30 HANDLEBAR, Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	2.30 HANDLEBAR, Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.34 RIGHT HANDLEBAR SWITCHES, Installation
Switch housing screw	35-45 <b>in-lbs</b>	4.0-5.1 Nm	6.35 LEFT HANDLEBAR SWITCHES, Installation
Tail lamp base mounting screw: XL Models	45-48 <b>in-lbs</b>	5.1-5.4 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X
Tail lamp base mounting screw: XR 1200X	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X
Tail lamp LED base fasteners: XL 1200C/C ANV/CP/CA/CB	40-50 <b>in-lbs</b>	4.5-5.6 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB
Tail lamp LED screws: XL 1200C/C ANV/CP/CA/CB	20-25 <b>in-lbs</b>	2.3-2.8 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, LED Tail Lamp: XL 1200C/C ANV/CP/CA/CB
Tail lamp lens screw	20-24 in-lbs	2.3-2.7 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Bulb Replacement Except XL 1200C/C ANV/CP/CA/CB
Tail lamp lens screw	20-24 in-lbs	2.3-2.7 Nm	6.16 TAIL LAMP: ALL MODELS EXCEPT XL 883N/XL 1200X/V, Base Replacement: XL 883R/L and XR 1200X
Tailsection bolts: XR 1200X	72-120 <b>in-lbs</b>	8.1-13.6 Nm	2.35 REAR FENDER: XR 1200X, Installation
Tappet cover, anti-rotation mounting screw	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.22 BOTTOM END OVERHAUL: ASSEMBLY, Tappets
Tappet cover fastener	90-120 <b>in-lbs</b>	10.2-13.6 Nm	3.16 TOP END OVERHAUL: ASSEMBLY, Tappet Covers, Pushrod Covers and Pushrods
Throttle cable bracket screw: XR 1200X	60 <b>in-lbs</b>	6.8 Nm	4.9 INDUCTION MODULE: XR 1200X, Assembly
TMAP sensor screw	80 <b>in-lbs</b>	9.0 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X
TPS screw: XL Models	35 <b>in-lbs</b>	4.0 Nm	4.6 THROTTLE POSITION SENSOR (TPS), Installation: XL Models
TPS screw: XR 1200X	29 <b>in-lbs</b>	3.3 Nm	4.6 THROTTLE POSITION SENSOR (TPS), Installation: XR 1200X
Transmission mainshaft nut: XL Models	50-60 ft-lbs	67.8-81.3 Nm	5.4 PRIMARY DRIVE AND CLUTCH: XL MODELS, Installation
Transmission mainshaft nut: XR 1200X	50-60 ft-lbs	67.8-81.3 Nm	5.5 PRIMARY DRIVE AND CLUTCH: XR 1200X, Installation

FASTENER	TORQUE	VALUE	NOTES
Transmission sprocket lockplate fastener	90-120 <b>in-lbs</b>	10.3-13.6 Nm	5.15 TRANSMISSION SPROCKET, Installation
Transmission sprocket nut	50 ft-lbs	68 Nm	5.15 TRANSMISSION SPROCKET, Installation/Initial torque plus 30-40 degrees.
Turn signal, front, ball head studs	96-144 in-lbs	10.8-16.3 Nm	6.18 FRONT TURN SIGNALS, All Except XL 1200X
Turn signal clamp, front, screw	96-120 <b>in-lbs</b>	10.9-13.6 Nm	2.29 CLUTCH CONTROL, Assembly and Installation
Turn signal clamp, front, screw	96-120 <b>in-lbs</b>	10.8-13.6 Nm	6.18 FRONT TURN SIGNALS, All Except XL 1200X
Turn signal housing, rear, screws: XR 1200X	30-40 <b>in-lbs</b>	3.4-4.5 Nm	6.19 REAR TURN SIGNALS, XR 1200X
Turn signal housing to bracket: XL 1200X	12-16 ft-lbs	16.3-21.7 Nm	6.18 FRONT TURN SIGNALS, XL 1200X
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.19 REAR TURN SIGNALS, XL 883R/L
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.19 REAR TURN SIGNALS, XL 883N and XL 1200X/V
Turn signal housing to mount, rear, fastener	96-156 <b>in-lbs</b>	10.9-17.6 Nm	6.19 REAR TURN SIGNALS, XL 1200C/C ANV/CP/CA/CB
Turn signal stalk locknut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 883R/L
Turn signal stalk locknut	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.33 REAR FENDER: ALL XL MODELS EXCEPT XL 883N, XL 1200X/V, XL 1200C/C ANV/CP/CA/CB
Turn signal stalk locknut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	2.34 REAR FENDER AND LICENSE PLATE BRACKET: XL 883N, XL 1200X/V, Assembly and Installation
Turn signal stalk locknut	96-156 <b>in-lbs</b>	10.9-17.6 Nm	2.36 SAREE GUARD: INDIA MODELS, Saree Guard: XL 883R, XL 1200C/C ANV (India)
Turn signal stalk nut	132-216 in-lbs	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883R/L
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 883N and XL 1200X/V
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 1200C/C ANV/CP/CA/CB
Turn signal stalk nut	132-216 <b>in-lbs</b>	14.9-24.4 Nm	6.19 REAR TURN SIGNALS, XL 1200C/C ANV/CP/CA/CB
Valve stem, tubeless type, nut	12-15 <b>in-lbs</b>	1.4-1.7 Nm	2.4 TIRES, Installation
Valve stem, tube type, nut	3-7 in-lbs	0.3-0.8 Nm	2.4 TIRES, Installation
Voltage regulator mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.23 VOLTAGE REGULATOR, Installation: XL Models
Voltage regulator mounting screw	36-60 <b>in-lbs</b>	4.1-6.8 Nm	6.23 VOLTAGE REGULATOR, Installation: XR 1200X
VSS screw	90-120 in-lbs	10.2-13.6 Nm	6.25 VEHICLE SPEED SENSOR (VSS), Installation
Wire form to induction module cover fastener: XR 1200X	84-108 <b>in-lbs</b>	9.5-12.2 Nm	4.11 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR, Installation: XR 1200X

#### **NOTES**

A	Assembly: XR 1200X	
Acronyms and AbbreviationsE-1	Cleaning, Inspection and Repair: XL Models	
Actority in and Abbreviations	Cleaning, Inspection and Repair: XR 1200X	
XL 1200V4-5	Disassembly: XL Models	
XL Models except XL 1200V	Disassembly: XR 1200X	
XR 1200X	Installation: XL Models	
Air Filter	Installation: XR 1200X	
	Installing Brake Pads: XL Models	
Cleaning Filter Element.         1-22           XL 1200V.         1-19	Lubricating Pins and Boots: XL Models	
XL Models except XL 1200V1-19	Removal: XL Models	
XR 1200X	Removal: XR 1200X	2-53
Alignment	Brake Caliper, Rear	0.70
Wheels1-66	Assembly: XL Models	
Alternator	Assembly: XR 1200X	
Rotor6-65	Cleaning, Inspection and Repair: XL Models	
Stator	Cleaning, Inspection and Repair: XR 1200X	
Anniversary Badging	Disassembly: XL Models	
Autofuse Electrical Connector	Disassembly: XR 1200X	
Assembly	Installation: XL Models	
Disassembly	Installation: XR 1200X	
_	Lubricating Bolt Pins and Boots	
В	Removal: XL Models	
Bank Angle Sensor (BAS)6-14	Removal: XR 1200X	2-79
Battery	Brake Disc	2 24
Cables6-15	Dual	
Charging	Front Installation: Cast Wheels	
Cleaning	Front Removal: Cast Wheels	
Disconnection and Removal	Lateral Runout. VD 1200V	
Inspection	Lateral Runout: XR 1200X	
Installation and Connection	Rear Installation	
Maintenance	Rear Removal	
Storage	Specification: XL Models (Table)	
Voltmeter Test	Specifications: XR 1200X (Table)	
BeltSee Drive Belt	Brake Lines	1-47
Belt Guard	Front Brake Lines: All Models	2 26
XL Models2-111	Inspection	
XR 1200X2-111	Rear Brake Line: XL Models	
Bleeding Brakes2-94	Rear Brake Line: XR 1200X	
Bosch Compact 1.1M Connector	Routing, Front: XL 1200CP/CA w/Drag Bar	
Bottom End Overhaul: Assembly	Routing, Front: XL 1200V/CP/CB w/Mini-Ape	
Cam and Pinion Gear Identification 3-112	Routing, Front: XL 883L/N, XL 1200X, XL 1200C/C	
Cam Gears: XL Models	Back	
Cam Gears: XR 1200X	Routing, Front: XL 883R	
Crankcase	Routing, Front: XR 1200X	
Cylinder Base Studs	Brake Master Cylinder, Front	2-30
Gearcase Cover: XL Models	Assembly	2_41
Gearcase Cover: XR 1200X	Cleaning, Inspection and Repair	
Left Main Bearing3-109	Disassembly	
Pinion Shaft Bearing	Inspection.	
Piston Oil Jet	Installation: All Models	
Tappets	Removal: All Models	
Bottom End Overhaul: Disassembly	Brake Master Cylinder, Rear	0.
Cam Gear End Play3-84	Assembly: XL Models	2-61
Cam Gears: XL Models	Assembly: XR 1200X	
Cam Gears: XR 1200X	Cleaning and Inspection: XL Models	
Crankcase3-86	Cleaning and Inspection: XR 1200X	
Cylinder Base Studs	Disassembly: XL Models	
Gearcase Cover: XL Models	Disassembly: XR 1200X	
Gearcase Cover: XR 1200X3-85	Inspection: XL Models	
Oil Pump: XL Models	Inspection: XR 1200X	
Piston Oil Jets3-87	Installation: XL Models	
Tappets3-84	Installation: XL Models	
Bottom End Service	Installation: XR 1200X	
Engine in Chassis	Installation: XR 1200X	
Engine Removed From Chassis	Removal: XL Models	
Brake Caliper, Front	Removal: XR 1200X	
Assembly: XL Models		0¬

Reservoir: XL Models 2-69	Troubleshooting	5-8
Reservoir: XR 1200X	Clutch Lever Free Play	
Brake Pads	Specifications (Table)	1-30
Front Installation: XR 1200X1-49	Compensating Sprocket (Japan)	
Front Removal: XR 1200X1-48	Assembly and Installation	
Front Replacement: XL Models 1-41	Bearing Installation	
Rear Installation: XR 1200X1-51	Cleaning, Inspection and Repair	
Rear Removal: XR 1200X1-50	Removal and Disassembly	C-1
Rear Replacement: XL Models1-44	Compression Damping	
Service Wear Limit: XL Models	Front Fork: XR 1200X	
Service Wear Limit: XR 1200X 1-47	Shock Absorber: XR 1200X	1-70
Brake Rotor See Brake Disc	Compression Test	3-14
Brakes	Connecting Rod Bushings	
Bleeding See Bleeding Brakes	Honing Upper Connecting Rod Bushings	3-74
Fluid Inspection1-37	Installing Upper Connecting Rod Bushings	3-73
Front Brake Line2-86	Reaming Upper Connecting Rod Bushings	3-74
Troubleshooting1-39	Removing Upper Connecting Rod Bushings	3-72
Breathers See Rocker Covers	Repair	3-74
Bulb Replacement	Connectors	
Specifications (Table)1-9	Autofuse Unsealed	A-1
<b>C</b>	Bosch Compact 1.1M	
	Connector Number	
Cable and Chassis Lubrication	Delphi 100W Micro-Pack Sealed	
Foot Shift Lever and Rear Brake Pedal 1-36	Delphi 150 Metri-Pack Sealed	
Jiffy Stand	Delphi 280 Metri-Pack Unsealed	
Steering Head Bearings1-36	Delphi 480 Metri-Pack Unsealed	
Cams	Delphi 630 Metri-Pack Unsealed	
Bushing Installation: XL Models 3-89	Delphi 800 Metri-Pack Sealed	
Bushing Removal: XL Models	Delphi GT 150 Sealed	
End Play	Delphi GT 280 Sealed	
Gearcase Cover: XL Models3-113	Delphi Micro 64 Sealed	
Gearcase Cover: XR 1200X	Description	
Identification	Deutsch DTM Sealed Mini	
Pinion Gear	Deutsch DTM Sealed Solid Barrel	
Timing: XL Models	Deutsch DT Sealed	
Timing: XR 1200X	Function	
Capacities	JAE MX19 Sealed	
XL 1200 Models and XR 1200X (Table) 2-10	Location Table	
XL 1200 Models and XR 1200X (Table) 4-4	Metri-Pack Terminal Crimps	
XL 883 Models (Table)	Molex CMC Sealed	
XL 883 Models (Table)	Molex MX 150 Sealed	
Carrying Capacity	Repair Instruction	
Shock Absorber Preload1-69	Sealed Splice	
CKP See Crank Position Sensor (CKP)	Tyco 070 Multilock Unsealed	
Cleaning		
Bearings1-5	Tyco GET 64 Sealed Connector	
Cleaning Process	Tyco MCP	A-4 I
Part Protection	Conversions	D 0
Rust or Corrosion Removal	Fluid	
Clutch	Length	
Adjusting Screw5-17	Torque	
· · · · · · · · · · · · · · · · · · ·	Converter Module See Rear Lighting Converte	r Module
Adjustment1-29	Countershaft	
Cable Routing	Assembly	
Cable Routing (Table) (Table)	Bearing Installation	
Clutch Cable	Bearing Removal	
Clutch Pack Inspection: XR1200X	Disassembly	
Clutch Pack Specifications (Table)	Needle Bearing	
Interlock Switch	Crankcase	
Lever	Cylinder Base Stud Removal	
Lever Free Play	Disassembly	
Primary Chain Adjuster5-6	Fitting Pinion Bearings	
Release Ramp	Lapping Engine Main Bearing Races	
Shell Bearing Replacement5-19	Main Bearing	3-94

Main Bearing Installation3-109	Deutsch DT Sealed Connector
Piston Oil Jet Removal	Repair
Crankcase Breathing System	Dimensions
BreathersSee Rocker Covers	XL 1200 Models and XR 1200X (Table) 2-9
XL Models3-13	XL 883 Models (Table)
XR 1200X3-13	Drag Handlebar: XL 1200CP/CA 2-134
Crank Position Sensor (CKP)	Drive Belt
Installation	Adjustment
Removal	Cleaning1-31
Crankshaft See Flywheel Assembly	Deflection
Critical Fasteners	Deflection Specifications (Table) (Table) 1-33
Cylinder	Handling
Bore	Idler Pulley
Boring	Inspection
Cleaning, Inspection and Repair3-68	Installation: XL Models 5-25
Gasket Surface3-68	Installation: XR 1200X5-27
Honing3-69	Removal: XL Models
Piston to Cylinder Fit	Removal: XR 1200X
Service Wear Limits (Table) (Table) 3-69	Wear Analysis1-31
Cylinder Head	E
Assembly	<b>L</b>
Cleaning and Inspection: Heads 3-56	Electrical Caddy
Cleaning and Inspection: Pushrods 3-59	XL Models6-74
Cleaning and Inspection: Rocker Arm Assemblies 3-57	XR 1200X6-77
Cleaning and Inspection: Spark Plug Threads 3-59	Electronic Control Module (ECM)
Cleaning and Inspection: Valve Guides 3-59	XL Models6-12
Cleaning and Inspection: Valves	XR 1200X6-13
Cleaning and Inspection: Valve Seats	Engine
Cleaning and Inspection: Valve Springs	Installation: XL Models
	Installation: XR 1200X
Disassembling PushRods and Covers	Mount/Isolator, Rear: Installation
Disassembly	Mount/Isolator: Installation
Installation	Mount/Isolator: Removal
Refacing Valve Seats	
Removal	Mount Inspection
Replacing Rocker Arm Bushings 3-59	Removal: XL Models
Rocker Covers	Removal: XR 1200X
Valve Guides3-60	Stabilizer Links See Stabilizer Links
D	Engine Lubrication System
	Oil Flow: XL Models
Debris Deflector	Oil Flow: XR 1200X
XL Models2-111	Engine Oil
XR 1200X2-112	Changing1-16
Delphi 100W Sealed Connector	Checking
Repair	Recommended Engine Oils1-7
Delphi 150 Metri-Pack Connector	Winter Lubrication1-8
Repair	Engine Temperature (ET) Sensor
Delphi 280 Metri-Pack Unsealed Connectors A-7	Installation
Delphi 480 Metri-Pack Unsealed Connector	Removal
Repair	ET See Engine Temperature (ET) Sensor
Delphi 630 Metri-Pack Unsealed Connector	Evaporative Emissions Control
Delphi 800 Metri-Pack Sealed Connectors	Charcoal Canister
Repair	Hose Routing
Delphi GT 150 Sealed Connector	Vapor Valve
Repair	Exhaust System
	•
Delphi GT 280 Sealed Connector	Installation: XL Models
Delphi Micro-64 Sealed Connector	Installation: XR 1200X
Repair	Muffler Interconnect Bracket: XL Models 4-43
Deutsch Connector	Removal: XL Models
Crimping Standard Terminals	Removal: XR 1200X
Deutsch DTM Sealed Mini Connector	F
Crimping Terminals	
Deutsch DTM Sealed Solid Barrel Connector	Fall-Away See Steering Head Bearings
Crimping Terminals A-26	

Fender	Removal
Extension, rear2-145	Spring Service Length (Table)2-108
Front: XL 1200X2-138	Front Stop Lamp Switch See Stop Lamp Switch
Front: XL Models except XL 1200X2-138	Fuel
Front: XR 1200X	Gasoline Blends1-7
License Plate Bracket: XL 1200C/C ANV/CP/CA/CB. 2-146	Recommended Fuel
License Plate Bracket: XL 883R/L2-145	Fuel Filter Element
Rear Installation: XL 1200C/C ANV/CP/CA/CB 2-144	Installation
Rear Installation: XL 883/XL 1200X 2-149	Removal4-57
Rear Installation: XL 883R/L2-142	Fuel Injectors
Rear Installation: XR 1200X2-152	Installation
Rear Removal: XL 1200C/C ANV/CP/CA/CB 2-143	Removal
Rear Removal: XL 883/XL 1200X2-147	Fuel Pump
Rear Removal: XL 883R/L	Assembly4-54
Rear Removal: XR 1200X2-152	Disassembly
Saree Guard: XL 883R	Filter Element
Seat Nut	Installation
Wire Harness Retention Bracket 2-145	Pressure Test
Fluid Conversions	Removal
Flywheel Assembly	Fuel Tank: XL Models
Fitting Pinion Bearings	Cleaning and Inspection
Installation	Connecting Fuel Hose and Filling Fuel Tank 4-10
Pinion Shaft Bearing	Installation
Pinion Shaft Bearing Installation3-108	Purging and Disconnecting Fuel Supply Hose 4-8
Removal3-87	Removal
FOB	Vapor Valve
	Fuel Tank: XR 1200X
Assignment	
Battery Replacement6-82	Assembly
Footrests, Passenger See Passenger Footrests	Cleaning and Inspection
Footrests, Rider See Rider Foot Controls	Connecting Fuel Hose and Filling Fuel Tank 4-16
Fork Brace: XL 1200X	Disassemble
Fork Lock	Installing Fuel Tank
Installation	Purging and Disconnecting Fuel Supply Hose 4-12
Removal	Removing Fuel Tank
Fork Stem and Bracket Assembly	Fuse Block Repair
Assembly and Installation	Fuses
Cleaning, Inspection and Repair2-110	Main
Removal and Disassembly2-109	Relays6-7
Front Brake	System Fuses
Caliper: XL Models See Brake Caliper, Front	G
Caliper: XR 1200X See Brake Caliper, Front	0
Master Cylinder See Brake Master Cylinder, Front	Gearcase Cover
Front Fork: XL Models	Bushing Installation: XL Models
Assembly2-101	Bushing Removal: XL Models
Cleaning, Inspection and Repair2-99	Installation: XL Models
Disassembly	Installation: XR 1200X
Fork Oil	Reaming Bushings3-90
Fork Oil Amounts (Table)	Removal: XL Models
Fork Oil Change	Glossary
	Acronyms and Abbreviations E-1
Fork Oil Level (Table)	-
Installation	Н
Removal	Hand Control
Front Fork: XR 1200X	Clutch2-132
Assembly	
Bracket2-138	Hand Grip, Left
Cleaning and Inspection 2-105	Installation
Compression Damping	Removal
Disassembly	Handlebar
Fork Oil Level (Table)	Drag Bar: XL 1200CP/CA 2-134
Fork Oil Volume (Table) (Table)	Mini-Ape,: XL 1200CP/CB2-134
	Pull Back: XL 1200CP
Installation	XL Models
Preload Adjustment	XR 1200X
Rebound Damping1-68	7.11 12007.1

Handlebar Switches	J
Connectors	•
Left	JAE MX19 Sealed Connectors
Repair Procedures6-89	Crimping Terminals
Right	Crimping Terminals
HD-SSS	HousingsA-28
Configuration	Installing Terminals
Power Disruption6-103	Removing Terminals
Tag Actuation	Jiffy Stand
Headlamp	Lubrication
Adjustment: XL 1200X/C/CP/CA/CB/V1-72	Removal2-156
Alignment	Jiffy Stand Sensor: International Models
Assembly Mount: XL 1200C/C ANV/CP/CA/CB 6-32	Installation
Assembly Mount: XL 1200X 6-31	Removal
Bulb Replacement 6-30	JSS See Jiffy Stand Sensor: International Models
Mount: XL 883L/R/N, XR 1200X6-31	ı
Position Lamp: HDI6-30	
Visor: XL 1200C/C ANV/CP/CA/CB 6-32	Laced Wheel Rim Offset 2-33
Horn	Left Handlebar Switch
Replacement6-87	Assembly6-98
Replacement: Side Mounted Horn)6-87	Disassembly 6-97
Troubleshooting	Installation6-99
Voltage Test	Removal6-97
ı	Switch Repair/Replacement 6-97
l l	License Plate, Front (India)
Idle Air Control (IAC)	XL 1200X/C/C ANV2-140
Installation: XL Models	XL 883L/N/R2-140
Installation: XR 1200X4-36	License Plate, Rear (India)
Removal: XL Models4-33	XL 883L/R, XL 1200C/C ANV2-155
Removal: XR 1200X4-35	XL 883N, XL 1200X2-155
Idler Pulley: XR 1200X	License Plate Bracket
Inspection	XL 1200C/C ANV/CP/CA/CB 2-146
Installation	XL 883/XL 1200X2-147
Removal	XL 883R/L2-145
Ignition Coil	License Plate Lamp Module: XL 883N
Installation	Installation (Domestic Only)6-41
Removal	Installation (HDI Only) 6-44
Ignition Switch	Removal (Domestic Only)6-40
Installation	Removal (HDI Only)
Removal	Light Bulbs
Indicator Lamp Module	See Bulb Replacement (Table) 1-9
Assembling Motorcycle: All Models 6-35	Load
Preliminary Disassembly: All Models 6-33	Shock Absorber Adjustment 1-69
Replacement: XL 1200C/C ANV/CP except w/Mini-Ape	LOCTITEi-II
Handelbar6-33	
Replacement: XL 883N6-34	M
Replacement: XR 1200X	Main Bearings See Crankcase
Induction Module: XL Models	Main Drive Gear and Bearing
Assembly	Assembly5-42
	Disassembly5-41
Disassembly	Installation: Bearing
Removal	Installation: Main Drive Gear5-44
	Installation: Main Drive Gear Seal 5-46
Induction Module: XR 1200X	Removal: Ball Bearing 5-41
Assembly	Removal: Main Drive Gear
Disassembly	Main Fuse
Installation	Installation
Removal4-29	Mainshaft
Intake Leak Test	Assembly5-37
Leak Tester: Parts List	Bearing Installation
Leak Tester: Tester Adjustment	Bearing Removal
Leak Tester: Tester Assembly	Disassembly
Procedure	Dicacconibity
IsolatorSee Engine	

Maintenance	Oil Line Routing: XR 1200X 3-121
Brake Line Inspection (Table) 1-37	Removal3-121
Drive Belt	Oxygen (O2) Sensors
Engine Oil Change	Installation
Engine Oil Check1-15	Removal
Headlamp Adjustment	Р
Idler Pulley	Docconger Footroote
Recommended Engine Oils	Passenger Footrests XL Models2-169
Main Wiring Harness See Wiring Harness	XR 1200X
Medallions	Personal Identification Number (PIN)
Metric System	Changing the PIN
Mid-Mount Controls See Rider Foot Controls	Initial Entry6-101
Mini-Ape Handlebar: XL 1200CP/CB2-134	Modifying an Existing PIN
Mirrors	Pinion Bearings See Flywheel Assembly
XL 1200X2-44	Piston
XL Models except XL 1200X 2-44	Cleaning, Inspection and Repair
XR 1200X2-44	Piston Rings
Molex CMC Sealed Connectors	Piston to Cylinder Fit
Crimping Terminals	Precision Cooling System
HousingsA-29	Cylinder Head Oil Feed3-46
Installing Terminals	Cylinder Head Oil Return Lines
Removing Terminals	Oil Cooler
Molex MX 150 Sealed Connector	Oil Pump Lines
RepairA-31	Return Oil Manifold
Terminal Crimps	Preload Adjustment
Mount/IsolatorSee Engine	Front Fork: XR 1200X
N	Rear Shock: All Models
Neutral Indicator Switch 6-68	Primary Chain Free Play Adjustment
_	Primary Cover
0	Primary Drive/Clutch
O2 Con Owigen (O2) Concern	
O2 See Oxygen (O2) Sensors	Adjusting Screw: XR 1200X
Odometer Reset Switch	Adjusting Screw: XR 1200X 5-17 Assembly: XL Models
Odometer Reset Switch Replacement: XL Models6-8	Assembly: XL Models
Odometer Reset Switch Replacement: XL Models	
Odometer Reset Switch Replacement: XL Models	Assembly: XL Models
Odometer Reset Switch Replacement: XL Models	Assembly: XL Models
Odometer Reset Switch Replacement: XL Models	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22 Removal: XL Models. 5-8
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         Checking Oil Pressure.         3-11	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22 Removal: XL Models. 5-8 Removal: XR 1200X. 5-15 Troubleshooting. 5-8 Pull Back Handlebar: XL 1200CP. 2-134 Pushrods
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         Checking Oil Pressure.         3-11           Indicator Lamp.         3-10	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22 Removal: XL Models. 5-8 Removal: XR 1200X. 5-15 Troubleshooting. 5-8 Pull Back Handlebar: XL 1200CP. 2-134 Pushrods
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104           Installation: XL Models.         3-102	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22 Removal: XL Models. 5-8 Removal: XL Models. 5-8 Removal: XR 1200X. 5-15 Troubleshooting. 5-8 Pull Back Handlebar: XL 1200CP. 2-134 Pushrods Pushrod Covers. 3-77  R  Rear Brake Caliper: XL Models. See Brake Caliper, Rear Calper: XR 1200X. See Brake Caliper, Rear Calper: XR 1200X. See Brake Lines Rear Engine Mount/Isolator. See Engine Rear Fender. See Fender
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104           Installation: XL Models.         3-102           Operation.         3-16	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22 Removal: XL Models. 5-8 Removal: XL Models. 5-8 Removal: XR 1200X. 5-15 Troubleshooting. 5-8 Pull Back Handlebar: XL 1200CP. 2-134 Pushrods Pushrod Covers. 3-77  R  Rear Brake Caliper: XL Models. See Brake Caliper, Rear Calper: XR 1200X. See Brake Caliper, Rear Calper: XR 1200X. See Brake Caliper, Rear Calper: XR 1200X. See Brake Caliper, Rear Line: XR 1200X. See Brake Lines Rear Engine Mount/Isolator. See Engine Rear Fender. See Fender Rear Fork
Odometer Reset Switch         6-8           Replacement: XL Models.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104           Installation: XL Models.         3-102           Operation.         3-101           Removal: XL Models.         3-101	Assembly: XL Models. 5-12 Assembly: XR 1200X. 5-20 Clutch Pack Cleaning and Inspection: XR 1200X. 5-17 Clutch Shell/Hub Inspection: XR 1200X. 5-18 Clutch Shell Bearing Replacment: XR 1200X. 5-19 Disassembly: XL Models. 5-10 Disassembly: XR 1200X. 5-17 Inspection and Repair: XL Models. 5-11 Installation: XL Models. 5-13 Installation: XR 1200X. 5-22 Removal: XL Models. 5-8 Removal: XL Models. 5-8 Removal: XR 1200X. 5-15 Troubleshooting. 5-8 Pull Back Handlebar: XL 1200CP. 2-134 Pushrods Pushrod Covers. 3-77  R  Rear Brake Caliper: XL Models. See Brake Caliper, Rear Calper: XR 1200X. See Brake Calper: XR 120X. Se
Odometer Reset Switch         6-8           Replacement: XR 1200X         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104           Installation: XL Models.         3-102           Operation.         3-106           Removal: XL Models.         3-101           Oil Tank	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XL Models.         6-8           Replacement: XR 1200X.         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Oil Pressure         3-120           Checking Oil Pressure.         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104           Installation: XL Models.         3-101           Oil Tank         Installation.         3-122	Assembly: XL Models
Odometer Reset Switch         6-8           Replacement: XR 1200X         6-11           Oil.         See Engine Oil           Cold Check.         1-15           Hot Check.         1-16           Pump.         3-100           Oil Cooler.         3-48           Oil Filter Mount.         3-120           Assembly.         3-120           Cleaning and Inspection.         3-120           Disassembly.         3-120           Oil Pressure         3-11           Indicator Lamp.         3-10           Pressure Switch.         6-85           Oil Pump         Assembly: XL Models.         3-101           Assembly: XR 1200X.         3-106           Cleaning and Inspection: XL Models.         3-101           Cleaning and Inspection: XR 1200X.         3-105           Disassembly: XL Models.         3-101           Disassembly: XR 1200X.         3-104           Installation: XL Models.         3-102           Operation.         3-106           Removal: XL Models.         3-101           Oil Tank	Assembly: XL Models

Rear Lighting Converter Module: XL 883N, XL 1200X/V (US)	XR 1200X	2-159
Installation	Security Siren	
Removal6-55	Battery	6-83
Rear Stop Lamp Switch See Stop Lamp Switch	Installation	6-83
Rebound Damping	Removal	6-82
Front Fork:1-68	Sensors	
Shock Absorber: XR 1200X1-70	CKP	6-59
Relays6-7	ET	4-20
Repair and Replacement Procedures	JSS	6-81
Bearings	02	4-40
Bushings	TMAP	4-37
Gaskets1-4	TPS	
Gears	VSS	
Hardware and Threaded Parts	Serialized Badges	
Lip Type Seals	Service Bulletins	
O-Rings	Service Preparation	
Part Replacement	Servicing a New Motorcycle	
Shafts1-5	Shifter	
Threadlocking Agents	Drum	5-52
Wiring, Hoses and Lines	Drum Bushing, Left Case Removal	
Reservoir See Brake Master Cylinder	Drum Bushing, Right Case Installation	
Rider Foot Controls: XL Models	Drum Bushing Left Case Installation	
Left Footrest (Forward)	Forks	
Left Footrest (Mid-mount)	Fork Shafts	
Rear Brake Pedal (Forward)	Lever Adjustment: XR 1200X	
Rear Brake Pedal (Mid-mount)	Right Case Drum Bushing Removal	
	Shaft Installation	
Right Footrest (Forward)2-163	Shift Lever	5-54
Right Footrest (Mid-mount)		2 165
Shift Lever (Forward)	Adjustment: XL Mid-Mount Models	
Shift Lever (Mid-mount)	Adjustment: XR 1200X	
Shift Lever Adjustment: Mid-Mount Models 2-165	XL Forward Controls	
Wear Peg	XL Mid-Mount Controls	
Rider Foot Controls: XR 1200X	XR 1200X	
Adjusting Shift Lever	Shock Absorbers	
Left Footrest	Compression Damping: XR 1200X	
Rear Brake Pedal	Disposal: Schrader Valve Models	
Right Footrest	Preload: All Models	
Shift Lever	Rebound Damping: XR 1200X	
Right Handlebar Switch	Recommended Preload: 3 Position (Table)	
Assembly	Recommended Preload: 5 Position (Table)	
Disassembly	Shop Practices	
Installation	Checking Torques	
Removal6-91	Cleaning	
Switch Repair/Replacement	Disassembly and Assembly	
Rocker Covers	Magnetic Parts Trays	
Breather: XL Models	Removing Parts	
Breather: XR 1200X3-81	Safety	
Inner Cover	Sidecar Configuration	
Outer Cover3-81	Side Cover	
Rotor	SidestandSee J	liffy Stand
S	Solenoid	
_	Long Post Contact	
Safe Operating Maintenance	Plunger	
Saree Guard	Short Post Contact	
Left-Front	Spark Plug Cables	
Left-Rear	Inspection	
Right	Installation	
Sealed Splice Connectors	Removal	6-24
Seat	Spark Plugs	
Pillion: XR 1200X	Cable Resistance (Table)	1-54
Seat Nut	Cleaning	
Seat Post2-141	Gap (Table)	
XL Models2-158	Inspection	

Installation	Lubrication
Removal	Stop Lamp Switch
Specifications	Front
Body Panel Fastener Torque (Table) 2-139	Storage
Brake Disc: XL Models (Table) 2-10	Suspension Tuning
Brake Disc: XR 1200X (Table)2-10	XR 1200X1-70
Bulbs (Table)1-9	SwingarmSee Rear Fork
Cam and Pinon Shaft (Table)	•
Capacities: XL 1200 Models and XR 1200X (Table). 2-10	Т
Capacities: XL 1200 Models and XR 1200X (Table). 2-10	Tachometer: XR 1200X
	Installation
Capacities: XL 883 Models (Table) 2-10	Removal
Capacities: XL 883 Models (Table)	
Chassis	Tail Lamp
Clutch Pack (Table)	Base Replacement: XL 883R/L6-36
Critical Fasteners (Table)	Bulb Replacement 6-36
Dimensions: 883 Models (Table) 2-9	Wire Harness2-145
Dimensions: XL 1200 Models and XR 1200X	XL 1200C/C ANV/CP/CA/CB6-38
(Table)	Tank Emblems
Drive/Transmission	Tappets See Valves
Electrical	Covers
Fall-Away (Table)1-55	Temperature Manifold Absolute Pressure (TMAP) Sensor
Fork Oil Level: XR 1200X (Table)	Installation: XL Models
Fork Oil Volume: XR 1200X (Table)	Installation: XR 1200X
` '	Removal: XL Models
Laced Wheel Hub Offset (Table)	Removal: XR 1200X
Spark Plug Gap (Table)	Throttle Cables
Specified Tires, table (Table)1-24	Adjustment1-35
Sportster Models4-4	
Tire Pressure (Table)	Assembly and Installation
Valve Tappet (Table)	Cleaning and Inspection
Weights: XL 883 Models (Table) 2-9	Inspection
Weights: XL Models and XR 1200X (Table) 2-10	Lubrication
Wheel Runout (Table)	Removal and Disassembly 2-125
Speedometer	Throttle Position Sensor (TPS)
Installation: XL Models	Installation: XL Models 4-18
Installation: XR 1200X6-10	Installation: XR 1200X4-19
Removal: XL Models6-8	Removal: XL Models4-17
Removal: XR 1200X 6-10	Removal: XR 1200X
Reset Switch: XL Models 6-8	Tires
Reset Switch: XR 1200X 6-11	Checking Runout2-15
Spokes	Cleaning, Inspection and Repair2-14
	Installation
Adjustment1-25	Pressure (Table)
Sprockets	Removal
Inspection	Replacement
Transmission	
Wheel2-23	Specified1-24
SPX Kent-Moore	Specified (Table)
Stabilizer Links	Valve Stems
Inspection	Wheel Balancing2-16
Lower Front Stabilizer Link: Installation 2-118	Tool Safety
Lower Front Stabilizer Link: Removal 2-118	Air Tools1-5
Rear Stabilizer Link: Installation 2-119	Hammers1-6
Rear Stabilizer Link: Removal	Pliers/Cutters/Pry bars1-6
Upper Front: Installation	Punches/Chisels
Upper Front: Removal	Ratchets and Handles1-6
Starter	Screwdrivers1-6
	Sockets
Clutch Shaft Assembly	Storage Units
Installation	Wrenches
Solenoid	
Touch-Up Paint	Top End Overhaul: Assembly
Stator6-64	Cylinder Head
Steering Head Bearings	Piston and Cylinder
Fall-Away Adjustment	Rocker Covers
Fall-Away Specifications (Table)1-55	Tappet Covers, Pushrod Covers and Pushrods 3-77

Top End Overhaul: Disassembly	XL 1200C/C ANV/CP/CA/CB, Rear 6-52
Cylinder and Piston	XL 883N and XL 1200X, Rear6-50
Cylinder Head	XL 883R/L, Rear
Top End Service	XR 1200X, Rear6-53
Engine in Chassis	Turn Signal Switch Replacement
Engine Removed from Chassis	Left
Torque Conversion	Right6-98
Touch-Up Paint	Tyco 070 Multilock Unsealed Connector
See Starter6-19	RepairA-35
TPS See Throttle Position Sensor (TPS)	Tyco GET 64 Sealed Connector
Trademarks	Crimping Terminals
Harley-Davidson i-II	Tyco MCP Connectors
Referenced Productsi-II	Crimping Terminals
Transmission	Installing Terminals
Assembling Crankcases5-53	Removing Large Socket Terminals
Assembly, Countershaft5-37	Removing Small Socket Terminals
Assembly, Mainshaft5-37	V
Cleaning and Inspection, Countershaft5-36	V
Cleaning and Inspection, Mainshaft 5-35	Valves
Countershaft Bearing Installation 5-50	Guides
Countershaft Bearing Removal5-50	Seats3-64
Countershaft Needle Bearing 5-49	Tappets
Disassembly, Countershaft 5-35	Valve Stems See Tires
Disassembly, Mainshaft 5-34	Valve Tappet
Installation	Specifications (Table)
Lubricant Change1-28	Vapor Valve
Lubricant Level	Installation
Mainshaft Bearing Installation 5-50	Removal
Mainshaft Bearing Removal5-50	Vehicle Identification Number (VIN) 2-12
Removal, Left Crankcase5-33	Abbreviated2-12
Shift Drum Bushing Installation, Left Case 5-50	Model Codes (Table)
Shifter Drum Bushing Removal, Left Case 5-50	Vehicle Speed Sensor (VSS)
Shifter Drum Bushing Right Case Installation 5-49	Installation
Shifter Drum Right Case Bushing 5-49	Removal
Shifter Shaft Installation5-54	Voltage Regulator
Sprocket	Installation: XL Models 6-61
Troubleshooting	Installation: XR 1200X6-62
Brakes1-78	Removal: XL Models6-60
Clutch5-8	Removal: XR 1200X 6-61
Compression Test	VSS See Vehicle Speed Sensor (VSS)
Cylinder Leakage Test	
Diagnosing Smoking Engine or High Oil	W
Consumption	Wear Peg See Rider Foot Controls
Diagnosing Valve Train Noise	Weights
Electrical System	XL 883 Models (Table)
Engine1-76	XL Models and XR 1200X (Table)2-10
Handling	Wheel Lacing
Lubrication System	Angle Flange Hub
Transmission	Straight Flange Hub, Dual Hole Circle 2-31
Truing Laced Wheels	Straight Flange Hub, Single Hole Circle 2-29
Lateral Runout2-35	Wheels
Radial Runout	Alignment
TSM/TSSM/HFSM	Assembly, Cast Single Disc 2-20
	Balancing
Password Learn	Cast Lateral Runout2-33
TSSM/HFSM Maintenance	Cast Radial Runout
FOB Battery	Disassembly, Cast
Turn Signal/Security Module	Hub Offset Dimensions, laced (Table) 2-34
Installation	Installation
Removal	Laced Wheel Rim Offset
Turn Signals	Rear2-23
Bulb Replacement	Removal
Front Housing Replacement	Runout Specifications (Table)
Wire Retention Clip2-145	ranoat opcomoations (rabio)

Sealed Bearings	2-25
Spokes	1-25
Truing Laced Wheels	2-35
Weights	2-16
Wheel Bearing End Play	2-18
Wheel Bearings	1-24
Winter Lubrication	1-8
Wiring	
Color Codes	B-4
Diagram Symbols	B-4
Wiring Diagram List	B-6
Wiring Harness	
Connectors	6-69
Installation	6-72
Removal	6-70